


SAFETY LABELS

1. LOCATION

Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

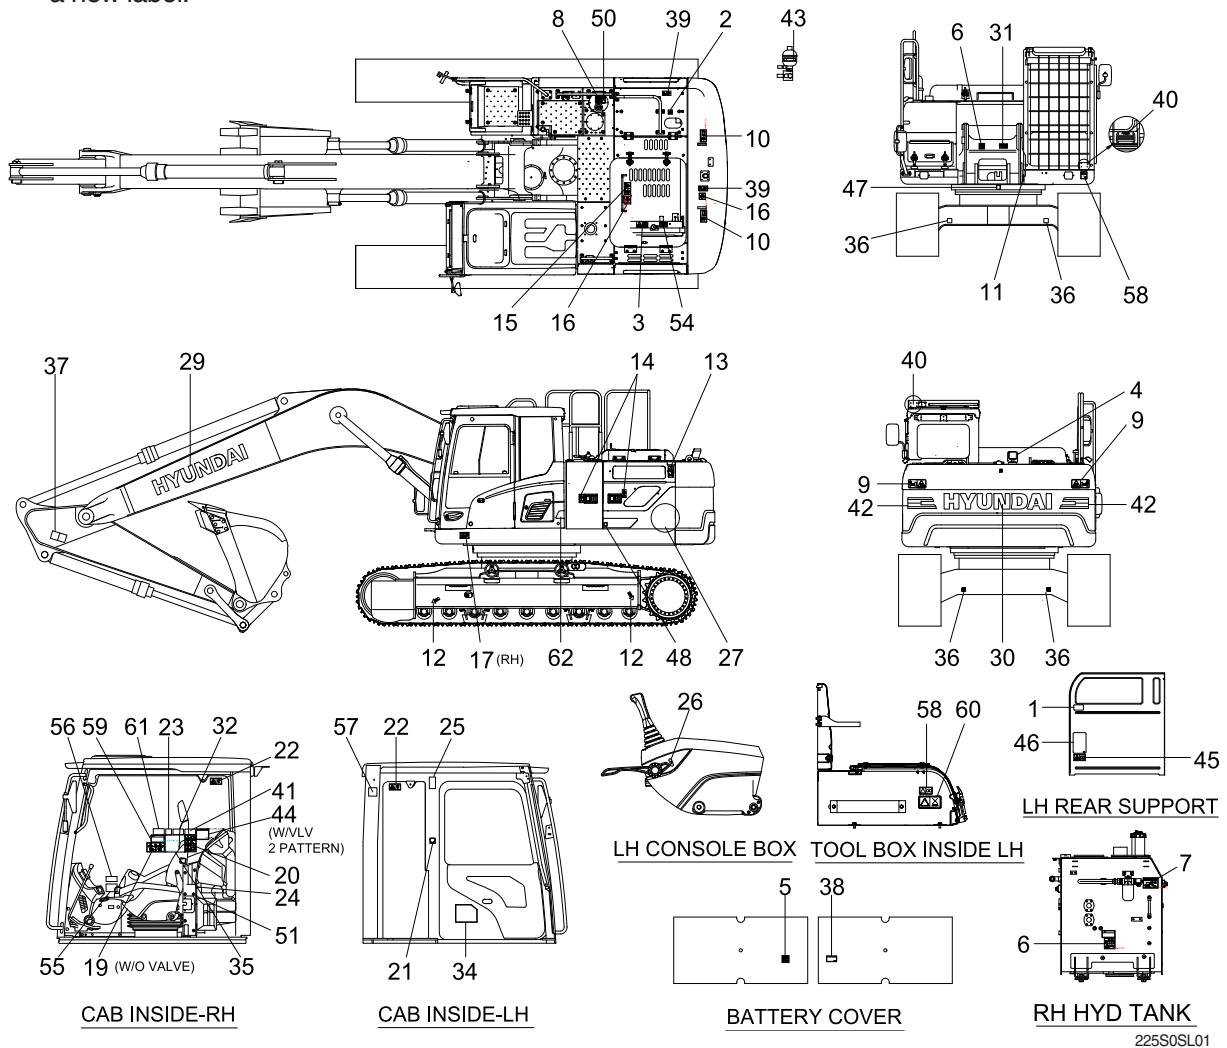

- | | | |
|--------------------------|---------------------------|--|
| 1 Air cleaner filter | 21 Hammer | 41 Caution (water separator, turbocharger) |
| 2 Turbocharger cover | 22 Safety front window | 42 Reflecting |
| 3 Radiator cap | 23 Safety rear window | 43 Accumulator |
| 4 Fueling | 24 Air conditioner filter | 44 M/control pattern change valve |
| 5 Battery accident | 25 ROPS plate | 45 M/control pattern change-w/o valve |
| 6 High pressure hose | 26 Safety lever | 46 M/control pattern change-w/valve |
| 7 Hydraulic oil level | 27 Model name | 47 Swing bearing grease |
| 8 Hydraulic oil lub | 29 Trade mark (boom) | 48 Battery position |
| 9 Keep clear-rear | 30 Trade mark (CWT) | 50 Fuel shut off |
| 10 Lifting eye | 31 Reduction gear grease | 51 MCU/ECM connector |
| 11 Name plate | 32 Clamp locking | 54 Surge tank |
| 12 Sliding ideogram | 34 Service instruction | 55 Key off caution |
| 13 Keep clear-side | 35 Lifting chart | 56 RCV lever |
| 14 Stay fix | 36 Tie | 57 Fire extinguisher |
| 15 Engine hood shearing | 37 Keep clear-attach | 58 Leftover fuel |
| 16 No step | 38 Electric welding | 59 RCV control |
| 17 Transporting | 39 Falling | 60 Air compressor |
| 19 M/control pattern | 40 FOPS FOG plate | 61 Air compressor - cab |
| 20 Ref operator's manual | | 62 Band |

2. DESCRIPTION


There are several specific warning labels on this machine please become familiarized with all warning labels.

Replace any safety label that is damaged, or missing. If a safety label is attached to a part that is replaced, install a safety label on the replacement part.

1) AIR CLEANER FILTER (item 1)

This warning label is positioned on the left side of the rear support.

- ※ **Periodic and proper inspection, cleaning and change of elements prolong engine life time and maintain the good performance of engine.**

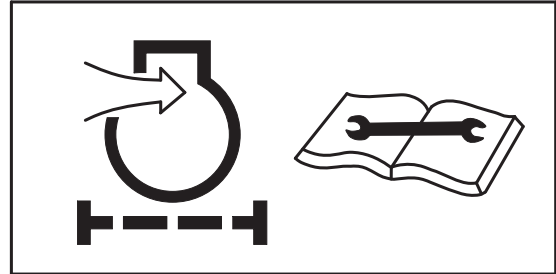

21070FW01

2) TURBOCHARGER COVER (item 2)

This warning label is positioned on the turbocharger cover.

- ⚠ **Do not touch turbocharger or it may cause severe burn. When the engine is running or immediately after engine shut down.**



21070FW02

3) RADIATOR CAP (item 3)

This warning label is positioned on the radiator.

- ⚠ **Never open the filler cap while engine running or at high coolant temperature. Hot coolant can cause serious burns, injury or death.**



14070FW03

4) FUELING (item 4)

This warning label is positioned on the right side of fuel filler neck.

- ⚠ **Stop the engine when refueling. All lights or flames shall be kept at a safe distance while refueling.**



290F0FW02

5) BATTERY ACCIDENT (item 5)

This warning label is positioned on the battery cover.

- ⚠ **Electrolyte containing sulfuric acid cause severe burns. Avoid being in contact with skin, eyes or clothes. In the event of accident flush with sufficient water, call a physician immediately.**
- ※ **Maintain the electrolyte at the recommended level. Add distilled water to the battery only when starting up, never when shutting down.**
With electrolyte at proper level, less space may cause the gases to be accumulated in the battery.
- ⚠ **Extinguish all smoking materials and open flames before checking the battery.**
- ⚠ **Do not use matches, lighters or torches as a light source near the battery for the probable presence of explosive gas.**
- ⚠ **Do not allow unauthorized personnel to change the battery or to use booster cables.**
- ⚠ **For safety from electric shock, do not battery terminal with a wet hand.**



36070FW05

6) HIGH PRESSURE HOSE (item 6)

This warning label is positioned on the front of the upper frame and the right side of the hydraulic tank.

- ⚠ **Escaping fluid under pressure can penetrate the skin causing serious injury.**
- ⚠ **Avoid the hazard by relieving pressure before disconnecting hydraulic lines or other lines.**
- ※ **See the maintenance section for details.**




14070FW29

7) HYDRAULIC OIL LEVEL (item 7)

This warning label is positioned on the right side of the hydraulic tank.

- ▲ Place the bucket on the ground whenever servicing the hydraulic system.
- ※ Check oil level on the level gauge.
- ※ Refill the recommended hydraulic oil up to specified level if necessary.

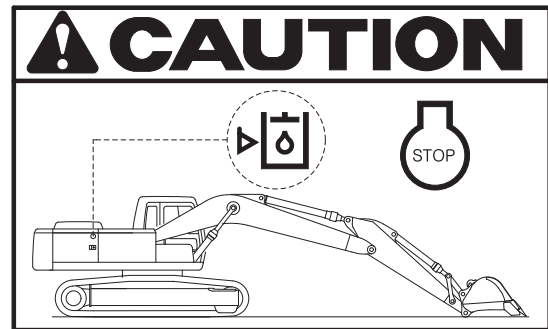

21070FW07

8) HYDRAULIC OIL LUBRICATION (item 8)

This warning label is positioned on the top of the hydraulic tank.

- ※ Do not mix with different brand oils.
- ▲ Never open the filler cap while high temperature.
- ▲ Loosen the cap slowly and release internal pressure completely.




14070FW08

9) KEEP CLEAR-REAR (item 9)

This warning label is positioned on the rear of counterweight.

- ▲ To prevent serious personal injury or death keep clear of machine swing radius.
- ▲ Do not deface or remove this label from the machine.

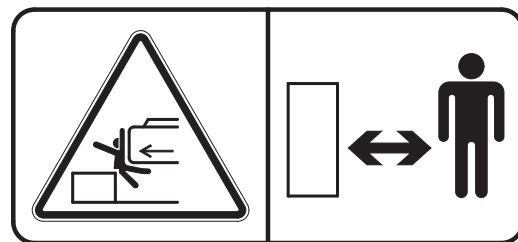


21090FW09

10) LIFTING EYE (item 10)

This warning label is positioned on the counterweight.

- ▲ Do not lift the machine by using lifting eyes on the counterweight or the lifting eyes may be subject to overload causing its breaking and possible personal injury.
- ※ See page 5-9 for proper lifting method of the machine.

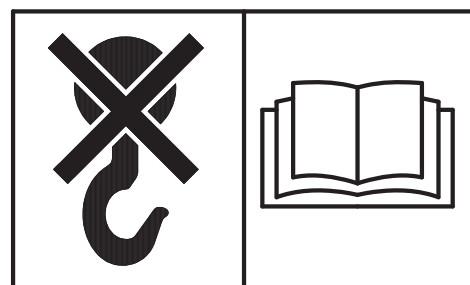

21070FW10

11) KEEP CLEAR-SIDE (item 13)

This warning label is positioned on the side of LH rear side cover.

- ⚠ **To prevent serious personal injury or death keep clear of machine swing radius.**
- ⚠ **Do not deface or remove this label from the machine.**



21070FW13

12) STAY FIX (item 14)

This warning label is positioned on the both side of the side cover.

- ⚠ **Be sure to support the stay when the door needs to be opened.**
- ⚠ **Be careful that the opened door may be closed by the external or natural force like strong wind.**




21070FW14

13) ENGINE HOOD SHEARING (item 15)

This warning label is positioned on the engine hood.

- ⚠ **Don't open the engine hood during the engine's running. Stay clear of rotating parts.**
- ⚠ **Don't touch exhaust pipe or it may cause severe burn.**

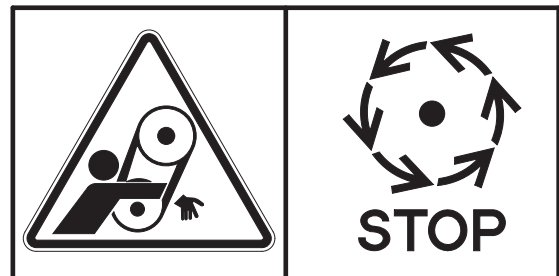

21070FW15

14) NO STEP (item 16)

This warning label is positioned on the engine hood and counterweight.

- △ **Don't step on the engine hood and counterweight.**



21070FW16

15) TRANSPORTING (item 17)

This warning label is positioned on the front right side of upper frame.

- ▲ **Study the operator's manual before transporting the machine, if provided and tie down arm and track to the carrier with lashing wire.**

See page 5-8 for details.



14070FW17


16) MACHINE CONTROL PATTERN (item 19)

This warning label is positioned in right window of the cab.

- ▲ **Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.**

- ▲ **Failure to do so could result in injury or death.**

See page 4-12 for details.

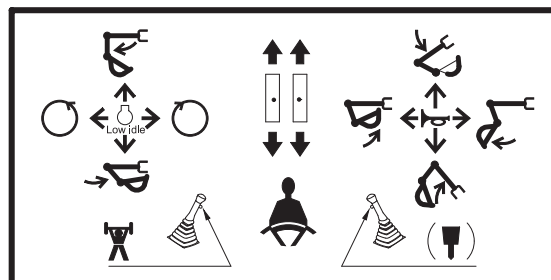

36070FW19

17) REF OPERATOR'S MANUAL (item 20)

This warning label is positioned on the right side window of the cab.

(1) Ref operator manual


- ▲ Study the operator's manual before starting and operating machine.
- ▲ Do not operate this machine unless you have read and understand the instructions and warnings in this manual. Failure to follow the instructions or warnings could result in injury or death.

(2) Max height

- ▲ Serious injury or death can result from contact with electric lines. An electric shock being received by merely coming into the vicinity of an electric lines, the minimum distance should be kept considering the supply voltage as page 1-16.

(3) Interference

- ▲ Be careful to operate machine equipped with quick clamp or extensions. Bucket may hit cab or boom, boom cylinders when it reached vicinity of them.

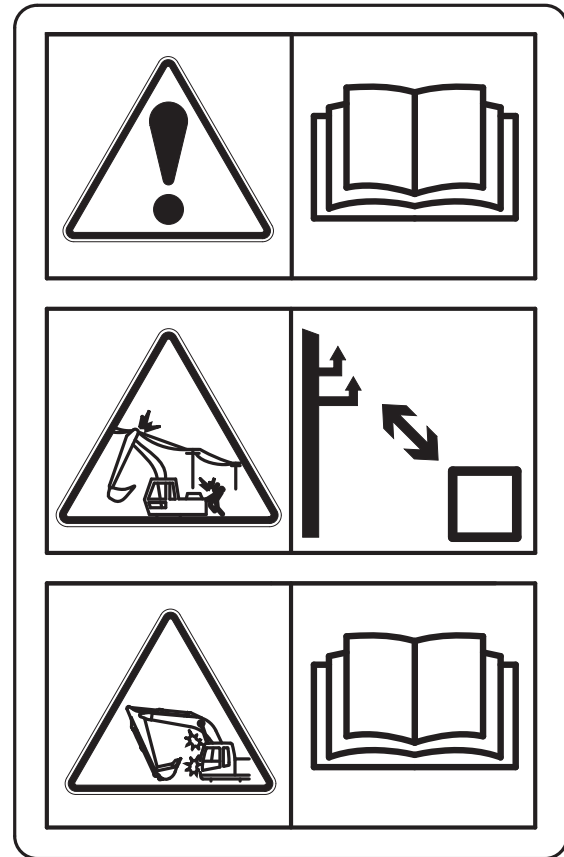


2609A0SL05

18) SAFETY FRONT WINDOW (item 22)

This warning label is positioned on the both side window of the cab.

- ▲ Be careful that the front window may be promptly closed.
- ※ See page 3-60 for details.

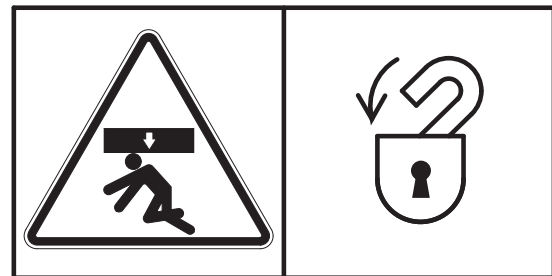

21070FW24

19) SAFETY REAR WINDOW (item 23)

This warning label is positioned on the right side window of the cab.

- ※ The rear window serves as an alternate exit.
- ※ To remove rear window, pull the ring and push out the glass.




2609A0SL02

20) AIR CONDITIONER FILTER (item 24)

This warning label is positioned on the air conditioner cover.

- ※ Periodic and proper inspection, cleaning and change of filter prolong air conditioner life time and maintain good performance.

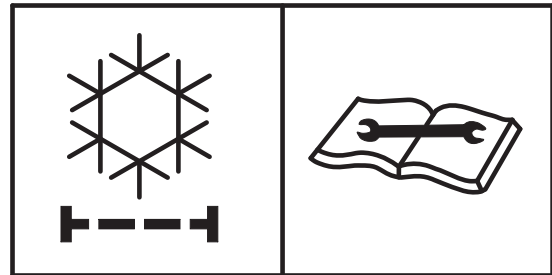


21070FW26

21) SAFETY LEVER (item 26)

This warning label is positioned on the cover of the safety lever.

- ⚠ Before you get off the machine be sure to place the safety lever **LOCKED** position.

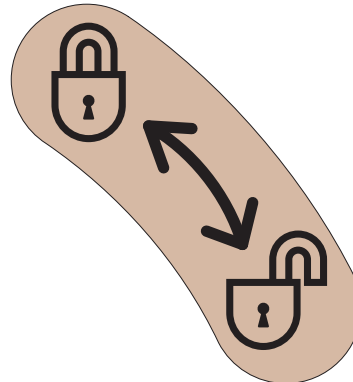


30007A1FW07A

22) REDUCTION GEAR GREASE (item 31)

This warning label is positioned on the front of upper frame.

- ⚠ Grease is under high pressure. Grease coming out of the grease plug under pressure can penetrate the body causing injury or death.

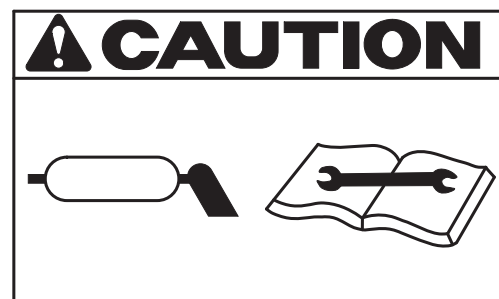


21070FW35

23) CLAMP LOCKING (item 32)

This warning label is positioned on the right side window of cab.

- ⚠ **Serious injury or death can result from dropping bucket.**
- ⚠ **Operating the machine with quick clamp switch unlocked or without safety pin of moving hook can cause the bucket to drop off.**

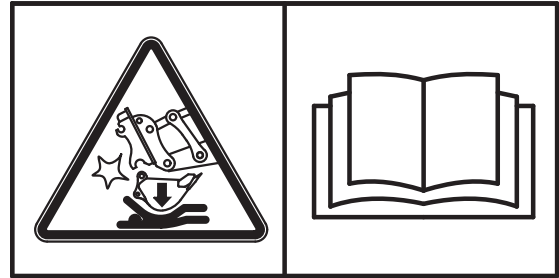


14070FW60

24) TIE (item 36)

This warning label is positioned on the front and rear side of the lower frame.

- ⚠ **Never tow the machine using tie hole, because this may break.**
- ⚠ **See page 4-15 for detail.**

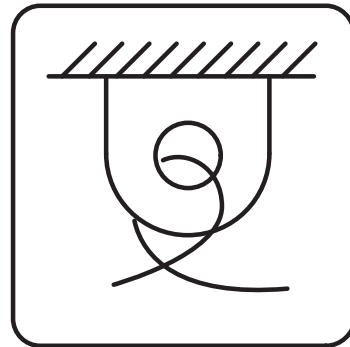

4507A0FW02

25) KEEP CLEAR-ATTACH (item 37)

This warning label is positioned on both side of the arm.

- ⚠ **Serious injury or death can result from falling of the attachment.**
- ⚠ **To prevent serious injury or death, keep clear the underneath of attachment.**




14070FW31

26) ELECTRIC WELDING (item 38)

This warning label is positioned on the battery cover.

- ⚠ **Before carrying out any electric welding on this machine, follow the below procedure.**
 - Pull the connector out of all electric control units.
 - Connector the ground lead of the welding equipment as close to the welding point as possible.
- ※ **See page 6-43 for detail.**

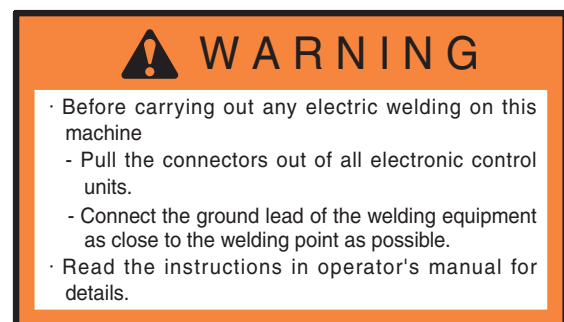

7807AFW20

27) FALLING (item 39)

This warning label is positioned on the top of the turbocharger cover and counterweight.

- ⚠ Falling is one of the major cause of personal injury.
- ⚠ Be careful of slippery conditions on the platforms, steps and handrails when standing on the machine.




14070FW30

28) CAUTION (W/SEPARATOR, TURBOCHARGER) (item 41)

This warning label is positioned on the right window of the cab.

- ⚠ In order to protect high pressure fuel system, please drain water in water separator before starting the engine.
- ⚠ In order to prevent turbocharger failure, please allow more than 5 minutes' cool down period (no load low idle operation) before shutting the engine off.

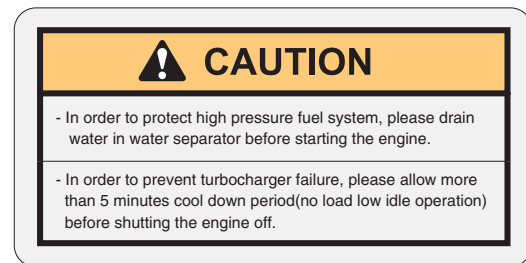

120090SL02

29) REFLECTING (item 42)

This warning label is positioned on the rear of counterweight.

- ⚠ To prevent serious personal injury or death keep clear of machine swing radius.
- ⚠ Do not deface or remove this label from the machine.



290F0FW01

30) ACCUMULATOR (item 43)

This warning label is positioned on the accumulator of the solenoid valve.

- ※ The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.

- ▲ Never make any hole in the accumulator expose it to flame or fire.
- ▲ Do not weld anything to the accumulator.
- ※ When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your Hyundai distributor.




1107A0FW46

31) MACHINE CONTROL PATTERN CHANGE VALVE (item 44)

This warning label is positioned on the right side window of the cab.

- ▲ The machine control pattern can easily be changed to the "ISO type" or to the "A type" by changing the position of the lever of the pattern change valve.
- ▲ Before starting this machine, check the lever pattern valve.
- ※ See page 4-27 for detail.

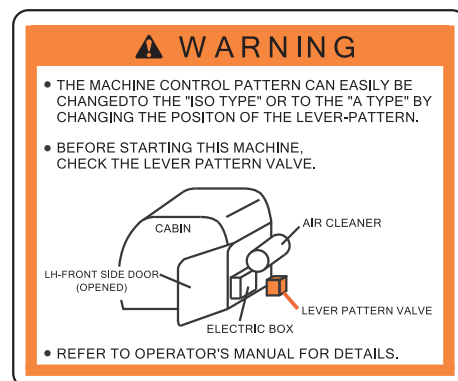

2609A0SL11

32) MACHINE CONTROL PATTERN CHANGE-W/O VALVE (item 45)

This warning label is positioned on the left rear support of cowl.

- ▲ Check the machine control pattern before starting this machine.
- ※ See page 4-26 for detail.



14W90FW47


33) MACHINE CONTROL PATTERN CHANGE-W/VALVE (item 46)

This warning label is positioned on the left rear support of cowl.

⚠ **Check the machine control pattern for conformance to pattern on this label.** If not, change label to match pattern before operating machine.

⚠ **Failure to do so could result in injury or death.**

※ See page 4-27 for details.

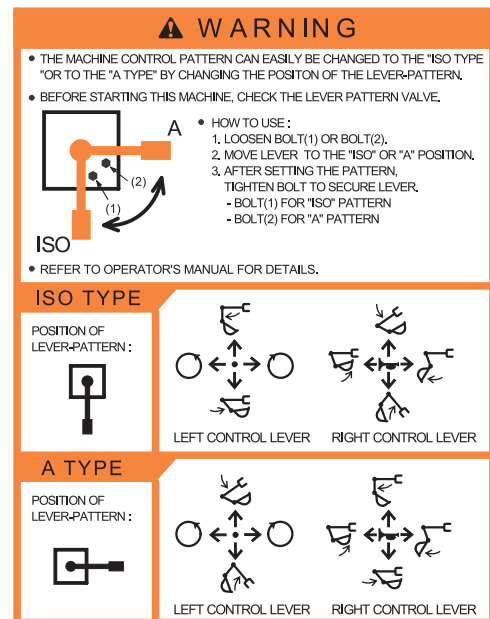


3809FW01A

34) SWING BEARING GREASE (item 47)

This warning label is positioned in the front of swing ring gear.


※ See page 6-34 for details.

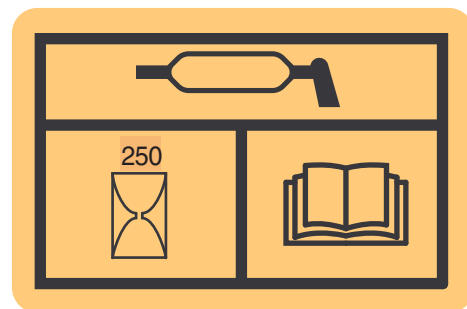

38090FW02

35) BATTERY POSITION (item 48)

This warning label is positioned on the left side cover.

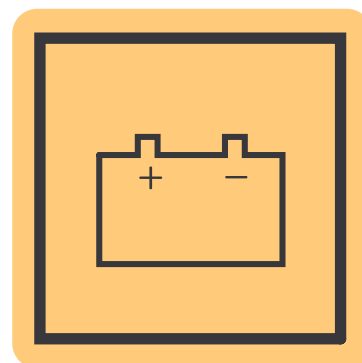


38090FW03

36) FUEL SHUT OFF (item 50)

This warning label is positioned on the top side of the hydraulic tank.

- ※ Fill only the hydraulic oil.
- ※ Do not fill the diesel fuel.
- ⚠ Relieve tank pressure with the engine off by removing the cap slowly to prevent burns from hot oil.

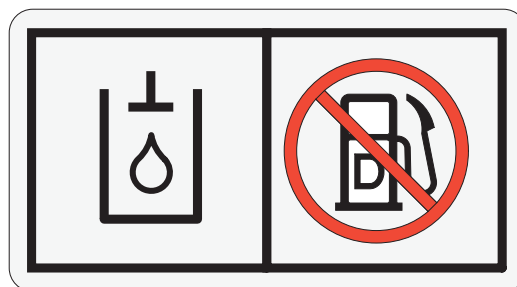


140WH90FW51

37) MCU/ECM CONNECTOR (item 51)

This warning label is positioned on the low cover of the air conditioner in the cab.

- ※ MCU communicates the machine data with Laptop computer through RS232 service socket.
- ※ ECM communicates the engine data with cummins INSITE tool adapter through J1939 service socket.
- ※ See page 3-60 for details.

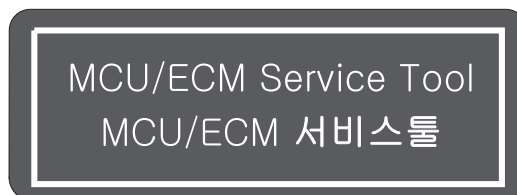


235Z90FW52

38) SURGE TANK (item 54)

This warning label is positioned on the top of the radiator.

This system must be filled slowly to prevent air locks.

- ※ Fill rate ≤ 11 lpm

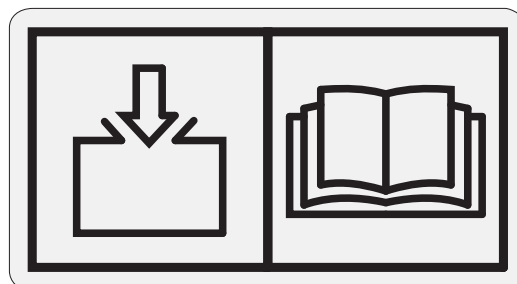


3009A0FW54

39) KEY OFF CAUTION (item 55)

This warning label is positioned on the right side window of the cab.

- ※ Park on a flat place and stop the engine for inspecting and repairing. Properly TAG machine is not operational. (remove start key)

Extreme care shall be taken during maintenance work.

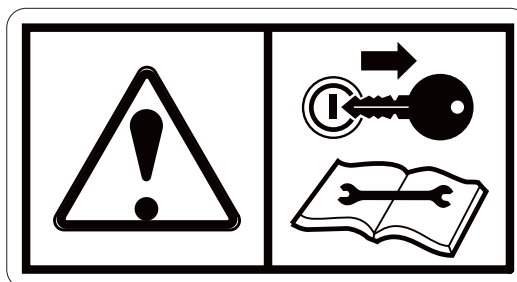

290F0FW05

40) RCV LEVER (item 56)

This warning label is positioned on the right side window of the cab.

- ※ **When you work by moving the seat to the front of cab, it is possible to take place interference between cluster and RCV lever at specific position.**
To prevent this interference, handle below works.

- (1) Rotate cluster.
- (2) Adjust seat position for up-and-downward using seat height adjuster knob in suspension.
- (3) Lower the console box height using knob between RH console box and seat cushion.
- (4) Push back console and seat position using seat and console box adjust knob between LH console box and seat cushion.



290F0FW04

41) LEFTOVER FUEL (item 58)

This warning label is positioned on the inner left side of tool box.

- ⚠ **Do not fuel a machine near open flames or sparks.**
- ⚠ **Properly clean areas of spillage.**




91K4-02700

91K4-02700

42) RCV CONTROL (item 59)

This warning label is positioned on the right side window of the cab.

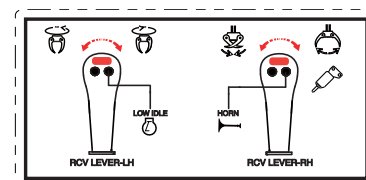

330F0SL05

43) AIR COMPRESSOR (item 60)

This warning label is positioned on the inner left side of tool box.

- ⚠ **Do not touch air compressor or it may cause server burn.**




91Q4-13301

44) AIR COMPRESSOR -CAB (item 61)

This warning label is positioned on the right window of cab.

- ※ Park on a flat place to use the air compressor.
- ※ Be sure the engine working during the use of air compressor. After the use, make sure the compressor switch off.
- ※ During the operation, do not use the other electrical devices (air conditioner, lights, stereo etc.)
- ※ Lower the air breather.
- ※ After the use, completely drain the water and the air inside the air tank.
- ※ Do not change the setting of the operating switch or the harness.
- ⚠ **Do not touch the cylinder head during the operation.**

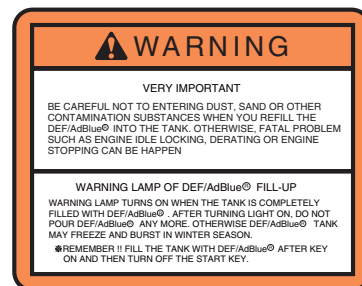

480F0SL06