

## A

|                                |      |
|--------------------------------|------|
| AAVM .....                     | 3-32 |
| Accel dial switch .....        | 3-34 |
| After engine start .....       | 4-5  |
| Air breather element .....     | 6-33 |
| Air cleaner filter .....       | 6-26 |
| Air compressor .....           | 0-19 |
| Air conditioner & heater ..... | 3-39 |
| Air conditioner filter .....   | 6-44 |
| Alternate exit .....           | 0-12 |
| Attachment lowering .....      | 4-23 |

## B

|                                   |      |
|-----------------------------------|------|
| Battery .....                     | 6-41 |
| Before starting engine .....      | 4-2  |
| Bluetooth .....                   | 3-52 |
| Boom lowering .....               | 4-23 |
| Bucket clearance adjustment ..... | 6-39 |
| Bucket replacement .....          | 6-37 |
| Bucket selection guide .....      | 2-19 |
| Bucket tooth replacement .....    | 6-38 |

## C

|                                        |      |
|----------------------------------------|------|
| Cab air filter .....                   | 6-44 |
| Cab device .....                       | 3-1  |
| Changing machine control pattern ..... | 4-26 |
| Cigar lighter .....                    | 3-43 |
| Cluster .....                          | 3-2  |
| Coolant .....                          | 6-20 |
| Coolant filter .....                   | 6-32 |
| Cooling fan .....                      | 6-24 |

## D

|                            |      |
|----------------------------|------|
| Dimension and weight ..... | 5-2  |
| Drain filter .....         | 6-33 |

## E

|                                  |      |
|----------------------------------|------|
| Engine oil filter .....          | 6-18 |
| Engine oil level .....           | 6-18 |
| Engine starting & stop .....     | 4-3  |
| Engine starting by booster ..... | 6-42 |
| Engine stop .....                | 4-6  |

## F

|                        |      |
|------------------------|------|
| Fan belt .....         | 6-24 |
| Fan extinguisher ..... | 0-18 |

|                            |      |
|----------------------------|------|
| Fuel filter .....          | 6-28 |
| Fuel leakage .....         | 6-30 |
| Fuel system bleeding ..... | 6-29 |
| Fuel tank .....            | 6-26 |
| Fuse & relay box .....     | 3-59 |

## G

|             |     |
|-------------|-----|
| Gauge ..... | 3-3 |
|-------------|-----|

## H

|                              |      |
|------------------------------|------|
| Hammer .....                 | 0-11 |
| Hydraulic breaker .....      | 8-1  |
| Hydraulic oil changing ..... | 6-32 |
| Hydraulic oil filling .....  | 6-31 |
| Hydraulic oil level .....    | 6-31 |

## L

|                                      |      |
|--------------------------------------|------|
| LCD .....                            | 3-2  |
| Levers & pedals .....                | 3-37 |
| Lifting capacities .....             | 2-11 |
| Loading and unloading by crane ..... | 5-9  |
| Lubricant specification .....        | 6-9  |

## M

|                                  |      |
|----------------------------------|------|
| Machine data plate .....         | 0-20 |
| Maintenance check list .....     | 6-11 |
| Major component .....            | 2-1  |
| MCU (Machine Control Unit) ..... | 3-59 |
| Mode selection system .....      | 4-7  |
| Mounting and dismounting .....   | 1-21 |

## N

|                             |     |
|-----------------------------|-----|
| New machine operation ..... | 4-1 |
|-----------------------------|-----|

## O

|                         |      |
|-------------------------|------|
| Oil cooler .....        | 6-23 |
| Operating pattern ..... | 4-26 |

## P

|                                    |      |
|------------------------------------|------|
| Pedals .....                       | 3-37 |
| Periodical replacement parts ..... | 6-5  |
| Pilot line filter .....            | 6-34 |
| Pin & bushing lubrication .....    | 6-40 |
| Pilot lamps .....                  | 3-9  |
| Prefilter .....                    | 6-31 |

## Q

|                   |     |
|-------------------|-----|
| Quick clamp ..... | 8-6 |
|-------------------|-----|

## R

|                                   |            |
|-----------------------------------|------------|
| Radiator flushing .....           | 6-20       |
| Radio & USB player .....          | 3-44       |
| RCV lever lubricate .....         | 6-36       |
| Recommended oils .....            | 2-27, 6-10 |
| Relieving pressure .....          | 6-3        |
| Reservoir tank .....              | 6-20       |
| Return filter .....               | 6-33       |
| RCV lever operating pattern ..... | 4-26       |

## S

|                                         |            |
|-----------------------------------------|------------|
| Safety hints .....                      | 1-1        |
| Safety labels .....                     | 0-5        |
| Safety parts .....                      | 6-5        |
| Seat .....                              | 3-58       |
| Seat belt .....                         | 3-58       |
| Service instruction .....               | 6-18       |
| Service meter .....                     | 3-60       |
| Service socket .....                    | 3-60       |
| Smart key tag .....                     | 3-32       |
| Specification for major component ..... | 2-23       |
| Specification .....                     | 2-2        |
| Start switch .....                      | 3-32       |
| Storage .....                           | 4-24       |
| Suction strainer .....                  | 6-32       |
| Swing bearing grease .....              | 6-34       |
| Swing gear & pinion grease .....        | 6-35       |
| Swing reduction gear oil .....          | 6-34       |
| Switch panel .....                      | 3-32       |
| Switches .....                          | 3-12, 3-32 |

## T

|                                 |      |
|---------------------------------|------|
| Torques-major component .....   | 6-8  |
| Torques-fastener .....          | 6-6  |
| Towing machine .....            | 4-15 |
| Track adjustment .....          | 6-36 |
| Track shoe selection .....      | 2-22 |
| Transportation .....            | 5-1  |
| Travel reduction gear oil ..... | 6-35 |
| Traveling machine .....         | 4-13 |
| Troubleshooting guide .....     | 7-1  |

## U

|                        |      |
|------------------------|------|
| Undercarriage .....    | 2-21 |
| Upper windshield ..... | 3-60 |
| USB port .....         | 3-48 |

## W

|                                |      |
|--------------------------------|------|
| Warming up operation .....     | 4-5  |
| Warning lamps .....            | 3-6  |
| Weight .....                   | 2-8  |
| Welding repair .....           | 6-43 |
| Windshield .....               | 3-60 |
| Working device operation ..... | 4-12 |
| Working method .....           | 4-16 |
| Working range .....            | 2-5  |