

CONTENTS

Foreword	0-1	6. Traveling of the machine	4-13		
Before servicing this machine	0-2	7. Efficient working method	4-16		
Table to enter S/No and distribution	0-3	8. Operation in the special work sites	4-20		
Safety labels	0-4	9. Normal operation of excavator	4-22		
Machine data plate	0-19	10. Attachment lowering	4-23		
Guide (direction, S/No, symbol)	0-20	11. Storage	4-24		
		12. RCV lever operating pattern	4-26		
SAFETY HINTS					
1. Before operating the machine	1-1	TRANSPORTATION			
2. During operating the machine	1-15	1. Preparation for transportation	5-1		
3. During maintenance	1-22	2. Dimension and weight	5-2		
4. Parking	1-25	3. Loading the machine	5-4		
		4. Fixing the machine	5-6		
SPECIFICATIONS				5. Loading and unloading by crane	5-7
1. Major components	2-1	MAINTENANCE			
2. Specifications	2-2	1. Instruction	6-1		
3. Working range	2-4	2. Tightening torque	6-6		
4. Weight	2-5	3. Fuel, coolant and lubricants	6-9		
5. Lifting capacities	2-6	4. Maintenance check list	6-11		
6. Bucket selection guide	2-11	5. Maintenance chart	6-16		
7. Undercarriage	2-13	6. Service instruction	6-18		
8. Specification for major components	2-15	7. Electrical system	6-44		
9. Recommended oils	2-18	8. Air conditioner and heater	6-47		
CONTROL DEVICES				TROUBLESHOOTING GUIDE	
1. Cab devices	3-1	1. Engine	7-1		
2. Cluster	3-2	2. Electrical system	7-2		
3. Switches	3-33	3. Others	7-3		
4. Levers and pedals	3-37	HYDRAULIC BREAKER AND QUICK CLAMP			
5. Air conditioner and heater	3-39	1. Selecting hydraulic breaker	8-1		
6. Others	3-43	2. Circuit configuration	8-2		
OPERATION				3. Maintenance	8-3
1. Suggestion for new machine	4-1	4. Precaution while operating the breaker	8-4		
2. Check before starting the engine	4-2	5. Quick clamp	8-6		
3. Starting and stop the engine	4-3				
4. Mode selection system	4-7				
5. Operation of the working device	4-12				
		INDEX	9-1		