

A

Accel dial switch	3-10
After engine start	4-4
Air breather element	6-30
Alternate exit	0-11

B

Battery	6-38
Before starting engine	4-2
Bucket replacement	6-34
Bucket selection guide	2-10
Bucket tooth replacement	6-35

C

Cab device	3-1
Cassette & radio	3-18
Changing machine control pattern	4-25
Cigar lighter	3-14
Coolant	6-20
Cooling fan	6-23
CPU controller	3-16

D

Drain filter	6-30
--------------------	------

E

Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-2
Engine starting by booster	6-39
Engine stop	4-6

F

Fan belt	6-24
Fuel filter	6-26
Fuel leakage	6-27
Fuel system bleeding	6-27
Fuel tank	6-25
Fuse box	3-16

H

Hydraulic breaker	8-1
Hydraulic oil changing	6-28
Hydraulic oil filling	6-28
Hydraulic oil level	6-27

L

Levers & pedals	3-12
Lifting capacities	2-7
Lubricant specification	2-16

M

Maintenance check list	6-11
Major component	2-1
Mode selection system	4-7
Monitor display	4-11
Monitor panel	3-2
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
Operating pattern	4-25

P

Pedals	3-12
Periodical replacement parts	6-5
Pilot line filter	6-30
Pin & bushing adjustment	6-37

R

Radiator flushing	6-20
Radio	3-18
RCV lever lubricate	6-33
Recommended oils	2-16
Relieving pressure	6-3
Resistor	3-17
Return filter	6-29

S

Safety hints	1-1
Safety labels	0-4
Safety parts	6-5
Seat	3-15
Service meter	3-17
Speciation for major component	2-13
Specification	2-2
Start switch	3-9
Storage	4-24

Suction strainer	6-29
Swing bearing grease	6-31
Swing gear & pinion grease	6-32
Swing reduction gear oil	6-31
Switch panel	3-7
Switches	3-9

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-15
Track adjustment	6-33
Track shoe selection	2-11
Transportation	5-1
Travel reduction gear oil	6-32
Travelling machine	4-13
Troubleshooting guide	7-1

U

Undercarriage	2-11
---------------------	------

W

Warming up operation	4-5
Warning lamps	3-3
Water separator	6-26
Weight	2-6
Working device operation	4-12
Working method	4-16
Working range	2-4