

<b>A</b>	
Accel dial switch .....	3-9
After engine start .....	4-4
Air breather element .....	6-33
Air cleaner filter .....	6-25
Air conditioner & heater .....	3-14
Air conditioner filter .....	6-44
Alternate exit .....	0-12
Attachment lowering .....	4-22
<b>B</b>	
Battery .....	6-41
Before starting engine .....	4-2
Boom lowering .....	4-22
Bucket clearance adjustment .....	6-39
Bucket replacement .....	6-37
Bucket selection guide .....	2-8
Bucket tooth replacement .....	6-38
<b>C</b>	
Cab air filter .....	6-44
Cab device .....	3-1
Changing machine control pattern .....	4-25
Charge air cooler .....	6-23
Cigar lighter .....	3-17
Coolant .....	6-20
Cooling fan .....	6-24
CPU controller .....	3-18
<b>D</b>	
Drain filter .....	6-33
<b>E</b>	
Engine oil filter .....	6-18
Engine oil level .....	6-18
Engine starting & stop .....	4-3
Engine starting by booster .....	6-42
Engine stop .....	4-6
<b>F</b>	
Fan belt .....	6-24
Fuel filter .....	6-27
Fuel leakage .....	6-30
Fuel system bleeding .....	6-27
Fuel tank .....	6-25
Fuse box .....	3-18
<b>H</b>	
Hydraulic breaker .....	8-1
Hydraulic oil changing .....	6-31
Hydraulic oil filling .....	6-31
Hydraulic oil level .....	6-31
<b>L</b>	
Levers & pedals .....	3-12
Lifting capacities .....	2-5
Lubricant specification .....	2-16
<b>M</b>	
Maintenance check list .....	6-11
Major component .....	2-1
Mode selection system .....	4-7
Monitor display .....	4-10
Monitor panel .....	3-2
Mounting and dismounting .....	1-12
<b>N</b>	
New machine operation .....	4-1
<b>O</b>	
Oil cooler .....	6-23
Operating pattern .....	4-25
<b>P</b>	
Pedals .....	3-12
Periodical replacement parts .....	3-12
Pilot line filter .....	6-33
Pin & bushing adjustment .....	6-40
Prefilter .....	6-26
<b>R</b>	
Radiator flushing .....	6-20
RCV lever lubricate .....	6-36
Recommended oils .....	2-26, 6-10
Relieving pressure .....	6-3
Resistor .....	3-19
Return filter .....	6-32

**S**

Safety hints .....	1-1
Safety labels .....	0-5
Safety parts .....	6-5
Seat .....	3-17
Service meter .....	3-19
Speciation for major component .....	2-12
Specification .....	2-2
Start switch .....	3-9
Storage .....	4-23
Suction strainer .....	6-32
Swing bearing grease .....	6-34
Swing gear & pinion grease .....	6-35
Swing reduction gear oil .....	6-34
Switch panel .....	3-7
Switches .....	3-9

**T**

Torques-major component .....	6-8
Torques-fastener .....	6-6
Towing machine .....	4-14
Track adjustment .....	6-36
Track shoe selection .....	2-21
Transportation .....	5-1
Travel reduction gear oil .....	6-35
Travelling machine .....	4-12
Troubleshooting guide .....	7-1

**U**

Undercarriage .....	2-10
---------------------	------

**W**

Warming up operation .....	4-5
Warning lamps .....	3-3
Weight .....	2-4
Working device operation .....	4-11
Working method .....	4-15
Working range .....	2-3