

A

Accel dial switch	3-9
After engine start	4-4
Air breather element	6-33
Air cleaner filter	6-25
Air conditioner & heater	3-14
Air conditioner filter	6-44
Alternate exit	0-12
Attachment lowering	4-22

B

Battery	6-41
Before starting engine	4-2
Boom lowering	4-22
Bucket clearance adjustment	6-39
Bucket replacement	6-37
Bucket selection guide	2-8
Bucket tooth replacement	6-38

C

Cab air filter	6-44
Cab device	3-1
Changing machine control pattern	4-25
Charge air cooler	6-23
Cigar lighter	3-17
Coolant	6-20
Cooling fan	6-24
CPU controller	3-18

D

Drain filter	6-33
--------------------	------

E

Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-42
Engine stop	4-6

F

Fan belt	6-24
Fuel filter	6-27
Fuel leakage	6-30

Fuel system bleeding	6-27
Fuel tank	6-25
Fuse box	3-18

H

Hydraulic breaker	8-1
Hydraulic oil changing	6-31
Hydraulic oil filling	6-31
Hydraulic oil level	6-31

L

Levers & pedals	3-12
Lifting capacities	2-5
Lubricant specification	2-16

M

Maintenance check list	6-11
Major component	2-1
Mode selection system	4-7
Monitor display	4-10
Monitor panel	3-2
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
Operating pattern	4-25

P

Pedals	3-12
Periodical replacement parts	3-12
Pilot line filter	6-33
Pin & bushing adjustment	6-40
Prefilter	6-26

R

Radiator flushing	6-20
RCV lever lubricate	6-36
Recommended oils	2-26, 6-10
Relieving pressure	6-3
Resistor	3-19
Return filter	6-32