

A

Accel dial switch	3-10
After engine start	4-4
Air breather element	6-29
Air cleaner filter	6-23
Air conditioner	3-16
Air conditioner filter	6-41
Alternate exit	0-11
Attachment lowering	4-25

B

Battery	6-38
Before starting engine	4-2
Boom lowering	4-25
Bucket clearance adjustment	6-36
Bucket replacement	6-34
Bucket selection guide	2-7
Bucket tooth replacement	6-35

C

Cab air filter	6-41
Cab device	3-1
Cassette & radio	3-23
Changing machine control pattern	4-28
Cigar lighter	3-18
Coolant	6-19
Cooling fan	6-24
MCU controller	3-20

D

Drain filter	6-30
--------------------	------

E

Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-39
Engine stop	4-5

F

Fan belt	6-23
Fuel filter	6-26
Fuel leakage	6-27

Fuel system bleeding	6-26
Fuel tank	6-24
Fuse box	3-20

H

Hydraulic breaker	8-1
Hydraulic oil changing	6-28
Hydraulic oil filling	6-27
Hydraulic oil level	6-27

L

Levers & pedals	3-14
Lifting capacities	2-5
Lubricant specification	2-13

M

Maintenance check list	6-11
Major component	2-1
Mode selection system	4-7
Monitor panel	3-2
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-22
Operating pattern	4-28

P

Pedals	3-15
Periodical replacement parts	6-5
Pilot filter	6-30
Pin & bushing adjustment	6-34
Prefilter	6-25

R

Radiator flushing	6-20
Radio and USB player	3-23
RCV lever lubricate	6-33
Recommended oils	2-13, 6-10
Relieving pressure	6-3
Resistor	3-21
Return filter	6-29

S

Safety hints	1-1
Safety labels	0-4
Safety parts	6-5
Seat	3-19
Seat belt	3-19
Service meter	3-21
Speciation for major component	2-10
Specification	2-2
Start switch	3-9
Storage	4-26
Suction strainer	6-28
Swing bearing grease	6-31
Swing gear & pinion grease	6-32
Swing reduction gear oil	6-31
Switch panel	3-7
Switches	3-9

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-17
Track adjustment	6-33
Track shoe selection	2-8
Transportation	5-1
Travel reduction gear oil	6-32
Travelling machine	4-15
Troubleshooting guide	7-1

U

Undercarriage	2-8
---------------------	-----

W

Warming up operation	4-5
Warning lamps	3-2
Weight	2-4
Working device operation	4-14
Working method	4-18
Working range	2-3