

A

Accel dial switch	3-14
After engine start	4-4
Air breather element	6-30
Air cleaner filter	6-25
Air conditioner & heater	3-19
Air conditioner filter	6-42
Alternate exit	0-12
Attachment lowering	4-22

B

Battery	6-39
Before starting engine	4-2
Boom lowering	4-22
Bucket clearance adjustment	6-37
Bucket replacement	6-35
Bucket selection guide	2-9
Bucket tooth replacement	6-36

C

Cab air filter	6-42
Cab device	3-1
Changing machine control pattern	4-25
Cigar lighter	3-23
Coolant	6-20
Coolant filter	6-27
Cooling fan	6-25

D

Drain filter	6-30
Dimension and weight	5-2

E

Emergency engine speed control	3-26
Emergency engine starting connector	3-26
Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-40
Engine stop	4-5

F

Fan belt	6-24
Fixing the machine	5-9
Fuel filter	6-26
Fuel leakage	6-28

Fuel tank	6-26
Fuse box	3-25

G

Gauge	3-3
-------------	-----

H

Hydraulic breaker	8-1
Hydraulic oil changing	6-29
Hydraulic oil filling	6-28
Hydraulic oil level	6-28

L

LCD	3-5
LCD display map	3-6
LCD main operation display	3-4
Levers & pedals	3-17
Lifting capacities	2-7
Loading the machine	5-4
Lubricant specification	2-17

M

Maintenance check list	6-11
Major component	2-13
Master switch	3-14
MCU (Machine Control Unit)	3-25
Mode selection system	4-6
Monitor display	3-3
Monitor panel	3-2
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
Operating pattern	4-25

P

Pedals	3-18
Periodical replacement parts	6-5
Pilot filter	6-31
Pilot lamp	3-9
Pin & bushing adjustment	6-38
Prolix resistor	3-26

R

Radiator flushing	6-20
Radio & USB player	3-28
RCV lever lubricate	6-33
RCV lever operating pattern	4-25
Recommended oils	2-17, 6-10
Relieving pressure	6-3
Return filter	6-30
RS 232 serial connector	3-26

S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
Seat	3-24
Seat belt	3-24
Service meter	3-26
Speciation for major component	2-13
Specification	2-2
Start switch	3-13
Storage	4-23
Suction strainer	6-29
Swing bearing grease	6-32
Swing gear & pinion grease	6-32
Swing reduction gear oil	6-31
Switch panel	3-11
Switches	3-13

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-14
Track adjustment	6-34
Track shoe selection	2-12
Transportation	5-1
Travel reduction gear oil	6-33
Travelling machine	4-12
Troubleshooting guide	7-1

U

Undercarriage	2-11
---------------------	------

W

Warming up operation	4-4
Warning lamps	3-3
Water separator	6-26
Weight	2-6
Working device operation	4-12

Working method	4-15
Working range	2-3