

A

Air cleaner	6-22
Air conditioner & heater	3-23
Air conditioner filter	6-43
Axle oil	6-34

B

Battery	6-40
Before starting engine	4-2
Belt tensioner	6-21
Boom kick out	4-21
Brake line filter	6-28
Bucket leveler	4-22

C

Cab device	3-1
Charge air cooler	6-21
Cigar lighter	3-26
Cluster	3-2
Control device	3-20
Coolant level	6-17

E

Engine control module (ECM)	3-28
Engine oil filter	6-15
Engine oil level	6-15

F

Fan belt	6-21
Fault codes	3-11
Fuel filter	6-24
Fuel prefilter	6-24
Fuse box	3-28

G

Gear selector lever	3-21
---------------------------	------

H

Hydraulic oil changing	6-26
Hydraulic oil filling	6-26
Hydraulic oil level	6-26
Hydraulic safety lock lever	3-22

L

LCD	3-8
Loading and unloading	5-6
Lubrication	6-36

M

Machine control unit (MCU)	3-28
Maintenance chart	6-13
Maintenance check list	6-10
Major components	2-1
Master switch	3-27

P

Pilot line filter	6-27
-------------------------	------

R

Radiator and oil cooler	6-20
Recommended lubricants	6-9
Return filter	6-27
Radio and cassette	3-29

S

Safety hints	1-1
Safety labels	0-5
Seat	3-27
Specifications	2-2
Storage	4-25
Switches	3-14

T

Tightening torque	6-5
Tire	6-29
Towing the machine	5-7
Transmission cold starting	4-6
Transmission control unit (TCU)	3-28
Transmission oil filter	6-32
Transmission oil level	6-32
Transportation	5-1
Travelling machine	4-9
Troubleshooting guide	7-1

W

Warming up operation	4-7
Weight	2-3
Working method	4-14