

Foreword	0-1	8. Operation in the special work sites	4-22
Before servicing this machine	0-2	9. Storage	4-24
Table to enter S/No and distribution	0-3		
Safety labels	0-4	5. TRANSPORTATION	
Machine data plate	0-12	1. Road traveling	5-1
Guide (direction, S/No, symbol)	0-13	2. Preparation for transportation	5-2
		3. Loading the machine	5-3
1. SAFETY HINTS		4. Fixing the machine	5-4
1. Before operating the machine	1-1	5. Loading and unloading by crane	5-6
2. During operating the machine	1-15	6. Towing the machine	5-7
3. During maintenance	1-24		
4. Parking	1-28	6. MAINTENANCE	
		1. Instructions	6-1
2. SPECIFICATIONS		2. Tightening torque	6-5
1. Major components	2-1	3. Spec of fuel, coolant and lubricants	6-8
2. Specifications	2-2	4. Maintenance check list	6-10
3. Weight	2-3	5. Maintenance chart	6-13
4. Specification for major components	2-4	6. Service instruction	6-15
		7. Electrical system	6-40
3. CONTROL DEVICES		8. Air conditioner and heater	6-43
1. Cab devices	3-1		
2. Cluster	3-2	7. TROUBLESHOOTING GUIDE	
3. Monitors	3-11	1. Engine	7-1
4. Switches	3-25	2. Electrical system	7-2
5. Control device	3-31	3. Power train system	7-3
6. Air conditioner and heater	3-34	4. Hydraulic system	7-4
7. Others	3-37		
4. OPERATION		8. OTHERS	
1. Suggestion for new machine	4-1	1. Quick coupler	8-1
2. Check before starting the engine	4-2		
3. Starting and stop the engine	4-3	INDEX	9-1
4. Warming-up operation	4-8		
5. Operation of the working device	4-9		
6. Traveling of the machine	4-10		
7. Efficient working method	4-15		