

CONTENTS

EC declaration of conformity	0-1	7. Efficient working method	4-15
Foreword	0-2	8. Adjustment of the work equipment	4-22
Emission-related components warranty (USA and CANADA only)	0-2-1	9. Operation in the special work sites	4-23
Before servicing this machine	0-3	10. Storage	4-25
Table to enter S/No and distribution	0-4	11. Exhaust system cleaning	4-27
EC regulation approved	0-5	12. Attachment manually lowering	4-28
Safety labels	0-6		
Machine data plate	0-16	5. TRANSPORTATION	
Guide (direction, S/No, symbol)	0-17	1. Road traveling	5-1
1. SAFETY HINTS		2. Preparation for transportation	5-2
1. California proposition 65	1-1	3. Loading the machine	5-3
2. Safety rules	1-2	4. Fixing the machine	5-4
		5. Loading and unloading by crane	5-6
		6. Towing the machine	5-7
2. SPECIFICATIONS		6. MAINTENANCE	
1. Major components	2-1	1. Instructions	6-1
2. Specifications	2-2	2. Tightening torque	6-5
3. Weight	2-6	3. Spec of fuel, coolant and lubricants	6-8
4. Specification for major components	2-7	4. Maintenance check list	6-10
		5. Maintenance chart	6-13
3. CONTROL DEVICES		6. Service instruction	6-15
1. Cab devices	3-1	7. Electrical system	6-54
2. Cluster	3-2	8. Air conditioner and heater	6-57
3. Monitors	3-13		
4. Switches	3-44	7. TROUBLESHOOTING GUIDE	
5. Control device	3-49	1. Engine	7-1
6. Air conditioner and heater	3-53	2. Electrical system	7-2
7. Others	3-56	3. Power train system	7-3
		4. Hydraulic system	7-4
4. OPERATION		8. OTHERS	
1. Suggestion for new machine	4-1	1. Quick coupler	8-1
2. Check before starting the engine	4-2		
3. Starting and stop the engine	4-3	INDEX	9-1
4. Warming-up operation	4-8		
5. Operation of the working device	4-9		
6. Traveling of the machine	4-10		