CONTENTS

Foreword ·····	0-1	5. TRANSPORTATION	
Before servicing this machine	0-2	1. Road traveling ·····	5-1
Table to enter S/No and distribution	0-3	2. Preparation for transportation	5-2
Safety labels ·····	0-4	3. Loading the machine	5-3
Machine data plate ·····	0-14	4. Fixing the machine	5-4
Guide (direction, S/No, symbol) ······	0-15	5. Loading and unloading by crane	5-6
		6. Towing the machine ·····	5-7
1. SAFETY HINTS			
1. Safety rules ·····	1-1	6. MAINTENANCE	
		1. Instructions ·····	6-1
2. SPECIFICATIONS		2. Tightening torque ·····	6-5
1. Major components ·····	2-1	3. Spec of fuel, coolant and lubricants	6-8
2. Specifications	2-2	4. Maintenance check list ······	6-10
3. Weight	2-6	5. Maintenance chart ·····	6-13
4. Specification for major components	2-7	6. Service instruction ·····	6-15
		7. Electrical system ·····	6-44
3. CONTROL DEVICES		8. Air conditioner and heater	6-47
1. Cab devices ·····	3-1		
2. Cluster ·····	3-2	7. TROUBLESHOOTING GUIDE	
3. Monitors ·····	3-10	1. Engine	7-1
4. Switches ·····	3-44	2. Electrical system ·····	7-2
5. Control device ······	3-49	3. Power train system ·····	7-3
6. Air conditioner and heater	3-53	4. Hydraulic system ·····	7-4
7. Others	3-56		
		8. OTHERS	
4. OPERATION		1. Quick coupler ······	8-1
1. Suggestion for new machine ······	4-1		
2. Check before starting the engine	4-2	INDEX	9-1
3. Starting and stop the engine	4-3		
4. Warming-up operation ······	4-8		
5. Operation of the working device ·····	4-9		
6. Traveling of the machine	4-10		
7. Efficient working method ·····	4-15		
8. Adjustment of the work equipment	4-22		
9. Operation in the special work sites ·····	4-23		
10. Storage	4-25		
11. Open the engine hood ······	4-27		
12. Manually lowering the attachment	4-30		

FOREWORD

This manual contains several instructions and safety recommendations regarding driving, handling, lubrication, maintenance, inspection, and adjustment of the machine.

The manual is to promote safety maintenance and enhance machine performance.

Keep this manual handy and have all personnel read it periodically.

If you sell the machine, be sure to give this manual to the new owners.

This machine complies with the EC directive "2006/42/EC".

1. Read and understand this manual before operating the machine.

This operator's manual may contain attachments and optional equipment that are not available in your area. Please consult your local Hyundai distributor for those items you require.

Improper operation and maintenance of this machine can be hazardous and could result in serious injury or death.

Some actions involved in the operation and maintenance of the machine can cause a serious accident if they are not done in a manner described in this manual.

The procedures and precautions are given in this manual apply only to the intended uses of the machine.

If you use your machine for any unintended uses that are not specifically prohibited, you must be sure that it is safe for you and others. In no event should you or others engage in prohibited uses of actions as described in this manual.

Some illustrations in this manual show details or attachments that can be different from your machine. Covers and guards might have been removed for illustrative purposes.

- 2. **Inspect** the jobsite and **follow** the safety recommendations in the **safety hints** section before operating the machine.
- 3. Use **genuine Hyundai spare parts** for the replacement of parts.

We expressly point out that Hyundai will not accept any responsibility for defects resulting from non-genuine parts or non-workmanlike repair.

In such cases, Hyundai cannot assume liability for any damage.

Continuing improvements in the design of this machine can lead to changes in detail which may not be reflected in this manual. Consult Hyundai or your Hyundai distributor for the latest available information for your machine or questions regarding information in this manual.

BEFORE SERVICING THIS MACHINE

It is the responsibility of the owner and all service and maintenance personnel to avoid accidents and serious injury by keeping this machine properly maintained.

It also is the responsibility of the owner and all service and maintenance personnel to avoid accidents and serious injury while servicing the machine.

No one should service or attempt to repair this machine without proper training and supervision.

All service and maintenance personnel should be thoroughly familiar with the procedures and precautions contained in this manual.

All personnel also must be aware of any federal, state, provincial, or local laws or regulations covering the use and service of construction equipment.

The procedures in this manual do not supersede any requirements imposed by federal, state, provincial, or local laws.

Hyundai can not anticipate every possible circumstance or environment in which this machine may be used and serviced.

All personnel must remain alert to potential hazards.

Work within your level of training and skill.

Ask your supervisor if you are uncertain about a particular task. Do not try to do too much too fast. Use your common sense.

How to adjust the language of monitor

Users can select their preferred language and all displays are changed the selected language.



* Please refer to the page 3-34 for the monitor.


TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR

Machine Serial No.	
Engine Serial No.	
Manufacturing year	
Manufacturer	Hyundai Construction Equipment co., Ltd.
Address	12th, Fl., Hyundai Bldg. 75, Yulgok-ro, Jongno-Gu, Seoul, 03058, Korea
Distributor for North Americas	Hyundai Construction Equipment Americas, Inc
Address	6100 Atlantic Boulevard Norcross GA 30071 U.S.A
Distributor for Europe	Hyundai Construction Equipment Europe N. V.
Address	Hyundailaan 4 3980 Tessenderlo Belgium
Dealer	
Address	

SAFETY LABELS

1. LOCATION

Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

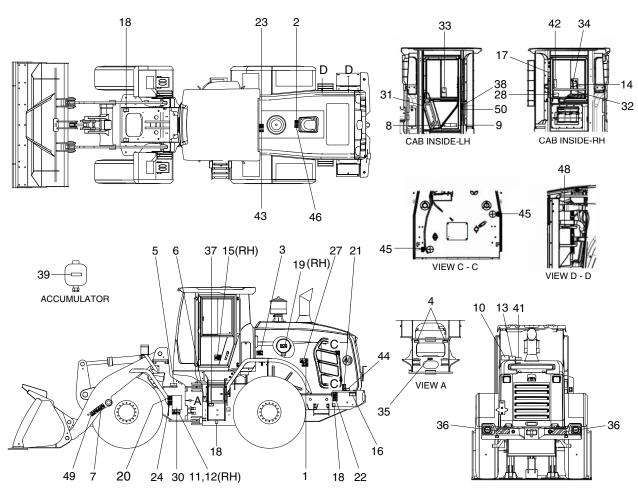

940SA0FW03

1	Start motor	16	Electric welding	34	Joystick lever
2	Turbocharger cover	17	Hammer	35	Grease (center)
3	Hyd oil level	18	Lift & tie	36	Keep clear/Reflect
4	Ride control (option)	19	Air cleaner	37	Nameplate
5	Grease (A)	20	Manual lowering valve	38	ROPS plate
6	Grease (B)	21	Fueling	39	Accumulator
7	Bucket stopper	22	Battery accident	41	Caution (water separator,
8	Max h/reach	23	Hyd oil lube		turbocharger)
9	Rollover	24	High-pressure hose	43	Fuel shut off
10	ROPS cab	27	Engine door shearing	44	Ultra-low sulfur diesel
11	Steering warning-LH	28	Alternate exit	45	Emergency fire hole
12	Steering warning-RH	30	Service instruction	46	No step
13	Engine start caution	31	Fire extinguisher	47	Refrigerant
14	Control ideogram	32	Start procedure	49	Quick coupler
15	Air conditioner filter	33	Joystick steering	50	Engine nameplate

2. DESCRIPTION

There are several specific warning labels on this machine please become familiarized with all warning labels. Replace any safety label that is damaged, or missing. If a safety label is attached to a part that is replaced, install a safety label on the replacement part.

1) START MOTOR (item 1)

This warning label is positioned on the left side of the engine hood.

▲ You should always start the engine from the operators cab. Never use objects to crossover the starter solenoid terminals or crossover the battery terminals. Crossing over terminals could bypass the engine neutral start system.Possibly over damage the electrical system.



This warning label is positioned on the turbocharger cover.

Δ Do not touch turbocharger or it may cause a severe burn. When the engine is running or immediately after engine shut down.



This warning label is positioned on the left side the of the hydraulic oil tank.


- Λ Place the bucket on the ground whenever servicing the hydraulic system.
- Check the oil level on the level gauge.
- ** Refill the recommended hydraulic oil up to a specified level if necessary.

4) RIDE CONTROL (item 4)

This warning label is positioned on the front frame.

Before checking the boom operation system,

- 1. The bucket should be laid on the ground.
- 2. Turn start switch to "ON" position and press the button on monitor to operate ride control function.
- 3. Depressurize boom head by joystick. (boom down or floating)

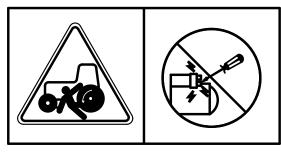

77070FW05



21070FW02



7609A0FW06

A CAUTION

Before checking the boom operation system,

- 1.Bucket should be laid on the ground.
- Turn starter switch to "ON" position and press the button on monitor to operate ride control function.
- 3.Depressurize boom head by joystick (Boom down or Floating)

970A0FW90

5) BUCKET STOPPER (item 7)

This warning label is positioned on the middle of the boom.

♠ When working under or around the bucket or linkage, with bucket raised period, Proper support must be provided for the bucket and/or the linkage.




7803AFW05

6) MAX HEIGHT (item 8)

This warning label is positioned on the left side window of the cab.

▲ Serious injury or death can result from contact with electric lines.

An electric shock is received by merely coming into the vicinity of an electric lines, the minimum distance should be kept considering the supply voltage as page 1-21.

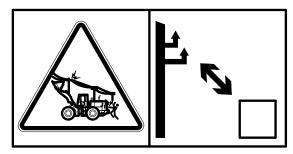


7803AFW16

7) ROLLOVER (item 9)

This warning label is positioned on the left side window of the cab.

 - ▲ Structural damage caused from an overturn, modification, alternating, or improper repair. Can weaken the structure's protection ability, thereby, voiding the warranty certification. Always wear the seat belt when operating this machine.
- Always check the condition of the seat belt and the condition of the seatbelt mounting hardware before you operatethe machine.



- ▲ No clearance for person in this area when machine turns.
- ▲ Severe injury or death from crushing could occur.



77070FW14



77070FW07

9) ENGINE START CAUTION (item 13)

This warning label is positioned on the right side window of the cab.

♠ Study the operator's manual before starting and operating machine.

ACAUTION

STUDY THE OPERATOR'S MANUAL BEFORE STARTING AND OPERATING MACHINE.



CHECK COLLANT LEVEL, OIL LEVEL, FAN BELT TENSION AND OTHER RELATED PARTS BEFORE STARTING ENGINE.

BEFORE LEAVING SEAT


- -LOWER BUCKET TO GROUND.
- -PLACE THE GEAR SELECTOR LEVER IN NEUTRAL.
- -TURN THE PARKING BRAKE SWITCH "ON"
- -RUN THE ENGINE AT LOW IDLING SPEED FOR ABOUT 5 MINUTES.
- -RETURN THE KEY OF STARTING SWITCH TO THE "OFF" POSITION

77070FW08

10) CONTROL IDEOGRAM (item 14)

This warning label is positioned on the right side window of the cab.

- ▲ Confirm the operation of the control lever and working device before operating the machine.
- ※ Refer to the page 4-9 for details.

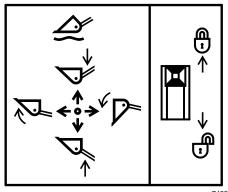


74090FW04

11) AIR CONDITIONER FILTER (item 15)

This warning label is positioned on the airconditioner filter.

Periodic and proper inspection, cleaning and changing of the filter prolongs the life of the air conditioner maintaining good performance.

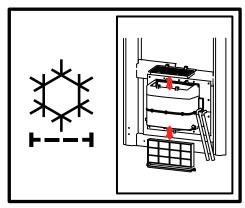

760F0FW10

12) ELECTRIC WELDING (item 16)

This warning label is positioned on the side of the battery box.

♠ Before carrying out any electric welding on this machine

- Pull the connectors out of all electronic control units.
- Connect the ground lead of the welding equipment as close to the welding point as possible.
- * Refer to the page 6-44 for details.

WARNING

- Before carrying out any electric welding on this machine
- Pull the connectors out of all electronic control units.
- Connect the ground lead of the welding equipment as close to the welding point as possible.
- · Read the instructions in operator's manual for details.

7803AFW20

13) LIFTING-EYE & TIE (item 18)


This label is positioned on the both side of the front and rear frame.

- Lifting-Eye point

To lift the machine, attach the lifting devices to the lifting-eyes.

- Tie-Down Points


To tie down the machine, attach the tiedowns to the tie-down.

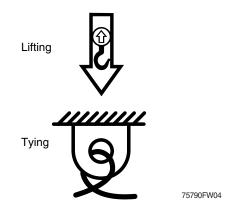

14) AIR CLEANER (item 19)

The warning label is positioned on the air cleaner.

A Periodic and proper inspection, cleaning and change of elements prolong engine life time and maintain the good performance of engine.

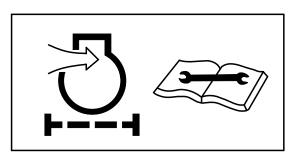


21070FW01

15) MANUAL LOWERING VALVE (item 20)

The warning label is positioned on the left side of the front frame.

- ▲ Be sure no one is under or near the attachment before lowering the boom.
- * Refer to the page 4-30.

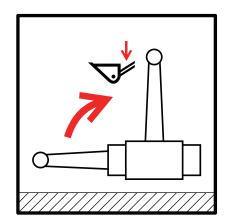


760F0FW12

16) FUELING (item 21)

This warning label is positioned on the left side of the fuel filler neck.

▲ Stop the engine when refueling. All lights or flames shall be kept at a safe distance while refueling.

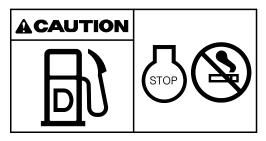

21070FW04

17) BATTERY ACCIDENT (item 22)


This warning label is positioned on the battery box.

- ▲ Electrolyte containing sulfuric acid cause severe burns. Avoid being in contact with skin, eyes or clothes. In the event of accident flush with sufficient water, call a physician immediately.
- Maintain the electrolyte at the recommended level. Add distilled water to the battery only when starting up, never when shutting down.
 - With electrolytes at proper level, less space may cause the gases to be accumulated in the battery.
- ▲ Extinguish all smoking materials and open flames before checking the battery.
- ♠ Do not use matches, lighters or torches as a light source near the battery for the probable presence of explosive gas.
- ♠ Do not allow unauthorized personnel to change the battery or to use booster cables.
- ▲ For safety from electric shock, do not battery terminal with a wet hand.

18) HYDRAULIC OIL LUB (item 23)

This warning label is positioned on the top of the hydraulic oil tank.

- * Do not mix with different brand oils.
- A Never open the filler cap while engine running or at high coolant temperature.
- ▲ Loosen the cap slowly and release internal pressure completely.

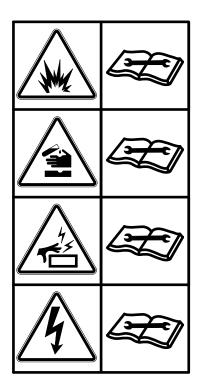

7579A0FW30



14070FW08

19) HIGH-PRESSURE HOSE (item 24)

This warning label is positioned on the left side of the front frame.

- ▲ Escaping fluid under pressure can penetrate the skin causing serious injury.
- ▲ Avoid the hazard by relieving pressure before disconnecting hydraulic lines or other lines.
- * See the maintenance section for details.




14070FW29

20) ENGINE DOOR SHEARING (item 27)

This warning label is positioned on the left side of the engine side door.

- ♠ Don't open the engine door while the engine's running. Stay clear of rotating parts.
- ▲ Don't touch exhaust pipe or it may cause a severe burn.

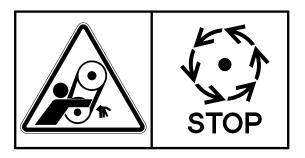


21070FW15

21) ALTERNATE EXIT (item 28)

This warning label is positioned on the right side window of the cab.

- The right window serves as an alternate exit.
- * Refer to the page 3-60.

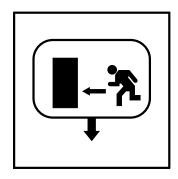

77070FW12

22) START PROCEDURE (item 32)

This warning label is positioned on the right side window of the cab.

Start Procedure

 
- 1. Start ignition on.
- Wait up to 4 seconds for grid heater operation in summer.
 (45 seconds in winter)
- 3. Start cranking.
- 4. If engine still does not start, turn the Keyswitch to OFF position.
- 5. Loosen fuel supply line at the outlet of pre-filter.
- Do hand-priming repeatedly until air bubbles comes out from fuel supply line completely.
- 7. Tighten fuel supply line to its origin position.
- 8. Recranking.
- If the engine still would not start,
 please contact the nearest HYUNDAI or Cummins dealers.

7609A0FW07

23) ACCUMULATOR (item 39)

This warning label is positioned on the accumulator of the solenoid valve.

- ** The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.
- A Never make any hole in the accumulator expose it to flame or fire.
- ♠ Do not weld anything to the accumulator. When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your Hyundai distributor.




1107A0FW46

24) CAUTION (WATER SEPARATOR, TURBOCHARGER) (item 41)

This warning label is positioned on the right side window of the cab.

 - ▲ In order to protect high pressure fuel system, please drain water in water separator before starting the engine.
- ▲ In order to prevent turbocharger failure, please allow more than 5 minutes' cool down period (no load low idle operation) before shutting the engine off.




120090SL02

25) TILT HANDLE (item 42)

This warning label is positioned on the right side window of the cab.

- The right side window can be used as an alternate exit.
- * Refer to the page 3-60.

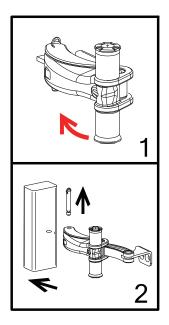

760F0FW14

26) FUEL SHUT OFF (item 43)

This warning label is positioned on the hydraulic tank.

- Fill only the hydraulic oil.
- * Do not fill the diesel fuel.
- A Relieve tank pressure with the engine off by removing the cap slowly to prevent burns from hot oil.




140WH90FW51

27) ULTRA LOW SULFUR DIESEL (item 44)

This warning label is positioned on the left side of the fuel filler neck.

- W Use ultra-low sulfur fuel only.
- With a sulfur fuel sulfur content ≤ 15 ppm
- If ultra-low sulfur diesel is not used, the after-treatment diesel particulate filter can be damaged.

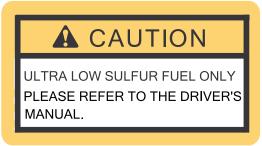

2609A0SL03

28) EMERGENCY FIRE HOLE (item 45)

This warning label is positioned inside of the engine hood inlet cover.

Refer to the page 4-28.



955TM0FW20

29) NO STEP (item 46)

This warning label is positioned on the engine hood.

▲ Don't step on the engine hood.



9800FW08

33) QUICK COUPLER (item 49)

This warning label is positioned on the middle of the boom.

- Serious injury or death can result from dropping the bucket.
- Operating the machine with an attachment switch unlocked or without a safety pin of moving hook can cause the bucket to drop off.



757TM9A0FW30

MACHINE DATA PLATE






970SAFW06

- 1 Machine type / model 2 Product identification number 3 Engine power
- 4 Operating mass 5 Maximum certified weight
- ** The product identification number assigned to this particular machine and should be used when requesting information or ordering service parts for this machine from your authorized HYUNDAI dealer. The product identification number is also stamped on the frame.

GUIDE

1. DIRECTION

The direction of this manual indicates forward, backward, right, and left when the machine is in the traveling direction.

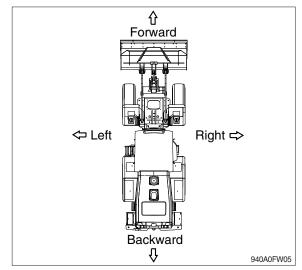

2. SERIAL NUMBER

Inform following when you order parts or the machine is out of order.


1) MACHINE SERIAL NUMBER


The numbers are located on the left side of the rear frame.

2) ENGINE SERIAL NUMBER

The numbers are located on the engine nameplate.

It is also located on the left side frame of the cab inside.

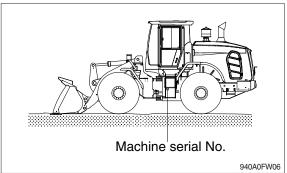

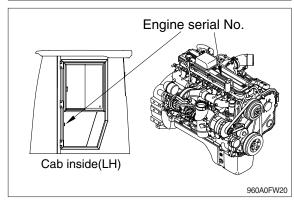

3. INTENDED USE

This machine is designed to be used mainly for the following work.

- Excavating work Leveling work
- Loading work Transporting work
- * Please refer to the section 4 (efficient working method) further details.

4. SYMBOLS

- ⚠ This Danger label indicates a high level of risk. Neglecting the warning may result in serious injury or death.
- △ This Warning label indicates a medium level of risk. Neglecting the warning may result in serious injury or death.
- * This label indicate useful information for the operator.

1. SAFETY INSTRUCTIONS

Safety Message

Intended Use

Machines should be operated by the procedure the described in the Operator manual.

The products described in the Operator manual are designed and manufactured mainly for the following purposes:

- · Loading work
- · Leveling work

Do not operate the machine for any purpose other than those stated above or in areas where there are potential risks. Make sure that you comply strictly with the safety regulations at all times. Please contact HD Hyundai Construction Equipment Co., Ltd. or your dealer for more information.

It is strictly prohibited to operate or use the machine in any of the following cases:

- · Operation by an unskilled worker
- · Lifting a worker up
- · Transporting inflammable or dangerous materials
- · Driving down or extracting piles with the bucket
- · Towing damaged vehicles

Safety guidelines

Most safety accidents related to the operation, maintenance/inspection, and repair of the machine result from a failure to comply with the safety instructions or to take adequate preventive measures. Safety accidents can be prevented by eliminating potentially hazardous situations. The operator should attend all mandatory training courses on the operation of the machine, and fully understand how to use the tools.

Improper operation, refueling, inspection or repair of this machine may cause serious injury or death.

Do not attempt to operate, refuel, inspect or repair this machine before reading and understanding the product information on such tasks.

This manual describes preventive measures and warnings about the product.

Failure to comply with the warnings about potential risks may result in serious injury or death.

General Safety Information

Unauthorized modification

Any attempt to modify the machine, including the use of unauthorized accessories or spare parts, may have adverse effects on the conditions of the machine and its ability to function as it was designed. Do not attempt to modify the machine in any way without the written consent of the company in advance. The company bears the right to disclaim all quality assurance of a product that is modified without its advance approval.

Never modify the operator's cabin by welding, grinding, drilling holes, or adding attachments unless instructed by HD Hyundai Construction Equipment in writing. Changes to the cabin can cause loss of operator protection from roll-over and falling objects. Can result in death or serious injury.

If the user performs unauthorized modification of the product, the user shall fully be responsible for any damages to the machine resulting from the effects of such modification.

- The attachment, the accessory, or the spare part has been made or distributed by HD Hyundai Construction Equipment and has been installed according to approved methods described in a publication available from HD Hyundai Construction Equipment.
- 2. Any modification should be approved by the company in writing.

ROPS/FOPS

The cabin is designed to guarantee sufficient space to minimize impacts according to ISO 3471 of Rollover Protective Structures (ROPS). If any additional devices are installed that exceed the Max. certified weight indicated on the ROPS nameplate, the ROPS certification may be nullified. The protective structure of the cabin should be replaced immediately if it is permanently deformed or damaged.

Machines operated in areas where there is a risk of objects falling onto the cabin are fitted with a Falling Object Protective Structure (FOPS) according to ISO 3449.

Fire and Explosion

Preventing fires

The following actions should be taken to minimize the risk of fire:

- Do a visual inspection before operating the machine to check for any risk of fire.
- · Do not operate the machine if there is a risk of fire.
- Be sure to identify the primary exit and alternative exit of the machine, and fully understand how to use the exits in the event of a fire.
- Do not perform any welding or drilling work on the engine cover
- · Keep the engine compartment free from the buildup of flammable materials such as dead leaves, small branches, paper, and other types of trash.
- Keep the covers of the major parts of the machine closed.
 Make sure that the covers operate normally in order to be able to use firefighting equipment in the event of a fire.
- · Be careful when handling fuel. Fuel is a highly flammable.
- · Always stop the engine when refueling the machine.
- · Refuel outdoors.
- Remove any build-up of flammable materials from the machine.
- Do not operate the machine near a flame.
- All fuels and most lubricant and coolant mixtures are flammable materials, so special care should be exercised when handling such materials to prevent fire and explosion.
- · Keep all fuels and lubricant in adequate containers.
- Never smoke in the area where refueling is taking place or in the space for handling battery electrolytes and other flammable materials.
- Oil leaked to a hot surface or electronic component may cause a fire.
- Do not operate the machine if there is an oil leak.
 Repair the source of the oil leak, and wipe clean any leaked oil before operating the machine.
- Always clean all electrical lines, connectors, and clamps, and check whether they are securely connected on a regular basis.
- If any electrical wire or connector is loose or damaged, repair it immediately.
- Do not weld, cut or use a cutting torch through any tubes or lines in which flammable flows. Check all tubes and lines for signs of abrasion or deterioration and replace if damaged.
- Dust or particles generated when repairing the nonmetallic hood or fender are flammable or explosive.
 Repair such parts in a well ventilated area well away from flames or sparks, and be sure to wear suitable PPE (Personal Protective Equipment).











Prevention of explosion

The following actions should be taken to minimize the risk of explosion:

- Preheating function is provided to certain machines that are used in extremely cold environments.
- Never use starting aid fluid in a low-temperature environment as it can environment as it can harm the engine the engine performance and may cause an explosion.
- Do not attempt to recharge a frozen battery. Forcibly recharging a frozen battery may result in an explosion. Great care should be exercised when handling the batteries. Never let a tool make contact with the positive pole and the frame of the machine simultaneously.
- Sparks maybe generated, resulting in an explosion.
 The voltage of the battery to be recharged should be identical to the voltage of the recharger.
- Incorrect voltage may cause overheating and explosion.

 Do not use or charge the battery if the level of electrolytes in the battery is lower than the minimum level.

 Regularly check the electrolyte level, and refill the distilled water to the maximum level.

Do not try to start the engine using an unsuitable booster cable as it may result in an explosion and serious injury. Only use the booster cable to start the engine in a ventilated open space, as starting the engine with a booster cable may generate inflammable gas.

When hydraulic equipment and piping are overheated, flammable gas or airborne particles may explode. Make sure to protect and insulate such parts to prevent over heating.







Corrective Actions Before and After a Fire

In the event of a fire in the machine, the top priority should be the safety of the operator and workers in the work area. In the event of a fire at a level that does not endanger the operator or workers, the following actions should be taken:

- Move the machine well away from any inflammable materials (e.g., fuel, engine oil, clothes, and bits of wood) and adjacent buildings.
- If the engine is running, it may cause a persistent fire. Immediatly stop the engine.
- In the event of an electric short, disconnect the batteries
 to eliminate the main ignition source.
 In the event of an electricity leak resulting from damage to
 the power wiring caused by fire, disconnect the batteries
 to eliminate the secondary ignition source.

If a fire becomes too large to control, assess the following risks:

- If the machine is equipped with wheels, there is a risk of tire combustion and explosion. If exploded, hightemperature fragments may scatter.
- The tank, accumulator, hose and fitting may burst into flames, splashing fuel and scattering particles throughout the surrounding area.

If you have to handle a machine that has been damaged by fire or one that is exposed to excessively high heat after extinguishing a fire, take the following precautions:

- Wear thick protective gloves and protective goggles.
- Never touch any materials left after combustion with your bare hands.
- Avoid contact with melted polymer materials (e.g., plastics).





Information on fire extinguisher

Fire extinguishers (if equipped) should be kept in a fully operable condition, and be inspected by a qualified person on a regular basis. Workers should complete a training course on the use of fire extinguishers in advance.

Use fire extinguishers in accordance with the following procedures, if required:

- ① Pull the safety pin of the fire extinguisher first.
- ② Extend the nozzle, and stand toward the fire.
- ③ Aim the nozzle at the flames, and firmly press the top and bottom handles.
- 4 Stand in a downwind position, and evenly spray the foam over the flames.

If the weight of the fire extinguisher exceeds 4.5 kg, mount the extinguisher in a location near the bottom of the cabin. Do not mount the fire extinguisher at a level higher than one third of the height of the cabin.

Do not weld or drill ROPS to mount a fire extinguisher. Contact your dealer or distributor for more information about the correct mounting of fire extinguishers.



Health and Safety

Personal protective equipment

The wearing of personal protective gear is mandatory for protecting the human body from hazardous chemicals and hazardous environments.

The wearing of personal protective gear is a means of preventing injury, and should not interfere with the performance of jobs. It is designed to protect the human body from hazardous environments and hazardous materials, and should be kept in an easily accessible place.

List of personal protection gear

Name	Symbol	Remarks
Safety helmet		Protects the head from falling objects, and reduces risks when falling down.
Dust mask		Air-purifying dust mask should not be worn in workplaces with an oxygen concentration of less than 18%.
Gas mask		Prevents the inhalation of mist, airborne particles, or protects against the spray of hazardous chemicals.
Welding helmet		Blocks airborne dust and slag, and shields the face from bright light during welding.
Protective clothing	n	Blocks dust, mist and hazardous chemicals, and protects against burns.
Protective gloves		Electric insulation gloves: Should be worn when working in areas with a high risk of electric shock. Chemical protective gloves: Should be worn when working in areas where there is a risk of contact with hazardous chemicals including materials leaked from batteries.
Protective goggles		Protects the eyes from dust, particles and airborne materials in work areas.
Earplugs and earmuffs		Wear earplug and earmuffs separately or in combination depending on the level and duration of noise.
Safety shoes		Protects the feet from falling objects, impacts, and sharp objects.

Health and safety instructions in hazardous environments

Comply with the following instructions during operation and maintenance of the machine.

When handling oil

Failure to wear personal protection equipment may result in burns caused by contact with a high-temperature liquid. Make sure you wear protective goggles, protective gloves and protective clothing when handling oils such as hydraulic oil and engine oil.

If the eyes come into contact with oil, wash them with a sufficient amount of water for 15 minutes or longer. If the skin comes into contact with oil, take off contaminated clothes and shoes, and wash the skin with soap and water for 15 minutes or longer.



When handling the battery

If battery electrolyte leaks while handling the battery, the sulfuric acid contained in the electrolyte may cause burns. The lead components in battery electrolyte are toxic, so be sure to wear protective gloves and protective clothing. Do not forget to wash your hands after handling the battery.

If a part of your body not protected by personal protective equipment comes into direct contact with battery electrolyte, immediately wash the affected part with flowing water for 20 minutes or more, and then see a doctor without delay.

If you accidentally swallow battery electrolyte, drink lots of water and do not forcibly induce vomiting, and then see a doctor without delay.



When hanlding refrigerant

Make sure you wear protective goggles, protective gloves and other personal protective equipment when handling refrigerant to prevent direct contact of the skin with the refrigerant. Wear protective gloves made of materials that are resistant to chemicals (such as neoprene and butyl rubber).

Never smoke when handing refrigerant.

If refrigerant comes into direct contact with the skin, wash the skin with warm water immediately.



When handling coolants

After operation of the machine the coolant is of high temperature and high pressure, and is retained inside the engine radiator and the heater line. Direct contact of the skin with the coolant may result in serious burns. Open the cap of the radiator only after the engine has sufficiently cooled and the pressure has reduced to a safe level.

Coolant contains toxic and combustible ethylene glycol, and should be handled in a cool, well-ventilated place only when wearing protective goggles, protective gloves, protective clothing, and a gas mask.

Avoid inhaling airborne particles or spray from coolant. If the substances make contact with skin or eyes that are not protected by personal protection gear, immediately wash the skin and eye with flowing water for 20 minutes or longer.





When working in a place subject to airborne particles and falling objects,

Make sure you wear a safety helmet, protective goggles and safety shoes to prevent injury from such particles and objects. Earplugs or earmuffs may be necessary when working in a noisy place.



When working in places with a high level of noise

When the operator is exposed to the noise exceeding 90 dB (A) for 8 hours or longer, wear earplugs or earmuffs.




Personal protection gear for various situations

Situation	Symbol
Oil handling	
Battery handling	
Refrigerant handling	
Coolant handling	
Repair by welding	
Working in areas subject to airborne particles and falling objects	
Working in places with a high level of noise	
Handling machines damaged by fire or exposed to excessively high temperature	

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

- Do not wear loose clothing and accessories.
 Secure long hair. These items can snag on controls or on other parts of equipment.
- · Do not wear oily clothes. They are highly flammable.
- · Wear a hard hat, safety shoes, safety goggles, mask, leather gloves, earplugs and other protective equipment, as required.
- · While working on machine, never use inadequate tools. They could break or slip, or they may not adequately perform intended.

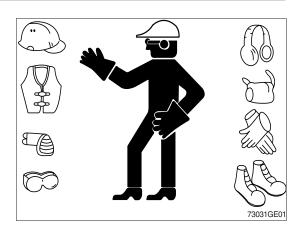

Noise and Vibration

Information on vibration

This section describes the vibration data of the machine, and methods of calculating the vibration level.

The vibration level of the machine varies according to any of the following conditions:

- Driving habits of the operator (i.e. aggressive/mild temperament when driving)
- · Quality of seat and suspension
- · Type of machine, attachments, and conditions of machine
- · Conditions of work site, working environment, ground surface conditions, and weather

Vibration also varies according to the duration of operation. Accordingly, it is not possible to precisely calculate the vibration level of the machine; however, it is possible to predict the level.

Physical Agents Directive 2002/44/ECdefines the exposure action value as 0.5m/s², and the exposure limit value as 1.15 m/s². If the predicted value is near the exposure action value or exposure limit value, the predicted value should be assumed to exceed the two latter values, and necessary action should be taken.

As regards the actions to take according to vibrations, refer to the following table :

Daily vibration exposure (A(8))	Vibration exposure range	Actions to be taken
$A(8) \le 0.5 \text{ m/s}^2$	Exposure action value or lower	When approaching the exposure activity value, reasonable measures should be taken to minimize exposure to vibration. The relevant information and opportunities for training on vibration reduction should be provided to the operator.
$0.5 \text{ m/s}^2 < A(8) \le 1.15 \text{ m/s}^2$	Exceeding the exposure action value, but not exceeding the exposure limit value	reducing exposure to and risks of vibration to
1.15 m/s ² <a(8)< td=""><td>Exceeding the exposure limit value:</td><td>Immediate action is required to reduce the vibration exposure level to below the exposure limit value.</td></a(8)<>	Exceeding the exposure limit value:	Immediate action is required to reduce the vibration exposure level to below the exposure limit value.

The vibration level can be predicted based on the information in the following table which is used to calculate the daily level of vibration exposure.

Predict the vibration level in the three vibration directions of axes X, Y, and Z. The mean vibration level should be used under normal operation conditions. Scenario factors from mean vibration level based on operation by skilled operator and on smooth terrain are excluded. Scenario factors are included to obtain the mean vibration level based on aggressive operation and severe terrain to assess the expected vibration level.

* All vibration values are indicated in m/s².

Instructions on mitigating vibration

Machines should be correctly adjusted and maintained to ensure smooth operation. The terrain conditions should be observed. The following instructions will help reduce the whole body vibration level:

- ① Use machines and attachments of the correct types and sizes.
- ② Maintain the machines pursuant to the manufacturer's recommendations.
 - · Brake and steering systems
 - · Controls, hydraulic system and linkage
 - · Tire pressure
- ③ Maintain and provide good terrain conditions.
 - · Remove any large rocks or obstacles.
 - · Fill gutters or holes.
 - Keep the vibration level minimal by adjusting the speed and driving path
- 4 Use a driver's seat that satisfies ISO 7096.
 - · Adjust the driver's seat and suspension for the weight and the size of the operator.
 - · Inspect the suspension and adjusting devices of the driver's seat.
- ⑤ Perform the following maneuvers without using excessive force :
 - Steering
 - · Braking
 - Accelerating
 - · Gear shifting
- (6) Move the attachments smoothly.
- Adjust the speed and path of machine to keep the vibration level minimal.
 - Operate the machine so as to avoid obstacles and rough terrain.
 - · Decelerate the machine when driving on rough terrain.
- Keep the level of vibration minimal when working for a long time or driving for a long distance.
 - · Use a machine mounted with suspension system.
 - · Use the machine's drive control system (optional).
 - If the machine is not fitted with a drive control system, reduce the speed.
 - Transport the machine when moving between worksites; do not drive the machine to get to another worksite.

- The operator's convenience may be reduced by various risk factors. Comply with the following conditions to effec- tively ensure the operator's comfort and convenience.
 - · Adjust the driver's seat adjustment device to allow a convenient posture.
 - Adjust the angles of the mirrors to minimize awkward, compromised posture
 - · Avoid working for an excessively long time, and take regular breaks.
 - · Do not jump on or from the cabin.
 - · Minimize repeated handling of loads and lifting of loads.
 - The vibration information and calculation procedures are based on <ISO/TR 25398>, which has been defined according to the emission of vibrations measured under the actual working conditions of the machines.

Information on noise

Noise level (EN 474-1:2018 and 2000/14/EC) are as follows:

 \cdot Sound pressure level (LpA) : See pages 0-3.

 
· Sound power level (LwA) : See pages 0-3.

 
Emergency situations

In the event of an emergency situation, use the emergency hammer installed inside the cabin to break the windshield of the cabin, and carefully escape from the cabin. The emergency hammer should always be kept inside the cabin for emergencies, and should not be removed or used for other purposes. If the emergency hammer is lost, replace it immediately.

Keep a first-aid kit inside the cabin or in another place at the worksite for safety accidents.

Keep contact information (e.g., phone number) to request help with an emergency situation or injury.





Safety Information on the Machines and Operation


Before Operating the Machine

Visual inspection shall be performed for identifying potential hazards and obstruction of visibility around the machine.

Carefully examine the following conditions and take the necessary actions, if required, to prevent risk factors before operating the machine:

Checking the worksite

- Check the weather condition at the worksite (e.g., fog, rain, etc.). Fog or heavy rain may narrow the operator's field of vision, or render the machine inoperable. In particular, the operator should bring the bucket down to the ground in the event of thunder and lightning, and evacuate to a safe place.
- Check the worksite for obstacles, and avoid collisions with such obstacles during operation. Check the surroundings of the machine for any obstacles that may hinder operation.
- Check the worksite for buried waterlines, telecommunication cables, power cables and oil pipelines in advance, and avoid damaging them.
- If the terrain of the worksite is too rough for normal operation of the machines, flatten the terrain before operating the machines. Make sure that the ground of the worksite is not soft as it may cause hazards during operation.
- If the worksite is a marshy place (e.g., shallow river, large or small lake, swamp, etc), check the conditions and the depth of marshy areas, and the flow rate before driving or operating the machines. Do not operate the machines underwater.
- Do not operate the machines on cliffs or at the end of a road on soft ground as the machine may overturn.
- When operating the machine in areas with pedestrian or vehicle traffic, or in a zone in the vicinity of such an area, appoint workers exclusively responsible for controlling the traffic, or install fences or blocking wall to separate the worksite from the traffic area. Workers responsible for vehicle control in the traffic area or exposed to public vehiclar traffic shall be worn with warning vests or clothing made of reflective or high-visibility materials. Prevent unauthorized workers or machines from accessing the worksite.

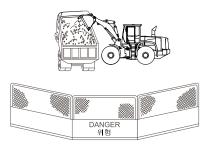

Operator conditions to be checked before operating the machine

- The machine shall be operated by authorized and skilled operators only.
- The operator should wear clothes and personal protection gear that are appropriate for the work environment.
- The operator should only be permitted to operate the machine under normal conditions after checking the state of the operator. Operator under the influence of alcohol or drugs, or an extremely exhausted operator should not operate the machine.
- The operator should read and fully understand the operator's manual before operating the machine.
- The operator should fully understand the details and procedures of the work to be performed.
- · If a risk of a safety accident is suspected, consult sufficiently with the responsible worker, and only perform the work after taking the necessary preventive measures.



Machine conditions to be checked before operating the machine

- When defects make continued operation hazardous to operator and workers around the worksite, the defective items of the machine shall not be operated and placed in a designed area posted for that purpose, or a tag or other effectice method of marking the defective items shall be used to prohibit further use untile the defects are corrected.
- If damaged windows obscure visibility necessary for safe operation, or crated hazard to the equipment operator, the windows shall be replaced or corrected.
- Check the machine for abnormal noise, vibration or heat, and for the leakage of engine oil, hydraulic oil, fuel or refrigerant.
- Remove any substances (e.g., inflammable materials such as wooden chips, dead leaves, and pieces of paper) from the engine and the battery. The buildup of such substances may cause a fire
- Do not operate a machine that needs repairing without taking actions for repair.
 Operate the machine only after making sure that the regular inspection and service recommended in the operator's manual have been executed.
- Adjust the operator's seat to suit the physical condition of the operator. Check the seatbelt for damage, and replace it if damaged. Do not store unnecessary objects or tools in the cabin.
- Keep clean all parts related to the visibility, such as the windshield and rearview mirror. In particular, adjust the rearview mirror to ensure that the operator's field of vision is clear.
- Check the acoustic alarms (e.g., the horn and warning signal when driving backward or moving) for normal operation.



During Operation of the Machine Getting on and off

- Do not jump on or off the machine.
 Do not try to get on or off the machine while it is moving.
- Get on or off the machine using the handrail and step (or stepladder, if any). Always keep the handrail and step clean and free from mud or oil.
- · Wear anti-slip shoes.
- Comply with the principle of three-point contact* by contacting the machine with either both hands and one foot or vice versa when getting on or off the machine.
- · Do not sit on a seat not suited or intended for sitting.
- * Three-point contact means making contact with the machine with both hands and one foot, or with one hand and both feet.





During operation

- The operator should start the engine only after sitting on the operator's seat. Make sure that all levers are shifted to the neutral position before starting the engine.
- If there are any obstacles at the worksite, pay attention to prevent collision of the machine with such obstacles, particularly when turning and moving backward. Make sure that there are no obstacles when turning and moving backward.
- When lifting a load, the capacity of the machine and the size and weight of the object to be lifted must be considered. Do not lift a heavy object with slings by suspending the slings on the tooth of the bucket.
- · Do not allow any worker to stand under the bucket.








Operation on a slope

Comply with the following conditions when operating the machine on a slope:

- Do not work on slopes of 10° or more.
- The maximum climbing angle of the machine on a slope is 30°. Do not operate the machine at an angle exceeding this value.
- If operation of the machine on a slope is unavoidable, perform the work after flattening the ground.
- When operating the machine laterally on a slope, there is a high risk of machine overturning or slipping. Do not operate the machine in such conditions.
- Do not operate the machine on a slope covered with wet grass or a thick layer of dead leaves, as the machine may slip.
- Do not park or stop the machine on a slope.
 If parking or stopping the machine on a slope is unavoidable, bring the bucket down to the ground, and support the wheels with wheel chocks.
- When traveling up a slope, operate the machine at a slow speed with the attachment extended forward to keep the machine balanced, and with the bucket raised at least 20 ~30 cm from the ground.
- Never travel down a slope in neutral. Keep the bucket 20~30 cm above the ground and use the bucket as a brake in an emergency situation.
- · If the engine suddenly stalls, immediately bring the bucket to the ground.
- If the fuel gauge reaches the red zone while operating the machine, immediately refill with fuel. (If the machine operates on a slope under these conditions, air may be introduced into the engine, causing it to stall suddenly.)




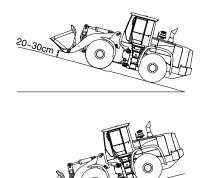

Cautions to Be Taken When Driving the Machine

- · If you operate the machine with the parking brake on, it may cause serious damage to the parking brake disk.
- · Select the appropriate gear for the driving speed.
- Do not change direction when driving the machine at max. speed as this may cause serious damage to the transmission.
- · Only drive the machine for short distances on the road.
- Make sure you fully comply with the local road traffic regulations and legislation of your country when driving on the road.
- · Please note that the machine is wider and travels at a lower driving speed than other vehicles on the roads.
- · Pay attention to any vehicles behind your vehicle, and allow them to overtake your vehicle safely.
- · Check the following conditions before driving the machine on the public road:
 - Remove any dirt and sand from the machine.
 - Empty the bucket and move it to the driving position (40~
 50 cm above the ground) and fix it.
 - Close the windshield. Turn the working light off.
 - Wear the seat belt.
 - Use the lighting devices, such as the headlights, emergency warning light and rotating beacon, pursuant to the local road traffic legislation.
 - Pay attention to people in the vicinity of the machine.
 - Do not operate the machine on roads or bridges where the machine exceeds the weight limit.
 - Familiarize yourself fully with the width, length and height of the machine.
 - Check the tire pressure.
 - When traveling for a long distance, stop the machine after every 40 km or on an hourly basis, and take a break
 - Check the level of fuel and coolant.
 - Never shift the gear to the neutral position when driving down a slope.
 - Changing direction when operating the machine on a slope is dangerous.
 - Do not drive on a slope of 30° or more.
 - Drive slowly when traveling the machine on rough terrain or moving over obstacles.
 - Install chains on the tires when operating the machine on slippery roads covered with snow or rainwater, and do not attempt to start, stop or turn the machine suddenly.
 - Be sure to avoid any obstacles when traveling the machine on paths.

 Driving position




Operations to be avoided or prohibited

- Pay attention when operating the machine in an enclosed space as this may result in the risk of a buildup of hazardous gases.
- · If the machine is operated in the vicinity of a high-voltage line, there is a risk of death or serious injury.
- Make sure you are fully aware of the height and working radius of the machine, and maintain the minimum safety distance.


Voltage	Minimum safety distance
6.6 kV	3 m (10 ft)
33.0 kV	4 m (13 ft)
66.0 kV	5 m (16 ft)
154.0 kV	8 m (26 ft)
275.0 kV	10 m (33 ft)

 - · In the event of contact with a high-voltage line, keep sitting on the operator's seat until the electric current has been shut down.
- · Warn any workers on the ground in the vicinity of the machine not to make contact with the machine.
- · If leaving the machine is unavoidable, jump down to a place free from any contact with the machine.
- Do not operate the machine too close to the edge of cliffs, overhangs and deep ditches for preventing falling down or tipping over. Avoid operating on loose ground, especially the ground near ditch is likely to collapse. Pay special attention when it is raining as the heavy rainfall may soften the ground.
- Avoid operating the machine on soft ground, a slope or cliff as there is a risk that it may overturn. Pay special attention when it is raining as the rainfall may soften the ground.
- When operating or driving the machine underwater, check the floor conditions, depth of water and flow rate, and make sure that the top roller and axle housing are not immersed in water.
- Do not operate the machine under adverse weather conditions caused by overcast skies, snow, and rainfall.
- Do not turn or travel the machine when the bucket is stuck in the ground.
- Do not excavate too deeply under the front of the machine for preventing from falling or tipping over.



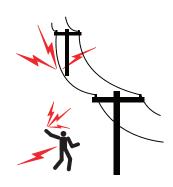





Cautions when operating in specific areas

Operating in extremely cold environments


- Do not attempt to start, stop or turn the machine suddenly as this may cause it to slip. There is potential for the machine to slip.
- Snow-covered or frozen ground may be slippery and dangerous.
- · Idle operation of the machine may be required to elevate the engine temperature during startup.
- An impact resulting from a sudden movement of the boom or the attachments at an extremely low temperature may cause serious damage to the machine.
- The working cycle or loading weight might be reduced to lower than those under normal conditions.
- · Check the following conditions before operating the machine:
 - Warm up the engine for 3~4 seconds when starting up the engine.
 - Always fully charge the battery. A discharged battery will freeze earlier than a fully charged battery.
 - Use engine oil and fuel that are appropriate for the temperature.
 - Keep the fuel tank full.
 - Remove any moisture from the fuel tank, and change the fuel filter regularly.
 - If the fuel filter is frozen, the flow of fuel may be blocked.
 - Pour the proper volume of antifreeze into the coolant.
 - Wait until the various parts of the machine reach the operating temperature after starting the engine.
 - Make sure that every controller and function of the machine operates normally.
 - Remove any dirt, snow and ice from the machine after completing the operation, and park the machine on a wooden pallet.

Operating in extremely hot environments

Continuous operation of the machine for a long period of time may cause the machine to overheat. Pay special attention to prevent the overheating of respective parts such as the engine and the hydraulic system, and stop the machine and take a break if necessary.

Check the following conditions frequently:

- Check the level of the coolant in the radiator.
- Check the radiator grill for clogging by foreign pollutant, and remove them, if any.
- Check the level of the battery electrolyte.
- If the battery will not be used for a long period of time, store it in a cool place.
- Check the hydraulic system for oil leakage.
- Check the lubrication oil on the respective parts, and top up the oil if necessary.
- If the paint coating of any parts has been effaced or damaged, coat the parts with paints or treat them with an anti-rust additive.
- Do not park the machine under direct light for a long period of time.
- When parking or storing the machine outdoors, use the proper cover to protect the machine from sunlight and dust.

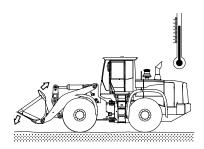

Operating in dusty or sandy environments

- Check the radiator grill for clogging by pollutant, and remove them, if any.
- Check the fuel system, and protect it from dust or sand when refueling.
- · Inspect the air cleaner regularly, and replace it if necessary.
- If the gauge lamp on the dashboard lights up and the buzzer sounds at the same time, clean or replace the air cleaner independently of the usual inspection cycle.
- Frequently check consumables such as hydraulic oil and lubrication oil, and change them if necessary. Pay attention care to prevent the introduction of dust or sand when changing the consumables.
- Check the air-conditioner and the heater filters regularly, and clean or replace them if necessary.
- · When parking or storing the machine outdoors, use the proper cover to protect the machine from dust and sand.

Operating in rainy or humid environments

- Do not operate the machine in areas where there is heavy rainfall or thick fog.
- If operating the machine in such areas is unavoidable, perform operation after ensuring sufficient field of vision.
 - Use lighting devices such as the head lamp and working light.
 - Warn any workers within the radius of operation of the machine.
- Pay attention when operating the machine on smooth ground as there is a risk of it overturning.
- · If the paint coating on any parts has been effaced or damaged, coat the parts with paints or treat them with an anti-rust additive.

Operating the machine in coastal areas

- Special care should be taken when operating the machine in coastal areas as exposed parts may be corroded easily.
- If the paint coating on any parts has been effaced or damaged, coat the parts with paints or treat them with an anti-rust additive.
- · Perform inspection and maintenance of the parts promptly.

Cautions during maintenance

Tools

- · Use the correct tools for each type of work.
- · Using improper tools may damage the machine and its parts.
- Using deteriorated or damaged tools may result in bodily injury.

Inspection and servicing

- Prevent access to the machine by all unauthorized workers (other than those authorized during operation of the machine).
- In the event of an inspection park the machine in a flat area and attach it with an 'Under Inspection' sign.
- Clean the machine before inspection or maintenance.
 - When performing inspection or maintenance on a dirty machine, it may be difficult to diagnosis or detect the cause of a problem with the machine, if any.
- Dust or dirt accumulated on the machine may cause a worker to slip or fall.
- Wear protective goggles and protective clothes when cleaning the machine using a compressed water jet.
- Do not spray water directly on sensors or electric connectors (sensors or electrical connection units, etc.). If water gets into the electrical system, it can cause operational problems.
- · Use proper lighting devices when operating the machine in a dark area.
- Use lighting devices that satisfy the explosion-proof requirements when handling inflammable materials such as fuel and hydraulic oil.
- Never attempt to use a direct flame such as a cigarette lighter in lieu of the lighting device.
- Check the level of the cooling water after stopping and sufficiently cooling down the engine.
- Sufficiently relieve the inside pressure before opening the cooling water cap.
- The cooling system contains basic components. Pay attention to prevent the skin or eyes coming into contact with the basic components.
- Pay attention to protect the body from contact with hot fluid or parts.
- Replace the filters only after stopping off and sufficiently cooling down the engine.
- · Slowly remove the hydraulic oil filter plug to relieve the inside pressure.
- Relieve the pressure from the hydraulic system before disconnecting the lines and fittings.









Collision or cutting

- · Never open or remove the engine hood while the machine is in operation.
- · Two workers should perform the job while the engine is running:
- · One worker should be ready to operate the machine or to turn the engine off from the cabin.
- · Keep areas in the vicinity of rotating or moving parts clean.
- · Keep articles in the vicinity of the fan clean.
 - Wear safety gloves when handling the wire cables.
 - Wear protective goggles and protective clothes, if required.

Preventing fire and explosion

- · All fuels and most lubrication oils and coolant mixtures are inflammable materials, so special care should be exercised when handling such materials to prevent fire and explosion.
- · Oil that leaks on to a hot surface or electronic components may cause a fire.
- · Keep all fuels and lubrication oils in adequate containers.
- · Do not smoke while refueling fuels, or at the refueling point.
- · Do not smoke in a space where battery electrolyte and other inflammable materials are handled.
- · Always keep all electrical lines, connectors, and clamps clean, and check whether they are securely connected on a regular basis.
- · If any electrical wire or connector is loose or damaged, repair it immediately.
- · Do not weld or cut with gas cutter pipes or tubes that contains flammable fluids.

Cautions on decoupling the attachments

- · Do not allow unauthorized workers to access the machine.
- · Place the operating machine in a safe position.
- · Install safety fences around the operating machine.











Repair by welding

- Perform repairs by welding in an area where adequate facilities for welding are available.
- Welding work may be subject to risks of gas leak, flame and electric shock.
 - Welding should be performed only by a qualified welder.
- . Take the following precautions when welding:
 - Separate and remove the battery to prevent battery explosion.
 - Perform direct heating in a place free from the risk of explosion.
 - Cover parts such as rubber hoses subject to damage by welding with flame-resistant materials.
 - Wear a welding helmet, protective clothes, protective gloves, and safety shoes.
 - Perform welding work in a well-ventilated place.
 - Remove all inflammable materials from areas in the vicinity of welding work.
 - Provide fire extinguishers.

Precautions to take when working on the machine

- · There is a risk of falling when working on the machine.
- · Keep the area around the workers' feet clean and tidy.
- · Do not spill oil or grease.
- · Do not leave tools lying on the floor.
- · Be careful on the floor when moving.
- · Never jump from the machine.
- When getting off the machine, use the step or handrail and get off the machine while keeping to the principle of threepoint contact.
- · Wear protective clothes if necessary.
- · Do not perform maintenance work in an area where no anti-slipping pads have been installed.
- Replace anti-slipping pads and step treads with new ones if they have deteriorated or no longer function.







Cautions when working with the high-pressure line or hose

- · Make sure that the internal pressure is released before replacing or checking the high-pressure line or hose.
- · If the internal pressure is not released, serious injury may result.
- · Be careful in the following conditions:
 - Provide fire extinguishers.
 - Leaked oil may penetrate the skin or cause serious injury.
 - Never check for oil leaks with your bare hands.
 - Check an oil leak using a wooden plate or cardboard.
 - Never bend or hit the high-pressure line hard.
 - Do not install a bent or damaged line or hose.
 - Make sure that all of the clamps and protective devices are properly installed.
- Check the pipes and hoses regularly and replace any damaged parts if necessary.



Cautions on inspecting the tire

- · Always keep the tires inflated to the proper pressure.
- Overheating or rupture of the tires may result in serious injury.
- Repairing or changing the tires requires exclusive facilities and expertise. Please contact a professional tire repair shop if repairs are necessary.

Cautions on inspecting the counterweight

- Never stand beneath the counterweight when installing or removing it.
- Make sure that the status and conditions of the lifting device are normal.



Battery

- · The battery contains flammable materials.
- · Never smoke in the vicinity of the battery.
- The battery electrolyte is strong acid. Pay attention to prevent the skin and eyes from coming into contact with the electrolyte.
- If the battery electrolyte accidentally comes into contact with the body or clothes, immediately wash off the electrolyte with water.
- · If the battery electrolyte is frozen, do not use other devices to start the engine up.
- Always wear protective goggles and protective gloves when working on the battery.
- · Always keep the switch in the 'OFF' position when working on the battery.
- · Securely fasten the battery cap.
- Always disconnect the battery from the machine before charging the battery.
- · Disconnect the cathode (-) first when removing the battery.
- · Connect the anode (+) first when connecting the battery.
- Follow the safety procedures when jump starting or charging the battery. Improper connection of the cable may result in an explosion and serious injury.
- · Use a voltmeter when inspecting the charging system.
- Regularly inspect the battery cable, and replace it if damaged.
- A battery cable with exposed wires may cause a short if it comes into contact with the grounding surface.
- A short circuit of the battery cable may cause heat from the battery current and result in a fire.
- If the wires of the ground cable are exposed between the battery and the master switch, the exposed wires make contact with the grounding surface and the current may bypass to the master switch. This may destabilize the machine operation.

Repair or replace the part before operating the machine.

Battery disconnection switch

- Do not turn off the battery disconnect switch while engine is running. There is a risk of damaging electrical system.
- The battery disconnect switch can be found under the left-hand door of the machine.
- Make sure to turn off the battery disconnect switch when welding or servicing electrical systems, and before clocking out.

Switchboard

- The relay and fuse can be found on the switchboard at the rear of the cab.
- Do not use the fuse that has a higher amperage than indicated on the decal. There is a risk of damaging electric circuits or catching fire.









 
Parking and Storage

Cautions on parking

- · Park the machine on the flat ground as possible.
- If parking the machine on a slope is unavoidable, use wheel chocks to prevent the machine from moving.
- · Bring the bucket right down to the ground.
- Make sure that all of the switches are turned to the 'OFF' position.
- Make sure that all of the controllers are turned to the neutral position.
- · Activate the parking brake.
- · Stop the engine, and withdraw the ignition key.
- · Close and lock the windshield, door and cover completely.
- Install fences around the machine when parking it on a public road, and put up a warning sign.


Cautions on storage for a long period of time

- · Park the machine in accordance with the cautions for parking.
- When storing the machine for a month or longer, pay attention the following conditions to prevent deterioration of the machine performance:
 - Thoroughly clean the machine before storing.
 - Inject sufficient lubrication oil and grease into the injection ports.
 - If the lubrication oil is deficient, top it up. If the oil is contaminated, change it.
 - The lubrication oil may deteriorate during storage. Pay special attention to reusing the oil.
 - The density of the oil may drop during storage.
 - Apply an anti-rust additive to the exposed area of the piston rod of the cylinder in areas where it is likely to rust quickly.
 - Keep the master switch mounted in the power box (or the toolbox on the left of the rear frame of the machine) turned 'OFF'.
 - Top up the antifreeze in the radiator.
 - Keep the machine in a dry indoor environment.
 If storing the machine outdoors is unavoidable, store it on a wooden pallet.
 - Keep the exposed area of the piston load of the cylinder covered
 - Bring the attachments right down to the ground, and keep the wheels and the track immobile by placing wheel chocks.




Regular lubrication (during storage)

 
- · Breaking the lubrication film on parts may cause abnormal abrasion during the next operation.
- · Start up the engine once a month, perform all of the functions, and apply lubrication oil to every part.
- · Check the level of the engine oil and coolant when starting the engine up, and top them up if necessary.
- Thoroughly wipe off any rust-proofing oil from the cylinder and piston rod.
- Sufficiently warm up the engine after starting the engine and repeat the operation of the attachments several times to wear in the parts sufficiently.
- · Fully charge and store the battery.
- · Store the battery separately for a long period of time under extremely cold weather conditions.
- · Check the tire pressure.
- The machine shall not be lubricated manually while it is in motion where application of the lubricant may expose persons to injury.



2. SPECIFICATIONS

1. MAJOR COMPONENTS

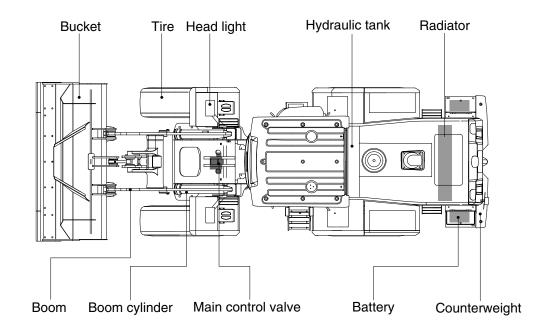


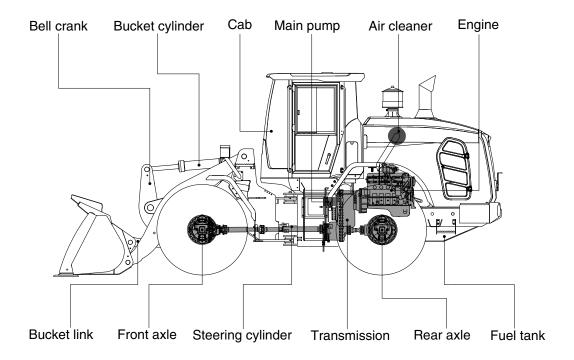

940SA2SE01


2. SPECIFICATIONS

1) WITH BOLT-ON CUTTING EDGE TYPE BUCKET ($HL940\ T3$)

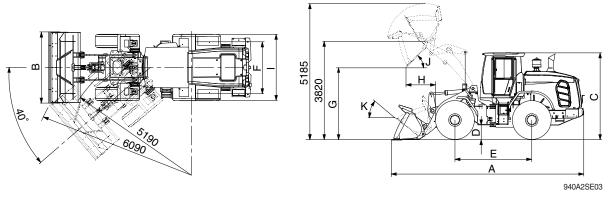


Description		Unit	Specification	
Operating weight		kg (lb)	13200 (29105)	
		Struck		2.0 (2.6)
Bucket capacit	У	Heaped	m³ (yd³)	2.3 (3.0)
Overall length		А		7600 (24' 11")
Overall width		В		2600 (8' 6")
Overall height		С		3300 (10' 10")
Ground clearar	nce	D		417 (1' 5")
Wheelbase		Е	mm (ft-in)	3000 (9' 10")
Tread		F		1930 (6' 4")
Dump clearance	ce at 45°	G		2765 (9' 1")
Dump reach (fo	ull lift)	Н		1095 (3' 7")
Width over tires	S	I		2450 (8' 0")
Dump angle Rollback angle (carry position)		J	degree (°)	48
		К		47
Cycle time		Lift (with load)	sec	5.5
		Dump (with load)		1.8
		Lower (empty)		3.7
Maximum travel speed			km/hr (mph)	38.8 (24.1)
Braking distant	ce		on /ft in	12.6 (41' 4")
Minimum turnir	ng radius (cente	er of outside tire)	m (ft-in)	5.19 (17' 0")
Gradeability			degree (°)	30
Breakout force			kg (lb)	11800 (26015)
		First gear		6.7 (4.2)
Forward Travel speed	Second gear		12.1 (7.5)	
	roiwaid	Third gear		23.5 (14.6)
		Fourth gear	km/hr (mph)	38.8 (24.1)
		First gear		7.0 (4.3)
	Reverse	Second gear		12.8 (8.0)
		Third gear		24.7 (15.3)

WITH BOLT-ON CUTTING EDGE TYPE BUCKET (HL940XT T3)

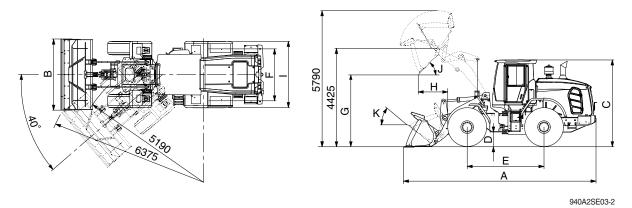


Description		Unit	Specification	
Operating weight		kg (lb)	13645 (30085)	
		Struck	- (1-)	2.0 (2.6)
Bucket capacity	/	Heaped	m³ (yd³)	2.3 (3.0)
Overall length		А		8190 (26' 10")
Overall width		В		2600 (8' 6")
Overall height		С		3300 (10' 10")
Ground clearar	nce	D		417 (1' 4")
Wheelbase		Е	mm (ft-in)	3000 (9' 10")
Tread		F		1930 (6' 4")
Dump clearance	e at 45°	G		3370 (11' 1")
Dump reach (fu	ıll lift)	Н		1090 (3' 7")
Width over tires	3	I		2450 (8' 0")
Dump angle	Dump angle		degree (°)	47
Rollback angle (carry position)		K		50
		Lift (with load)	sec	5.5
Cycle time	Cycle time			1.8
		Lower (empty)		3.7
Maximum travel speed			km/hr (mph)	40 (24.9)
Braking distance	е		m (ft in)	12.6 (41' 4")
Minimum turnin	ng radius (cente	er of outside tire)	m (ft-in)	5.19 (17' 0")
Gradeability			degree (°)	30
Breakout force			kg (lb)	11940 (26325)
		First gear		6.7 (4.2)
Forward	Second gear		12.1 (7.5)	
	rorward	Third gear	km/hr (mph)	23.5 (14.6)
Travel speed	Travel speed	Fourth gear		38.8 (24.1)
		First gear		7.0 (4.3)
	Reverse	Second gear		12.8 (8.0)
	Third gear		24.7 (15.3)	

WITH BOLT-ON CUTTING EDGE TYPE NARROW BUCKET (HL940 T3)

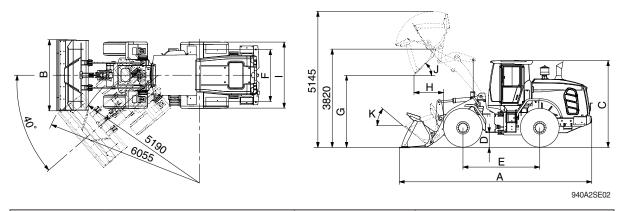

Description		Unit	Specification	
Operating weight		kg (lb)	13160 (29015)	
D. d. d. d. d. d. d.		Struck	(1.8 (2.4)
Bucket capacit	у	Heaped	m³ (yd³)	2.1 (2.7)
Overall length		A		7560 (24' 10")
Overall width		В		2550 (8' 4")
Overall height		С		3300 (10' 10")
Ground clearar	nce	D		432 (1' 5")
Wheelbase		E	mm (ft-in)	3000 (9' 10")
Tread		F		1930 (6' 4")
Dump clearand	ce at 45°	G		2795 (9' 2")
Dump reach (fo	ull lift)	Н		1065 (3' 6")
Width over tire	S	I		2450 (8' 0")
Dump angle	Dump angle		degree (°)	48
Rollback angle (carry position)		K		47
		Lift (with load)	sec	5.5
Cycle time	Cycle time			1.8
		Lower (empty)		3.7
Maximum travel speed			km/hr (mph)	40 (24.9)
Braking distant	ce		m (ft-in)	12.6 (41' 4")
Minimum turnii	ng radius (cente	er of outside tire)	111 (11-111)	5.19 (17' 0")
Gradeability			degree (°)	30
Breakout force			kg (lb)	12230 (26960)
		First gear		6.7 (4.2)
Forward Travel speed	Second gear		12.1 (7.5)	
	Forward	Third gear		23.5 (14.6)
		Fourth gear	km/hr (mph)	38.8 (24.1)
		First gear		7.0 (4.3)
	Reverse	Second gear		12.8 (8.0)
		Third gear		24.7 (15.3)

WITH BOLT-ON CUTTING EDGE TYPE NARROW BUCKET (HL940XT T3)

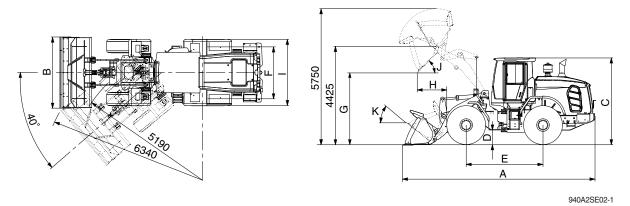

Description		Unit	Specification	
Operating weight		kg (lb)	13605 (30000)	
D. d. d. d. d. d. d.		Struck	neg (cledg)	1.8 (2.4)
Bucket capacit	у	Heaped	m³ (yd³)	2.1 (2.7)
Overall length		A		8150 (26' 9")
Overall width		В		2550 (8' 4")
Overall height		С		3300 (10' 10")
Ground clearar	nce	D		432 (1' 5")
Wheelbase		E	mm (ft-in)	3000 (9' 10")
Tread		F		1930 (6' 4")
Dump clearand	e at 45°	G		3400 (11' 2")
Dump reach (fo	ıll lift)	Н		1060 (3' 6")
Width over tire	S	I		2450 (8' 0")
Dump angle Rollback angle (carry position)		J	degree (°)	47
		K		50
Cycle time		Lift (with load)	sec	5.5
		Dump (with load)		1.8
		Lower (empty)		3.7
Maximum travel speed			km/hr (mph)	40 (24.9)
Braking distance	се		m (ft in)	12.6 (41' 4")
Minimum turnir	ng radius (cent	er of outside tire)	m (ft-in)	5.19 (17' 0")
Gradeability			degree (°)	30
Breakout force			kg (lb)	12370 (27270)
		First gear		6.7 (4.2)
Forward Travel speed	Second gear		12.1 (7.5)	
	roiward	Third gear		23.5 (14.6)
		Fourth gear	km/hr (mph)	38.8 (24.1)
		First gear		7.0 (4.3)
	Reverse	Second gear		12.8 (8.0)
		Third gear		24.7 (15.3)

3. WEIGHT

lt	em	kg	lb
Front frame assembly		935	2065
Rear frame assembly		1342	2960
Front fender (LH & RH)		61	135
Rear fender (LH & RH)		95	210
Countoursialet	HL940 T3	300	665
Counterweight	HL940XT T3	500	1105
Cab assembly	,	726	1605
Engine assembly		555	1225
Transmission assembly		404	895
Driveshaft (front)		12	30
Driveshaft (center)		18	40
Driveshaft (rear)		10	25
Front axle (include differen	tial)	750	1655
Rear axle (include different	tial)	772	1705
Tire (20.5 R25 L3 ★★)		696	1535
Hydraulic tank assembly		150	335
Fuel tank assembly		280	620
Main pump assembly		23	55
Fan & brake pump assembly		23	55
Main control valve (2/3 spool)		42/55	95/125
Steering valve (Priority valv	ve)	8	20
D	HL940 t3	720	1590
Boom assembly	HL940XT t3	945	2085
Bell crank assembly		260	575
Bucket link		35	80
2.3 m³ bucket, with bolt on	cutting edge	1110	2450
2.1 m³ bucket, with bolt on	cutting edge	1070	2360
Quick coupler		1040	2295
Boom cylinder assembly		85	190
Bucket cylinder assembly (HL940 T3/HL940XT T3)		95/115	210/255
Steering cylinder assembly		17	37
Seat (Including suspension	Seat (Including suspension and armrest)		175
Under guard Kit		46	105
Engine Hood assembly		293	650
Mud guard assembly (LH /	RH)	41	95
Battery (1EA)		30	70

4. SPECIFICATION FOR MAJOR COMPONENTS

1) ENGINE

Item	Specification
Model	HYUNDAI HE6.7
Туре	4-cycle turbocharged, charge air cooled diesel engine
Control type	Electronic control
Cooling method	Water cooling
Number of cylinders and arrangement	6 cylinders, in-line
Firing order	1-5-3-6-2-4
Combustion chamber type	Direct injection type
Cylinder bore × stroke	107×124 mm (4.2"×4.9")
Piston displacement	6700 cc (408 cu in)
Compression ratio	17.2 : 1
Gross power	145 hp (108 kW) at 2100 rpm
Net power	142 hp (106 kW) at 2100 rpm
Maximum power	146 hp (109 kW) at 1900 rpm
Peak gross torque	667 N · m (492 lbf · ft) at 1400 rpm
Engine oil quantity	18 ℓ (4.8 U.S. gal)
Wet weight	552 kg (1216 lb)
Starting motor	24V-4.8kW
Alternator	24V-70Amp
Battery	2×12V×120Ah

2) MAIN PUMP

Item	Specification
Туре	Variable piston pump
Capacity	74 cc/rev
Maximum operating pressure	280 kgf/cm² (3980 psi)
Rated output flow	160 ℓ /min (42.3 U.S.gpm)

3) FAN AND BRAKE PUMP

Item	Specification	
	Fan	Brake
Туре	Variable piston pump	
Capacity	28 cc/rev	
Maximum operating pressure	250 bar	150 bar
Rated output flow	56 ℓ /min (14.8 U.S.gpm)	

4) MAIN CONTROL VALVE

Item	Specification
Туре	2 spool & 3 spool
Operating method	Hydraulic pilot assist
Main relief valve set pressure	280 kgf/cm² (3980 psi)
Overload relief valve set pressure	340 kgf/cm² (4840 psi)

5) REMOTE CONTROL VALVE

Item		Specification
Туре		Joystick (or with aux lever)
Control processing	Minimum	3.7 kgf/cm² (52.6 psi)
Control pressure	Maximum	30 kgf/cm² (427 psi)

6) CYLINDER

Item		Specification
Boom cylinder	Bore dia × Rod dia × Stroke	Ø110ר65×738 mm
Bucket cylinder (HL940 T3)	Bore dia × Rod dia × Stroke	Ø125ר70×560 mm
Bucket cylinder (HL940XT T3)	Bore dia × Rod dia × Stroke	Ø125ר75×580 mm
Steering cylinder	Bore dia × Rod dia × Stroke	Ø 65ר40×429 mm

7) DYNAMIC POWER TRANSMISSION DEVICES

Item		Specification
	Model	ZF 4WG160
Torque converter	Туре	Single-stage, single-phase
	Ratio	2.302:1
	Туре	Full-automatic power shift
Transmission	Gear shift	Forward fourth gear, reverse third gear
	Control	Electrical single lever type, kick-down system
	Drive devices	4-wheel drive
Axle	Front	Front fixed location
	Rear	Oscillation \pm 12 $^{\circ}$ of center pin-loaded
Wheels	Tires	20.5 R25 L3 **
Brakes	Travel	Four-wheel, wet-disc type, full hydraulic
Drakes	Parking	Spring applied, hydraulic released brake on transmission
Stooring	Туре	Full hydraulic, articulated
Steering	Steering angle	40° to both right and left angle, respectively


3. CONTROL DEVICES

1. CAB DEVICES

1) The ergonomically designed console box and suspension type seat provide the operator with comfort.

2) ELECTRONIC MONITOR SYSTEM

- (1) The centralized electronic monitor system allows the status and conditions of the machine to be monitored at a glance.
- (2) It is equipped with a safety warning system for early detection of machine malfunction.

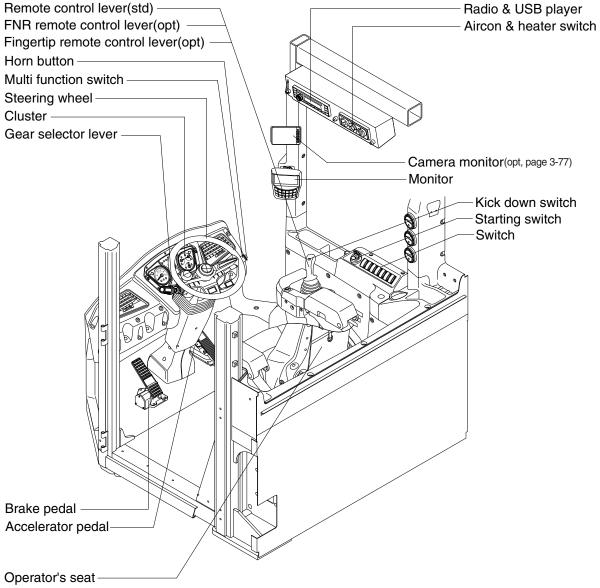

940A3CD01

2. CLUSTER

1) STRUCTURE


The cluster consists of gauges, lamps, and LCD as shown below, to warn the operator in case of abnormal machine operation or conditions, for the appropriate operation and inspection.

· Gauges : Indicate operating status of the machine.

Warning lamps: Indicate abnormality of the machine.
Pilot lamps: Indicate operating status of the machine.

· LCD : Indicates selected the driving speed and direction.


- * The cluster installed on this machine does not entirely guarantee the condition of the machine. Daily inspection should be performed according to chapter 6, MAINTENANCE.
- * When the cluster provides a warning immediately check the problem, and perform the required action.

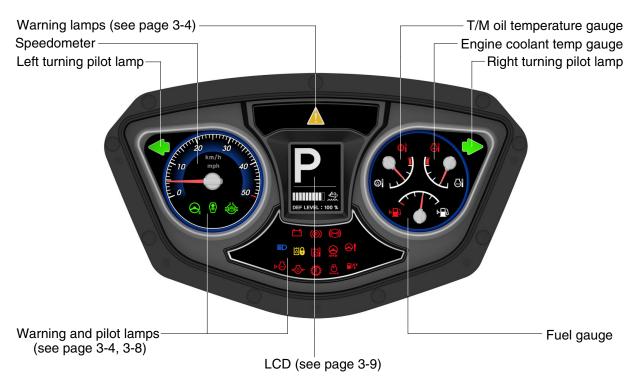

970SA3CD02

2) GAUGE

(1) Speedometer

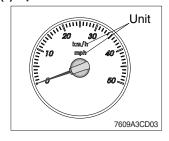

- ① The speedometer displays the speed of machine in mph and km/h.
- The unit (km/h or mph) can be set by the display set up menu of the monitor and selected unit is displayed.
 Refer to page 3-33.

(2) Fuel gauge




- ① This gauge indicates the amount of fuel in the fuel tank.
- ② Fill the fuel when the indicator moves red range or 🖺 lamp blinks in red, refuel as soon as possible to avoid running out of fuel.
- If the gauge indicates red range even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.

(3) Engine coolant temperature gauge




- ① This gauge indicates the temperature of coolant.
 - · White range : 40~105°C (104~221°F)
 - · Red range : Above 105°C (221°F)
- ② If the indicator is in the red range or 🎒 lamp blinks in red, turn OFF the engine and check the radiator and engine.
- If the gauge indicates red range even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.

(4) Transmission oil temperature gauge

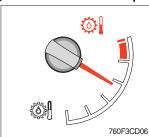

- ① This gauge indicates the temperature of transmission oil.
 - · White range : 40~107°C (104~225°F)
 - · Red range : Above 107°C (225°F)
- ② If the indicator is in the red range or I lamp blinks in red, it means the transmission is overheated. Be careful that the indicator does not move into the red range.
- If the gauge indicates red range even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.

3) WARNING LAMPS

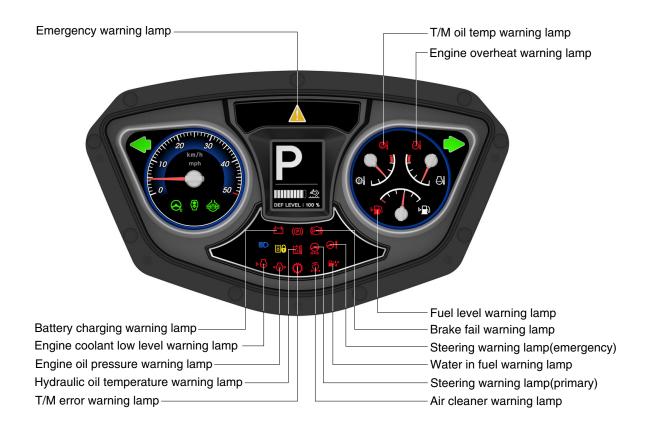


970SA3CD09A

(1) Emergency warning lamp




- ① This lamp blinks when each of the below warnings is happened.
 - Warning lamps light ON
 - MCU input voltage abnormal
 - Monitor communication data error
 - Engine ECM and TCU communication data error
- ② When this warning lamp blinks, machine must be checked and service immediately.

(2) Engine overheat warning lamp

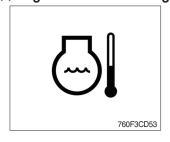


- ① This lamp is turned ON when the temperature of coolant is over the normal temperature (105°C, 221°F).
- ② Check the cooling system when the lamp is ON.

(3) Transmission oil temperature warning lamp

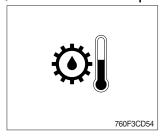


- ① This lamp is turned ON when the temperature of transmission oil is over the normal temperature (107°C, 225°F).
- ② When this lamp lights up during operation, stop the engine and check the machine.

(4) Hydraulic oil temperature warning lamp

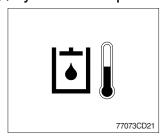


- ① This warning lamp operates and the buzzer sounds when the temperature of hydraulic oil is over 106°C (223°F).
- ② Check the hydraulic oil level when the lamp is turned ON and the buzzer sounds.
- (3) Check for debris between oil cooler and radiator.
- * If you want to stop buzzer sound, just touch the icon.

(5) Fuel level warning lamp

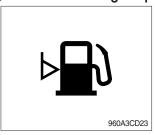

① This warning lamp lights ON when the fuel level is low. Refuel the machine as soon as possible.

(6) Transmission error warning lamp

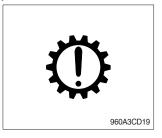


- ① This lamp lights ON and the LCD display show the error codes when an error occurs in the transmission.
- ② Immediately pull the machine to a convenient stop. Stop the engine. Investigate the cause.
- Consult a HYUNDAI dealer to investigate the cause.
- * Do not operate until the cause has been corrected.

(7) Air cleaner warning lamp



- ① This lamp lights ON and the buzzer sounds when the filter of air cleaner is clogged.
- ② When the air cleaner warning lamp is ON and the buzzer sounds, check and clean the primary element.
- If you want to stop buzzer sound, just touch the icon.
- * The primary element should be replaced if the warning lamp is ON after installation of a clean primary element.
- * Replace the primary element after 4 times cleanings.

(8) Engine oil pressure warning lamp

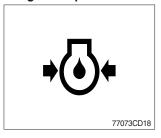

- ① This lamp is comes ON and the buzzer sounds after starting the engine because of the low engine oil pressure.
- ② If the lamp comes ON and the buzzer sounds during engine operation, shut OFF engine immediately. Check engine oil level.

(9) Steering warning lamp



① Primary

This lamp indicates that the primary steering has failed. When the indicator comes ON and the action alarm sounds, steer the machine immediately to a convenient location and stop the machine. Stop the engine and investigate the cause.

- Do not operate the machine until the cause has been corrected.




② Emergency

This lamp indicates the emergency steering system is active.

- Immediately pull the machine to a convenient stop and stop the engine.
- * The emergency steering system can be manually tested. Refer to page 3-45.


(10) Battery charging warning lamp

960A3CD51

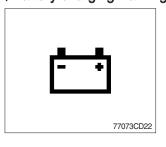


- ① This lamp is ON and the buzzer sounds when key ON, it is turned OFF after starting the engine.
- ② Check the battery charging circuit when this lamp comes ON and the buzzer sounds, during engine operation.
- * If you want to stop buzzer sound, just touch the licon.

(11) Brake fail warning lamp

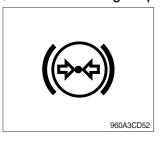

- ① The lamp lights ON and the buzzer sounds when the oil pressure of service brake drops below the normal range.
- ② When the lamp is ON and the buzzer sounds, stop the engine and check for its cause.
- If you want to stop buzzer sound, just touch the icon.
- » Do not operate until any problems are corrected.

(12) Engine coolant low level warning lamp

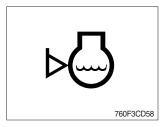


- ① This warning lamp lights ON when the level of coolant is low.
- ② Fill the coolant immediately when the lamp is ON.

(13) Water in fuel warning lamp




- ① This warning lamp lights ON when the water separator is full of water or malfunctioning.
- * When this lamp lights ON, stop the machine and spill water out of the separator.

4) PILOT LAMPS

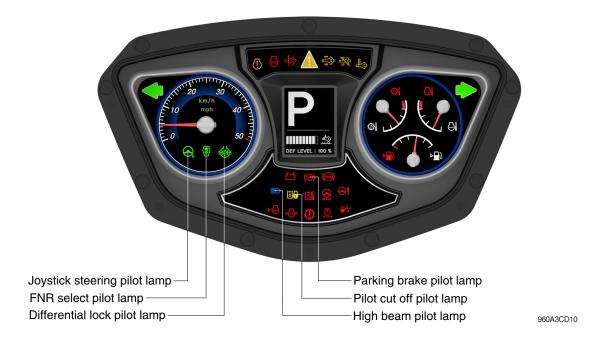

 (1) High beam pilot lamp



- ① This lamp works when the illuminating direction is upward.
- ② This lamp comes ON when the dimmer switch is operated, e.g., when passing another vehicle.

(2) Parking brake pilot lamp



- ① When the parking brake is actuated, the lamp lights ON.
- * Check the lamp is OFF before driving.

(3) FNR select pilot lamp (option)



- ① The lamp comes ON when FNR select button on the optional FNR remote control lever is pressed.
- * Refer to page 3-47.

(4) Joystick steering pilot lamp (option)



- ① This lamp lights ON when joystick steering is activated.

 It is then possible to steer the machine and select gears from the armrest to the left of the operator's seat.
- Refer to page 3-51.

(5) Differential lock pilot lamp (option)




- ① This lamp lights ON when the differential lock function is operating.
- * Refer to page 3-45.

(6) Pilot cut off pilot lamp



- ① This lamp lights ON when the pilot cut off switch is pressed.
- * Refer to page 3-45.

5) LCD

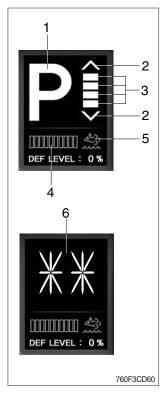

(1) The LCD can be used with the gear selector.
It indicates speed, driving direction, DEF/AdBlue® level and transmission warning.

No	Symbol	Meaning	Remark	
		Actual gear display	Forward, reverse, neutral	
1	1, 2, 3, 4, 5		Actual gear	
	Р	diopidy	Parking brake mode active	
2	^ , V	Forward, reverse	↑ FWD 1 ▼ REV 1	
3		Gear range display	FWD 5 REV 5	
4		DEF/AdBlue® level	Dispaly the amount of liquid in the DEF/Ad-Blue® tank	
5		DEF/AdBlue® level warning lamp	Fill the DEF/AdBlue® when the lamp ON or blinks in red. - ON: DEF/AdBlue® level 5~10% - Blink: DEF/AdBlue® level below 5% ** If the lamp ON or blinks in red even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.	
	LF, LR	Limp home gear	-	
	**	Oil temperature too low, no gear available	Warm up engine/transmission	
6	WS	Warning sump temperature	Alternate between WS and actual gear / direction while driving in neutral only displayed WS if no fault is detected **Cool down transmission	
	WT	Warning torque c o n v e r t e r temperature	Alternate between WS and actual gear / direction while driving, in neutral only displayed WS if no fault is detected **Cool down transmission	

3. MONITOR (7 inch touch screen)

- · The monitor is adjustable.
- Vertical : 30°- Horizontal : 15°



1) MAIN DISPLAY

- * You can select or set the menu by the switches or touch screen.
- * Please refer to switch, page 3-39 for selection and change of menu and input value.
- * Display type can be changed by operator. See page 3-34 for details.



- 1 Clock
- 2 Buzzer
- 3 Wiper speed
- 4 Camera screen
- 5 Menu

- 6 Machine monitoring
- 7 Fuel rate
- 8 Engine mode/Operation history
- 9 Transmission mode
- 10 ECO gauge

- 11 Engine rpm
- 12 Quick menu
- 13 10 lamps

(1) Menu bar



970SA3CD07-1

In main display, you can move to right side menu by touching each icon.

① Clock setting

Set the time (hour, minute and AM or PM)

② Wiper speed

Set the wiper speed (slow, normal, fast and very fast)

3 Menu

Move to main menu.

4 Buzzer stop

If you want to stop buzzer sound, just touch the licon.

① Clock setting



760F3CD07A-1

2 Wiper speed



760F3CD07B-1

3 Menu



760F3CD07C-1

4 Buzzer stop



970SA3CD07E-1

(2) Change display information



* In main display, you can check the data and setup what you want by touching each window area or icon.

① Machine monitoring

To display the item in main display, select two items of them.

Priority in the machine monitoring display

The priority of the weighing system is the highest.

If the weighing system is selected, the other items are not available.

To display the other items, the weighing system should not be selected.

Weighing system : see page 3-19.

① Machine monitoring



960A3CD08

2 Fuel rate

- · Set average fuel rate or a days fuel used on main display screen.
- · Refer to page 3-27.

$\ensuremath{\textcircled{2}} \mbox{ Fuel rate}$



3 Engine mode and operation history

- · Set the engine mode (A).
- · Refer to page 3-19.
- · Set Hour meter / ODO meter (B).
- · Refer to page 3-26.

③ Engine mode





4 Transmission mode

- · Set the I.C.C.O. mode (A) and shift mode (B).
- · Refer to page 3-17 and 3-18.

4 Transmission mode





(5) Quick menu



Move the quick menu screen by touching .

a User switching

- · When multiple users share a machine, it allows users to switch user settings of machine.
- · User can apply or save the setting of monitor easily.

b Active fault

- · Display the fault code of MCU/ECU/TCU/EHCU.
- · Refer to page 3-26.

© Maintenance

- · Elapsed time, change or replace cycle can be changed.
- · Refer to page 3-31.

d Help

 
· Read the monitor manual as a PDF file on the monitor.

(a) User switching



760F3CD08H-1

b Active fault



760F3CD16-1

© Maintenance



960A3CD08

d Help



960A3CD08

To display the virtual keypad, drag the button (to top of the screen.

Refer to the page 3-39 for details.



Virtual keypad



760F3CD68B-1

(3) Fault and maintenance warning



- ① If you touch the warning sign (red icon), move to the quick menu.
- You 2 can check the fault message and move the maintenance screen by touching relevant area.



(4) Machine monitoring warning

- 1 Warning sign (red icon) will be shown when the temperature of hydraulic oil, cooling water, transmission oil
- battery voltage is not normal state.
 - ② Case of warning sign

Icon	Description		
	Above 106°C of hydraulic oil temperature		
•	Above 105°C of cooling water temperature		
•	Above 107°C of transmission oil temperature		
	Below 24.5 voltage of battery (for 3 minutes)		
ŀ∲ŀ	Above 100°C of axle oil temperature (option)		



(5) Communication error

① MCU could not communicate with monitor over 10 seconds, error message will be show on the screen.



970SA3CD19-1

(6) Eco gauge

- ① This gauge indicates the fuel consumption rate and machine load status. So that operators can be careful with fuel economy.
- 2) The fuel consumption rate or machine load is high, the segment is increased.
- ③ The color of Eco gauge indicates operation status.
 - · White: Idle operation
 - · Green: Economy operation
 - · Yellow : Non-economy operation at a medium level.
 - · Red : Non-economy operation at a high level.





970SA3CD113-1


2) MAIN AND SUB MENU

(1) Structure

No	Main menu	Sub menu	Description
1	Mode Mode 760F3CD25A	Engine setting Kick down I.C.C.O mode Shift mode Work load Boom/bucket detent mode Bucket priority Auxiliary attach max flow level Soft end stop Cooling fan reverse mode Wiper level setting Calibration Engine auto shutdown	Engine mode, Engine speed Mode 1 (down/up), Mode 2 (down only) I.C.C.O. mode (OFF, ON) Transmission shift mode (manual, AL, AN, AH) Weighing system, Weighing display, Error detection Boom pressure calibration, Weighing system compensation Boom/bucket detent ON/OFF, Save position Bucket priority ON/OFF Max oil flow level setting Boom up/down, Bucket in/dump ON/OFF Off, Manual, Automatic Slow, Normal, Fast, Very fast Boom/bucket angle, Boom pressure, Brake pedal sensor, AEB Once, On/Always, Disable, ESL system setting
2	Monitoring Monitoring 760F3CD25B	Machine monitoring Operation history Fault history Fuel rate information Machine information	Hyd, Coolant, axle and TM oil temp, Battery voltage Hour meter, ODO meter Active/Logged fault (MCU, ECM, TCU, EHCU, AAVM) General record, Hourly record, Daily record, Mode record, Operation efficiency record TCU, ECM, MCU, RMCU, EHCU, Monitor, Cluster
3	Machine security Maintenance Service menu Change A/S phone number Software update Owner menu editing		ESL system setting, Change password Elapsed time, Cycle, Maintenance history Sensor monitoring, Speed limit setting, Weighing system compensation, EHCU I/O information Check and change of contact information Update file in USB memory Owner menu editing, Menu list, Password change
4	Preference Preference 760F3CD25D	Brightness setting Clock setting Unit setting Display style/Language Camera setting AAVM setting Wi-Fi direct	Manual, Automatic Clock setting Temp (°F/°C), Distance (km, mile), Weight (ton, lb), Pressure (bar, Mpa, kgf/m², psi), Volume (I, gal) Type A, Type B, 14 multiple language Acive camera, Display order, Reverse mode AAVM camera reverse mode Active Wi-Fi direct

(2) Mode

① Engine setting mode

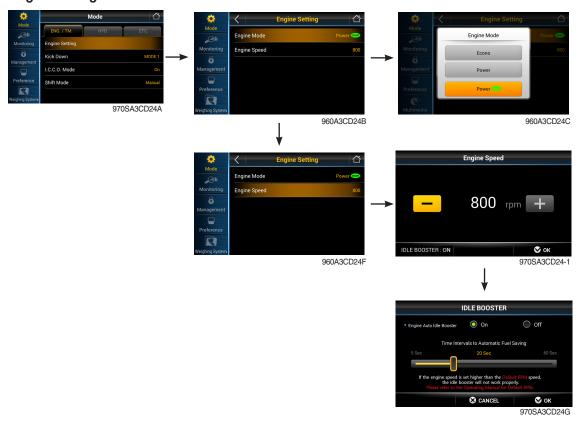

Engine mode

The operator can adjust the machine's performance.

- Econo: Maximum fuel efficiency for general loading.
- Power: Maximum power output for hard digging operation or hill climb.
- Smart power: Fuel efficient operation with same performance as power mode.

· Engine speed

Setting engine default rpm.

Idle booster

- Idle booster On: 800 rpm (HL960 T3) / 700 rpm (HL970 T3 and up)
- Idle booster Off : Set proper default rpm as per work load.

The operator can turn idle booster function On / Off and adjust the time intervals...


On: The engine low idle speed is increased and after adjusted time intervals without machine operation, the engine speed is decresed to default rpm automatically.

Off: Idle booster fuction is not actived. The operator should set default rpm properly.

* HL940 T3 and HL955 T3 are not applied with idle booster.

② Kick down mode



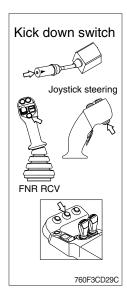

- Manual mode (shift mode: manual)
 It is effective 2nd speed to 1st speed only. Recover to 2nd speed quickly when push the switch one more time.
- · Automatic mode (shift mode: AL, AN, AH)
- Mode 1 (down/up)
 It shifts down quickly from current gear to one step lower speed by pushing the switch and recover to current speed quickly when pushing the switch one more time.
- Mode 2 (down only)
 It shifts down from current gear to one step lower speed when pushing the switch every time.
 The kick down function is released in only 1st speed.
- * The normal autoshift function continues after the kick-down switch is released.

③ I.C.C.O. (Intelligent Clutch Cut Off) mode



- · OFF: The clutch cut off function is disable.
- · ON (I.C.C.O.): It will cut off the clutch when brake pedal operation.
- * The clutch cut off function is automatically adjusted depending on slope angle or machine load, And inching fuction becomes possible by using the brake pedal.

4 Shift mode



- · Four modes are available for operator's preference and job condition.
 - Manual : Machine is operated by selected gear on lever.
 - AL (Auto Light) : Automatic shifting point is fast for long-distance transportation and fuel efficiency.
 - AN (Auto Normal) : Automatic shifting point is normal without automatic kick-down to 1st gear for general digging and loading operation.
 - AH (Auto Heavy) : Automatic shifting point is normal with automatic kick-down to 1st gear for more powerful operation.

5 Work load



- · Weighing system : Set the workload measurements.
- · Weighing display : Set the display on main display screen.

- Type A: Project & Truck



	Work weight (Previous day)	
Today	Work weight (Today)	
	Current weight	
Project	Total weight accumulated in selected Project**.	
Truck	Total weight accumulated in selected Truck**.	

** Refer to page 3-42 for details

- Type B: Truck Preset

A TION TOOLS	Work weight (today)
(Work weight (previous day)
(A) Total A (B) Total B (C) Total C	Total weight accumulated in memory A, B, C individually redardless of date
₹	Current weight

Initialization daily, tatal A, B, C
Initialize accumulated value at memory daily, A, B and C.

- · Error detection : Set error detection ON/OFF.
 - OFF: Errors are not displayed.
 - ON : (a),(b) and (c) are displayed on main display screen.
 - a The boom lift was performed too fast.
 - (b) The bucket was not in the fully tilted back position while bucket was in the weigh range.
 - © The hydraulic temperature is low (below 40 °C).




- · Boom pressure calibration : See the page 3-24 for details.
- · Weighing system compensation
 - Calibration workload depending on work tool.
 - * Only for the service person. Do not adjust arbitrary.



Weighing system

- The weight indication in bucket is calculated by measuring boom position and boom pressure.
- The weight is '0.0 ton' when the boom is placed at below -15°.
- (b) The weight is indicated when the boom is placed at the range (5°→15°).
- © The weight is calculated when the boom is placed at above 5° and boom is lowered below -15° after dumping operation.

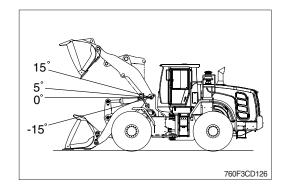

In order to recheck weight, go to the (b) after changing boom position (below -15°).

- Dump operation: It is checked by bucket cylinder's stroke change (below 250 mm).
- * The temperature for the hydraulic oil must be raised to at least 40 °C (104 °F) before operation.

7 Boom/bucket detent mode



- · OFF: Detent functions are not operated.
- · ON : Boom or bucket detent functions are operated.
- · Save position : Refer to page 4-22.

® Bucket priority mode (option)



- Bucket priority function is to be more convenient for operator to load materials.
 Bucket-in (rollback) operation takes priority over the boom-up (raise) operation in case of using both operations at the same time and therefore boom (raise) operation is stopped and only bucket (roll back) is operated.
- · Set the bucket priority function ON/OFF.

Auxiliary attachment max flow level mode (option)



- · If the machine is equipped with auxiliary attachment, auxiliary attachment flow can be easily adjusted and controlled.
- · Set the oil flow level from 0 to 15 level by using +/- button.

10 Soft end stop mode (option)



- · This function gives shock free operation by reducing the speed of attachment near the end stroke.
- · Set the soft end stop function ON/OFF.

Cooling fan reverse mode Automatic Manual Cooling Fan Reverse Mode Cooling Fan Reverse Mode Automatic Manual Cooling Fan Reverse Mode Automatic Manual Automatic Manual Automatic Cooling Fan Reverse Mode Automatic Manual Automatic Execute Fush and hold to reverse rotation.

- · Manual: Rotate the fan with reverse direction while pressing the button "Execute".
- · Automatic : Rotate the fan with reverse direction by preset cycle.
 - Interval : 30 min ~ 5 hrs - Time : 30 sec ~ 5 min
- Default : Interval (60 min), time (120 sec)
- * When the fan is in reverse mode, the AC compressor will not be functional and cab cooling will be disabled.

12 Wiper level setting (Intermittent mode)



- · Setting wiper speed in J position of multi function switch (slow, normal, fast and very fast)
- Refer to the page 3-48.

(13) Calibration




- · You should turn OFF " Soft end stop " before start calibration.
- Press the NEXT button after following the instruction at each step.
- · If correction is right, the NEXT button will be activated, then go to next stage.
- · After following each step correctly, the message "Calibration completed" will be shown. Press OK button, then process be ended.

W Using switch


- Using @ instead of the NEXT, complete button.

· Boom / Bucket angle calibration

- MCU get sensing signal from boom angle and bell crank angle and calculate bucket cylinder stroke and boom link position angle from ground real-time basis.
- Boom angle position and bucket cylinder stroke is set by detent setting switch on monitor.
- The individual setting position is done by lever (detent, release operation).
- Angle sensor calibration is basically carried out before delivery of the machine.
 - When angle sensor is replaced or actual value is different compared to setting value, this function can be done.
- The calibration must be carried out as follows:
- ② Raise boom at maximum high position and press the NEXT button (or @).
- (3) Position boom at -5° and press the NEXT button (or **@**).
- ④ Retract bucket cylinder length (to minimum position) at -5° boom position and press the NEXT button (or ♥).
- ⑤ Extend bucket cylinder length (to maximum position) at -5° boom position and press the NEXT button (or ♥).
- ⑥ In case above steps are carried normally, "Calibration is done" message is shown. Then angle sensor calibration is finished.
- Boom down / boom up / bucket position setting : Refer to page 4-22.

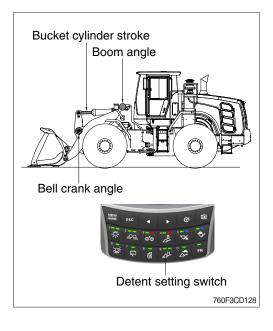

· Boom pressure calibration

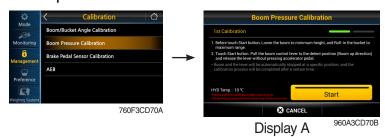


Boom pressure calibration

- It is used when bucket weight is changed or measured weight is inaccurate.
- The calibration must be carried out as follows :
- ① Increase hydraulic temperature (about $40\sim60^{\circ}$ C).
- 2 Turn off "Soft End Stop".
- ③ Set a boom raise dentent position when the boom is in the fully raises position.
- 4 Select "Boom-pressure".
- ⑤ Roll-in the bucket at maximum range and lower the boom at minimum height.
- ⑥ Press START button. Raise boom to maximum position. Boom up must be finished before stepping advance in "display A".
- ⑦ If it show "Calibration success" message in a moment, press complete button (or ♥).
- * Raise hydraulic temperature enough when checking work load / boom pressure sensor calibration (recommendation : about 40 ~ 60°C).
 - Check if pressure sensor or angle sensor is in normal condition for accurate work load
- * algorism or pressure sensor calibration [pressure sensors at boom cylinder head area and rod area, boom angle sensor (CD-80), bell crank angle sensor (CD-81)].
 - Sensor error message during pressure sensor calibration: sensor need to be checked.

· Brake pedal sensor calibration



- Turn the engine OFF and turn the starting switch ON position.
- Press OK button, then calibration will be started.
- When display " IP \ " on main display, press slowly the brake pedal completely.
- Release the brake pedal when display "IP : on main display.
- For cancel, press MENU/HOME switch.
- * When the brake pedal or sensor is replaced, brake pedal sensor calibration must be performed.

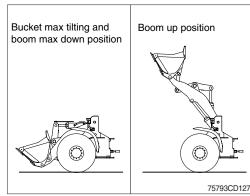

· AEB



- AEB mode controls the disk clearance of the transmission, automatically.
- To start AEB setting, press AEB bar (or ♥) for 3 seconds.
- If you press & or ESC, AEB setting will be canceled. Machine need to restart.
- Display during AEB mode

Symbol	Meaning		
ST	Start AEB		
K1~K4, KV, KR	Calibrating clutch K1~K4, KV or KR respectively		
OK*	Calibration for all clutches finished		
Spanner and Kx*	Kx couldn't be calibrated, AEB finished		
ΔE	Engine speed too low - Raise engine speed		
∇E	Engine speed too high - Lower engine speed		
ΔT	Transmission oil temperature too low - Heat up transmission		
∇T	Transmission oil temperature too high - Cool down transmission		
FO*	Output speed not zero		
FN*	Shift lever not in neutral position		
FP*	Parking brake not applied		

^{*:} Transmission stays in neutral, you have to restart the TCU (starting switch off/on).

4 Engine auto shutdown mode



- · The engine auto shutdown function can be activated or cancelled.
- · If machine is idling for the setting time (2~40 minutes), then engine will shutdown automatically.

(3) Monitoring

① Machine monitoring




· Monitor the status of the machine.

2 Operation history



- Hour meter / ODO meter
- · Total
 - Total distance (this item cannot be initialized).
- Total working hour can check on service meter. See page 3-59.
- · Latest
 - Working hour/distance after reset.
 - If you select **Initialization**, working hour/distance start zero.
- · To display the item in main display, select the item in main display. See the page 3-13.

③ Fault history

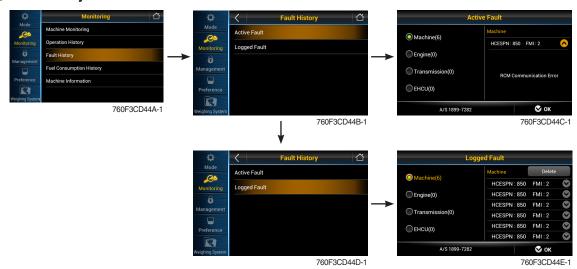

- · Display the fault code of MCU/ECU/TCU/EHCU and delete logged fault.
- * Refer to service manual for HCESPN/FMI of engine and transmission.
- EHCU : Electro Hydraulic Control Unit
 AAVM : All Around View Monitoring

4 Fuel rate information














- · Dispaly the fuel consumption history.
 - General record (average fuel rate and a days fuel used)
 - Hourly record Daily record Mode record : P, P(smart), E mode
 - Operation efficiency record (Shuttle shift, Idle, Relief)

5 Machine information

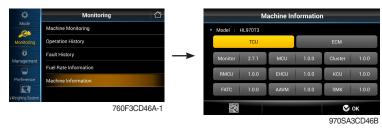


· Software versions of MCU, ECM, TCU, EHCU, RMCU, Cluster and monitor can be checked.

(4) Management

① Machine security



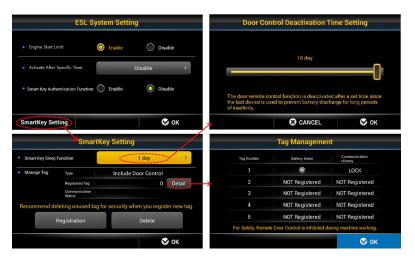

· ESL system setting

- ESL: Engine Starting Limit
- ESL mode is designed to be a theft deterrent or can prevent the unauthorized operation of the machine.
- If the ESL mode is enabled ON, the password will be required when the start switch is turned ON.
- Engine start limit
 - . Disable: ESL is not in use
 - **. Enable :** The password is required whenever the operator start engine.
- Activate after specific time

The password is required when the operator first starts the engine. The operator can restart the engine within the specific time setting without inputting the password. The maximum specific time setting is 2 days.

- Smart key authentication function

- . **Enable**: Set the using or not of smart key. If you using smart key, ESL function always be activated.
- . **Disable :** Register or delete user tag and display registered user tag. When delete user tag, all user tag will be deleted.

Weing smart key

- Verification success
 Green smart key icon is displayed on the main display screen.
- Verification failure
 Red smart key icon and password input screen is displayed.







Verification failure

- The machine operator can lock, unlock and open the cab door by means of the remote key tag, as long as he is within a range of 15 meters from the machine.
- Please note that the door cannot be closed using the Remote Key Tag.

 


- 1 Door lock
- 2 Door unlock
- 3 Door open (press and hold for 2 seconds)
 - ▲ Do not activate this function if there is person nearby the door and when machine work or travel.

Door control deactivation time setting

- There is a limited period of a maximum of 10 days that can be set during which the 'Remote Door Functionality' can be used if the machine has been parked or at a standstill.
- If the machine is parked or at a standstill for a period that exceeds the period in days set by the operator without any activity, then to prevent the machine batteries from draining, the 'Remote Door Functionality' will be disabled.
- When this happens, the operator will be able to only use the machine Key to open the cab door, after which the 'Remote Door functionality' can be enabled again during first start-up.
- During the first start-up after the machine was inactive for a period that exceeds the period in days set by the operator, the operator will be able to see the below pop-up on the monitor, by which the operator can then enable the 'Remote Door functionality' again by clicking the 'Setting' tab and confirming the settings thereafter.





- When door control is deactivated, the door lock once automatically for machine security.
- * During the deactivation, remote door control function is not work.

Tag management

- Tag number
 - . Max 5 tags can be registered.
- Battery alarm
 - . Check tag's battery status. (normal or low)
- Communication history (check, lock, unlock, open)



Engine Starting Condition


	T		
Case	ESL Mode	Smart Key	Condition
1	Disable	Disable	With registered tag: Engine can be started without password input.Without registered tag: Engine can be started without password input.
2	Disable	Enable	If Smart Key is enabled, ESL Mode is automatically enabled. This Case 2 work the same as the Case 4.
3	Enable	Disable	With registered tag: Engine can be started with password input.Without registered tag: Engine can be started with password input.
4	Enable	Enable	With registered tag: Engine can be started without password input.Without registered tag: Engine can be started with password input.

2 Maintenance



- · Replacement : The elapsed time will be reset to zero (0). Change cycle : The change or replace cycle can be changed in the unit of 50 hours.
- Show the maintenance history below 10.
 When history have more than 10, delete the old item.
- · Change or replace interval : Refer to the page 6-10.

③ Service menu

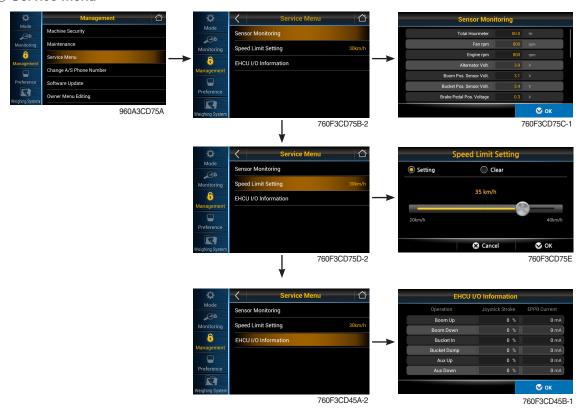

- · Sensor monitoring : Display information of each sensors.
- · **Speed limit setting**: 20~40 km/h (5 km/h intervals)
- · EHCU I/O information
 - Real time monitoring (joystick stroke, EPPR current).

4 Change A/S phone number




· Check and change of contact information for customer service.

Software update



· Update file in USB memory.

⑤ Owner menu editing

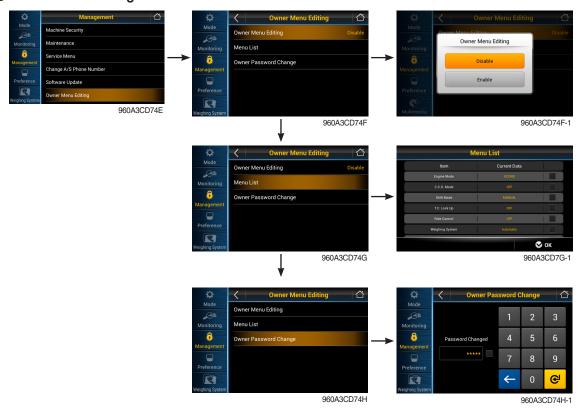

- · Owner menu editing : Owner can set the status of the function. (Enable / Disable)
- · Menu list: In the menu, owner can set the list of the function to lock or unlock it.
- · Owner passward change (Default password : 11111)
 - Owner can manage and change the password.
 - Necessary to input the password to access the set of function.

(5) Preference

1 Brightness setting



- · Manual
 - Manual setting for LCD brig
- · Automatic
 - Automatic control of LCD brightness as set level of day/night.
- · Setting day time
 - Set the time for daylight.
 - If you set the time for daylight, the rest time will be night.


2 Clock setting



· Set the time (hour, minute and AM or PM)



③ Unit setting

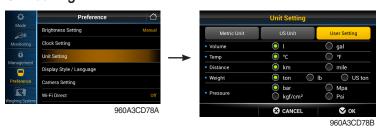

· Volume : $\ell \leftrightarrow gal$

· Temperature : $^{\circ}C \leftrightarrow ^{\circ}F$

Weighing System

 $\begin{array}{ll} \cdot \ \, \text{Distance} & : \, \text{km} \leftrightarrow \text{mile} \\ \cdot \ \, \text{Weight} & : \, \text{ton} \leftrightarrow \text{lb} \end{array}$

· Pressure : bar \leftrightarrow Mpa \leftrightarrow kgf/m² \leftrightarrow psi

W Using button

- Move to other item by 😝.

① Display style/ Language



- · Set the display type A or B.
- · User can select preferable language and all display are changed the selected language.
- · 14 multiple language available.
- * To ensure that the entire system reflects the change, please restart the machine.

⑤ Camera setting

* If the camera monitor is equipped, camera will showing on camera monitor only.



· Active camera

- Four cameras can be installed on the machine.

Display order

- Set the channel sequence of each camera.

Active when the reverse gear is selected

- If transmission engages the reverse gear (R1~R3), the camera mode is displayed automatically in main display.
- · If the camera was not equipped, this menu is not useful.
- If the camera monitor is equipped, camera will showing on camera monitor only. This menu is not useful. See the page 3-77.
- · In main display, if the 🔳 is touched (or 🗎 switch is pushed), the first ordered display camera will be viewed.
- If AAVM is equipped, this menu will be changed to AAVM setting.


6 AAVM (Advance Around View Monitoring, option)

- * If the camera monitor is equipped, AAVM will showing on camera monitor only.
- · The AAVM switchs of the cluster consist of Camera, ESC and Buzzer stop.



- Camera switch

- · It will enter into the AAVM mode from the main display if the AAVM is installed.
- · If the camera monitor is equipped, AAVM will showing on camera monitor only. This menu is not useful. See the page 3-77.
- · While in the AAVM mode, select the ESC switch to return to the main display.

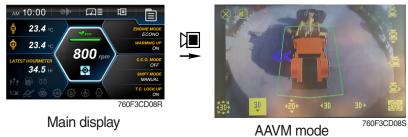


- Buzzer stop switch

- · In AAVM mode, it detects surrounding pedestrians or objects and the warning buzzer sounds.
- · User can turn OFF the warning sound by pressing buzzer stop switch.



290F3CD246

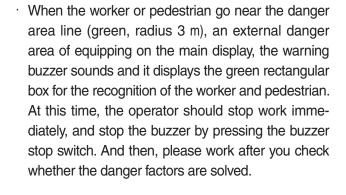



290F3CD247


• When the worker or pedestrian go inside of the danger area line (red, radius 3 m), an internal danger area of equipping on the main display, the warning buzzer sounds and it displays the red rectangular box for the recognition of the worker and pedestrian. At this time, the operator should stop work immediately, and stop the buzzer by pressing the buzzer stop switch. And then, please work after you check whether the danger factors are solved.

Wi-Fi direct



- Activate Wi-Fi direct to use wireless machine diagnostic tool.

3) PILOT LAMPS

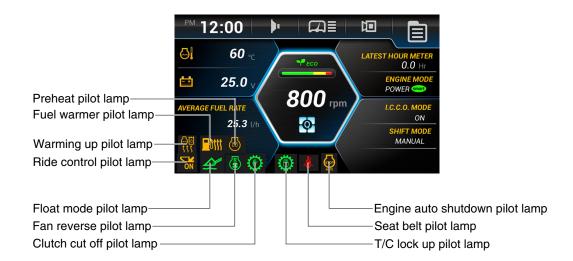

960A3CD90

(1) Warming up pilot lamp



- ① This lamp lights ON when the coolant temperature is below 30°C (86°F).
- ② The automatic warming up is cancelled when the engine coolant temperature is above 30°C, or when 10 minutes have passed since starting the engine.

(2) Seat belt pilot lamp



① This lamp lights ON for the first five seconds after starting the engine.

(3) Preheat pilot lamp



- ① This lamp lights ON when start switch is turned clockwise to the ON position. Light will turn off after approximately 5~45 seconds, depending on engine temperature, indicating that preheating is completed.
- ② When the lamp goes out the operator should start cranking the engine.
- * Refer to page 4-5.

(4) Engine auto shutdown pilot lamp



- ① This lamp lights ON when the engine auto shutdown function is activated.
- * Refer to page 3-25.

(5) Clutch cut off pilot lamp



- ① This lamp lights ON when I.C.C.O mode is ON.
- * Refer to page 3-17.

(6) Float mode pilot lamp



- ① This lamp lights ON when the boom float is activated.
- * Refer to page 4-9.

(7) Ride control pilot lamp (option)



① Auto ride control

This lamp lights ON when the automatic ride control function is activated (**ON, Conditional speed** setting).

* Refer to page 3-41.



2 Manual ride control

This lamp lights ON when the manual ride control function is activated (**ON**, **Always** setting).

* Refer to page 3-41.

(8) Fan reverse pilot lamp



- ① This lamp lights ON when the cooling fan reverse mode is activated
- * Refer to page 3-22.

(9) Fuel warmer pilot lamp



- ① This lamp is turned ON when the coolant temperature is below 10°C (50°F) or the hydraulic oil temperature 20°C (68°F).
- ② The automatic fuel warming is cancelled when the engine coolant temperature is above 60°C and the hydraulic oil temperature is above 45°C since the start switch was ON position.

3) SWITCHES



760F3CD95-1

- ※ If you push left or right switch (

 ◆) on main display, show the select box on current time.

 Move to next item in order by using left / right button.
 - (① Time \rightarrow ② Buzzer \rightarrow ③ Wiper \rightarrow ④ Camera \rightarrow ⑤ Menu \rightarrow ⑥ Machine monitoring \rightarrow
 - Transmission mode →
 Quick menu)
- Move to selected setting screen by using enter switch (

 O

).
- When keypad is not pressed for 3 seconds, convert screen to main display.
- ※ If you push left and right switch (

 ◆

) at the same time, move language settings.

(1) Menu / Home switch



① Main display to main menu, main menu to main display.

(2) ESC switch



- ① For other menu, this is used for cancellation (move to previous menu).
- ② AEB cancel or finish button in AEB.

(3) Left / Right move switch



- ① Move in menu (left, up / right, down).
- 2 Decrease / Increase input value.
- ③ Stop buzzer sound when sound is on.

(4) Enter switch



① Select menu (enter).

(5) Camera switch



- ① Enter rear camera or AAVM mode in main display.
- ② If the camera monitor is equipped, camera or AAVM will showing on camera monitor only. This switch is not applicable. See the page 3-77.

(6) Main light switch



- · Position lamp: Clearance lamp and cluster illumination lamp come ON. The green pilot lamp is turned ON.

① This switch use to operates the clearance lamp and head light.

· **Head lamp + Position lamp** : Clearance lamp, cluster illumination lamp and head light come ON. The green pilot lamp is turned ON.

(7) Work lamp switch



- 760F3CD84-1
- ① This switch use to operates the front and rear work lamps.
 - · Front: Front work lamp located on the cab comes ON. The green pilot lamp is turned ON.
 - · Front + Rear : Front work lamp located on the cab and rear work lamp located on the cowl come ON. The green pilot lamp is turned ON.

(8) Central grease lubrication switch (option)



- ① This switch is used to operate the central grease lubrication sys-
- ② The central grease lubrication system is operated for set period. The green pilot lamp is turned ON.
- * When a malfunction occurs in the auto grease lubrication system, the red pilot lamp is turned ON.
- Refer to page 8-1.

(9) Quick coupler switch (option)







① Disengage quick coupler

- The quick coupler pins move in the disengaged position and buzzer sounds. Refer to the page 8-1.
- The red pilot lamp is turned ON.
- A Always check that the attachment is properly secured to the attachment quick coupler by pressing the front part of the attachment against the ground.
- A Never use an attachment before you have checked its mounting.

2 Engage quick coupler

- The quick coupler pins move in the engaged position and buzzer sounds. Refer to the page 8-1.
- The green pilot lamp is turned ON.

Check for engagement as followings.

- a. Put down pressure on the attachment.
- b. Back up the machine and make sure that there is no movement between the quick coupler and attachment.

(10) Ride control switch (option)



① Forward / Backward 1~15 km/h

- The ride control automatically turns on when the travel speed exceeds a preset speed. (forward / backward 1~15 km/h)
- The blue pilot lamp is turned ON.


2 ON, Always

- When On, Alway is selected, the ride control system is on regardless of travel speed.
- The green pilot lamp is turned ON.

③ ON/OFF

Select ON/OFF in order to turn on/off the system for the ride control.

(11) Work mode switch

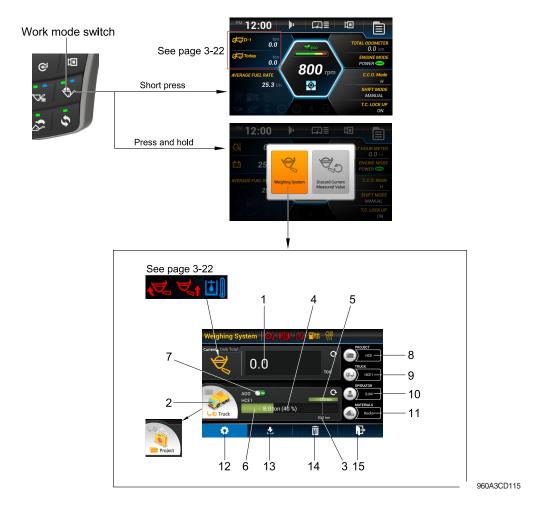

- Current weight in the bucket / Daily total weight
- 2 Select button (Click gray icon) for status (Project status / Truck status)
- 3 Target weight
- 4 Loaded weight
- 5 Remaining weight to complete job / Over weight to complete job
- 6 Progress bar / Total weight

- 7 Select button for mode (Standby mode / Weigh mode)
- 8 Project name
- 9 Truck name
- 10 Operator
- 11 Materials
- 12 Go to Work load setting menu
- 13 Save Work log to USB
- 14 Delete Work log
- 15 Go to Main menu

① Current weight in bucket/ Daily total weight

- This window displays the measured current weight information of the current bucket. Daily Total information accumulated up to today is displayed.
- Current / Daily Total changes the display status by clicking the tab
- The unit of weight depends on the monitor settings.



② Select Button(Click gray icon) for status (Project status/Truck status)

- This button can select the cumulative weight of the project or the cumulative weight of the truck
- If you click on the gray icon, the icon will be changed Project →Truck or Truck → Project.





3 Target Weight

- It displays the set target weight value of Project or Truck. It can be set in the pop-up window.

④ Loaded weight (Progress bar or Total weight)

- It displays the set target weight value of Project or Truck. It can be set in the pop-up window.
- In the case of Truck status, percentage symbol (%) of the target value is displayed after the accumulated value. (Loaded weight / Target weight * 100)
- In the case of Truck status, it is displayed in the form of a Progress bar. The size of the entire bar is set to 120% of the target value, and the color of the bar is green when the target value is below and red when the target value is exceeded.



- In the case of project status, it is displayed as 'Loaded weight / Target weight'.

In the case of project status, if the accumulated value exceeds the target value, the text of the accumulated value is displayed in red.



⑤ Remaining weight to complete job (or Over weight to complete job)

- This setting is displayed only when Truck status is selected.
- Displays the amount of work remaining from the current accumulated value to the target value. (Current cumulative value Truck target value)

- If the current cumulative value is below the target, it is marked with negative number and green, and if it exceeds the target, it is marked with positive number and red.

Select button for mode (Standby mode / Weigh mode)

- In the Standby mode, the measured current weight value is not added to the accumulated value.
- In Weigh mode, the measured current weight value is added to the accumulated value. Set to Weigh mode when 'ON' is displayed and Standby mode when 'OFF' is displayed



® Project Name

- If you touch the right Project icon and text on the Weighing System main screen,the following pop-up is created.



3-42-2

- Select the 'None' Project in advance as the initial default value. The project cannot be deleted.
- Touch one of the input projects and press 'Select' to select the project. After multiselection, press 'Select' to display a warning message to select only one
- Touch one of the input projects and press 'Select' to select the project. (Multi selectable)
- Touch one of the input projects and press 'Delete' to delete the project. (Multi selectable)
- When you touch '+ Add', a qwerty keyboard appears so you can enter a new Project Name.



940A3CD17


- If you touch the red circle, a window for entering the target value appears. After entering the target value, touch 'Save' to complete the setting.
- The unit of weight follows the setting of the monitor.
- When the number of items is exceeded, a 'You cannot add more.' toast message is generated.
- When adding an item with the same name, a 'You cannot add same item.' toast message is generated



940A3CD18

(9) Truck Name

- If you touch the right truck icon and text on the Weighing System main screen, the following pop-up is created. (The current Project Name and Truck Name are displayed at the top)

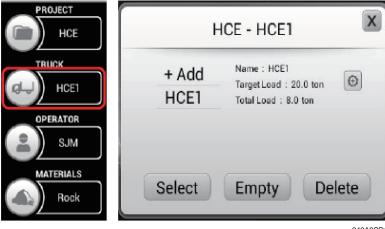

- Initially, Total A, Total B, and Total C are created in advance in the Truck List of the 'None' project. 'Total A' is selected as the default value. Trucks cannot be added or deleted in the 'None Project'. Display warning message that adding/removing is impossible.
- Touch one of the entered trucks and press 'Select' to select the truck. After multiselection, press 'Select' to display a warning message to select only one.
- Touch the entered truck and press 'Delete' to delete the truck (multi selectable)
- Touch the entered truck and press 'Empty' to delete all information in the truck.(multi selectable)
- Touching '+ Add' brings up a gwerty keyboard to enter a new Truck Name.
- If you touch the red circle, a window for entering the target value appears. After entering the target value, touch 'Save' to complete the setting.
- The unit of weight follows the setting of the monitor.
- When the number of items is exceeded, a 'You cannot add more.' toast message is generated.
- When adding an item with the same name, a 'You cannot add same item.' toast message is generated.



3-42-4

(10) Operator

- The pop-up below is created by touching the right operator icon and text on the Weighing System main screen.
- Touch one of the input operators and press 'Select' to select the operator.
- Touch the entered operator and press 'Delete' to delete the operator. (multi-selectable)
- When you touch '+ Add', a gwerty keyboard appears to enter a new operator.
- When the number of items is exceeded, a 'You cannot add more.' toast message is generated.



(1) Materials

- The pop-up below is created by touching the right operator icon and text on the Weighing System main screen.
- Touch one of the input materials and press 'Select' to select the material.
- Touch the input material and press 'Delete' to delete the material. (multi selectable)
- Touching '+ Add' brings up a gwerty keyboard to enter a new material.
- The related contents are saved in the monitor, and the material is limited to 20.
- Send, Gravel, Aggregate, and Rocks are saved in advance as default material values.
- When the number of items is exceeded, a 'You cannot add more.' toast message is generated.
- When adding an item with the same name, a 'You cannot add same item.' toast message is generated



3-42-5

12 Go to Work load setting menu

- Move to the Work load setting menu below.




(13) Save Work log to USB

- Touch the red marked part on the monitor to execute the USB storage function. If the USB is not plugged in, a pop-up will notify you.



- When the USB is plugged in, the pop-up notifies that the USB workload measurement record data is automatically saved.

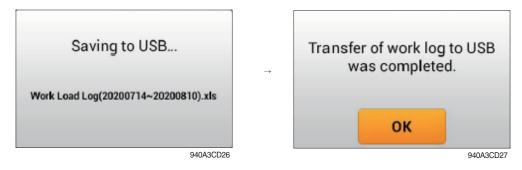

(14) Delete Work log

- Clicking the trash can icon deletes all stored workload measurement data.

(5) Go to Main menu

- Click the exit icon to move to the monitor main menu screen.

(12) Rear wiper and washer switch



① This switch use to operates the rear wiper and washer. When pressing the switch, the mode is changed sequence base. $(OFF \rightarrow intermittent \rightarrow Low \rightarrow OFF)$

· Intermittent: The rear wiper operates intermittently.

· Low :The rear wiper is operated lower speed.

· Washer :The washer liquid is sprayed while long pressing

the button.

② The green pilot lamp is turned ON.

(13) Beacon lamp switch (option)



- ① This switch turns ON the rotary light on the cab.
- 2 The green pilot lamp is turned ON.

(14) Mirror defrost switch (option)



① **ON**

- When turned ON, it will operate for 15 minutes. After 15 minutes, the defrost function stops automatically.
- The green pilot lamp is turned ON.

② **OFF**

- Stops defrost function.

(15) Detent setting switch



760F3CD66

① Boom and bucket

- Set the boom and bucket detent function ON/OFF.

2 Save position

- Press and hold Save Position until you hear an audible alarm noting the current position has been saved.
- Refer to page 4-22.

The green pilot lamps are turned ON.

(16) Fine modulation switch




① **ON**

- Remote control lever provide the operator with precise control of the work equipment (bucket and boom cylinders can be controlled precisely).
- The green pilot lamp is turned ON.

② **OFF**

- Full operation speed of the boom/bucket is enabled.

4. SWITCHES

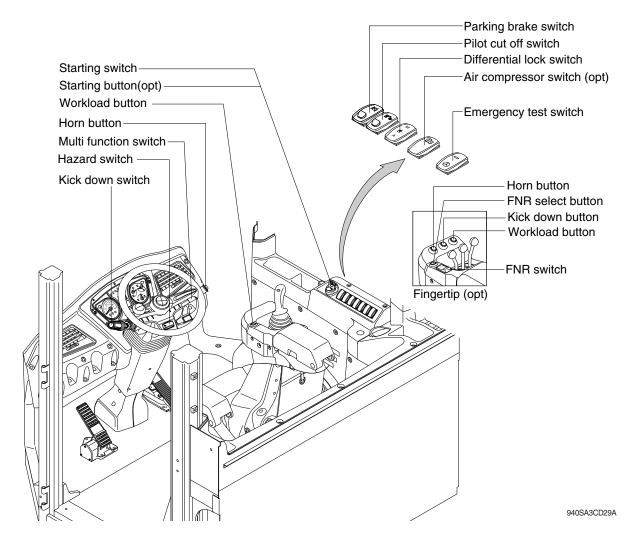

1) STARTING SWITCH & STARTING BUTTON (OPT)





Starting button with smart key tag (opt)

- (1) There are three positions, OFF, ON and START.
 - · O (OFF) : None of electrical circuits activate.
 - · (ON) : All the systems of machine operate.
 - · (START) : Use when starting the engine.
 - Release key immediately after starting.
- When you turn the switch to ON in cold weather, the fuel warmer is automatically enabled to heat the fuel by sensing the coolant temperature. Start the engine in 1~2 minutes after turn the switch to ON. More time may be needed according to ambient temperature.
- ※ Key must be in the ON position with engine running maintain electrical and hydraulic function and prevent serious machine damage.

2) PILOT CUT OFF SWITCH



- (1) When the switch is pressed to the OFF position, the hydraulic pilot line will be disabled and the work equipment will no operate.
- (2) Press the ON position to enable the hydraulic pilot line.
- * This switch can be set to ON or OFF position only when the safety button is pulled to the unlock position.

3) PARKING BRAKE SWITCH



- (1) When the switch is pressed to the ON position, the parking brake will start to operate and the cluster warning lamp will illuminate.
- (2) Press the switch into the release position to disengage the parking brake.
- When operating the gear selector lever, be sure to release the parking brake. If the machine is operated with the parking brake engaged, the brake will overheat and may cause the brake system to fail.
- * The switch can be set from ON to the Release position when the safety button is pulled to the unlock position.
- * If you turn ON the starting switch with the parking brake disengaged (release position), the parking brake will be engaged.


To release the parking brake, press the parking brake switch to ON and Release position.

4) EMERGENCY STEERING TEST SWITCH (option)



- (1) The emergency steering system can be manually tested. Push the switch in order to determine if the emergency steering and the emergency steering lamp are functional.
- (2) When the switch is pressed, the emergency steering pump motor will run. The emergency steering lamp will illuminate. If the emergency steering lamp does not illuminate, do not operate the machine.

5) DIFFERENTIAL LOCK SWITCH (option)

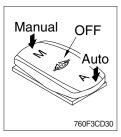

- (1) This switch is used to apply differential lock. The differential lock gives equal power to both front wheels and is used in conditions when traction is poor.
- (2) Manual mode


Depressing the M (Manual) side of the switch will manually engage the differential lock, illuminating the differential lock pilot lamp and the buzzer will sound. Manual mode will temporarily engage as long as the operator maintains pressure on the M (Manual) side of the switch. When the switch is released, the differential lock function is disengaged and the switch returns to the OFF position.

(3) Auto mode

Press the A (Auto) side of the switch for the auto mode of the differential lock function. In A (Auto) mode, the axle differential lock will automatically engage when wheel slippage is detected.

- * While the axle differential lock function is operating, the differential lock pilot lamp lights ON.
- * Refer to page 3-12 and 3-52 (diff lock foot switch).

6) HORN BUTTON

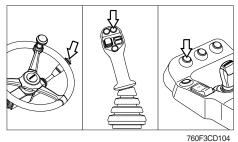

(1) Depressing the horn button(s) will engage the horn.

7) CAB LAMP SWITCH



- (1) This switch turns ON the cab room lamp.
- ① DOOR

The lamp comes ON when the door is opened. When the door is closed the lamp is OFF.

2 ON

This switch is used to turn the lamp ON or OFF.

8) KICK DOWN SWITCH



(1) Manual mode

Depressing the Kick Down Switch will shift from 2nd gear to 1st gear only and upshift from 1st gear to 2nd gear when pressed a second time.

(2) Automatic mode

① Mode 1 (down/up)

Depressing the Kick Down will shift from current gear to one step lower speed by pushing the switch. Depressing a second time will upshift one gear.


2 Mode 2 (down)

Depressing the Kick Down switch will down shift from the current gear to the next lower gear each time depressed.

The kick down function is released in only 1st speed.

- * Refer to page 3-17 for the kick down mode.
- * The normal autoshift function continues after the kick down switch is released.

9) FNR SELECT BUTTON AND SWITCH

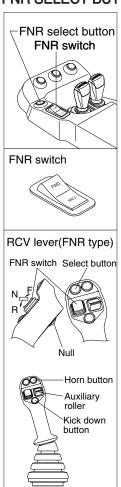

- (1) This button and switch is used to select forward and reverse range.
- * Gear range is selected on the gear selector lever and transmission mode is selected on the monitor.

(2) FNR select button

- ① When the FNR select button is pressed, the indicator lamp on the dash cluster will illuminate and the FNR switch will be functional.
- ** To engage the FNR the following conditions must be met: engine is running, the machine is at a standstill, parking brake is released, gear selector lever in neutral position, FNR switch in neutral position.

(3) FNR switch

· F : Forward drive

· N : Neutral

· R : Reverse drive

- ① If the upper side (F, FWD) of this switch is pushed, the machine moves forward.
- ② If the down side (R, REV) of this switch is pushed, the machine moves backward.
- ③ The FNR switch is disengaged when either the engine is stopped, parking brake is ON or the gear selector lever is moved from the neutral position.
- (4) Auxiliary roller: If the machine is equipped with auxiliary hydraulics, this roller is used for the attachments.

10) WORKLOAD BUTTON

760F3CD103



- (1) This button is used to calculate the weight manually.
 If the button is not pushed, the weight of the weighing system is not calculated.
- (2) This button is pushed for one second more, calculated weight will be accumulated.
- * Refer to the page 3-19, weighing system.

11) HAZARD SWITCH



- (1) Use for parking or loading the machine.
- (2) Will illuminate the Hazard Lights when depressed.
- If the switch is left ON for a long time, the battery may be discharged.

12) MULTI FUNCTION SWITCH



(1) Front wiper and washer switch

- ① When the switch is in **J** position, the wiper moves intermittently.
- * Refer to the page 3-22 (Wiper level setting).
- ② When placed in I or II position, the wiper moves continuously.
- ③ If you push the grip of the lever, washer liquid will be sprayed and the wiper will be activated 2-3 times.
- * Check the quantity of washer liquid in the tank. If the level of the washer liquid is LOW, add the washer liquid (in cold, winter days) or water. The capacity of the tank is 1 liter.
- * If the wiper does not operate with the switch in ON (J, I, II) position, turn the switch OFF (O) immediately and check the cause. If the switch remains ON, motor failure can result.



(2) Dimmer switch


- ① This switch is used to turn the head lights direction.
- 2 Switch positions

· Up : To flash for passing

 \cdot Middle : Head lights low beam ON

· Down: Head lights high beam ON


3 If you release the switch when it's in up position, the switch will return to middle.

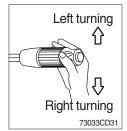


(3) Turning switch

- ① This switch is used to warn or signal the turning direction of the machine to other vehicles or equipment.
- ② Push the lever up for turning left, pull the lever down for turning right.

5. CONTROL DEVICE

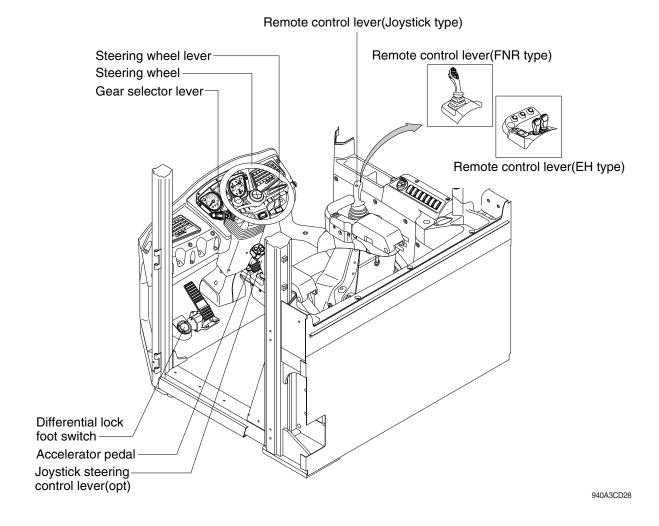


1) REMOTE CONTROL LEVER

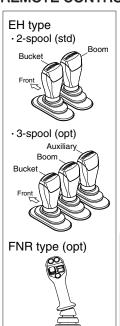


760F3CD50

- (1) These levers are used to control the boom and the bucket.
- (2) Refer to operation of working device in chapter 4 at page 4-9.
- *** EH: Electro-hydraulic**

 FNR: Forward - Neutral - Reverse




2) GEAR SELECTOR LEVER

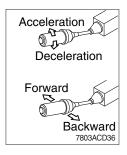


- (1) This lever is used for gear selection, forward 4 stages and reverse 3 stages.
- (2) The lever has 3 positions, Forward Neutral Reverse. If you push the selector lever forward the machine will move forward. if you pull the selector lever toward the operator, the machine will move backwards. The middle position is neutral.
- (3) Turning the gear selector lever will select the gear the machine will operate in during Manual transmission mode. When in AL, AN or AH, the gear selected will be the fastest gear the transmission can operate in automatic mode.


3) ACCELERATOR PEDAL

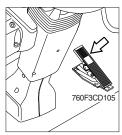

- (1) This pedal controls the engine speed. The engine speed will increase in proportion to the degree of force applied to this pedal.
- (2) The machine will operate at low idle unless the accelerator pedal is depressed.

 4) BRAKE PEDAL

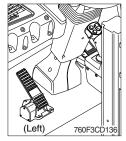




- (1) Left brake pedal (service brake + clutch cut off function)
- ① If the pedal is pushed down, this will generate braking force and bring the machine to a stop.
- ② If the power train operation is to be cut off, set the I.C.C.O mode to ON and press the pedal.
- ▲ Even if the brake is applied while I.C.C.O mode is OFF, power train will not cut off.
- Operating the machine with the brake pedal unnecessarily depressed will cause premature wear to the disc brakes.
- ③ Clutch cut off function: Refer to page 3-17.
- (2) Right brake pedal (service brake function only)
 This pedal functions as service brake only.

5) STEERING WHEEL



- (1) Two multi-motion cylinders in the center of the machine will operate the steering function.
- (2) If the steering wheel is turned to the left, the machine will move to the left. If the steering wheel is turned to the right, the machine will move to the right.

6) JOYSTICK STEERING CONTROL LEVER (option)

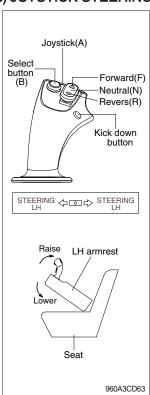

- (1) The system has the following functions concentrated to a collapsible arm rest: steering, forward/reverse drive and kickdown function.
- (2) During normal operation, the operator does not need to touch the steering wheel or gear selector lever.
- (3) The joystick steering and FNR pilot lamps will be illuminated on the cluster when joystick steering is activated.
- ♠ When operating on a public road, the steering wheel should always be used and the joystick steering be disconnected. Also when operating at high speeds (above 20 km/h) on a work site, always use the steering wheel.

(4) Joystick (A)

- ① Joystick steering can be enabled after following conditions have been satisfied.
 - Engine is running. Operator is seat on the seat.
 - LH armrest is placed to the lowered position.
 - Gear selector lever is in neutral.
 - RCV is deactivated. Joystick (A) is placed in normal position.
 - Parking brake is disengaged, but the machine speed is zero.
- ② After the previous conditions are met, press the select button (B). Then the joystick steering pilot lamp ⑤ on the cluster will be ON and joystick steering can be activated.
- 3 Steering will remain enabled until machine speed is zero and one of the following conditions is met.
 - LH armrest is raised. Parking brake is engaged.
 - Gear selector lever is in forward or backward position.
 - Operator is not seated on the seat. Press the select button (B).
- * The steering wheel works as usual, even if the joystick steering is activated.

(5) Forward/reverse selection button

F: Forward drive

N: Neutral

R : Reverse drive

- ① To be able to operate the forward / reverse drive, the system must first be activated using select button (B).
- * The gear selector lever should be in neutral.
- When this function is engaged, it is possible to operate the forward -reverse drive. If the ordinary gear selector control is activated at the same time as the joystick steering is activated, the ordinary gear selector control overrides any selection made by the joystick steering.
 - To reactivate the joystick steering, the ordinary gear selector control must first be moved to neutral and the system again be activated.
- The FNR select pilot lamp on the cluster will be ON when the forward/reverse selection is activated.
- (6) Kick-down button : Refer to page 3-46.

7) STEERING WHEEL LEVER







- (1) Pushing down on the lever, the steering wheel is able to be tilted 40°
- (2) Pulling up on the lever allows the steering column to telescope 80mm

8) DIFFERNETIAL LOCK FOOT SWITCH (OPT)




- (1) Press the foot switch for the differential lock function. When pressed, the differential lock will engage immediately, the differential lock pilot lamp will illuminate and buzzer will sound.
- (2) The differential lock function is temporarily engaged as long as the operator continues to press the foot switch. When the foot switch is released, differential lock is disengaged.

6. AIR CONDITIONER AND HEATER

■ FULL AUTO AIR CONDITIONER AND HEATER

Full auto air conditioner and heater system automatically keeps the optimum condition in accordance with operator's temperature configuration sensing ambient and cabin inside temperature.

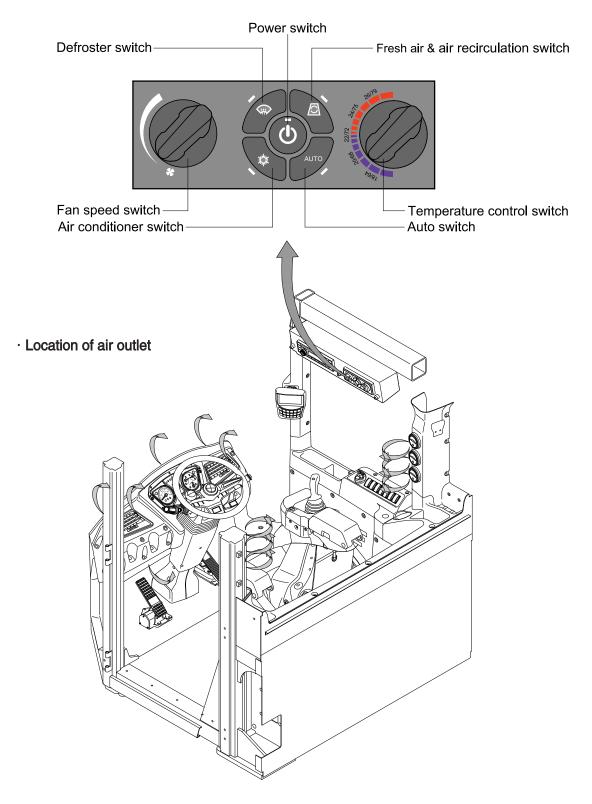

740F3CD37

1) POWER SWITCH



This switch turns the system ON or OFF.
 Just before the power OFF, set values are stored.

(2) Default setting values

Function	Air conditioner	In/outlet	Temperature
Value	OFF	Inlet	Previous sw OFF

* The green pilot lamp is turned ON.

2) AUTO SWITCH



(1) This switch sets the air conditioner and heater system to automatic temperature control.

Auto air conditioner and heater system automatically keeps the optimum condition in accordance with operator's temperature configuration sensing ambient and cabin inside temperature.

* The green pilot lamp is turned ON.

3) AIR CONDITIONER SWITCH (compressor switch)



- (1) This switch turns the compressor for the air conditioning.
- (2) In accordance with the temperature sensed by duct (evaporator) sensor, compressor turns ON or OFF automatically.
- * The green pilot lamp is turned ON.

4) DEFROSTER SWITCH



(1) Defroster and ventilation nozzles at window open and directed toward the windows.

(2) Default setting values

Function	Air conditioner	In/outlet	Blower
Value	ON	Outlet	Max for 15 minutes


The green pilot lamp is turned ON.

5) FRESH AIR/AIR RECIRCULATION SWITCH




- (1) It is possible to change the air-inlet method.
- Tresh air (pilot lamp OFF)
 Fresh cabin air is pulled through the cabin inlet filter, pressurizing the cabin.
- * Check the cabin air filter periodically to maintain cabin filtration.
- ② Air recirculation (pilot lamp ON)
 It recycles the heated or cooled air to increase the energy efficiency.
- Alternate between recirculation and fresh air when operating for extended periods of time.
- Change the recirculation filter periodically to maintain cabin filtering efficiency.

6) FAN SPEED KNOB

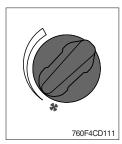


(1) This knob controls fan speed manually. There are 9 steps to control fan speed.

7) TEMPERATURE CONTROL KNOB

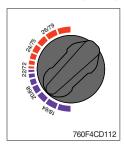

- (1) This knob controls the position of the water valve when the air conditioner switch is ON or OFF.
- (2) When the AUTO switch is ON, the temperature control knob determines the desired cab temperature. The temperature range is 18°C (64°F) in the full cold position and 26°C (79°F) in the full hot position.

7. OTHERS

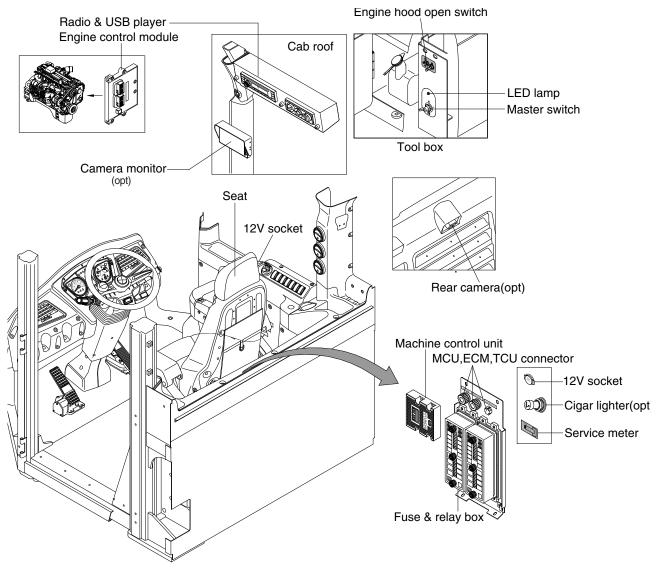

940SA3CD38

1) CIGAR LIGHTER




- (1) This can be used when the engine starting switch is ON.
- (2) The lighter can be used when it springs out in a short while after being pressed down.
- Service socket 24v, 100 W
 Use cigar lighter socket when you need emergency power.
 Do not use the lighter socket for items requiring below 24V

2) SEAT

The seat is adjustable to fit the contours of the operator's body. Operator fatigue can be reduced and work efficiency improved if properly configured.

- ▲ Always check the condition of the seat belt and mounting hardware before operating the machine.
- ▲ Failure to wear a seat belt during operation may result in serious injury or death in the event of an accident or machine rollover.


(1) Weight and height adjustment

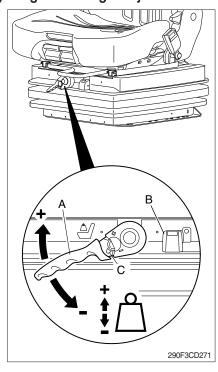

With socket wrench (A):


- ① The seat has to be adjusted for the operator's weight and height by tilting the handle (+) up or down (-) with the operator not sitting on the seat.
- ② The rotational direction is reversed by toggling the ratchet with the switch (C).
- ③ The operator's weight and the seat height are adjusted correctly when the green marking is completely visible in the indicator window (B) for weight and height.
- ④ The height can be adjusted individually as long as the green marking is visible.

Weight adjustment (AIR SUSPENSION, OPT)

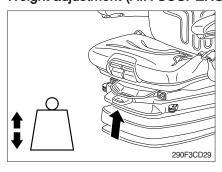


- The seat should be adjusted for the operator's weight by briefly pulling the actuator lever of the automatic weight and height adjuster (arrow) with the machine at a standstill and the operator's sitting on the seat.
 - The operator must sit absolutely still during adjustment.
- Before adjusting the weight, adjust shock absorbers to the position "soft".
- * The setting of the seat should be adjusted to the operator's weight before the machine is operated.

Height adjustment (AIR SUSPENSION, OPT)

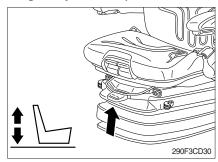


- ① The seat height can be set pneumatically and is continuously adjustable.
- ② The seat height can be altered by pulling or pressing the actuator lever fully out or in (arrow). If the adjustment reaches the top or bottom endstop, the height is adjusted automatically in order to guarantee a minimum spring travel.
- Before adjusting the weight, adjust shock absorbers to the position "soft".
- * In order to avoid damage, do not operate the compressor continuously for more than 1 minute.

(2) Fore/after adjustment

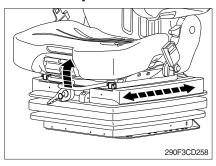


- ① The fore/after adjustment is released by lifting the locking lever.
- ▲ Do not operate the locking lever while operating.
- ** After the adjustment, the locking lever must latch into the desired position with an audible click. It should not be possible to move the operator's seat into another position when it is locked.
- * Do not lift the locking lever with your leg or calf.

(3) Seat depth adjustment

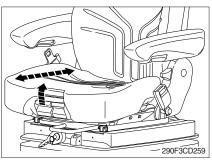


- ① The depth of the seat pan can be individually adjusted.
- ② To adjust the depth of the seat cushion, pull the right handle upwards. By moving the seat pan backwards or forwards the desired seating position can be reached.

(4) Seat pan angle adjustment

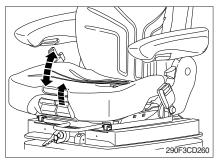

- ① The angle of the seat pan can be individually adjusted.
- ② To adjust the angle of the seat pan, pull the left handle upwards. By exerting pressure on or off the front or rear part of the seat pan it can be moved to the desired angle position.

(5) Armrest (LH)

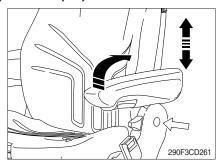

- ① The armrests can be folded up if required and the height can be individually adjusted.
- ② To adjust the armrest for height, separate the round cap (see arrow) from the cover and loosen the hexagon nut (size 13 mm) behind it adjust the armrests to the desired position (5 steps) and tighten the nut again (25 Nm).


 Replace the cap onto the nut.

Joystick & Joystick Steering Armrest




- Tilt lever Pull up and hold to tilt armrest maximum 70 degrees.
- 2. Adjust lever Pull up, hold and slide forward or rearward or up or down.

(6) Armrest adjustment

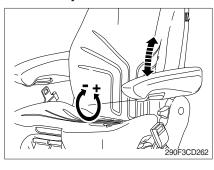


- ① The inclination of the armrest can be modified by turning the adjustment knob.
- ② When turning the knob to the outside (+), the front part of the armrest will be lifted; when turning the knob to the inside (-), it will be lowered.

(7) Headrest

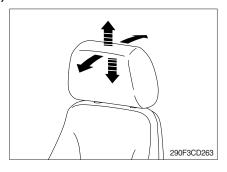

- ① The headrest can be individually adjusted for height by pulling it upward over the various increments up the end stop.
- ② By pushing forwards or rearwards the angle of the headrest can be adjusted individually.
- ③ To remove the headrest, pull it over the end stop.

(8) Document box

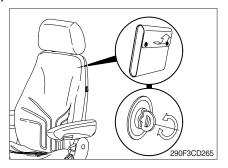


- ① The document box is placed on the rear side of the backrest.
- ② To open the document box, first twist the turn lock closures 90° to the left or the right and then fold the cover of the document box upwards.

(9) Seat heater switch



① The seat heater can be turned on/off by pressing the switch.

(10) Absorber

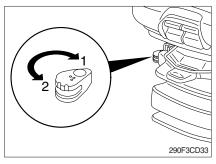


① The absorber setting of the seat can be varied to suit the on and off-road working conditions.

The cushioning effect can be individually adjusted for this purpose.

Turn the lever to the desired position and release.


- 1 Soft
- 2 Hard

(11) Fore/aft isolator

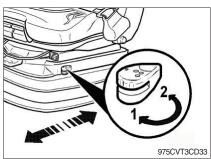


- ① It is useful to activate the fore/aft isolator. This means that shock impacts in the driving direction can be better absorbed by the seat.
 - 1 Fore/aft isolator off
 - 2 Fore/aft isolator on

(12) Lumbar support

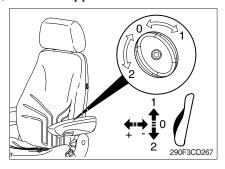

- ① By turning the adjustment knob to the left (2) or right (1), both the height and curvature of the backrest cushion can be individually adjusted.
- ② This increases or decreases lumbar support for the operator.

(13) Backrest adjustment

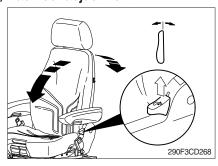

- ① Pull up the locking lever to adjust the angle of the backrest. When releasing the backrest, do not apply pressure by pressing against it.
- ② Exert pressure on or off the front or rear part of the seat pan to adjust the backrest. Release the locking lever once the backrest is in a comfortable position.
- * The backrest should not be able to move once the locking lever has been released and is in the locked position.

(14) Service slide release lever



- ① Moves the seat top & suspension fore/aft (for use of service & maintenance in back of cab only).
- 2 Pull, hold & slide forward.
- ③ Release to stop slide.
- 4 Maximum travel: 100 mm forward.
- Do not move the service slide backwards.
 Use only for service inspection and repair on cab rear. If you move the service slide backwards with the armrest lifted, the armrest and cab rear may interfere.

(15) Maintenance

Dirt can impair the function of the seat, so make sure you keep your seat clean. Upholstery does not need to be removed from the seat frame for cleaning.

- ▲ Be careful when adjusting the backrest it may jerk forward and cause injury. When cleaning the backrest cushion, the backrest must be held in place if operating the backrest lever.
- No not clean the seat with a pressure washer.

During cleaning, the upholstery must not be soaked through.

Use standard commercially available upholstery or plastics cleaning agent.


Test first for compatibility on a small, concealed area.

3) 12V SOCKET



(1) 12V, 30W power outlet providing DC power for accessories.

4) MASTER SWITCH

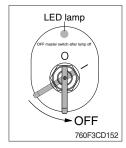

- (1) This switch is used to shut off the entire electrical system.
- (2) I: The battery remains connected to the electrical system.
 - O: The battery is disconnected to the electrical system.
- * Do not turn the master switch to the OFF position until the red
- * LED light is off.

Never turn the master switch to O (OFF) with the engine running. Engine and electrical system damage could result.

5) SERVICE METER




- (1) This meter shows the total operation hours of the machine.
- (2) Verify the meter is operating and follow the machine maintenance charts (chapter 6) based on the hour readings.

6) MCU/ECM/TCU CONNECTOR



(1) Service tool connection for communication with the engine, transmission and machine.


7) FUSE & RELAY BOX

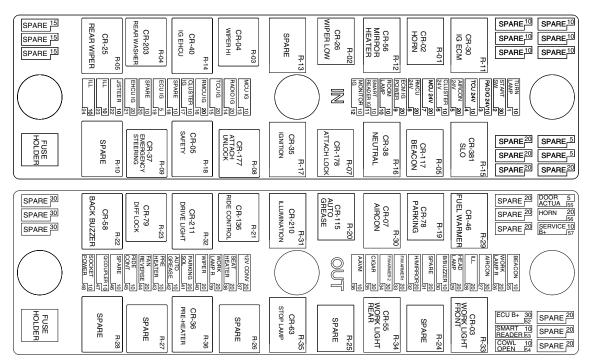

960SA3CD55


- (1) The fuses protect the electrical parts and wiring from burning out.
- (2) The fuse box cover indicates the capacity of each fuse and circuit it protects.
- * Replace a fuse with another of the same capacity.
- ▲ Before replacing a fuse, be sure to turn OFF the starting switch.

8) ENGINE HOOD TOGGLE SWITCH

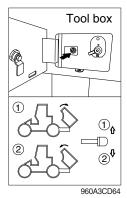


- (1) Move the toggle switch up to position ① to open the hood.
- (2) Move the toggle switch down to position ② to close the hood.
- (3) Hold the switch until the hood is fully opened or closed. Once the hood is fully opened or closed release the switch as it will return to the neutral position.
- (4) Rear hood panel can only be opened prior to opening hood.
- * Refer to the page 4-28.
- * After stopping the engine, open or close the engine hood.
- A Hood side doors should be closed prior to opening.
- ▲ If rear door is opened, insure swinging cooler is closed prior to opening or closing hood. Damage could occur from interference while.

9) RIGHT HAND TILT WINDOW & ESCAPE HATCH

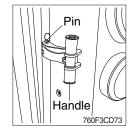

- (1) Push the handle forward and then outward to open the window. The handle will lock into the open position.
- (2) To use as an escape hatch, pull the pin from the handle and swing open the window frame.
- * Open the window periodically to ensure proper operation. Lubricate or repair the window as necessary.

10) MACHINE CONTROL UNIT (MCU)

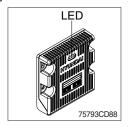


- (1) Electronic control unit receiving input from the ECM, TCU, engine and hydraulic sensors and transmits this data to control all indicators and buzzers in the cluster and monitor.
- (2) Three LED lamps on the MCU display service operating conditions.

11) TRANSMISSION CONTROL UNIT (TCU)



(1) The TCU uses sensors from the transmission, gear selector lever, as well as data provided by the ECU to calculate how and when to change gears.

12) ENGINE CONTROL MODULE (ECM)

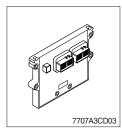

(1) The engine control module (ECM) reads values from a multitude of sensors and adjusts engine output for optimal performance.

13) CONTROL UNIT (electro hydraulic & joystick steering, EHCU)



(1) The control unit is the control center of the EH control lever and joystick steering system.

14) REAR CAMERA (option)



- (1) Located at the rear of the hood, the camera provides rear view with two proximity lines on the monitor.
- * Refer to page 3-35.

15) RADIO AND USB PLAYER (WITH BLUETOOTH)



9403CD100

FRONT PANEL PRESENTATION

	- HOM PANEET MEDERIATION				
1	VOL Fush POWER	······ Power ON/OFF, Volume UP/DOWN button			
2	Push SEL	Manual UP/DOWN Tuning, File search, SEL button			
3	MODE MUTE	Mode button, Audio mute button			
4	C	······ Call & Pair button			
5	•	······ Call end button			
6	DIS ···	······ Station preset 1 ······ Display button			

..... Station preset 2

	RPT	······ Repeat play button
9	4 RDM	····· Station preset 4
	RDM ·	Random play button

3 RPT Station preset 3

10		Station preset 5 Directory down button
11		Station preset 6 Directory up button
12	SCAN BSM	Scan play button (SCAN) Best station memory (BSM) button
13	SEEK	Auto tune up, Seek up button
14	TRACK	Auto tune down, Track down button
15	AUX	USB connector
16	~	AUX IN Jack
17	MIC ····	MIC hole

■GENERAL

(1) Power and volume button



① Power ON / OFF button

Press power button (1) to turn the unit on or off.

2 Volume UP/DOWN control knob

Turn VOL knob (1) right to increase the volume level.

Turn VOL knob (1) left to decrease the volume.

After 5 seconds the display will return to the previous display mode.

③ Initial volume level set up

I-VOL is the volume level the unit will play at when next turned on. To adjust the I-VOL level, press and hold VOL button (1) for longer than 2 seconds. The current volume level displays on the display panel.

Then turn button (1) right or left to set the volume level as the I-VOL level.

4 Clock ON/OFF control

The CLOCK was default at off status. To turn CLOCK ON, press and hold VOL button (1) for longer than 2 seconds to display I-VOL, then short press VOL again, turn VOL knob while CLOCK OFF display, then the CLOCK ON will be displayed.

* Due to time tolerance, the clock display on the Audio unit might have little difference.

⑤ Clock adjustment

With CLOCK ON selected, press VOL knob again after CLOCK ON display, the hour will blink, turn VOL knob right or left to adjust hour. Simply press VOL again, the minute will blink, turn VOL knob to adjust minute. Then press VOL again to confirm the clock once finished.

(2) Menu Selection



① This button can adjust the sound effect and other things. Each time you press this button (2), LCD displays as follows:

BAS
$$\rightarrow$$
 TREB \rightarrow BAL L=R \rightarrow FAD F=R \rightarrow EQ \rightarrow LOUD ON \rightarrow BEEP 2ND

On each setting, the level can be controlled by turning TUNE knob (2). When the last adjustment is made, after 5 seconds, the display will automatically return to the previous display mode.

② Bass control

To adjust the bass tone level, first select the bass mode by pressing SEL button (2) repeatedly until BASS appears on the display panel. Then turn knob (2) right or left within 5 seconds to adjust the bass level as desired. The bass level will be shown on the display panel from a minimum of BASS-7 to a maximum of BASS+7.

③ Treble control

To adjust the treble tone level, first select the treble mode by pressing SEL button (2) repeatedly until TREB appears on the display panel. Then turn knob (2) right or left within 5 seconds to adjust the treble level as desired. The treble level will be shown on the display panel from a minimum of TREB -7 to a maximum of TREB +7.

4 Balance control

To adjust the left-right speaker balance, first select the balance mode by pressing SEL button (2) repeatedly until BAL indication appears on the display panel. Then turn knob (2) right or left within 5 seconds to adjust the balance as desired. The balance position will be shown by the bars on the display panel from BAL 10R (full right) to BAL 10L (full left).

⑤ Fader control

To adjust the front-rear speaker balance, first select the fader mode by pressing SEL button (2) repeatedly until FADER indication appears on the display panel. Then turn knob (2) right or left within 5 seconds to adjust the front-rear speaker level as desired. The fader position will be shown by the bars on the display panel from FAD 10F (full front) to FAD 10R (full rear).

⑥ EQ control

You can select an equalizer curve for 4 music types (CLASSIC, POP, ROCK, JAZZ). Press button (2) until EQ is displayed, then turn knob (2) right or left to select the desired equalizer curve. Each time you turn the knob, LCD displays as follows:

When the EQ mode is activated, the BASS and TREBLE modes are not displayed.

7 Loud control

When listening to music at low volume levels, this feature will boost the bass and treble response. This action will compensate for the reduction in bass and treble performance experienced at low volume.

To select the loudness feature, press button (2) until LOUD is displayed, then turn knob (2) right or left to activate or deactivate loudness.

8 Beep control

To adjust the BEEP mode, first select the BEEP mode by pressing button (2) repeatedly until BEEP indication appears on the display panel. Then turn knob (2) left or right within 5 seconds to select BEEP 2ND, BEEP OFF or BEEP ON.

- · BEEP 2ND : You will only hear the beep sound when the buttons are held down for more than 2 seconds.
- · BEEP OFF: You can not hear the sound beep when you press the buttons.
- · BEEP ON : You can hear the beep sound each time you press the buttons.

(3) Mute control

① Press and hold MUTE button (3) for over 2 seconds to mute sound output and MUTE ON will blink on the LCD. Press the button again to cancel MUTE function and resume to normal playing mode.

(4) Mode selection

- ① Repeat press MODE button (3) to switch between FM1, FM2, AM, USB, AUX, BT MUSIC.
- * If there is no USB, AUX, Bluetooth Phone connected, it would not display USB, AUX, BT when you press button (3).

■RADIO

(1) Mode button



① Repeat press MODE button to select FM1, FM2 or AM.

(2) Manual tuning button



① To manually tune to a radio station, simply turn encoder TUNE (2) left or right to increase or decrease the radio frequency.

(3) Auto tuning button



① To automatically select a radio station, simply press Seek up or Track down button.



(4) Station preset button



- ① In radio mode, pressing buttons (6) to (11) will recall the radio stations that are memorized. To store desired stations into any of the 6 preset memories, in either the AM or FM bands, use the following procedure:
 - a. Select the desired station.
 - b. Press and hold one of the preset buttons for more than 2 seconds to store the current station into preset memory. Six stations can be memorized on each of FM1, FM2, and AM.

(5) Preset scan (PS) / Best station memory (BSM) button



- ① Press BSM button (12) momentarily to scan the 6 preset stations stored in the selected band. When you hear your desired station, press it again to listen to it.
 - Press BSM button (12) for longer than 2 seconds to activate the Best Station Memory feature which will automatically scan and enter each station into memory.
- If you have already set the preset memories to your favorite stations, activating the BSM tuning feature will erase those stations and enter into the new ones. This BSM feature is most useful when travelling in a new area where you are not familiar with the local stations.

■USB PLAYER

(1) USB playback



- ① The unit was equipped with a front USB jack and also a rear USB Jack.
 - With a USB device plugged in the front USB jack, it will be detected as front USB mode. And with a USB device plugged in the rear USB jack, it will be detected as rear USB. To get to a USB mode, press MODE (3) button momentarily or insert the USB device in front or rear USB jack.
- * If no mp3 or wma files in USB device, it will convert to the previous mode after display NO FILE.

(2) Track Up / Down button



① Press SEEK up (13) or TRACK down (14) to select the next or previous track. Press and hold the buttons to advance the track rapidly in the forward or backward direction.



(3) MP3 directory / File searching



① Button (2) is used to select a particular directory and file in the device. Turn button (2) right or left to display the available directories. Press button (2) momentarily when the desired directory is displayed, then turn button (2) right or left again to display the tracks in that directory. Press button (2) to begin playback when the desired file is displayed.

(4) Directory Up / Down button



- ① During MP3/WMA playback, simply press DIR- button (10) to select the previous directory (if available in the device); simply press DIR+ button (11) to select the next directory (if available in the device).
- If the USB device does not contain directories, it would play MP3/WMA tracks at 10- file when you press DIR- button (10), and play MP3/WMA tracks at 10+ file when you press DIR+ (11) button.

(5) Track Scan Play (SCAN) button



- SCAN playback : Simply press SCAN (12) button to play the first 10 seconds of each track.
- SCAN folder: Press and hold SCAN button for longer than 2 seconds to scan play the tracks in current folder.
- SCAN off : Simply press it again to cancel SCAN feature.

(6) Track Repeat Play (RPT) button



- REPEAT playback : Simply press RPT (8) button to play current track repeatedly.
- REPEAT folder: Press and hold RPT for longer than 2 seconds to repeat play the tracks in current folder.
- REPEAT off: Simply press it again to cancel REPEAT feature.

(7) Track Random Play (RDM) button



- RANDOM playback : Simply press RDM (9) button to play the tracks in the device in a random sequence.
- RANDOM folder: Press and hold RDM button for longer than 2 seconds to random play the tracks in current folder.
- RANDOM off: Simply press it again to cancel RANDOM feature.

(8) ID3 v2 (DISP)



- ① While a MP3 file is playing, press DISP button (6) to display ID3 information. Repeat push DISP button (6) to show directory name / file name and album name / performer / title.
- If the MP3 disc does not have any ID3 information, it will show NO ID3.
- * USB Information and Notice
 - a. Playback FILE SYSTEM and condition allowance.
 - FAT, FAT12, FAT16 and FAT32 in the file system.
 - V1.1, V2.2 and V2.3 in the TAG (ID3) version.
 - b. Display up to 32 characters in the LCD display.
 - c. No support any of MULTI-CAED Reader.
 - d. No high speed playback but only playing with normal full speed.
 - DRM files in the USB may cause malfunction to playback in the radio unit.
 - The temperature below -10 Celsius, the audio unit with USB hook up would be affected to play well.

■AUX OPERATION

It is possible to connect your portable media player to the audio system for playback of the audio tracks via the cab speakers.

To get the best results when connecting the portable media to the audio system, follow these steps:

- Use a 3.5 mm stereo plug cable to connect the media player headphone socket at each end as follows.
- Adjust the portable media player to approximately 3/4 volume and start playback.
- Press the MODE button (3) on the audio unit to change into AUX mode.
- The volume and tone can now be adjusted on the audio unit to the desired level.
- * The audio quality of your media player and the audio tracks on it may not be of the same sound quality as the audio system is CD Player.
- * If the sound of the media player is too low compared with the radio or CD, increase the volume of the player.
- * If the sound of the media player is too loud and/or distorted, decrease the volume of the player.
- * When in AUX mode, only the Volume, Bass, Treble, EQ and Mode functions of the audio unit can be used.

■BLUETOOTH

 
1) Using a bluetooth wireless connection

- (1) Your audio unit supports bluetooth wireless technology. You can set up a wireless link with bluetooth cellular phone.
- (2) Keep PAIRING the cellular phone with audio unit in a few minutes as the phone are being switched on well enough.
- * Since this audio unit is on standby to connect with your cellular phone via bluetooth wireless technology, using this audio unit without running the engine can result battery drainage.
- * This audio unit phone call reception is on standby when ignition switch is set to ACC OFF or ON.
- ** The line-of-sight distance between this audio unit and your cellular phone must be 10 meters or less for sending and receiving voice and data via bluetooth wireless technology. However the transmission distance may become shorter than the estimated distance depending on the environment in use.
- * Digital Noise & Echo suppression system provides the best sound clarity with little or no distortion (Echo & side tone will happen depending on cellular phone or service network).
- * To ensure the quality of calling, you should select a proper bluetooth VR level. This audio unit has already set with the best bluetooth VR level.




1 Bluetooth icon

It will blink while establishing the bluetooth pairing. It will light after a bluetooth device connected.



② Battery icon

 It indicates the battery status of the connected bluetooth device.



3 Single strength icon

It indicates the signal strength of the connected bluetooth device.

2) Pairing in hands free modes



- (1) Press and hold CALL button (4) for 2 seconds until you hear beep sound, then appears PAIR STR on the display.
- (2) For the next procedure, go to cellular phone pairing mode.
- (3) If it is in pairing status with audio unit and cellular phone, PAIRING will show on the display.
- (4) If you want to exit pairing mode, press CALL END button (5) briefly while pairing, then it will show PAIR CLR on the display.
- (5) Bluetooth Icon and PAIR OK appear on the display when pairing is successful.

3) Cellular phone pairing mode

- (1) Browse your cellular phone menu and find the connectivity or bluetooth connection section.
- (2) Select search for a new handsfree device function and allow the phone to find the mobile.
- (3) HYUNDAI should appear on your cellular phone screen.
- (4) Press connect menu among the handsfree option on your cellular phone.
- (5) The cellular phone should prompt for a pin code. Insert the pin code 0000.
- (6) The cellular phone should confirm that it has established a new paired connection.
- (7) Close the menu. The pairing is now completed. It appears PAIR FAIL on the display for 3 seconds.
- * Each cellular phone type has a distinct phone menu. Please refer to your cellular phone instructions regarding the correct procedure on how to connect a new bluetooth device.

4) Bluetooth connection and disconnection

(1) When established bluetooth connection between this audio unit and the cellular phone, bluetooth icon on the display appears and then the display shows HF/AV CONN when handsfree & AV profile connected.



(2) To disconnect bluetooth link

Press and hold CALL END button (4) for 2 seconds, it shows DIS CON and disappears bluetooth Icon on the display.



(3) To disconnect bluetooth link

Press CALL button (3) briefly, it blinks bluetooth Icon on the display while bluetooth is being connected. If the connection is completed, it appears bluetooth Icon on the display.

- When your cellular phone battery is at low charge, the bluetooth connection may occasionally be lost. To maintain good connectivity ensure that your phone battery is adequately charged.
- * In case of failure of bluetooth pairing:
 - Delete item in paired list on your phone.
 - Reset both phone by power off/on and the audio unit by ACC off/ on.
- Connecting priority of handsfree profile is higher than headset profile.
- * The headset mode does not support caller ID, reject call and call Transfer.

5) Using the audio unit as a handsfree device



(2) To accept call

Press CALL button (4), it appears ANSWER CALL and follows TALKING on the display.

- (3) To end call
 - To end call, press CALL END button (5), it appears REJECT on the display.
- If reject call is activated in your phone, then your cellular phone does not support reject call function.

6) Audio transfer between the audio unit and phone

The audio transfer function is for switching the call from the audio unit to the cellular phone for private conversation.



- (1) Press CALL button (4) briefly during conversation, it appears CALL TRANS on the display. To switch back to the audio unit, press button (4) briefly during private conversation, then it appears CALL TRANS on the display again.
- * This function will be a cause of disconnection of bluetooth link in some nokia phones, but you do not worry just press button (4) during private conversation, then switch back to the audio unit automatically.
- * The quality of calling between cellular phone and audio unit is better than calling between one audio unit and another one.

7) Last call number dialing



- (1) Press CALL button (4) briefly, it appears CALL TO, then simply press CALL button once again, it would make the last call with phone number display on LCD.
 - If Reject call is activated in your phone, then your cellular phone does not support Reject Call function.
- If you are using SAMSUNG phone, then you may need to press once more send button. First press button shows phone contact list in your phone, then second press make the last call.

8) To make a call by cellular phone

The audio transfer function is for switching the call from the audio unit to the cellular phone for private conversation.

- (1) The audio unit activated automatically when you make a call by cellular phone.
- (2) When you make a call processing by cellular phone, it shows CALLING on the display.
- (3) When you receive a call, the phone number ******* appears on the display.

9) Using the audio unit as bluetooth music

The audio unit supports A2DP (Audio Advanced Distribution Profile) and AVRCP (Audio Video Remote Control Profile), and both profiles are available to listen music at the audio unit via cellular phone which is supporting the two profiles above.

- (1) To play music, search the menu on your cellular phone as below:
 - i.e : Menu \rightarrow File manager \rightarrow Music \rightarrow Option \rightarrow Play via bluetooth. It appears BT MP3 on the display.
- (2) During BT MP3 playing, you could select the previous or next track by pressing SEEK up or TRACK down button on audio unit or operate via your cellular phone.
- (3) To stop music, press button (5) briefly and it will automatically switch into the previous mode.
- (4) To resume music playing, press the play button on your cellular phone.
- * This function maybe different depends on cellular phone. Please follow the cellular phone menu. Some kinds of phone need to pair once more for bluetooth MP3 connection.
- * This function will be caused to disconnect A2DP, AVRCP depends on cellular phone.
- * Information about songs (e.g.: the elapsed playing time, song title, song index, etc.) cannot be displayed on this audio unit.

■RESET AND PRECAUTIONS

1) Reset function

Interfere noise or abnormal compressed files in the MP3 disc or USB instrument may cause extraordinary operation (or unit frozen/locking up). It's strongly recommended to use appropriate USB storage not cause any malfunction to the audio unit. In the unlikely event that the player fails to operate correctly, try out to reset unit by any of following two methods.

- (1) press and hold seek simultaneously for about 5 seconds. (without Bluetooth)
 - Press and hold simultaneously for about 5 seconds. (with Bluetooth)
- (2) Take out the fuse for the audio system in the vehicle once and then plug again.
- * It will be necessary to re-enter the radio preset memories as these will have been erased when the microprocessor was reset.

After resetting the player, ensure all functions are operation correctly.

2) Precautions

When the inside of the car is very cold and the player is used soon after switching on the heater, moisture may form on the disc or the optical parts of the player and proper playback may not be possible.

If moisture forms on the optical parts of the player, do not use the player for about one hour. The condensation will disappear naturally allowing normal operation.

- (1) Operation voltage: 9~32 volts DC, negative
- (2) Output power: 40 watts maximum (20 watts x 2 channels)
- (3) Tuning range

Area	Band	Frequency range	Step
LICA	FM	87.5~107.9 MHZ	200K
USA	AM	530~1710 KHZ	10K
EUROPE	FM	87.5~108.0 MHZ	50K
LUNUFE	AM	522~1620 KHZ	9K
ASIA	FM	87.5~108.0 MHZ	100K
ASIA	AM	531~1602 KHZ	9K
LATIN	FM	87.5~107.9 MHZ	100K
LATIN	AM	530~1710 KHZ	10K

AREA Selection :

- To select an area, press and hold related buttons at FM1 band for about 3 seconds.
- USA Area: Press and hold mode + 1DIS buttons for 3 seconds
- EUROPE Area: Press and hold mode + 2 buttons for 3 seconds
- ASIA Area: Press and hold mode + 3RPT buttons for 3 seconds
- LATIN Area: Press and hold mode + 4RDM buttons for 3 seconds.
- (4) USB version : USB 1.1 (5) Bluetooth version : V2.1
- (6) Bluetooth supported profile:
 - A2DP : Advanced Audio Distribution Profile- AVRCP : Audio/Video Remote Control Profile
 - HFP: Hands-Free Profile

16) CAMERA MONITOR (OPTION)




960A3CD65

(1) Front panel description


Button	Description	Single Cam mode	Function menu - Single Cam	AAVM mode	Function menu - AAVM
Ф	POWER	- Beep stop - Display On / Off	- Beep stop - Display On / Off - Menu escape (save & exit)	- Beep stop * - Display On / Off	- Beep stop - Display On / Off - Menu escape (save & exit)
	SELECT	Parking guide line On / Off	- Menu select - Adjust menu escape	Favorite view (menu preset)	- Menu select - Adjust menu escape
糜	MENU	- Menu enter - Parking guide line adjust (long key/2 sec)	Menu next page	Menu enter	Menu next page
A	UP	- Previous view (short key) - Adjust to the volumn set in the menu (long key)	- Menu Up - Menu Adjust Up	- Previous view (short key) - Adjust to the volumn set in the menu (long key)	- Menu up - Menu adjust up
•	DOWN	Next view	- Menu Down - Menu Adjust down	Next view	- Menu down - Menu adjust down

(2) Interlocked with other devices

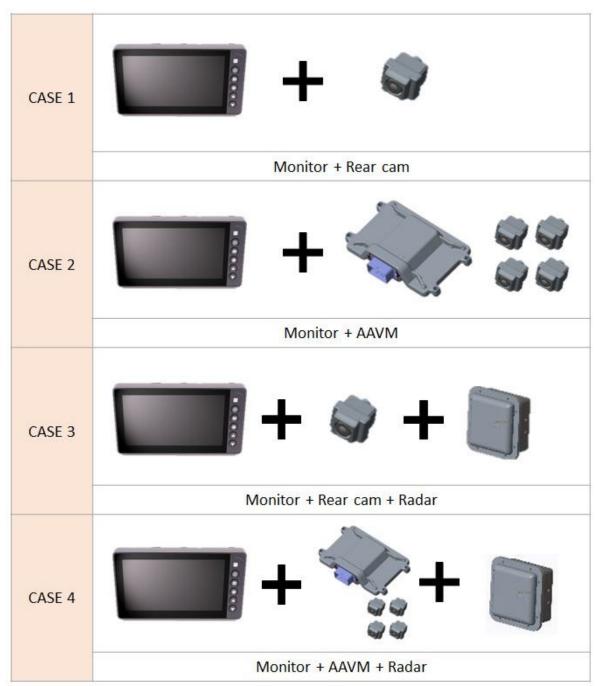

960A3CD71


(3) Operation scenario (Single camera mode)

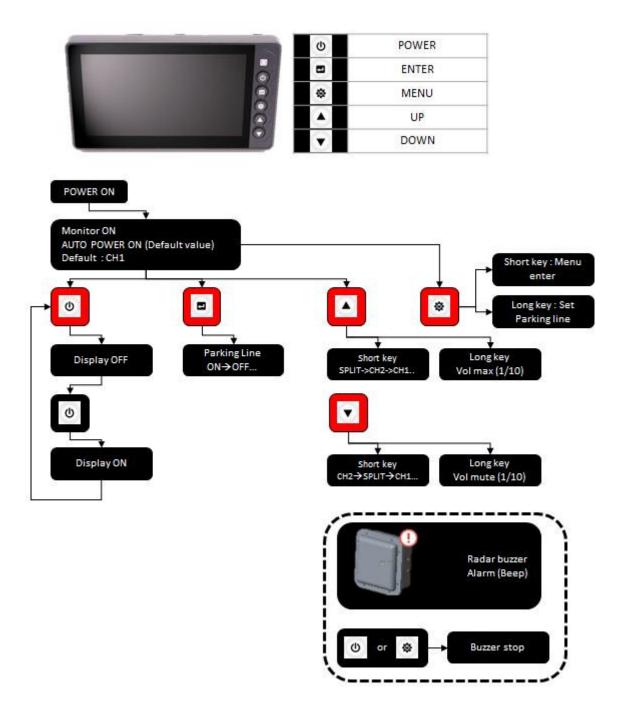

960A3CD72


(4) Operation scenario (AAVM mode)



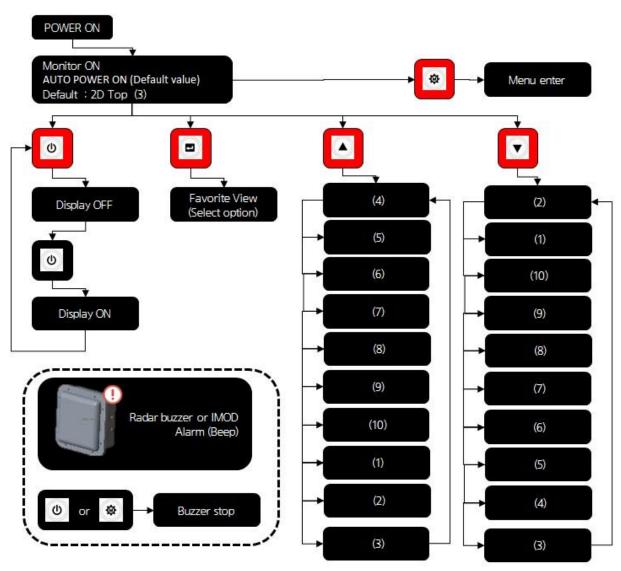

960A3CD73

(5) AAVM view mode type

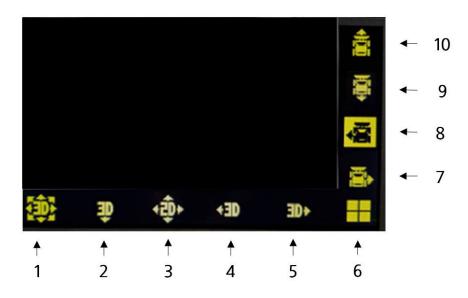

NO	Name
1	3D TOP
2	3D Rear
3	2D TOP
4	3D LEFT
5	3D RIGHT
6	4CH
7	RIGHT
8	LEFT
9	REAR
10	FRONT

UP & DOWN KEY ORDER

• UP: $1 \rightarrow 2 \rightarrow 3 \rightarrow 4 \rightarrow 5 \rightarrow 6 \rightarrow 7 \rightarrow 8 \rightarrow 9 \rightarrow 10$

• DOWN: $10 \rightarrow 9 \rightarrow 8 \rightarrow 7 \rightarrow 6 \rightarrow 5 \rightarrow 4 \rightarrow 3 \rightarrow 2 \rightarrow 1$

960A3CD74

(6) Function menu tree (Single cam mode)

SHOR	TKEY				
NO	MENU	Pop-up menu	Background video	SETTING VALUE	비고
1	SCREEN COLOR SETTING	■ SCREEN COLOR SETTING	Previous view	BRIGHT: 0~60 / 1STEP	Default : 20
		■ BRIGHT : 20 ■ CONTRAST : 33 ■ COLOR : 30 ■ SHARPNESS : 30 ■ TINT : 30		CONTRAST: 0~60 / 1STEP	Default: 33
				COLOR: 0~60 / 1STEP	Default: 30
				SHARPNESS: 0~60 / 1STEP	Default: 30
				TINT: 0~60 / 1STEP	Default : 30
			CAMERA 1	MIRROR: ON/OFF	
		■ CAMERA1 SETTING ■ MIRROR : OFF ■ UPSIDE DOWN : OFF ■ TRIGGER ENABLE : ON ■ TRIGGER SUSTAIN : 02sec ■ MARKER DISPLAY : OFF ■ MARKER TYPE : TypeA ■ MARKER POSITION Enter		UPSIDE DOWN : ON / OFF	
				TRIGER ENABLE : ON / OFF	
2	CAMERA1			TRIGGER SUSTAIN: 1~20 sec / 1sec	
_	SETTING			MARKER DISPLAY: ALWAYS / TRIGGER / OFF	
				MARKER TYPE : TYPE A / TYPE B	
				MARKER POSITION : ENTER	MARKR WIDTH / HIGHT ADJUST
	CAMERA2 SETTING	■ CAMERA2 SETTING ■ MIRROR : OFF ■ UPSIDE DOWN : OFF ■ TRIGGER ENABLE : ON ■ TRIGGER SUSTAIN : 02sec ■ MARKER DISPLAY : OFF ■ MARKER TYPE : TypeA ■ MARKER POSITION Enter		MIRROR: ON/OFF	
3			CAMERA 2	UPSIDE DOWN : ON/OFF	
				TRIGER ENABLE : ON/OFF	
				TRIGGER SUSTAIN: 1~20 sec / 1sec	
ا ر				MARKER DISPLAY: ALWAYS / TRIGGER / OFF	
				MARKER TYPE : TYPE A / TYPE B	
				MARKER POSITION : ENTER	MARKR WIDTH / HIGHT ADJUST
4	SPLIT1 SETTING	■ SPLIT1 SETTING ■ SPLIT TYPE : TypeA ■ CH1 : CAM1 ■ CH2 : CAM2		SPLIT TYPE : TYPE A / TYPE B	
				CH1: CAM1/CAM2	
				CH2: CAM1/CAM2	
	System Config	SYSTEM CONFIG AUTO POWER : AUTO AUTO DIMMER : OFF BEEP VOLUME : 05 LANGUAGE : ENGLISH FACTORY RESET : Ver0.55/1.33	SPLIT VIEW	AUTO POWER: AUTO / ON / OFF	
				AUTO DIMMER : ON / OFF	
5				BEEP VOLUME: 0~10 / 1 STEP	Default : 5
				LANGUAGE : 한국어 / ENGLISH	Default : ENGLISH
				FACTORY RESET : Version	


(7) Function menu tree (AAVM mode)

SHOF	SHORT KEY				
NO	MENU	Pop-up menu	Background video	SETTING VALUE	비고
1		■ SCREEN COLOR SETTING ■ BRIGHT : 20 ■ CONTRAST : 33 ■ COLOR : 30 ■ SHARPNESS : 30 ■ TINT : 30	Previous view	BRIGHT: 0~60 / 1STEP	Default : 20
	SCREEN			CONTRAST: 0~60 / 1STEP	Default: 33
	COLOR			COLOR: 0~60 / 1STEP	Default : 30
	SETTING			SHARPNESS: 0~60 / 1STEP	Default: 30
				TINT: 0~60 / 1STEP	Default : 30
			Previous view	AUTO POWER: AUTO / ON / OFF	
		SYSTEM CONFIG		AUTO DIMMER : ON / OFF	
		■ AUTO POWER : AUTO ■ AUTO DIMMER : OFF ■ BEEP VOLUME : OS ■ LANGUAGE : ENGLISH ■ FACTORY RESET : Ver0.55/1.33 ■ AAVM FAVORITE VIEW : 2D TOP		BEEP VOLUME: 0~10 / 1 STEP	Default: 5
	SYSTEM			LANGUAGE : 한국어 / ENGLISH	Default : ENGLISH
	CONFIG			FACTORY RESET : Version	
				Favorite view : [Click]AAVM View mode	Displayed when AAVM is installed Default: 4ch (6)
				RADAR DISPLAY : ON/OFF	Enable menu when radar mounted
4	radar Setting	■ RADAR SETTING ■ RADAR DISPLAY : ON ■ RADAR AUTO TRIGGER : ON	Previous view	RADAR AUTO TRIGGER : ON / OFF	Activate menu with radar and AAVM Non-adjustable when radar is not installed* Can not be set when Radar Display off* Default: ON


(8) Parking guide line adjust

How to Enter



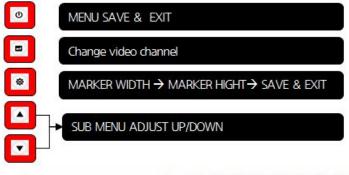




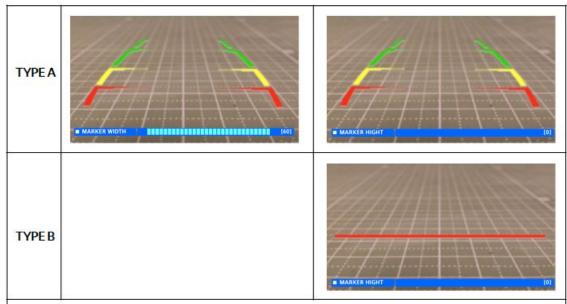


- To set the parking line, [MARKER DISPLAY: ALWAYS or TRIGGER] must be set in Camera 1 or Camera 2 setting.
- In other modes, the parking line can not be set.
- [MARKER DISPLAY : OFF] 3.
 - The parking line positioning menu should not be selected.
 Do not enter LONG KEY with the menu button.


(9) How to set function menu

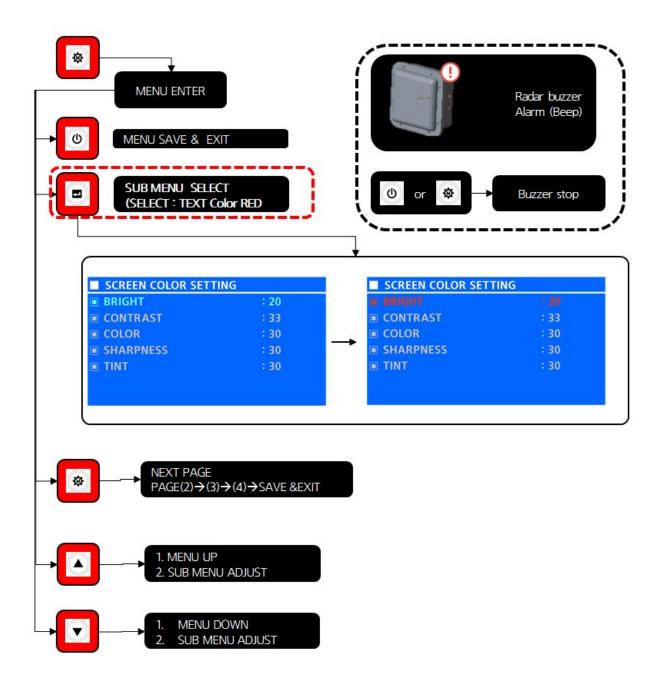


(10) Composition of menu screen

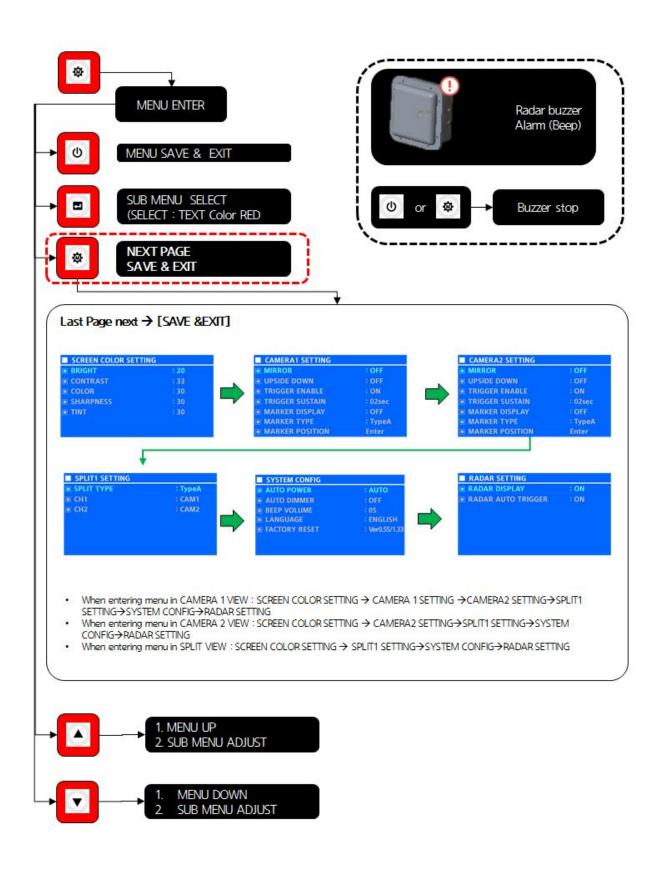


(11) Value adjustment

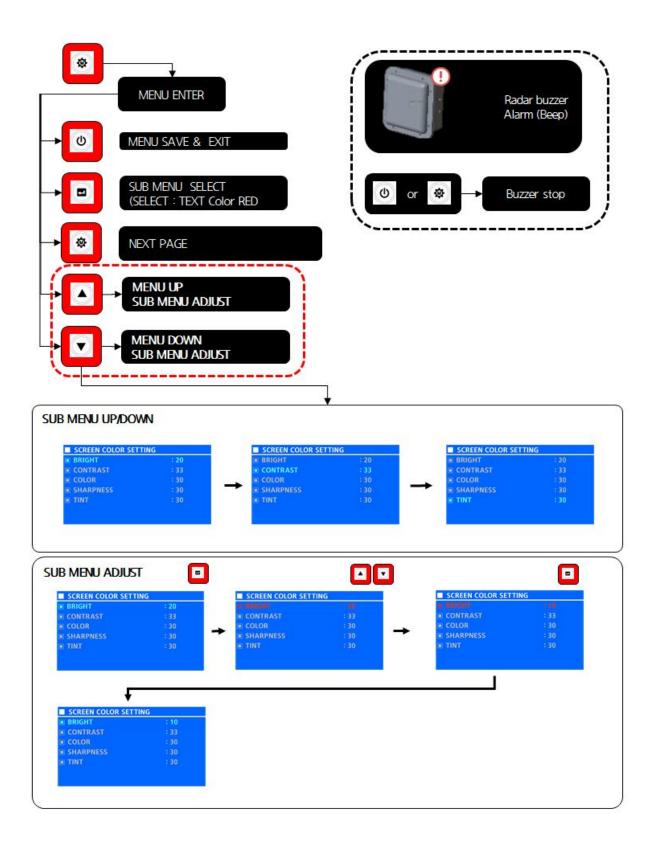



(12) When radar mounted, monitor display

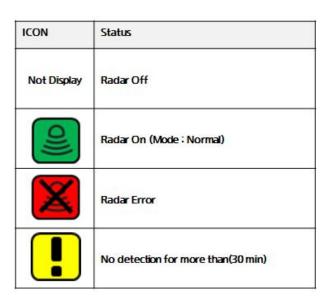



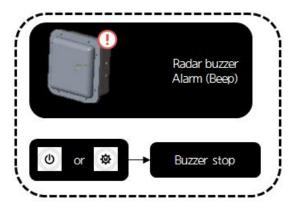

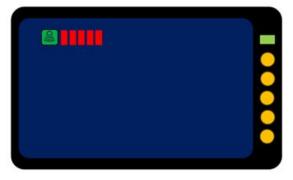

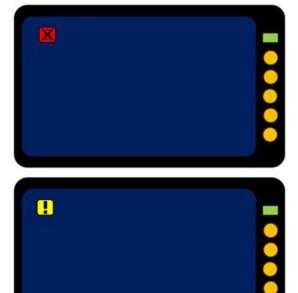

1. SUGGESTION FOR NEW MACHINE

- 1) It takes about 100 operating hours to break in a new machine.
- 2) Operate according to the below levels and avoid excessive load levels for the initial 100 hours.

Service meter	Load
Until 10 hours	About 60%
Until 100 hours	About 80%
After 100 hours	100%


- Excessive operation may reduce the potential performance of the machine and shorten the units lifetime.
- 3) During the initial 100 operating hours:
- (1) Daily check the level and for leakage of coolant, engine oil, hydraulic oil and fuel.
- (2) Daily grease all lubrication points.
- (3) Tighten bolts according to included torque chart in this manual.
- (4) Warm up the machine fully before operation.
- (5) Check the gauges during operation.
- (6) Check if the machine is operating normally during operation.
- 4) Replace followings after initial operation hours.

Checking items	Hours
Engine oil and filter	
Fuel filter element	250
Fuel pre-filter	
Transmission oil and filter	
Axle oil (front and rear)	
Hydraulic oil return filter	
Pilot line filter element	
Pressure filter element	



2. CHECK BEFORE STARTING THE ENGINE

- 1) Make sure the steering frame lock bar is pinned in the locked position.
- ▲ The steering frame lock bar must be in place before inspecting the machine.
- 2) Look under and around the machine to check for loose nuts or bolts, collection(s) of dirt or leakages of oil, fuel or coolant. Check for loose wiring, visual abrasions to wiring or hoses and collections of dust or debris in high temperature areas.
- * Check engine oil, coolant and hydraulic oil levels. Refer to the daily check list Chapter 6, Maintenance.
- 3) Before entering the cab, remove the steering frame lock bar.
- 4) Close engine hood and ensure all covers are closed and locked.
- 5) Adjust the seat to fit the operator comfortably.
- 6) Ensure all lights are in proper working order and adequate for the job conditions.
- 7) Adjust the rear view mirror and fasten safety belt.
- 8) Before starting the engine, make sure there are no bystanders present. Before moving the machine check all mirrors and visually around the machine that no one is present in your operating area.
- Check that engine hood and all covers are to be closed and locked.
- ▲ If a warning tag is attached to the starting switch or to the controls, do not start the engine. Also, do not move any controls.

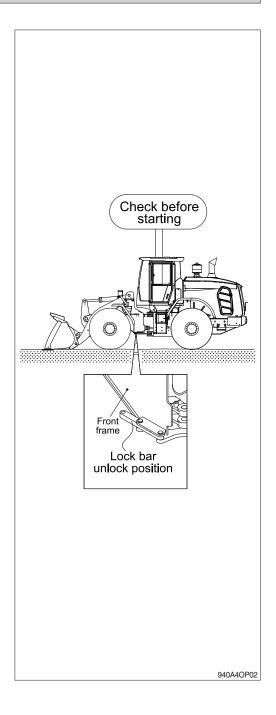

3. STARTING AND STOPPING THE ENGINE

1) CHECK INDICATOR LIGHTS


- (1) Check if the parking brake switch is ON.
- (2) Check if the gear selector lever is in neutral position.
- (3) Check if the pilot cut off switch is OFF.
- (4) Turn the key to the ON position, and check followings.

· Cluster

- ① If all the lamps light ON after sounding buzzer for 3 seconds.
- If the lamps do not light or the buzzer does not sound, check master disconnect switch position.
- ② Only below lamps will light ON and all other lamps will turn OFF after 3 seconds.
 - Charging warning lamp (1)
 - Engine oil pressure warning lamp (2)
 - Brake fail warning lamp (3)


· Monitor

- ① The buzzer sounds for 3 seconds with HYUNDAI logo on monitor.
- ② If ESL mode is set to enable, enter the password to start the engine.
- ③ If the incorrect password is entered 5 times, please wait 30 minutes before reattempting to enter the password.
- * Refer to page 3-28 for ESL system setting.

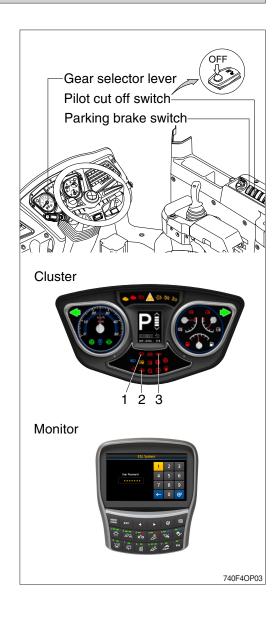


2) STARTING ENGINE IN NORMAL TEMPERATURE

- Sound the horn to warn the surroundings after checking if personnel or obstacles are in the area.
- (1) Check if the parking brake is locked (with the parking switch ON).
- (2) Check if the gear selector lever is in the neutral position.
- (3) Check if the pilot cut off switch is locked (with the switch OFF)
- (4) Turn the starting switch to START position to start the engine.
- ** Do not crank the engine for more than 20 seconds. If the engine does not start, allow the starter to cool for about 2 minutes before attempting to start the engine again.
- (5) Release the starting switch instantly after the engine starts to avoid possible damage to the starting motor.
- Refer to the START PROCEDURE on the page 0-13.

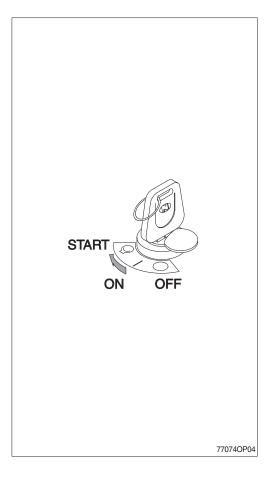

3) STARTING ENGINE IN A COLD WEATHER

- Sound horn to warn surroundings after checking if there are obstacles in the area.
- * Replace the engine oil, coolant and fuel referring to recommended oils at page 6-9.
- Fill the anti-freeze solution to the coolant as required.
- If you turn ON the starting switch, the fuel warmer will automatically operate to heat the fuel based on coolant temperature.
- (1) Check if the parking brake is locked (with the parking switch ON).
- (2) Check if the gear selector lever is in the neutral position.
- (3) Check if the pilot cut off switch is locked (with the switch OFF)
- (4) Turn the starting switch to ON position, and wait 1~2 minutes. More time may take according to ambient temperature.
- (5) Start the engine by turning the starting switch to START position after the preheater pilot lamp and fuel warmer pilot lamp OFF.
- If the engine does not start, allow the starter to cool for about 2 minutes before attempting to start the engine again.
- (6) Release starting switch immediately after starting engine. The starting switch will automatically return to the ON position.
- After the engine starts the preheat function is actuated to reduce the white smoke.
- Before the warming-up operation is completed, do not operate the equipment.
- After warm-up operate the machine at less than normal loads and at low idle speed.
- Run the engine for 10~15 minutes at low idle when the ambient temperature is below -15°C.

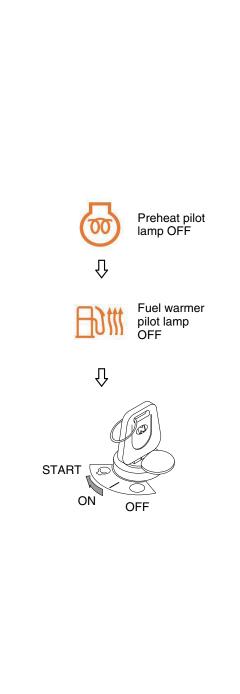

7609A4OP05


4) INSPECTION AFTER ENGINE START

Inspect and confirm the following after the engine starts.

- (1) IDoes the hydraulic oil tank gauge display the proper level of hydraulic oil?
- (2) Are there any oil or coolant leaks?
- (3) Are all the warning lamps (1-14) OFF?
- (4) Check the following after warming up operation.
- ① Is the coolant temperature gauge (3) in the operating range?
- ② Is the transmission oil temperature gauge (2) in the operating range?
- ③ Is the color of exhaust and engine sound normal?
- ④ Are there any abnormal sounds or vibrations?
- * Do not increase engine speed quickly after starting, as engine or turbocharger damage could occur.
- If there are problems displayed in the control panel, stop the engine immediately and contact your dealer.

5) TRANSMISSION COLD STARTING

- (1) If the transmission oil temperature is < -12°C, the transmission must be warmed-up procedure.
- (2) This must be carried out in neutral with an increased engine speed.
- (3) Until this oil temperature is reached, the electronics remains in neutral, and the symbol of the cold start phase will be indicated on the display.
 - · Indication on the display : **
- (4) After the oil temperature is met, the indicators on the display will fade and the transmission can be shifted from NEUTRAL.
- * Transmission warning

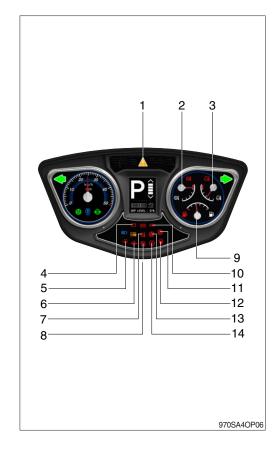




Symbol	Meaning	Remarks
LF, LR	Limp home gear	-
**	Oil temperature too low, no gear available	Warm up engine/transmission
WS	Warning sump temperature	Alternate between WS and actual gear/direction while driving, in neutral only displayed WS if no fault is detected **Cool down transmission*
WT	Warning torque converter temperature	Alternate between WS and actual gear/direction while driving, in neutral only displayed WS if no fault is detected **Cool down transmission*


6) TO STOP THE ENGINE

- Stopping the engine without conducting a cool down procedure can greatly shorten the life of the engine. Consequently, do not abruptly stop the engine apart from an emergency.
- If the engine has overheated, do not abruptly stop the engine.Run at a medium speed to allow the engine to cool gradually before shutting down.
- (1) Place the gear selector lever in neutral.
- (2) Push the parking brake switch to the ON position.
- (3) Run the engine for five minutes at low idle with no load.
- (4) Return the key of starting switch to the OFF position.
- (5) Remove the key to prevent other people using the machine.
- (6) Push the pilot cut off switch to the OFF position.
- (7) Lock the cab door.

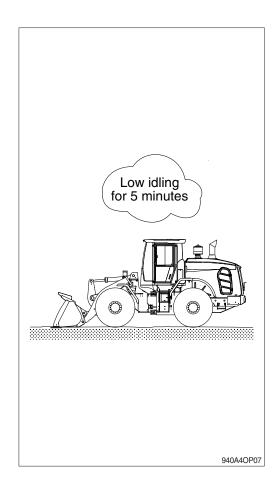

4. WARMING-UP OPERATION

- ** The most suitable temperature for the hydraulic oil is about 50°C (112°F). The temperature must be raised to at least 25°C (77°F) before starting work. Performance will be diminished by sudden operation when the hydraulic oil temperature is below 25°C (77°F).
- 1) Run the engine at low idling for 5 minutes.
- 2) Speed up the idling and run the engine at midrange speed.
- 3) Push the pilot cut off switch to the ON position.
- 4) Lift the boom slightly and extend the bucket cylinder to the stroke end to relieve hydraulic pressure.
- * Do not leave hydraulic pressure relieved for more than 30 seconds.
- 5) Shorten the bucket cylinder to the stroke end to relieve hydraulic pressure.
- * Do not leave hydraulic pressure relieved for more than 30 seconds.
- 6) Repeat the procedure 4)-5) several times until warm-up operation is completed.

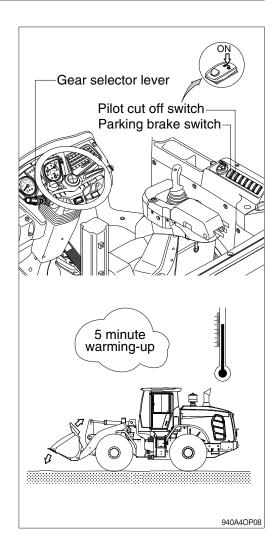

5. OPERATION OF THE WORKING DEVICE

- Confirm the operation of control lever and working device.
- 1) Control lever operates the boom and the bucket.
- 2) When you release the control lever, it returns to the neutral position automatically.
- 3) When the control lever operates to detent positions for boom float, boom kick out and bucket leveler, the control lever will return to the neutral position once the function is completed.

※ Control lever

Boom lower (1)



Push the control lever forward in order to lower the boom.

Boom raise (2)



Pull the control lever backward in order to raise the boom.

Bucket roll back (3)



Move the control lever toward the left in order to tilt the bucket backward.

Bucket dump (4)




Move the control lever toward the right in order to dump a load from the bucket.

Boom float (5)



Push the control lever forward into the detent.

The boom will lower to the ground. The boom will float along the contour of the ground.

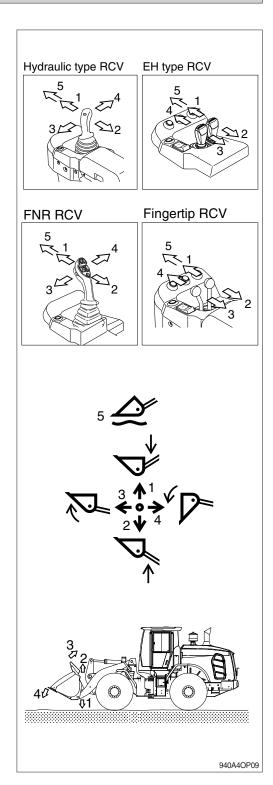


6. TRAVELING THE MACHINE

1) BASIC OPERATION

Secure the engine hood in the fully closed position prior to traveling the machine.

(1) Traveling posture


Lift the boom so that the bucket is placed 40-50cm above the ground.

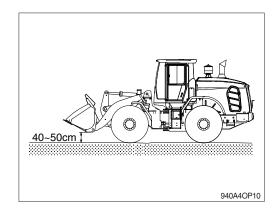

(2) Traveling operation


When warm-up operation is completed after the engine is started, move the machine according to the following procedure.

- ① Push the pilot cut off switch to the ON position.
- ② Depress the brake pedal.
- ③ Release the parking brake.
- ④ Put the gear selector in the the forward or reverse direction and gently press the accelerator pedal while releasing pressure on the service brake to move the machine.

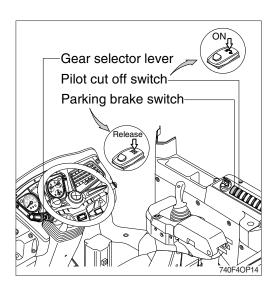

(3) Changing direction and speed


- ① The gear selector is mounted on the left side of the steering column.
- ② The gears 1 4 are selected by rotary motion. The driving direction Forward (F), Neutral (N) and Reverse (R) by pushing or pulling the selector lever.
- ③ A neutral lock is installed as protection against inadvertent drive off.
 - · Position N Gear selector lever locked in neutral position
 - · Position D Driving

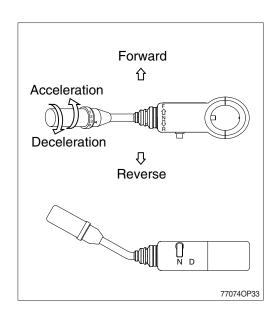

- When traveling at high speed, do not abruptly decelerate by using the transmission lever. To slow down, press the brake pedal.
- When changing direction, check beforehand there is no obstacle in the direction you will be headed.
- Avoid changing direction at high speed.

(4) Turning the machine

- ① Turn the machine by moving the steering wheel into the desired direction.
- ② You can turn the machine to the left or right by 40 degree.
- Do not turn the machine abruptly when traveling at high speeds and avoid turning on a slope.
- ▲ Steering does not function with engine OFF.

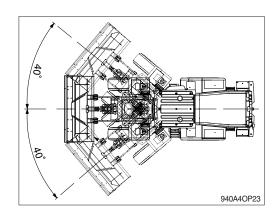


(5) Precautions when driving


- ① If the monitor warning lamp lights up, depress the brake pedal, slow the machine, put the gear selector lever in the neutral position and engage the parking brake. Stop the engine after running it at low idle. Resolve any problems regarding operation of the machine.
- ② When operating the machine and the amount of material being moved is reduced, increased speed can occur. Be cautious.
- When traveling on uneven ground operate at a reduced speed.

(6) Stopping the machine


- ① Press the brake pedal to stop the machine.
- ② Put the gear selector lever in the neutral position.
- ③ Push the parking brake switch to the ON position.

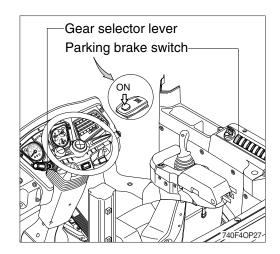

① Lower the bucket to the ground.

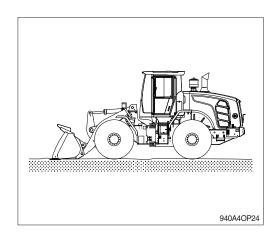

- ⑤ Push the pilot cut off switch to the OFF position.
- * When parking on a slope, chock the tires.

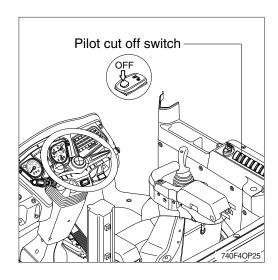


(7) Stopping engine

- Stopping the engine without conducting a cool down procedure can greatly shorten the life of the engine. Avoid sudden stops except in an emergency.
- If the engine has overheated, do not abruptly stop the engine. Run at a medium speed to allow the engine to cool gradually before shutting down.
- ① Move the gear selector is in the neutral position.
- ② Move the parking brake switch to ON.
- 3 Move the pilot cut off switch to OFF.
- Run the engine at low speed without operating the equipment for about 5 minutes to allow unit to cool down.
- ⑤ Turn the starting key to the OFF position and remove the key.


(8) Checks after the engine has stopped

- ① Visually check for oil or coolant leaks and a general inspection of the exterior of the machine.
- ② Refill the fuel tank.
- ③ Remove any debris inside of the engine room and attached to the machine.

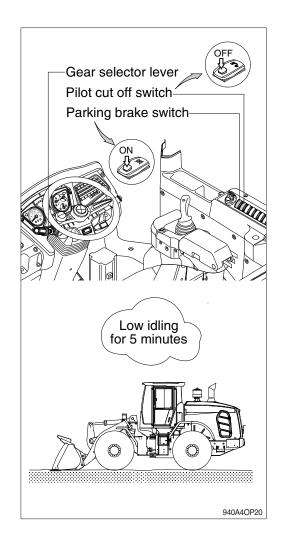

2) TRAVELING ON A SLOPE


- (1) Never travel down a slope in neutral.
- (2) Lower the bucket 20-30 cm (1 ft) to the ground so that it can be used as a brake in an emergency.
- (3) If the machine starts to slide or loses stability, lower the bucket immediately and brake the machine.
- (4) When parking on a slope, use the bucket as a brake and place chocks behind the tires to prevent sliding.
- ** The machine cannot travel effectively on a slope when the oil temperatures are low. Ensure the warm-up operation has been completed before operating the machine.
- Be careful when working on slopes, as this terrain has an increased risk roll-over.

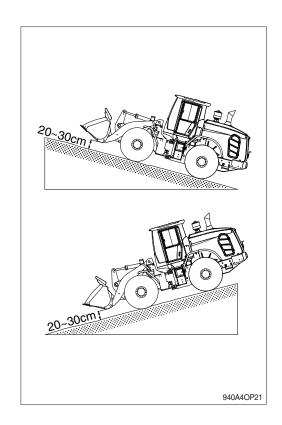

7. EFFICIENT WORKING METHOD

1) GENERAL

- (1) Lift the bucket about 40-50 cm (2 ft) above the ground to ensure safety and to gain a good range of view.
- (2) Clear the jobsite and level the ground.
- (3) Be careful that excessive force is not applied to the bucket.
- (4) When handling hard materials, use bucket teeth or bolt on cutting edge.
- (5) When doing dumping work, put the control lever in the DUMP position, then return it to a former state. Repeat this procedure until the work is finished.
- (6) Check that the proper bucket is used for the material density being handled. An incorrect combination can cause undue stress and decrease the machine's service life.

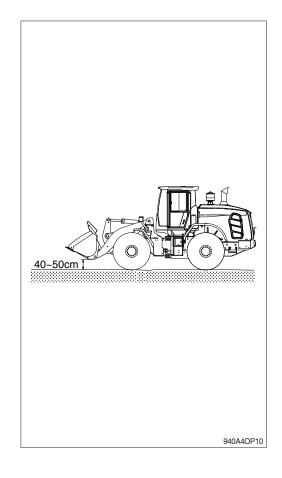



2) EXCAVATION WORK

(1) Shovel work


As the machine loads the bucket while traveling, tire slippage can occur due to material loading resistance. Slightly lift the bucket to transfer working load to the axle for increased traction.

- ① Keep the bucket shovel parallel to the ground. If the bucket is used in a non-horizontal position the cutting edge or teeth cannot correctly engage the material to dig deeply in the heap.
- When the bucket is sufficiently deep into the pile, advance the machine while raising the boom and moving the control lever to the bucket roll-back position to fill the bucket.

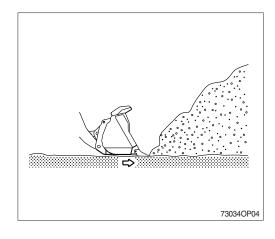


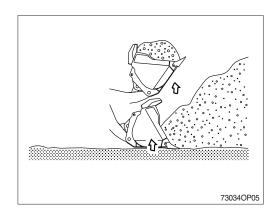

③ If material is dense, move the bucket control lever left and right to move the bucket teeth up and down to loosen the pile.

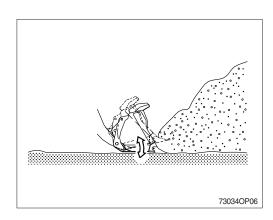


If the machine operates with the front tires lifted, tractive effort will be reduced significantly and excessive force will be applied to the rear tires. Avoid operating in this manner.

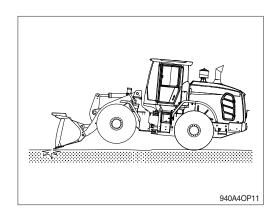


(2) Excavation on level ground

Advance the machine with the bucket lowered slightly and make sure that the bucket is evenly loaded on both sides.


① Lower the bucket edge slightly.

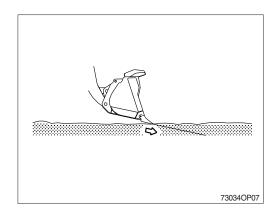

② Advance the machine and lift the bucket using the bucket control lever to dig out the soil.

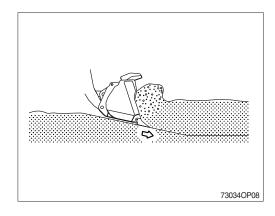


- 3 Advance the machine while controlling the depth of digging with the control lever.
- ** Do not press the bucket heavily into the ground. This will significantly reduce tractive effort.
- W Use the bucket suitable to the working condition
- When excavating, prevent forces from being applied to only one side of the bucket.

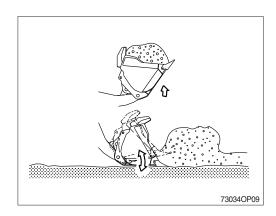


3) LEVELING

- (1) Load the bucket with material and gradually dump the material while driving backward.
- (2) After dumping the material, move backward with the bucket lowered to the ground to level the material.
- (3) Load the bucket with material and place the bucket a horizontal position. Then move the control lever to the BOOM FLOAT position and move backward.
- Make sure that the machine moves always backward when doing leveling work.

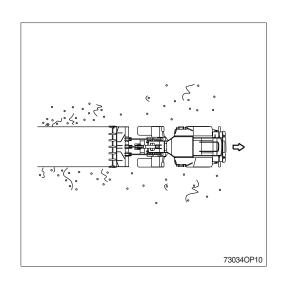

4) TRANSPORTATION


- Make sure that the traveling path is always cleared.
- When transporting material, lift the bucket 40-50 cm above the ground in the fully curled position to reduce spillage.

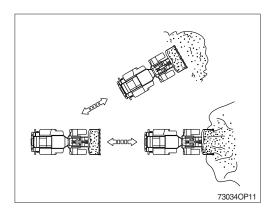

5) COMPACTION

When operating, keep the bottom of the bucket horizontal to the ground.

Do not work with the bucket set in the DUMP position.

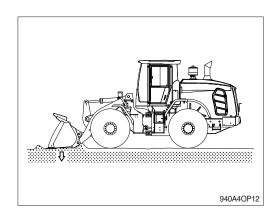

6) LOADING

Maximum efficiency can be attained by carrying out work in such a way that the turning angle and the traveling distance are kept as small and short as possible in accordance with the terrain.


(1) I method


- ① After digging out the soil, move backward and position the dump truck between the heap of soil and the machine to load the soil into the truck
- ② This is the fastest and most efficient way to load material.
- ** The ground of the jobsite should be always level and do not swing or step on a brake pedal abruptly with the boom raised.

73034OP12

(2) V method

- ① Park the truck at an angle of 60 degrees toward the machine. After digging out, drive backward and position the machine at a right angle with the truck and load the truck with the soil.
- ② Position the machine so that the soil can be dumped in the center of the truck. If the length of the truck is more than double the width of the bucket, perform the dumping work from forward to backward.
- ③ Move the control lever to the right and dump the bucket.
- ④ Shake the bucket to throw off the soil stuck inside. Move the bucket control lever to the left and right and attach the bucket to the stopper.
- Shake the bucket before setting it to the DUMP position so that loaded materials are evenly distributed inside the bucket. This will prevent materials from slipping back when the bucket is placed in the DUMP position.

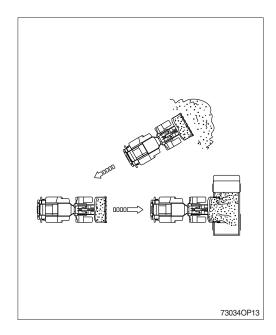


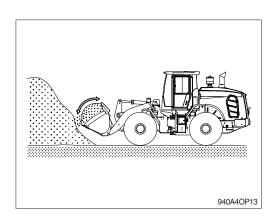

7) PRECAUTIONS DURING OPERATION


(1) Permissible water level

- ① Do not work in water or damp ground deeper than the permissible depth (Up to lower part of the axle housing).
- ② After the work is completed, grease parts which has been immersed in water.

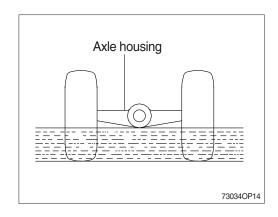

(2) When the brake does not operate

- ① If the machine does not stop even though the brake pedal is applied, use the parking brake.
- After using the parking brake as an emergency brake, contact your local Hyundai dealer to inspect the complete braking system.

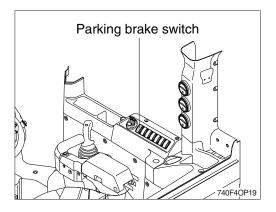

(3) Precautions when driving on a slope

① When turning on a slope, lower the work equipment to lower the machine's center of gravity. Avoid turns on slopes when possible.

2 When traveling down a slope

- a. If the main brake is used too often when traveling down a slope, it may overheat and incur damage. Put the transmission lever in the low speed position and use the engine as a brake.
- b. If there is a mismatch of speed, torque converter oil temperature may be overheated. Set the speed in the 1st speed position to allow the temperature to drop.
- c. When the transmission temperature gauge does not move into the green range in 1st speed, stop the machine and put it in neutral. Run the engine at a mid range engine speed until the gauge moves into the green range.

③ When the engine stops

If the engine stops on a slope, press the parking brake switch immediately and lower the work equipment to stop the machine.

(4) Precautions when traveling

Do not travel a long distance at high speed. It may overheat tires and cause premature damage. If it is necessary to travel a long distance at high speed, observe the following.

- ① Comply with the regulations concerning this machine to ensure safety.
- ② Do the pre-inspection before starting off.
- ③ As the optimum air pressure of tires and optimum driving speeds are different according to the kinds of tires and road conditions, consult your local Hyundai dealer or tire distributor for proper inflation recommendations.
- 4 Check tire pressures before driving.
- S After 1 hour of driving, stop for 30 minutes to check for any abnormalities of tires or other parts and the oil and coolant levels.
- 6 Travel with the bucket empty.

8. ADJUSTMENT OF THE WORK EQUIPMENT

The bucket can be adjusted to a height desired by using the boom kick-out device.

- ♠ Park the machine on level ground and chock the tires to prevent sudden movement of the machine.
- A Press the parking brake switch.
- ♠ Fix the front and rear frames by using the safety lock bar.
- ▲ Do not work underneath the work equipment.

1) ADJUSTMENT OF THE BOOM KICKOUT AND BUCKET LEVELER

(1) Lift kickout position


To set the lift kickout, raise the boom to the desired position above the midway point. Then push icon (, A) for 2~3 seconds until you hear an audible alarm. The boom will return to the programmed position when the raise detent is activated and the boom is below the kickout position.

(2) Lower kickout position

To set the lower kickout, lower the boom to the desired position below the midway point. Then push icon (, A) for 2~3 seconds until you hear an audible alarm. The boom will return to the programmed position when the float detent is activated and the boom is at least a foot above the kickout position.

(3) Bucket leveler position


To set the bucket leveler, roll back the bucket to the desired position. Then push icon (, B) for 2~3 seconds until you hear an audible alarm. The bucket will return to the programmed position when the roll back detent is activated and the bucket is below the leveler position.

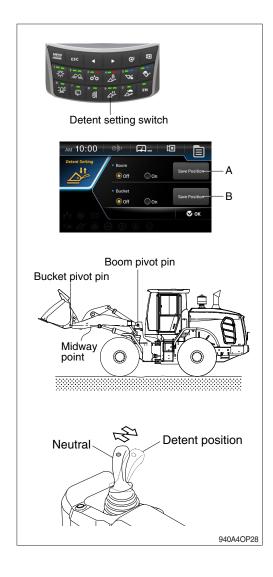

9. OPERATION IN SPECIAL WORK SITES

1) COLD WEATHER MACHINE OPERATION

- (1) Use proper engine oil and fuel for the weather.
- (2) Fill the required amount of antifreeze in the coolant.
- (3) Refer to starting engine in cold weather. Start the engine and extend the warming-up operation.
- (4) Be sure to open the heater cock when using the heater.
- (5) Always keep the battery completely charged.
- Discharged batteries will freeze more easily than fully charged.
- (6) Clean the machine and park on the wood plates.

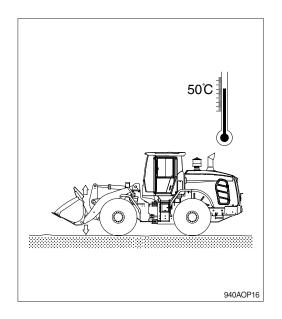

2) OPERATION IN SANDY OR DUSTY WORK SITES

- (1) Inspect air cleaner element frequently. Clean or replace the element more frequently, if warning lamp comes ON and buzzer sounds simultaneously, regardless of inspection period.
- (2) Inspect radiator frequently and keep cooling fins clean.
- (3) Prevent sand or dust from getting into the fuel tank and hydraulic tank during refilling.
- (4) Prevent sand or dust from penetrating into hydraulic circuit by tightly closing the hydraulic oil tank breather cap. Replace hydraulic oil filter frequently.
- (5) Keep all lubricated parts such as pins and bushings clean at all times. Shorten greasing intervals to flush contaminants from pins and bushings.
- (6) Increase the cleaning and replacement of cabin filters to prevent heating or cooling capacity from dropping.

3) SEA SHORE OPERATION

- (1) Prevent ingress of salt by securely tightening plugs, cocks and bolts of each part.
- (2) Wash machine after operation to remove salt residue.
 - Pay special attention to electrical parts and hydraulic cylinders to prevent corrosion.
- (3) Inspection and lubrication must be carried out more frequently.
 - Supply sufficient grease to replace all old grease in bearings which have been submerged.

10. STORAGE

When storing the machine for longer than 1 month, take care of the following to prevent deterioration.

1) CLEANING THE MACHINE

Clean the machine.

Grease each lubrication part.

2) LUBRICATION POSITION OF EACH PART Change all oil.

Be particularly careful when you reuse the machine.


As oil can be diluted during storage.

Apply anti-corrosive lubricant on the exposed part of the cylinder rod and in places where the machine rusts easily.

3) MASTER SWITCH

Turn OFF the master switch and store the machine.

4) Verify the protection level of antifreeze in the cooling system.

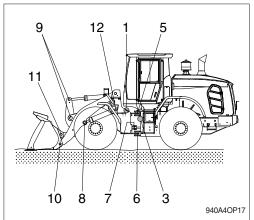


- 1 Lubricating manifold (left, 4EA)
- 3 Lubricating manifold (left, 4EA)
- 5 Center pivot pin (upper, 1EA)
- 6 Center pivot pin (lower, 1EA)
- 7 Steering cylinder rod (2EA)
- 8 Boom cylinder pin (rod side, 2EA)
- 9 Bellcrank (6EA)
- 10 Boom and bucket connecting pin (2EA)
- 11 Bucket link connecting pin (2EA)
- 12 Boom cylinder pin (frame side, 2EA)

5) PREVENTION OF DUST AND MOISTURE

Keep machine dry. Store the machine setting wood on the ground.


- * Cover exposed part of piston rod of cylinder.
- Lower the bucket to the ground and set a support under tires.

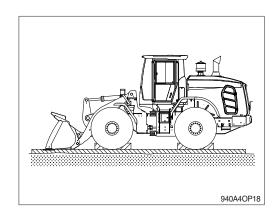

6) DURING STORAGE

Start engine and move the machine and working equipment once a month and apply lubrication to each part.

- * Check the level of engine oil and coolant and fill if required before starting the engine.
- Clean the anticorrosive from the cylinder rod.
- * Operate the machine such as traveling, turning, and work equipment operation to make sure enough lubrication of all functional components.

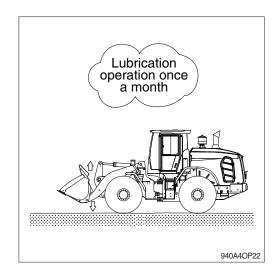


*** BATTERY**


- ① Once a month, start the engine for 15 minutes (or use a charger) to charge the battery.
- 2 Every 2 months, check the battery voltage and keep battery voltage over 25.08V.
- ③ If the machine storage period is over 6 months, disconnect the battery negative (-) terminal.


11. OPEN THE ENGINE HOOD

- The engine hood open toggle switch controls the engine hood. It is located in a compartment with the master disconnect switch near the cab entry steps.
- 2) Open the access door.
- * The engine hood may not be operated when the machine's engine is running. Risk of machine damage.
- 3) Move the toggle switch pull and up (①) in order to open the engine hood.
- 4) Move the toggle switch pull and down (②) in order to close the engine hood.
- 5) Hold the toggle switch until the engine hood is fully opened or closed. Release the switch. The switch will return to the middle position.
- When opening the engine hood, the counterweight shelf must be clear of dirt, debris or objects. The rear of the engine hood can be damaged if the engine hood is opened with objects on the shelf.
- Ensure that there are no personnel or equipment around the hood during operation.
- Secure the engine hood in the fully raised position before performing any maintenance work in the engine room.
- If the rear engine door is open, ensure the swing out coolers are in the closed position when raising or lowering the hood.
- 6) When hood is opened, cover the air intake and the aftertreatment device outlet to prevent any water entry.
- Secure the hood in the fully close position or the fully open position prior to starting the engine. Operating the machine with the hood partially open can cause the exhaust to damage hood components. Do not allow water to enter the aftertreatment device.


Water will damage the aftertreatment device.

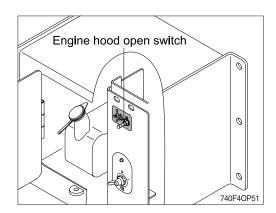

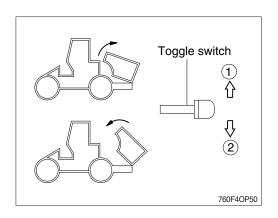

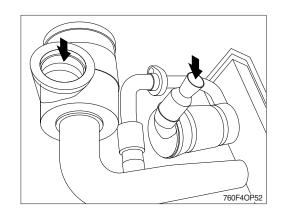

- 7) If further access in needed, either side cover can be opened. The levers are positioned on both sides of the engine room. Hold the side cover in place while unlatching the safety cable attached to the side cover. Lower the side cover to rest on the tire. The side cover can remain in the open position resting on the tire. For better access the side cover can be removed. Push the side cover forward along the hinge to remove the side cover fully.
- Avoid contact with hot surfaces. Exhaust piping and engine components become hot during engine operation and cool slowly after engine shut down. Any contact with hot surfaces can cause severe burns.

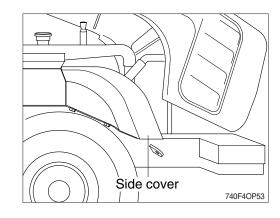


8) EMERGENCY FIRE HOLES

If the engine hood cannot be opened in case of fire, it is possible to fight the fire manually through two holes on the screen.


Holes for manual fire fighting can be accessed by opening the inlet covers on the right and left side. Fire fighting can take place using the holes on the screen, which provide access to the engine compartment with a handheld fire extinguisher nozzle.

▲ The extinguishing agent contains glycol which may cause injuries in case of contact. Avoid contact. In case of contact with the eyes, rinse with water. In case of skin contact, wash with soap and rinse with water. Always contact a doctor after contact with the extinguishing agent.

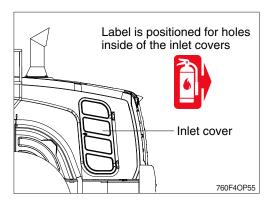


- 9) MANUAL OPERATION OF ENGINE HOOD The engine hood can be operated manually.
 - (1) Open the RH vent cover.

- (2) Remove the socket (Keep the socket to reuse) and turn the hand crank (6mm hexgon wrench) to open engine hood.
- When the actuator is operated as a hand crank, it must be operated by hand or carefully by tool otherwise there is a risk of overloading and damage of actuator.
- The master switch has to be in the OFF position during manual operation.

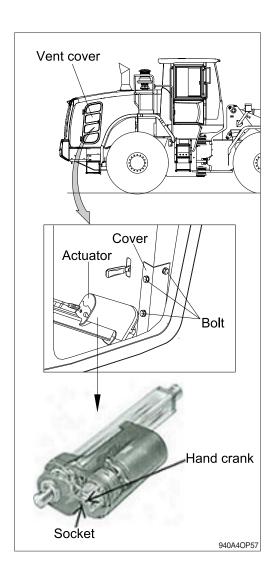

12. MANUALLY LOWERING THE ATTACHMENT (ENGINE STOPPED)

- The manual lowering valve on the front frame can be used to lower the attachment linkage if the engine is not operational.
- Slowly rotate the lowering valve lever to the OPEN position in order to lower the attachment to the ground.
- After the attachment is resting on the ground, rotate the lowering valve lever to the CLOSE position.
- ▲ Keep all personnel away from the boom drop area when lowering the boom with the engine stopped.
- ▲ Keep all personnel away from the front linkage when lowering the boom.

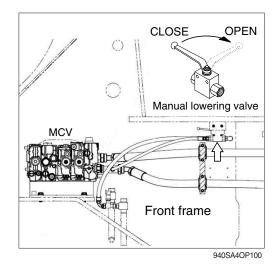


5. TRANSPORTATION

1. ROAD TRAVELING

- If it is necessary to travel on a road, observe the followings.
- 1) Comply with regulations regarding this machine for the sake of safety.
- 2) Perform daily inspection before starting the machine.
- 3) Check the air pressure of tires and traveling speed limitations.
 - · Air pressure


Size	Pressure		
20.5-25, 16PR, L3	3.5 kgf/cm² (50 psi)		
20.5-25, 16PR, L5	3.5 kgf/cm² (50 psi)		
20.5 R25, XHA, ★	Front 5.1 kgf/cm² (73 ps		
20.5 R25,★★, L3	Rear	4.2 kgf/cm² (60 psi)	

- · Maximum speed: 38.8 km/hr (24.1 mph)
- 4) When traveling for a long distance, stop every hour or every 40 km (25 mile) to allow tires and other components to cool down and check any abnormality.
- 5) Drive with the bucket empty.
- 6) Travel at a mid-range speed and be careful to drive within the limited speed when driving on a public road.

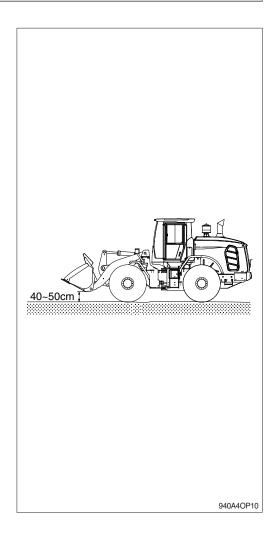


2. PREPARATION FOR TRANSPORTATION

- 1) When transporting the machine, observe the various road rules, road transportation vehicle laws and vehicle limit ordinances, etc.
- 2) Make sure the cooling system has proper antifreeze if moving machine to a cold climate.
- 3) Select proper trailer after confirming the weight and dimension from the page 2-2~2-5.
- 4) Check the whole route such as the road width, the height of bridge and limit of weight and etc., which will be passed.
- 5) Get the permission from the related authority if necessary.

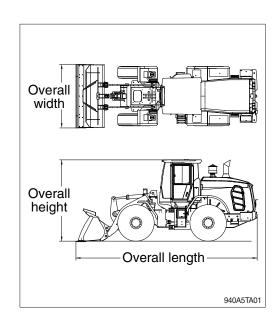


6) Prepare gangplank for safe loading referring to the below table and illustration.

Α	В
1.0	3.65 ~ 3.85
1.1	4.00 ~ 4.25
1.2	4.35 ~ 4.60
1.3	4.75 ~ 5.00
1.4	5.10 ~ 5.40
1.5	5.50 ~ 5.75
1.2 1.3 1.4	4.35 ~ 4.60 4.75 ~ 5.00 5.10 ~ 5.40

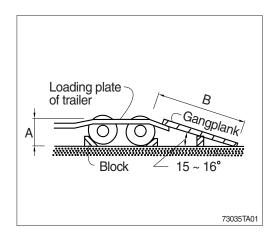


3. LOADING THE MACHINE

- 1) Load and unload the machine on a flat ground.
- 2) Use the gangplank with sufficient length, width, thickness and gradient.
- 3) Move slowly and carefully when the machine is on the gangplank. Do not change the direction of the machine while it is on the gangplank.

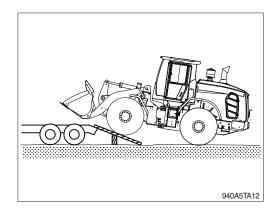


- 4) Do the following after loading the machine to the trailer.
- (1) Lower the working equipment gently after the location is determined.
- Place rectangular timber under the bucket cylinder to prevent the damage of it during transportation.
- ♠ Do not operate any other device when loading.
- A Balance the load.

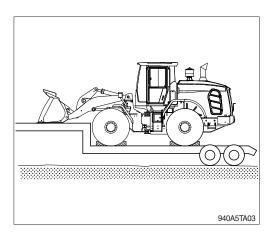


4. FIXING THE MACHINE


- 1) Fix front and rear frame by linking safety lock bar.
- 2) Push the parking brake switch.

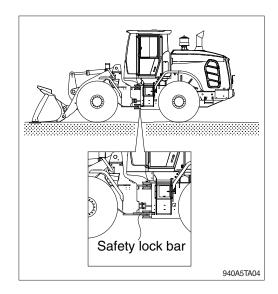


- 3) Push the pilot cut off switch to the OFF position to prevent the hydraulic system from operating.
- 4) Stop the engine, turn the starting switch off and remove the key.

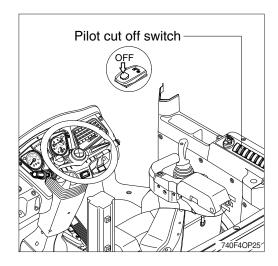

5) Secure all locks.

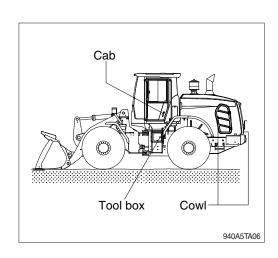

6) Block the tires and fix firmly with wire rope or chain to prevent the machine from moving during transportation.

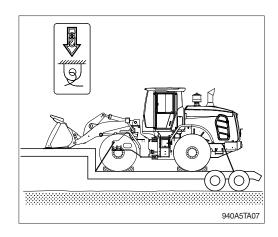


5. LOADING AND UNLOADING BY CRANE

- 1) Check the weight, length, width and height of the machine referring to chapter 2, Specification when you are going to hoist the machine.
- 2) Use long wire rope and stay to keep the distance with the machine as it should avoid to touch with the machine.
- 3) Put a rubber plate contact with wire rope and machine to prevent damage.
- 4) Place crane on the proper place.
- 5) Install the wire rope and stay like the illustration.
- ▲ Make sure wire rope is proper size.
- ♠ Place the safety lock bar and pilot cut off switch to the OFF position to prevent the machine moving when hoisting the machine.
- ▲ The wrong hoisting method or installation of wire rope can cause damage to the machine.
- ▲ Do not load abruptly.
- ▲ Keep area clear of personnel.
- Attach two wire ropes to the rear of the machine.

 Attach two wire ropes to the front of the machine.

 Connect the four wire ropes.

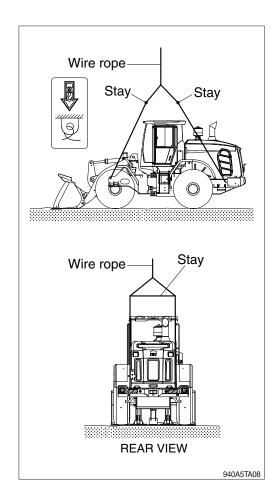


6. TOWING THE MACHINE

- Personal injury or death could result when towing a disabled machine incorrectly.
- ▲ Block the machine to prevent movement before releasing the brakes. The machine can roll free if it is not blocked.

Except for an emergency, do not tow this machine. If it is inevitable to tow this machine, observe the following.

1) GENERAL

- (1) Parking brake cylinder of the machine is operated by the spring force and released by hydraulic pressure.
 - If the engine does not operate, the brake will be operated to stop the machine.
- (2) When the machine is towed move it for a repair to nearby place at the speed less than 2 km/hr (1.2 mph). Transport it on a trailer, if it has to be moved for a long distance.
- (3) When the steering and brakes cannot be operated, transport the machine by trailer.
- A Be careful when towing.
- ♠ Be careful that the brake will not work if there is any disorder in the braking system.
- (4) When you tow the machine from the front, attach the tow line to the tow eyes on the front frame (1).
 - When you tow the machine from the rear, use the tow rear eyes provided for lift & tie (2).
- (5) Do not use a chain for pulling a disabled machine. A chain link can break. This may cause personal injury. Use a wire rope cable with ends that have loops or rings. Place an observer in a safe position in order to watch the pulling procedure. The observer can stop the procedure, if necessary. The procedure should be stopped if the cable starts to break. Also, stop the procedure if the cable starts to unravel. Stop pulling whenever the towing machine moves without moving the towed machine.

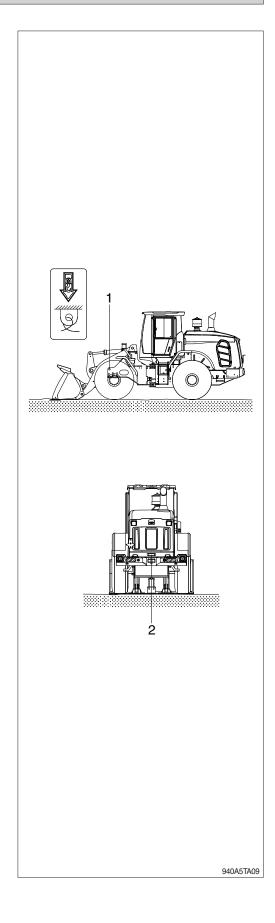

- (6) Keep the tow line angle to a minimum. Do not exceed a 30 degree angle from the straight ahead position.
- (7) Quick machine movement could overload the tow line or the tow bar. This could cause the tow line or the tow bar to break. Gradual, steady machine movement will be more effective.
- (8) Normally, the towing machine should be as large as the disabled machine. Make sure that the towing machine has enough brake capacity, enough weight, and enough power. The towing machine must be able to control both machines for the grade that is involved and for the distance that is involved.
- (9) You must provide sufficient control and sufficient braking when you are moving a disabled machine downhill. This may require a larger towing machine or additional machines that are connected to the rear of the disabled machine. This will prevent the machine from rolling away out of control.
- (10) All situation requirements cannot be listed. Minimal towing machine capacity is required on smooth, level surfaces. On inclines or on surfaces in poor condition, maximum towing machine capacity is required.
- (11) When any towed machine is loaded, this machine must be equipped with a brake system that is operable from the operator compartment.
- Consult your HYUNDAI dealer for the equipment that is necessary for towing a disabled machine.

2) WHEN THE ENGINE WORKS

- (1) When the transmission system or steering wheel is workable and the engine is running, the machine can be towed only for a short distance.
 - For example, pulling the machine out of mud or pulling the machine to the side of the road.
- (2) The operator of the towed machine should turn the steering wheel into the direction in which the machine is towed.

3) WHEN THE ENGINE DOES NOT WORK

When towing the machine with the engine stopped, do it in the following order.


- (1) The transmission oil does not lubricate the system, so remove the front and rear drive shafts.
- (2) Loosen the steering cylinder as the steering operation is not workable.

Even if the brake is in good condition, the brakes can only be used a limited number of times.

There is no change in the operating force for the brake pedal, but the braking force is reduce each time the pedal is depressed.

- (3) The parking brake is activated by spring and released by hydraulic pressure. If the engine does not work, the brake will be activated.
- ① Release the screw cap (1) in a counter-clockwise direction and unscrew it.
- ② Release the lock nut (2) and unscrew it back to the end of setting screw (3).
- ③ Rotate the setting screw (3) in a clockwise direction until the brake disc is completely free.
- ▲ In this condition the machine has no parking brake facility and thus must be protected from rolling away by different means. The brake must be adjusted before recommissioning.
- (4) Connect firmly between the traction machine and the towed machine.


Position each traction machine at the front and rear of the machine to be towed.

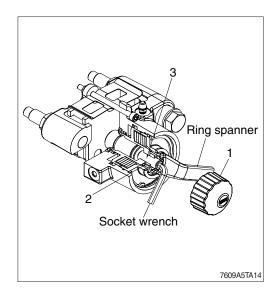

1. INSTRUCTIONS

1) INTERVAL OF MAINTENANCE

- (1) You may inspect and service the machine by the period as described at page 6-10 based on service meter of monitor.
- (2) Shorten the interval of inspect and service depending on site condition. (such as dusty area, quarry, sea shore and etc.)
- (3) Practice the entire related details at the same time when the service interval is doubled. For example, in case of 250 hours, carry out all the maintenance 「each 250 hours, each 100 hours and daily service」 at the same time.

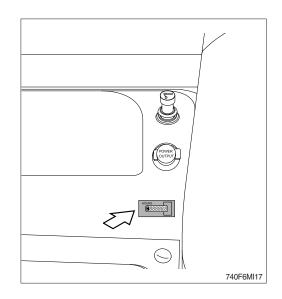

2) PRECAUTION


- (1) Start maintenance after you have read the operator's manual.
- (2) The monitor installed on this machine does not entirely guarantee the condition of the machine. Daily inspection should be performed according to chapter 4, maintenance check list.
- (3) Engine and hydraulic components have been preset in the factory. Do not allow unauthorized personnel to reset them.
- (4) Drain the used oil and coolant in a container and handle according to the method of handling for industrial waste to meet with regulations of each province or country.
- ▲ Hot oil and hot components can cause personal injury. Do not allow hot oil or hot components to contact skin.
- ♠ Accumulated grease and oil on the machine is a fire hazard. Remove this debris with steam cleaning or high pressure water, at least every 1000 hours.
- ▲ Inspect the engine compartment for any trash build up. Remove any trash build up from the engine compartment.
- (5) Contact your local HD Hyundai Construction Equipment dealer for service.

3) PROPER MAINTENANCE


- (1) Replace and repair of parts It is required to replace the wearable and consumable parts such as bucket teeth, cutting edges, filters and etc., regularly. Replace damaged or worn parts at proper time to prevent damage to other components.
- (2) Use genuine parts.
- (3) Use the recommended oil.
- (4) Remove the dust or water around the inlet of oil tank before supplying oil.
- (5) Drain oil when the temperature of oil is warm.
- (6) Do not repair anything while operating the engine.
 Stop the engine when you fill the oil.
- (7) Relieve the hydraulic system of the pressure by opening the breather when repairing the hydraulic system.
- (8) Confirm if the cluster is in the normal condition after completion of service.
- (9) For more detailed information on maintenance, contact your local HD Hyundai Construction Equipment dealer.
- ** Be sure to read the entire contents of this manual before performing maintenance.

4) RELIEVING PRESSURE IN THE HYDRAULIC SYSTEM

- Pressurized oil can cause injury when loosening the cap or hoses after operating the machine when the machine or oil is still under a high pressure condition. Be sure to relieve the pressure in the system before attempting repairs.
- (1) Repairs or maintenance of the machine shall be performed only after the power is off, and the machine blocked against hazardous motion. The attachment shall be lowered.

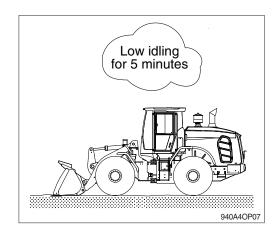

(2) Rotate the cap nut counter-clockwise by hand and push the rod to release the air pressure.

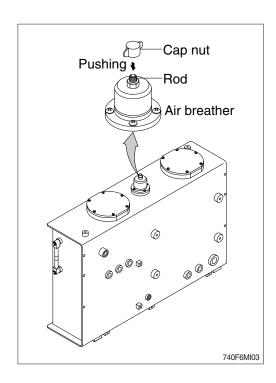

5) PRECAUTION WHEN INSTALLING HYDRAULIC HOSES OR PIPES

- Be particularly careful that the joint of hose, pipe and functioning item are not damaged.
 Avoid contamination.
- (2) Assemble after cleaning the hose, pipe and joint of functioning item.
- (3) Use genuine parts.
- (4) Do not assemble the hose in a twisted or tight radius.
- (5) Tighten all hoses to the specified torque rating.

6) PERIODICAL REPLACEMENT OF SAFETY PARTS

- (1) These are the parts which the operator can not judge the remaining life by visual inspection.
- (2) Repair or replace if an abnormality of these parts is found even before the recommended replacement interval.

Periodical replacement of safety parts	Interval
Fuel hose (engine-tank)	
Hose of steering system	
Packing, seal and O-ring of steering cylinder	Every 2 years
Hose of brake system	
Piston seal and packing of boom, bucket cylinder	

- * 1. Replace the O-ring and gasket at the same time when replace the hose.
- ※ 2. Replace clamp at the same time if the hose clamp is cracked when checking and replacing the hose.

2. TIGHTENING TORQUE

Use following table for unspecified torque.

1) BOLT AND NUT

(1) Coarse thread

Bolt size	8.8	ВТ	10.	10.9T		12.9T	
DOIL SIZE	kgf · m	lbf · ft	kgf · m	lbf ⋅ ft	kgf · m	lbf ⋅ ft	
M 6×1.0	0.8 ~ 1.2	5.8 ~ 8.6	1.2 ~ 1.8	8.7 ~ 13.0	1.5 ~ 2.1	10.9 ~ 15.1	
M 8×1.25	2.0 ~ 3.0	14.5 ~ 21.6	2.8 ~ 4.2	20.3 ~ 30.4	3.4 ~ 5.0	24.6 ~ 36.1	
M10×1.5	4.0 ~ 6.0	29.0 ~ 43.3	5.6 ~ 8.4	40.5 ~ 60.8	6.8 ~ 10.0	49.2 ~ 72.3	
M12×1.75	6.8 ~ 10.2	50.0 ~ 73.7	9.6 ~ 14.4	69.5 ~ 104	12.3 ~ 16.5	89.0 ~ 119	
M14×2.0	10.9 ~ 16.3	78.9 ~ 117	16.3 ~ 21.9	118 ~ 158	19.5 ~ 26.3	141 ~ 190	
M16×2.0	17.9 ~ 24.1	130 ~ 174	25.1 ~ 33.9	182 ~ 245	30.2 ~ 40.8	141 ~ 295	
M18×2.5	24.8 ~ 33.4	180 ~ 241	34.8 ~ 47.0	252 ~ 340	41.8 ~ 56.4	302 ~ 407	
M20×2.5	34.9 ~ 47.1	253 ~ 340	49.1 ~ 66.3	355 ~ 479	58.9 ~ 79.5	426 ~ 575	
M22×2.5	46.8 ~ 63.2	339 ~ 457	65.8 ~ 88.8	476 ~ 642	78.9 ~ 106	570 ~ 766	
M24×3.0	60.2 ~ 81.4	436 ~ 588	84.6 ~ 114	612 ~ 824	102 ~ 137	738 ~ 991	
M30×3.5	120 ~161	868 ~ 1164	168 ~ 227	1216 ~ 1641	202 ~ 272	1461 ~ 1967	

(2) Fine thread

Bolt size	8.	8.8T 10.9T		10.9T		.9T
Boil Size	kgf · m	lbf ⋅ ft	kgf · m	lbf ⋅ ft	kgf · m	lbf · ft
M 8×1.0	2.1 ~ 3.1	15.2 ~ 22.4	3.0 ~ 4.4	21.7 ~ 31.8	3.6 ~ 5.4	26.1 ~ 39.0
M10×1.25	4.2 ~ 6.2	30.4 ~ 44.9	5.9 ~ 8.7	42.7 ~ 62.9	7.0 ~ 10.4	50.1 ~ 75.2
M12×1.25	7.3 ~ 10.9	52.8 ~ 78.8	10.3 ~ 15.3	74.5 ~ 110	13.1 ~ 17.7	94.8 ~ 128
M14×1.5	12.4 ~ 16.6	89.7 ~ 120	17.4 ~ 23.4	126 ~ 169	20.8 ~ 28.0	151 ~ 202
M16×1.5	18.7 ~ 25.3	136 ~ 182	26.3 ~ 35.5	191 ~ 256	31.6 ~ 42.6	229 ~ 308
M18×1.5	27.1 ~ 36.5	196 ~ 264	38.0 ~ 51.4	275 ~ 371	45.7 ~ 61.7	331 ~ 446
M20×1.5	37.7 ~ 50.9	273 ~ 368	53.1 ~ 71.7	384 ~ 518	63.6 ~ 86.0	460 ~ 622
M22×1.5	51.2 ~ 69.2	370 ~ 500	72.0 ~ 97.2	521 ~ 703	86.4 ~ 116	625 ~ 839
M24×2.0	64.1 ~ 86.5	464 ~ 625	90.1 ~ 121	652 ~ 875	108 ~ 146	782 ~ 1056
M30×2.0	129 ~ 174	933 ~ 1258	181 ~ 245	1310 ~ 1772	217 ~ 294	1570 ~ 2126

2) PIPE AND HOSE (FLARE type)

Thread size	Width across flat (mm)	kgf · m	lbf ⋅ ft
1/4"	19	4	28.9
3/8"	22	5	36.2
1/2"	27	9.5	68.7
3/4"	36	18	130
1"	41	21	152
1-1/4"	50	35	253

3) PIPE AND HOSE (ORFS type)

Thread size	Width across flat (mm)	kgf · m	lbf ⋅ ft
9/16-18	19	4	28.9
11/16-16	22	5	36.2
13/16-16	27	9.5	68.7
1-3/16-12	36	18	130
1-7/16-12	41	21	152
1-11/16-12	50	35	253

4) FITTING

Thread size	Width across flat (mm)	kgf · m	lbf · ft
1/4"	19	4	28.9
3/8"	22	5	36.2
1/2"	27	9.5	68.7
3/4"	36	18	130
1"	41	21	152
1-1/4"	50	35	253

5) TIGHTENING TORQUE OF MAJOR COMPONENT

Na	No. Decariations		Doltoine	Tord	que
No.		Descriptions	Bolt size	kgf · m	lbf ⋅ ft
1		Engine mounting bolt, nut (rubber, 2EA)	M20×2.5	57.9 ± 8.7	419 ± 63
2		Engine mounting bolt (bracket, 8EA)	M12×1.75	11.7 ± 1.8	84.6 ± 13
3		Engine mounting bolt (T/C plate-adapter, 4EA)	M10×1.5	6.9 ± 1.4	49.9 ± 10.1
4	Ca eile e	Engine mounting stud bolt,nut (flywheel, 10EA)	M10×1.5	6.8 ± 1.0	49.2 ± 7.2
5	Engine	Engine mounting stud bolt (flywheel, 2EA)	M10×1.5	4.6 ± 0.9	33.3 ± 6.5
6		Fan motor mounting bolt	M12×1.75	12.8 \pm 3.0	92.6 ± 21.7
7		Radiator mounting bolt	M16×2.0	29.7 ± 5.9	215 ± 42.7
8		Fuel tank mounting bolt	M16×2.0	29.7 ± 4.5	215 ± 32.5
9		Main pump housing mounting bolt	M16×2.0	29.7 ± 4.5	215 ± 32.5
10		Fan & brake pump housing mounting bolt	M10×1.5	6.9 ± 1.4	50 ± 10.1
11		Main control valve mounting bolt	M10×1.5	6.9 ± 1.4	50 ± 10.1
12		Steering unit mounting bolt	M10×1.5	6.9 ± 1.4	50 ± 10.1
13	Hydraulic system	Brake valve mounting bolt	M8×1.25	2.5 ± 0.5	18.1 ± 3.6
14	oyo.o	Cut-off valve mounting bolt	M8×1.25	2.5 ± 0.5	18.1 ± 3.6
15		Remote control lever mounting bolt	M6×1.0	1.1 ± 0.2	8.0 \pm 1.4
16		Safety valve	M10×1.5	6.9 ± 1.4	50 ± 10.1
17		Hydraulic oil tank mounting bolt	M16×2.0	29.7 ± 4.5	215 \pm 32.5
18		Transmission mounting bolt, nut (rubber, 2EA)	M24×3.0	100 ± 15	723 ± 108
19		Transmission mounting bolt (bracket, 6EA)	M20×2.5	56.1 \pm 8.4	406 ± 60.8
20	Power	Front axle mounting bolt, nut	M27×2.0	135 \pm 20.2	976 ± 146
21	train system	Rear axle support mounting bolt, nut	M27×2.0	135 \pm 15	976 ± 108
22		Tire mounting nut	M22×1.5	79 \pm 11.9	571 ± 86.1
23		Drive shaft joint mounting bolt	3/8-24UNF	6.0 ± 0.8	43.4 ± 5.8
24		Counterweight mounting bolt (4EA)	M30×3.5	199 ± 30	1439 ± 216
25	Othors	Operator's seat mounting bolt	M8×1.25	3.4 ± 0.8	24.6 ± 5.0
00	Others	ROPS Cab mounting bolt (4EA)	M20×2.5	58 ± 8.7	419 ± 63
26		ROPS Cab mounting nut (4EA)	M16×2.0	20.5 ± 4.7	148± 34

3. SPECIFICATION OF FUEL, COOLANT AND LUBRICANTS

1) NEW MACHINE

New machine used and filled with following lubricants.

Description	Specification
Engine oil (API CH-4)	SAE 15W-40, *1SAE 5W-40
Hudraulia ail	HD Hyundai Construction Equipment genuine long life (ISO VG 46, VG 68 only)
Hydraulic oil	Conventional (ISO VG15*1)
Transmission oil	SAE 15W-40
Axle oil	*Refer to below list
Grease	Lithium base grease NLGI No. 2
Fuel	ASTM D975-No. 2
	ASTM D6210
Coolant	Mixture of 50% ethylene glycol base antifreeze and 50% water
	Mixture of 60% ethylene glycol base antifreeze and 40% water ^{★1}

SAE: Society of Automotive Engineers

API : American Petroleum Institute

ISO: International Organization for Standardization

NLGI: National Lubricating Grease Institute **ASTM**: American Society of Testing and Material


* Recommended oil list

- BP TERRAC SUPER TRANSMISSION 10W-30
- CASTROL AGRI TRANS PLUS 10W-30
- MOBILFLUID 426
- SHELL DONAX TD 10W-30
- TOTAL DYNATRANS MPV
- *1 Cold region

2) RECOMMENDED OILS

HD Hyundai Construction Equipment genuine lubricating oils have been developed to offer the best performance and service life for your equipment. These oils have been tested according to the specifications of HD Hyundai Construction Equipment and, therefore, will meet the highest safety and quality requirements. We recommend that you use only HD Hyundai Construction Equipment genuine lubricating oils and grease officially approved by HD Hyundai Construction Equipment.

- * Using any lubricating oils other than HD Hyundai Construction Equipment genuine products may lead to a deterioration of performance and cause damage to major components.
- * Do not mix HD Hyundai Construction Equipment genuine oil with any other lubricating oil as it may result in damage to the systems of major components.
- * Do not use any engine oil other than that specified above, as it may clog the diesel particulate filter(DPF).
- ** For HD Hyundai Construction Equipment genuine lubricating oils and grease for use in regions with extremely low temperatures, please contact HD Hyundai Construction Equipment dealers.

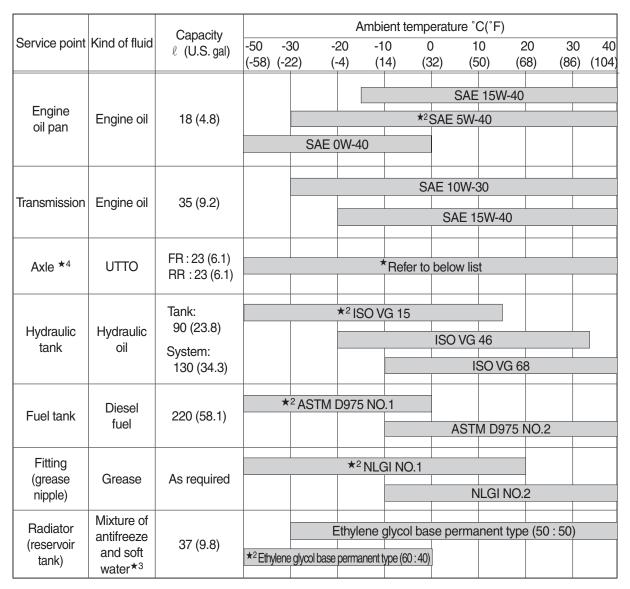

SAE : Society of Automotive Engineers

API : American Petroleum Institute

ISO: International Organization for Standardization

NLGI: National Lubricating Grease Institute

ASTM: American Society of Testing and Material

UTTO: Universal Tractor Transmission Oil

* Recommended oil list

- BP TERRAC SUPER TRANSMISSION 10W-30
- CASTROL AGRI TRANS PLUS 10W-30
- MOBILFLUID 426
- SHELL DONAX TD 10W-30
- TOTAL DYNATRANS MPV
- *2 Cold region
- *3 Soft water : City water or distilled water
- ★4 If the machine is equipped with axle oil cooler, refer to page 6-38.

4. MAINTENANCE CHECK LIST

Scheduled maintenance is the normal maintenance necessary to provide proper and efficient machine operation. To protect your investment and prolong the service life of your machine, follow the scheduled maintenance list below.

1) EVERY 10 HOURS SERVICE

Check items	Service	Page
Hydraulic oil level	Check, Add	6-29
Engine oil level	Check, Add	6-15
Radiator coolant level	Check, Add	6-17
Belt tension & damage	Check	6-22, 23
Fuel pre-filter element (water)	Drain	6-25
Charge air piping	Check	6-21
Cooling fan	Check	6-22
Air intake piping	Check	-

2) EVERY 50 HOURS SERVICE

Check items	Service	Page
Attachment pins	Lubricate	6-42
Tire (air)	Check, Add	6-32
Steering cylinder pins	Lubricate	6-39
Rear axle pivot	Lubricate	6-39
Fuel tank (water, sediment)	Drain	6-25

3) INITIAL 250 HOURS SERVICE

Check items	Service	Page
Engine oil and filter	Change	6-15, 16, 17
Fuel filter element	Replace	6-27
Fuel pre-filter element	Replace	6-25
Transmission oil and filter	Change	6-35, 36
Front and rear axle oil	Change	6-37
Hydraulic oil return filter	Replace	6-30
Pilot line filter element	Replace	6-31
Pressure filter element	Replace	6-31

4) EVERY 250 HOURS SERVICE

Check items	Service	Page
Drive shaft (flange bearing, front, center, rear) *	Lubricate	6-39
Wheel nuts	Check, Tight	6-33, 34
Battery (voltage) / Battery cable and connections	Check	6-45, 46
Air conditioner and heater filter (inner and outer)	Check, Clean	6-47

[★] Under harsh, corrosive, dusty and wet working condition : Lubricate every 50 hours.

5) EVERY 500 HOURS SERVICE

Check items	Service	Page
Engine oil and filter	Change, Replace	6-15, 16, 17
Fuel filter element	Replace	6-27
Fuel pre-filter element	Replace	6-25
Radiator, oil cooler, change air cooler, condenser	Check, Clean	6-21
Air cleaner element (primary)*	Clean	6-24
Parking brake clearance	Check, Adjust	6-36-1, 6-36-2

^{*} When working in dusty environments, more frequent cleaning is highly recommended.

6) EVERY 1000 HOURS SERVICE

Check items	Service	Page
Drive belt, cooling fan, belt tensioner	Check	6-22, 23
Hydraulic oil return filter	Replace	6-30
Pilot line filter element	Replace	6-31
Hydraulic tank air breather element	Replace	6-31
Pressure filter element	Replace	6-31
Center pivot pin	Lubricate	6-39
Transmission oil	Change	6-35, 36
Transmission oil filter	Replace	6-36
Aircon and heater outer filter	Replace	6-47

7) EVERY 1500 HOURS SERVICE

Check items	Service	Page
Front axle oil	Change	6-38
Rear axle oil	Change	6-38
Axle oil filter (opt)	Replace	6-38

8) EVERY 2000 HOURS SERVICE

Check items	Service	Page
Engine cleaning	Clean	6-28
Air cleaner element (safety and primary)	Replace	6-24
Hydraulic oil★1	Change	6-29
Coolant, cooling system and antifreeze*1	Change, Flush	6-17, 18, 19, 20
Hydraulic oil suction strainer	Check, Clean	6-30
Airconditioner and heater inner filter	Replace	6-47
Hoses, fittings, clamps (fuel, coolant, hydraulic)	Check, Retighten, Replace	-

[★]¹ Conventional

9) EVERY 5000 HOURS SERVICE

Check items	Service	Page
Hydraulic oil*2	Change	6-29

^{*2} HD Hyundai Construction Equipment genuine long life

10) EVERY 6000 HOURS SERVICE


Check items	Service	Page	
Coolant, cooling system and antifreeze*2	Change, Flush	6-17, 18, 19, 20	

^{*2} HD Hyundai Construction Equipment genuine long life

11) WHEN REQUIRED

Check items	Service	Page
Air cleaner element		
· Safety	Replace	6-24
· Primary	Clean, Replace	6-24
Air conditioner and heater		
· Outer filter	Replace	6-47
· Inner filter	Clean, Replace	6-47

5. MAINTENANCE CHART

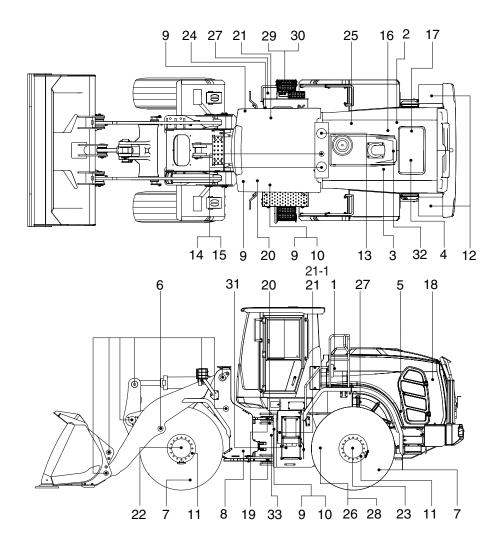

940SA6MI10

Caution

- 1. Service intervals are based on the hour meter reading.
- 2. The number of each item shows the lubrication point on the machine.
- 3. Stop engine while filling oil, and use no open flames.
- 4. For other details, refer to the service manual.

- EO: Engine oil - GO: Gear oil

- C : Coolant - HO : Hydraulic oil

- PGL: Grease

- UTTO: Refer to page 6-9.

Service interval	No.	Description	Service action	Oil symbol	Capacity ℓ (U.S.gal)	Service points No.
	1	Hydraulic oil level	Check, Add	НО	90 (23.8)	1
40.11	2	Engine oil level	Check, Add	EO	18 (4.8)	1
10 Hours or daily	4	Radiator coolant level	Check, Add	С	37 (9.8)	1
	5	Fan belt tension & damage	Check, Adjust	-	-	2
	17	Fuel pre-filter (water)	Drain	-	-	1
	6	Attachment pins	Lubricate	PGL	see 6-42	13
50 Hours or weekly	7	Tire (air)	Check, Add	-	-	4
	9	Steering cylinder pin	Lubricate	PGL	-	4
	10	Rear axle pivot	Lubricate	PGL	-	2

Service interval	No.	Description	Service action	Oil symbol	Capacity ℓ (U.S.gal)	Service points No.
	8	Drive shaft (flange bearing)	Lubricate	PGL	see 6-39	1
	11	Wheel nuts	Check, Tight	-	-	48
050 Haves	12	Battery voltage, cable and connection	Check, Add	-	-	2
250 Hours	24	Aircon and heater inner and outer filter	Check, Clean	-		2
	26	Drive shaft sleeve yoke	Lubricate	PGL	see 6-39	2
	27	Drive shaft journal bearing assy	Lubricate	PGL	see 6-39	5
	2	Engine oil	Change	EO	18 (4.8)	1
	3	Engine oil filter	Replace	-	-	1
	13	Hydraulic oil return filter	Replace	-	-	1
	16	Fuel filter element	Replace	-	-	1
Initial OEO	17	Fuel pre-filter element	Replace	-	-	1
Initial 250	20	Transmission oil	Change	EO	35 (9.2)	1
Hours	21	Transmission oil filter	Replace	-	-	1
	22	Axle oil (front)	Change	UTTO	See 6-9	3
	23	Axle oil (rear)	Change	UTTO	See 6-9	3
	28	Pilot line filter element	Replace	-	-	1
	29	Pressure filter	Replace	-	-	1
	2	Engine oil	Change	EO	18 (4.8)	1
	3	Engine oil filter	Replace	-	-	1
	16	Fuel filter element	Replace	-	-	1
500 Hours	17	Fuel pre-filter element	Replace	-	-	1
	18	Radiator, oil cooler, CAC, condenser	Clean	-	-	5
	21-1	Parking brake clearance	Check, Adjust	-	-	1
	25	Air cleaner element (primary)	Clean	-	-	1
	13	Hydraulic oil return filter	Replace	-	-	1
	14	Hydraulic tank air breather element	Replace	-	-	1
	19	Center pivot pin	Lubricate	PGL	-	2
1000 Hours	20	Transmission oil	Change	EO	35 (9.2)	1
1000 Hours	21	Transmission oil filter	Replace	-	-	2
	24	Airconditioner and heater outer filter	Replace	-	-	1
	28	Pilot line filter element	Replace	-	-	1
	29	Pressure filter	Replace	-	-	1
	22	Axle oil (front)	Change	UTTO	See 6-9	3
1500 Hours	23	Axle oil (rear)	Change	UTTO	See 6-9	3
	-	Axle oil filter (opt)	Replace	-	See 6-38	1
	1	Hydraulic oil★¹	Change	НО	90 (23.8)	1
	4	Radiator coolant*1	Change	С	37 (9.8)	1
	15	Hydraulic oil suction strainer	Check, Clean	-	-	1
2000 Hours	24	Air conditioner and heater inner filter	Replace	-	-	1
	25	Air cleaner element (safety, primary)	Replace	-	-	2
	-	Engine cleaning, Vibration damper	Clean, Check	-	-	2
	-	Hoses, fittings, clamps (fuel, coolant, hydraulic)	Check, Retighten, Replace	-	-	-
5000 Hours	1	Hydraulic oil*2	Change	НО	90 (23.8)	1
6000 Hours	4	Radiator coolant*2	Change	С	37 (9.8)	1
	24	Air conditioner and heater outer filter	Replace	-	-	1
When	<u> </u>	Air conditioner and heater inner filter	Clean, Replace	-	-	1
required	25	Air cleaner element (safety)	Replace	-	-	1
		Air cleaner element (primary)	Clean, Replace	-	-	1

^{★1} Conventional


^{★2} HD Hyundai Construction Equipment genuine long life

6. SERVICE INSTRUCTION

1) CHECK ENGINE OIL LEVEL


Check the oil level with the machine on a flat ground before starting engine.


- (1) Pull out the dipstick and wipe with a clean cloth.
- (2) Check the oil level by inserting the dipstick completely into the hole and pulling out again.
- (3) If oil level is LOW, add oil and then check again.
- If the oil is contaminated or diluted, change the oil regardless of the regular change interval.
- Check oil level after engine has been stopped for 15 minutes.
- ♠ Do not operate unless the oil level is in the normal range.

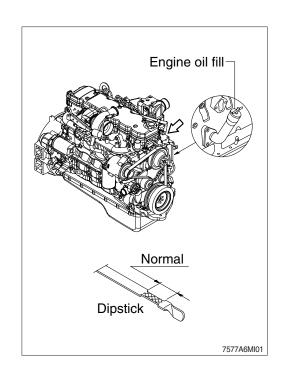


2) REPLACEMENT OF ENGINE OIL AND OIL FILTER

- (1) Operate the engine until the coolant temperature reaches 60°C (140°F). Shut off the engine.
- (2) Turn the stopper to the open position and allow the oil to drain.
 - · Wrench size: 10 mm
- A drain pan with a capacity of 20 liters (5.3 U.S.gallons) will be adequate.
- (3) Clean the area around the oil filter head.
- (4) Use oil filter wrench to remove the oil filter.
- (5) Clean the gasket surface of oil filter head.
- * The O-ring can stick on the filter head; make sure it is removed.

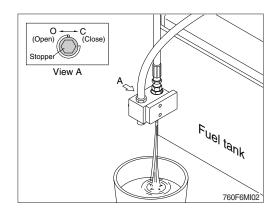

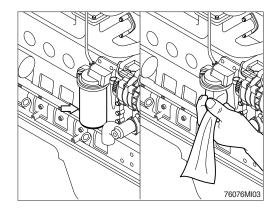

- (6) Apply a light film of lubricating oil to the gasket sealing surface before installing the filter.
- * Fill the filter with clean lubricating oil.

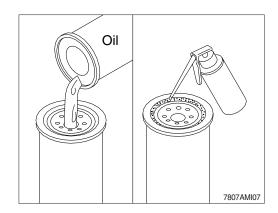


(7) Install the filler to the filter head.


Tighten the filter until the gasket contacts the filter head surface.

Tighten 3/4 to 1 turn after gasket makes contact with the filter head.


Mechanical over-tightening may distort the threads or damage the filter element seal.

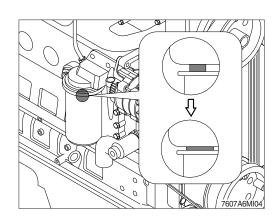


(8) Turn the stopper to the close position.

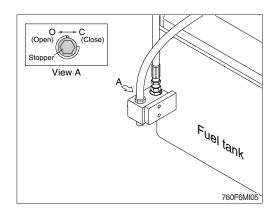

- (9) Fill the engine with clean oil to the proper level.
 - · Quantity: 18 \((4.8 U.S.gallons)

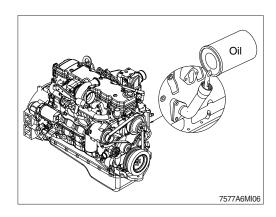



- (10) Operate the engine at low idle and inspect for leaks at the filter and the drain plug. Shut the engine off and check oil level with dipstick. Allow 15 minutes for oil to drain down before checking.
- * Do not overfill the engine with oil.

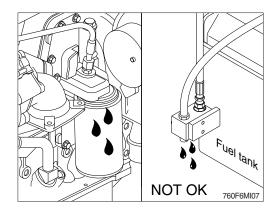

3) CHECK COOLANT LEVEL

- (1) Check the engine fault code on the monitor.
- (2) Add the mixture of antifreeze and water after removing the cap of the surge tank if coolant is not sufficient.
- (3) Replace gasket of surge tank cap when it is damaged.
- Do not remove the surge tank cap from a hot engine. Wait until the coolant temperature is below 50°C (120°F) before removing the cap. Heated coolant spray or steam can cause personal injury.
- ▲ Do not add cold coolant to a hot engine; engine castings can be damaged. Allow the engine to cool to below 50°C (120°F) before adding coolant.

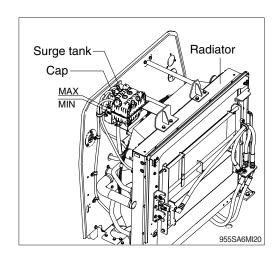

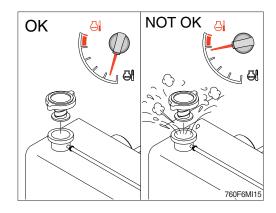

4) FLUSHING AND REFILLING OF RADIATOR

(1) Change coolant

♠ Avoid prolonged and repeated skin contact with used antifreeze. Such prolonged repeated contact can cause skin disorders or other bodily injury.

Avoid excessive contact-wash thoroughly after contact.

Keep out of reach of children.


♠ Protect the environment: Handling and disposal of used antifreeze can be subject to federal, state, and local law regulation.


Use authorized waste disposal facilities, including civic amenity sites and garages providing authorized facilities for the receipt of used antifreeze. If in doubt, contact your local authorities for guidance as to proper handing of used antifreeze.


▲ Wait until the temperature is below 50°C (120°F) before removing the coolant system cap. Failure to do so can cause personal injury from heated coolant spray. Drain the cooling system by turning the stopper to the open position. A drain pan with a capacity of 45 liters (11.9 U.S.gallons) will be adequate in most applications.

(2) Flushing of cooling system


- ① Fill the system with a mixture of sodium carbonate and water (or a commercially available equivalent).
- W Use 0.5 kg (1.0 pound) of sodium carbonate for every 23 liters (6.0 U.S. gallons) of water.
- * Do not install the cap. The engine is to be operated without the cap for this process.

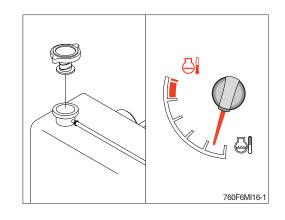

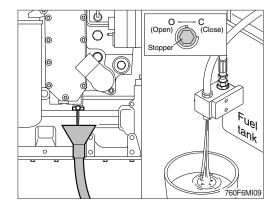


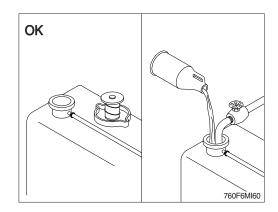


During filling, air must be vented from the engine coolant passages. The system must be filled slowly to prevent air locks. Wait 2 to 3 minutes to allow air to be vented, then add mixture to bring the level to the top.

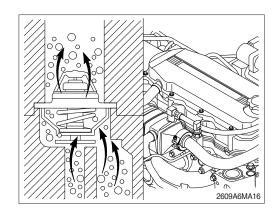


② Operate the engine for 5 minutes with the coolant temperature above 80°C (176°F). Shut the engine off, and drain the cooling system.

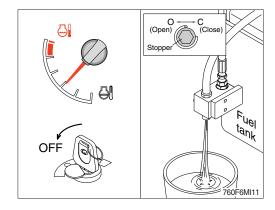

- ③ Fill the cooling system with clean water.
- ** Be sure to vent the engine and aftercooler for complete filling.
- Do not install the surge tank cap or the new coolant filter.

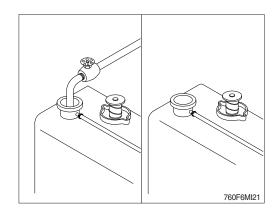


- ④ Operate the engine for 5 minutes with the coolant temperature above 80°C (176°F). Shut the engine off, and drain the cooling system.
- If the water being drained is still dirty, the system must be flushed again until the water is clean.

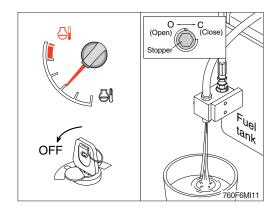


(3) Cooling system filling

- ① Use a mixture of 50 percent soft water and 50 percent ethylene glycol antifreeze to fill the cooling system. Refer to the page 6-9.
- Never use water alone for coolant.This can result in damage from corrosion.
- * Do not use hard water such as river water or well water.
- 50% WATER 50% WATER 50% ANTIFREEZE ANTIFREEZE

 7707A6MI15
- ② The system has a maximum fill rate of 19 liters (5.0 U.S. gallons) per minute.
 Do not exceed this fill rate.
- ** The system must be filled slowly to prevent air locks. During filling, air must be vented from the engine coolant passage.

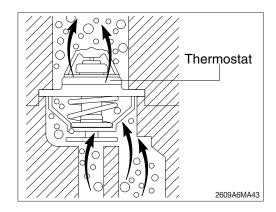


③ Install the cap. Operate the engine until it reaches a temperature 80°C (176°F), and check for coolant leaks. Check the coolant level again to make sure the system is full of coolant.

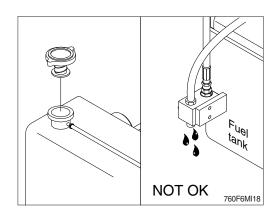


5) CLEAN RADIATOR AND OIL COOLER

Check, and if necessary, clean and dry outside of radiator and oil cooler. After working in a dusty place, clean radiator more frequently.


- Visually inspect the radiator for clogged radiator fins.
- (2) Use 550 kPa (80 psi) air pressure to blow the dirt and debris from the fins. Blow the air in the opposite direction of the fan air flow.
- (3) Visually inspect the radiator for bent or broken
- If the radiator must be replaced due to bent or broken fins which can cause the engine to overheat, refer to the manufacturer's replacement procedures.
- (4) Visually inspect the radiator for core and gasket leaks.

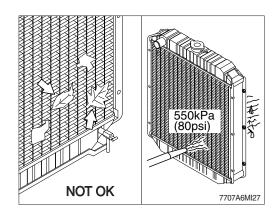

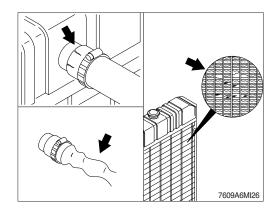


6) CHECK CHARGE AIR COOLER AND PIPING

- (1) Inspect the charge air cooler for dirt and debris blocking the fins. Check for cracks, holes, or other damage. If damage is found, please contact your local hyundai dealer.
- (2) Inspect the charge air piping and hoses for leaks, holes, cracks, or loose connections. Tighten the hose clamps if necessary.

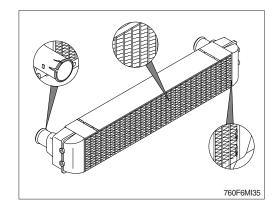


7) FAN BELT


- (1) Use the belt tension gage to measure the belt tension.
 - · Fan belt tension: 11.3 kg (25 lb)

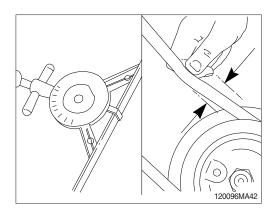

- (2) Inspect the fan belt for damage.
- ① Transverse (across the belt) cracks are acceptable.
- ② Longitudinal (direction of belt ribs) cracks that intersect with transverse cracks are not acceptable.
- ③ Replace the belt if it is frayed or has pieces of material missing.

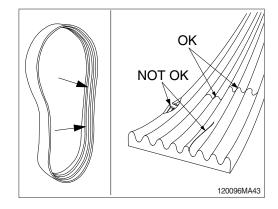

- (3) Inspect the idle and drive pulleys for wear
- or cracks.

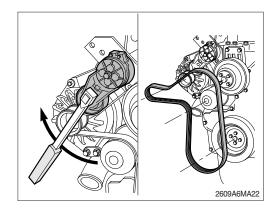


8) INSPECTION OF COOLING FAN

- ♠ Personal injury can result from a fan blade failure. Never pull or pry on the fan. This can damage the fan blade and cause fan failure.
- * Rotate the crankshaft by using the engine barring gear.
- A visual inspection of the cooling fan is required daily.


Check for cracks, loose rivets, and bent or loose blades.

Check the fan to make sure it is securely mounted. Tighten the capscrews if necessary. Replace any fan that is damaged.

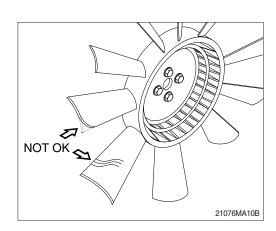


9) FAN BELT TENSIONER

(1) With the engine stopped, check the tensioner arm, pulley, and stops for cracks. If any cracks are found, the tensioner must be replaced.

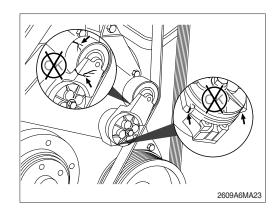


(2) With the belt installed, verify that neither tensioner arm stop is in contact with the spring case stop.


After replacing the belt, if the tensioner arm stops are still in contact with the spring case stop, replace the tensioner.

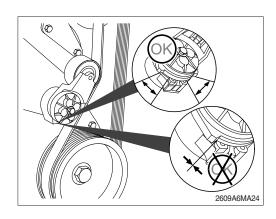

- (3) With the belt removed, verify that the tensioner arm stop is in contact with the spring case stop. If these two are not touching, the tensioner must be replaced.
- After replacing the belt, if the tensioner arm stop is still in contact with the spring case stop, the tensioner MUST be replace.

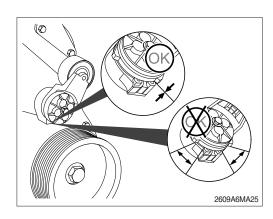

(4) Check the location of the drive belt on the belt tensioner pulley. The belt should be centered on, or close to the middle of, the pulley. Misaligned belts, either too far forward or backward, can cause belt wear, belt roll-offs, or increase uneven tensioner bushing wear.

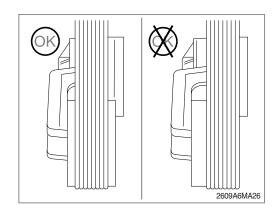


10) CLEANING OF AIR CLEANER

(1) Primary element

- ① Open the cover and remove the element.
- Wipe all contaminant and debris from inside the housing body.
- ③ Do not clean the filter element by striking or hitting the filter against any object to shake the debris from the filter element.
- 4 Clean the filter element with compressed air.
- Remove dust from filter element by directing the compressed air into the opening of the air filter element.
- b. Use 3 kg/cm² (40 psi) maximum air pressure and hold the compressed air nozzle at least 2.5 cm (1") away from the pleats while cleaning. Make sure to keep the clean side of air filter free of debris.
- Significantly inspect for damage to the filter elements and components. Use a light source to help identify any defects in the media. If any defects are observed discard the filter element and replace with a new primary filter element.
 - a. Before any type of cleaning, a visual inspection of the filter is needed. If there is any damage to the filter body, gaskets or endplates, do not clean or reuse; the filter should be discarded. Always clean filters in a clean environment, observe strict inspection procedures and repackage filters immediately after the cleaning process with appropriate materials.
- Use observe proper safety precautions and dispose of waste materials in an environmentally compliant manner.
- 6 Re-install filter element into the air housing.
- Replace the primary element at the fourth cleaning.


(2) Safety element

The safety filter element should never be cleaned since the safety filter is the last barrier to contaminant before it reaches engine/ equipment. The useful life of the safety filter is equivalent to that of the primary air filter only if the primary filter element is being regularly cleaned. If the primary filter element is not cleaned, the safety filter should be changed at every third primary air filter change or after one year of continuous service, whichever occurs first.

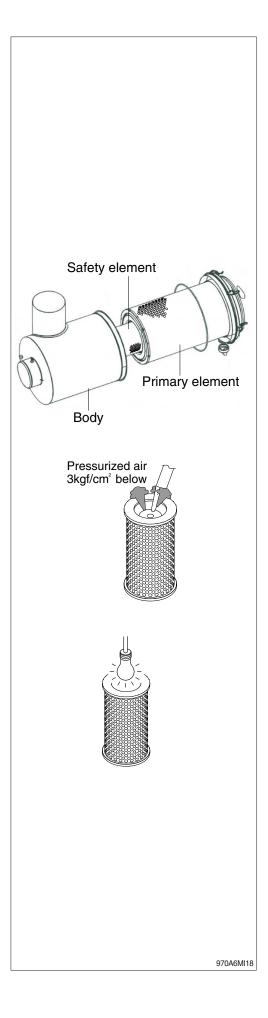

11) FUEL TANK

- (1) Fully fill the fuel tank to minimize water condensation and check the fuel gauge before starting the machine.
- (2) Drain the water and sediment in the fuel tank by opening the drain cock.
- Be sure to LOCK the cap of fuel tank.
- Remove the strainer of the fuel tank and clean it if contaminated.
- ▲ Stop the engine when refueling.
 All lights and flames shall be kept at a safe distance while refueling.

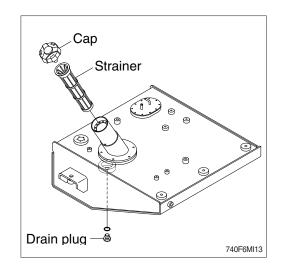

12) FUEL PRE-FILTER


Inspect or drain the collection bowl of water daily and replace the element every 500 hours.


(1) Drain water

- ① Open bowl drain valve to evacuate water.
- ② Close drain valve.
- » Don't tighten up a drain valve so strong.
- Inspect and drain water frequently for remain water volume to be less than 1/3 volume of a bowl.


(2) Replace element

- ① Loosen the air vent plug and drain the unit of fuel. Follow "Drain water" instructions above.
- ② Remove element and bowl from filter head.
- * The bowl is reusable, do not damage or discard.
- ③ Separate element from bowl. Clean bowl and seal gland.

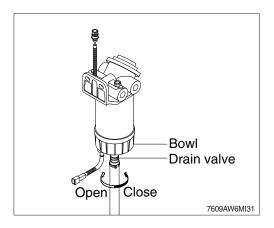

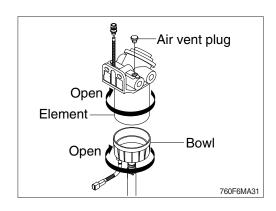


- 4 Lubricate new bowl seal with clean fuel or motor oil and place in bowl gland.
- (5) Attach bowl to new element firmly by hand.
- ⑥ Lubricate new element seal and place in element top gland.
- 7 Attach the element and bowl to the head.

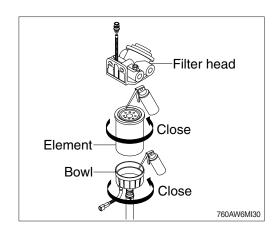

(3) Bleeding of fuel system


- ① Loosen fuel supply line plug at the outlet of prefilter.
- ② Do hand-priming the lift pump repeatedly until air bubbles comes out from fuel supply line completely.
- ③ Tighten fuel supply line to its origin position.
- ▲ The fuel pump, high-pressure fuel lines, and fuel rail contain very high-pressure fuel. Do not loosen any fittings while the engine is running. Personal injury and property damage can result.

Wait at least 10 minutes after shutting down the engine before loosening any fittings in the high-pressure fuel system to allow pressure to do decrease to a lower level.

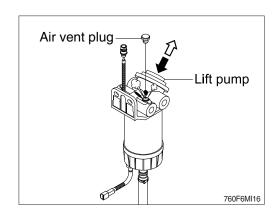


13) REPLACEMENT OF FUEL FILTER

- (1) Use 1" wrench, loosen and remove the filter and clean the gasket surface.
- Make sure O-ring does not stick to filter head. Remove O-ring with screwdriver if necessary.
- (2) Lubricate the fuel filter O-ring with clean lubricating oil.
- (3) Install the filter on the filter head. Tighten the filter until the gasket contacts the filter head surface. Tighten the fuel filter an additional 3/4 turn after contact.
- Mechanical overtightening can distort the threads or damage the filter element seal.
- (4) Relieve the air after mounting.
- Do not pre-fill an on-engine fuel filter with fuel. The system must be primed after the fuel filter is installed. Pre filling the fuel filter can result in debris entering the fuel system and damaging fuel system components.
- * Check for fuel leakage after the engine starts. If air is in the fuel system, the engine will not start. Start engine after bleeding the air according to the method of bleeding air.

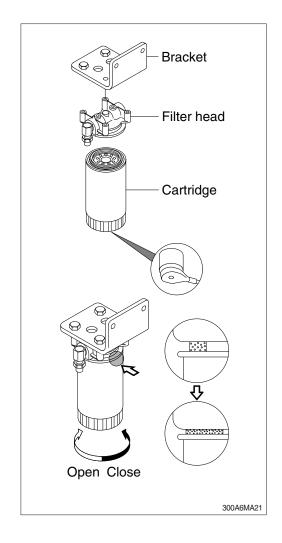


14) LEAKAGE OF FUEL

A Be careful and clean the fuel hose, injection pump, fuel filter and other connections as the leakage from these part can cause fire.

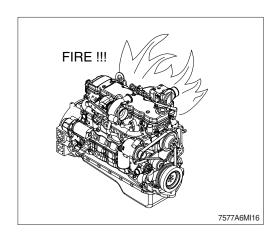

15) ENGINE CLEANING

- ♠ When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.
- * Turn OFF the master switch mounted electric box.
- (1) Steam is the recommended method of cleaning a dirty engine or a piece of equipment.
- (2) Protect all electrical components, openings, and wiring from the full force of the cleaner spray nozzle.
- (3) Components to protect include, but are not limited to the following:
 - · Electrical components and connectors
 - · Wiring harnesses
 - Electronic control module (ECM) and connectors.
 - · Belts and hoses
 - · Bearings (ball or taper roller)
- △ Soap, solvent, or water ingress into air intake system can cause engine damage.
- △ Do not directly spray or allow soap, solvent, or water to enter any passages, ports, or cowlings that lead to the engine air intake system.

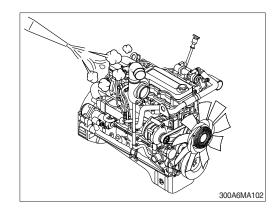

16) HYDRAULIC OIL CHECK


- (1) Position the machine as shown in the illustration on the right. Then stop engine.
- (2) Check the oil level at the level gauge of hydraulic oil tank.
- (3) The oil level is normal if the oil is between the red lines. The oil level depends on the temperature of the hydraulic oil. Refer to the height (A) in the below table to check the level gauge.


Temperature		Height A	
${\mathbb C}$	°F	mm	inch
0	32	15	0.6
10	50	25	1.0
20	68	30	1.2
30	86	35	1.4
40	104	40	1.6


- Refer to page 3-26 for checking the temperature of the hydraulic oil.
- * Add the hydraulic oil, if necessary.



- (1) Stop the engine to the position of level check.
- (2) Rotate the cap nut counter-clockwise by hand and push the rod to release the air pressure.
- (3) Remove the breather on the top of oil tank and fill the oil to the specified level.
- (4) Start engine after filling and operate the work equipment several times.
- (5) Check the oil level at the level check position after engine stops.

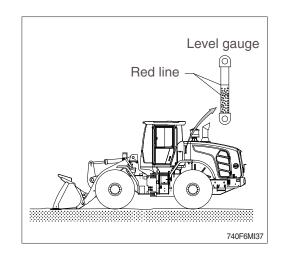


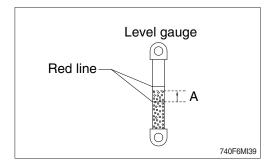

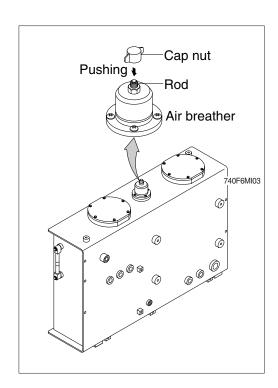

18) CHANGE THE HYDRAULIC OIL


- (1) Lower the bucket on the ground extend the bucket cylinder to the maximum.
- (2) Loosen the cap and relieve the pressure in the tank by pushing the top of the air breather.
- (3) Prepare a suitable container.
- (4) To drain the oil loosen the drain plug at the fuel tank block.
- (5) Tighten the drain plug.
- (6) Fill proper amount of recommended oil.
- (7) Put the breather in the right position.
- (8) Start engine and run continually. Release the air by full stroke of control lever.
- * The oil must be free of bubbles. If bubbles are present in the oil, air is entering the hydraulic system. Inspect the suction hoses and hose clamps. Tighten the drain plug.

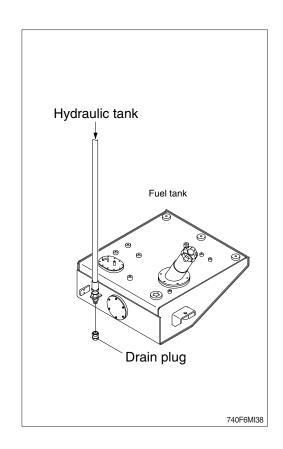

19) CLEANING AND REPLACING RETURN FILTER


Clean and replace the return filter in the following manner.

- (1) Remove the cover.
- (2) Remove spring, by-pass valve and return filter from the tank.
- (3) Replace element with new one and assemble spring and by-pass valve after cleaning.
- (4) Install the cover on the tank.
 - \cdot Tightening torque : 6.9 \pm 1.4 kgf \cdot m (50 \pm 10 lbf \cdot ft)

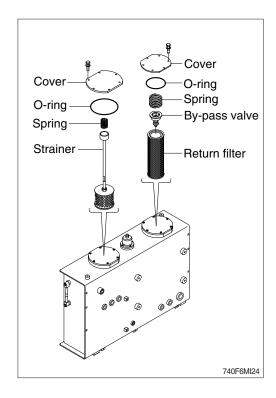


20) REPLACEMENT OF ELEMENT IN HYDRAULIC TANK BREATHER

- (1) Loosen the cap and relieve the pressure in the tank by pushing the top of the air breather.
- (2) Loosen the lock nut and remove the cover.
- (3) Pull out the filter element.
- (4) Replace the filter element new one.
- (5) Reassemble by reverse order of disassembly.
 - \cdot Tightening torque : 1.05 \pm 0.21 kgf \cdot m (7.6 \pm 1.5 lbf \cdot ft)

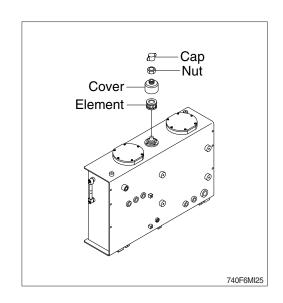


21) REPLACE OF PILOT LINE FILTER

- (1) Loosen the bowl positioned on the safety valve.
- (2) Pull out the filter element and clean the bowl.
- (3) Install the new element and tighten the bowl using spanner.
 - · Spanner size : 27 mm

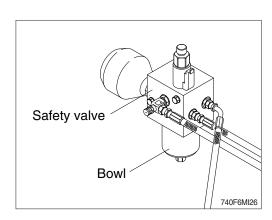


22) REPLACE OF PRESSURE FILTER

- (1) Loosen the pressure filter.
- (2) Install the new filter and tighten.
- Pressure filter is positioned near the upper center pivot pin.

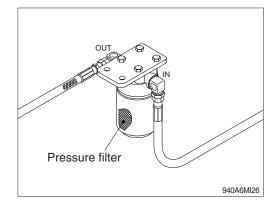

23) LUBRICATE RCV LEVER

Remove bellows and grease the joint (A) and the sliding parts (B).

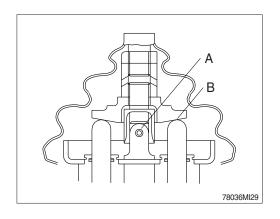

24) TIRE PRESSURE


- (1) Inappropriate tire pressure is a primary cause for tire damage. Insufficient tire pressure will damage internal carcass of tire. Repeated excessive bending will damage or break the carcass. Excessive pressure will also cause premature damage of tire.
- (2) Recommended tire pressure (When tire is cooled) / Refer to the page 5-1.

Size	Pressure
20.5 R25, L3 **	-


- (3) Continuous operation will produce heat and increase pressure on tire. But such phenomenon was already taken into account when designing a tire. Do not try to remove normally increased air because tires may be crushed or overinflated.
- (4) The three major causes for excessive heat and pressure of tire are insufficient pressure, excessive load and overspeed. Avoid excessive load and overspeed in order to keep tires in good shape.
- ♠ Do not inflate tires using flammable gases or alcohol injector.

This can cause explosion or personal injury.

- ▲ Inflate tires at the pressure level recommended by the manufacturer. Check pressure and wear of tires periodically.
- ♠ When replacing the inflated tire, do not stand near the tire.
- Check the tire when the tire is at normal temperature and the machine is not loaded.
- ▲ Do not use recycled wheel parts.
- ♠ When removing lock ring or inflating tire, use a safety cable or chain to ensure safety.
- Be sure to bleed air before removing lockering. Never inflate tires unless the lockering is assembled in its place.
- ① Avoid the followings when traveling.
- ② Rubbing tires against road bank or rack at cargo-unloading spot.
- ③ Tires slippage during working.
- ④ Abrupt starting of machine.
 Remove oil, grease or fuel found on tires to prevent permanent deformation.

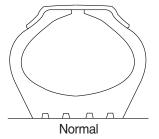



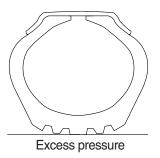


73036MI10

25) REPLACEMENT OF TIRE

▲ Disassembly, reassembly, replacement and repair of tire requires special skills and equipment. Contact a tire repair shop.


(1) Tires to be replaced

- ① Tires with broken or bent bead wires
- 2 Tires exposed more than 1/4 of carcass fly.
- ③ Tires whose carcass is damaged more than 1/3 of the tire width.
- 4 Tires which show fly separation.
- ⑤ Tires which have a radial crack near the carcass.
- ⑥ Tires which are judged to be unsuitable for use because of deformation or damage.

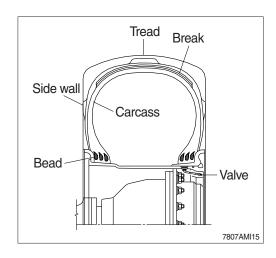


(2) Separation of tire

① After moving the machine to flat ground, lower the bucket to the ground and turn the parking brake switch ON.

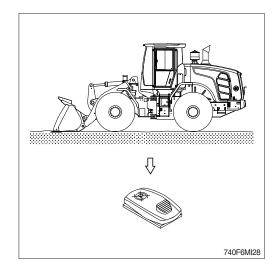


- 2 Loosen slightly all wheel mounting.
 - · Tools : Socket 32 mm Torque wrench Extension bar
- ③ Lift the machine with a jack.
- 4 Loosen all wheel mounting nuts and replace the tire.

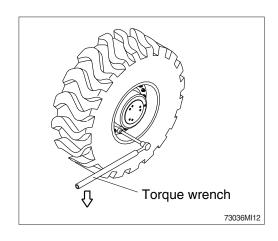


(3) Direction of tire to be installed

① Be careful that the valve should be facing the outside.

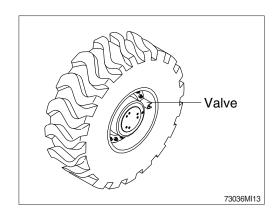

(4) Mounting of tire

- ① Lightly tighten nuts as shown in the illustration.
- ② Lower the jack after tire is replaced.
- 3 Tighten nuts according to the specified tighten torque.
 - \cdot Tightening torque : 79 \pm 11.9 kgf \cdot m (571 \pm 86.1 lbf \cdot ft)

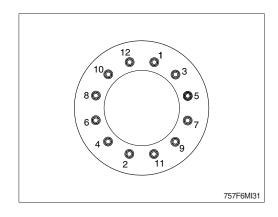


26) STORING TIRES AFTER REMOVAL

As a basic rule, store the tires in a warehouse which unauthorized persons cannot enter. If the tire are stored outside, always erect a fence around the tires and put up "No Entry" and other warning signs that even young children can understand.

Stand the tire on level ground, and block it securely so that it cannot roll or fall over.

If the tire should fall over, get out of the way quickly. The tires for construction equipment are extremely heavy, so trying to hold the tire may lead to serious injury.

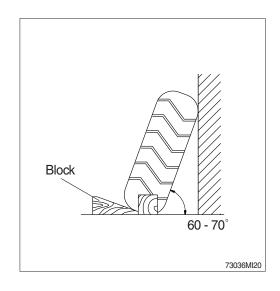



27) CHECK TRANSMISSION OIL LEVEL

- (1) The oil level check must be carried out as follows; oil level check (weekly).
- (2) Before the oil level check, transmission must have been running to warm up enough.
- (3) When the oil level is checked, machine must be on flat ground and engine must be at idling speed, transmission must be in neutral position.
- (4) Check the oil level on level (sight) gauge.
- (5) Oil level
 - Operating temperature (about 80~90°C)
 - :The Oil level must be lying in zone HOT (between two red lines).
 - Cold phase (about 40°C)
 - :The Oil level must be lying near cold mark (blue line).
- ♠ When checking, press the parking brake switch and fix the front and rear frames with the safety lock bar.


28) REPLACEMENT OF TRANSMISSION OIL AND FILTER ELEMENT

- (1) Operate the machine for a few minutes in order to warm the transmission oil.
- (2) Move the machine to flat ground. Lower the bucket to the ground and slightly apply downward force.
- (3) Press the parking brake switch and stop the engine.
- (4) Open transmission air breather to relieve internal air pressure.
- (5) Remove the transmission drain plug. Allow the transmission oil to drain into a suitable container.

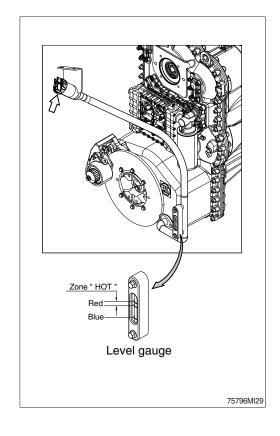


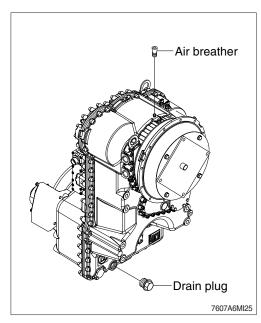


- (6) Remove the transmission oil filter cartridge. Dispose of the used transmission oil filter cartridge properly.
- (7) Clean the filter cartridge mounting base. Remove any part of the filter cartridge gasket that remains on the filter cartridge mounting base.

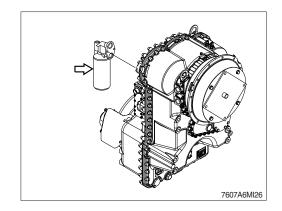

- (8) Apply a light coat of oil to the gasket of a new transmission oil filter cartridge.
- (9) Install the new transmission oil filter cartridge. Screw the filter in until contacts with the sealing surface is obtained and tighten it now by hand about 1/3 to 1/2 turn.

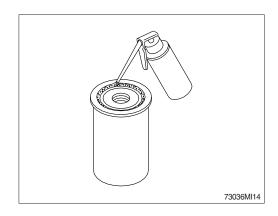

- (10) Fill the oil through filler cap and check if the oil is at the appropriate level.
- (11) The proper oil amount is 34.7 liters. (9.2 U.S. gallons)
- As the machine is hot after operation wait until the temperature has dropped.
- ▲ It is imperative to pay attention to absolute cleanliness of oil and filter.
 Binding is in any case the marking on the oil level gauge.
- Be careful not to inject water into the fill cap when you wash the machine.

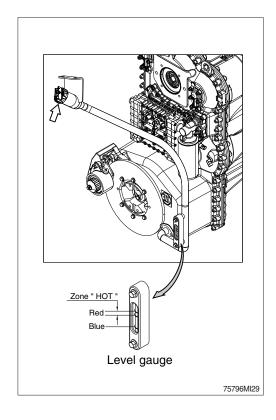


34-1) PARKING BRAKE CLEARANCE

(1) Safety instruction

- ① Park the machine on level ground, lower equipment to the ground.
- ② Insert wheel chocks.
- ③ Insert steering lock.
- 4 Leave the engine running.
- Isolate the machine from driving.
- 5 Release the parking brake.
- 6 Check clearance and adjust accordingly.

(2) Check and adjusting instruction

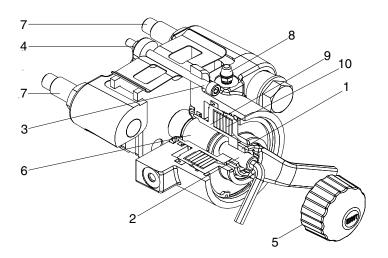


- 1 Lock nut
- 2 Setting screw
- 3 Adjusting screw
- 4 Counter nut
- 5 Screw cap
- 6 Pressure bolt
- 7 Guiding bolt
- 8 Bleeding screw
- 9 Piston
- 10 Spring pack
- ① Place the machine on flat ground and secure against rolling away.
- ② Start the engine and run at low idle. Release the parking brake by releasing the parking brake switch in the cabin.
- 3 Check the parking brake clearance with inserting a setting gauge on both sides between the brake lining carrier and brake disc.
- If the thickness of lining carriers are too thin (1.0 mm ~1.5 mm), then replace the lining carrier first referring to the service manual page 4-21.

Clearance		Setting gauge
Min.	0.5 mm	0.25 mm
Nominal clearance	1.0 mm	0.50 mm
Max.	1.5 mm	0.75 mm

If the clearance is out of specification, adjust the clearance as follows.


- ④ Rotate the screw cap (5) in a counter-clockwise direction and unscrew it.
- ⑤ Release the lock nut (1) of the setting screw (2).
- ⑥ Insert a setting gauge on both sides between the brake lining carrier and brake disc and hold them in position.
- Turn the setting screw (2) in a clockwise direction until the two setting gauges are clamped between the brake lining carriers and the brake disc.
- * The application pressure for clamping the setting gauges must be selected so that both gauges can be removed using a small amount of force after locking in position.
- Apply the lock nut (1) to the setting screw (2).
 - · Tightening torque for the lock nut (1): 6.1 kgf · m (44.3 lbf · ft)
- Release the counter nut (4) and then turn the adjusting screw (3) in a clockwise direction until
 the end surface of the adjusting screw (3) is in contact with the surface provided for setting.
- ① Hold the adjusting screw (3) in position and lock using the counter nut (4).
 - \cdot Tightening torque for the counter nut (4) : 2.3 kgf \cdot m (17 lbf \cdot ft)
- (1) Remove the setting gauge from both sides of the brake disc.
- * The adjustment of the desired air gap is now complete. The brake is ready for use.
- (2) Turn the screw cap (5) in a clockwise direction and tighten hand-tight.
- * Check if the parking brake is working properly with operating the parking brake switch on and off.

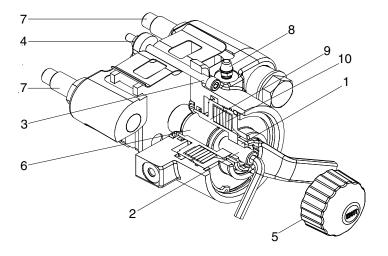

- 1 Lock nut
- 2 Setting screw
- 3 Adjusting screw
- 4 Counter nut
- 5 Screw cap
- 6 Pressure bolt
- 7 Guiding bolt
- 8 Bleeding screw
- 9 Piston
- 10 Spring pack

29) CLEANING TRANSMISSION AIR BREATHER


- (1) Remove dust or debris around the air breather.
- (2) Remove the air breather and wash it with cleaning oil.

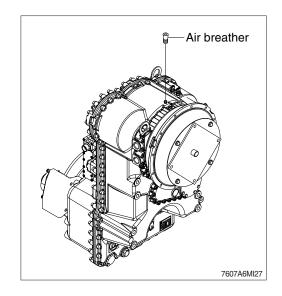

30) CHECK AND SUPPLYING AXLE OIL


- (1) Move the machine to flat ground.
- (2) Open the axle air breather to relieve internal air pressure.
- (3) Remove the plug and check the oil amount.


 If the oil level is at the hole of the plug, it is normal.
- Provide fill & level plug with O-ring and install it.
- ♠ When checking the oil level, press the parking brake switch and fix front and rear frames using the safety lock bar.
- ♠ As the machine is hot after operation, wait until the temperature has dropped. Set the plug of planetary gear in parallel to the ground.

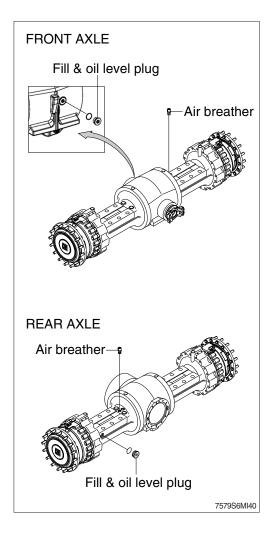

31) CHANGE THE AXLE OIL


- (1) Place a container under drain plug to catch oil.
- (2) Remove the air breather to relieve internal pressure.
- (3) For a correct oil change, the machine must be on a level plane.
- (4) All plugs must be cleaned carefully before opening.
- (5) Loosen drain plugs and drain oil.
- (6) Provide drain plugs with new O-ring and install them.
- (7) Fill up oil to the overflow on fill & level plug.
 - · Oil amount (HL960A, HL960A XT)
 - Front axle : 35 ℓ (9.2 U.S. gal)
 - Rear axle: 35 ℓ (9.2 U.S. gal)
 - · Oil amount (HL960A HD, HL960A HD XT)
 - Front axle : 45 ℓ (11.9 U.S. gal)
 - Rear axle: 40 ℓ (10.6 U.S. gal)
 - If equipped with axle oil coolers (option)
- (8) Replace front and rear axle oil filters.
- (9) Run the engine for five minutes at low idle on flat ground.
- (10) Fill up oil to the overflow on fill & level plug at low idle and install plugs.
 - · Oil amount (HL960A, HL960A XT)
 - Front axle : 41 ℓ (axle only 35 ℓ)
 - Rear axle : 40 ℓ (axle only 40 ℓ)
 - · Oil amount (HL960A HD, HL960A HD XT)
 - Front axle : 51 ℓ (axle only 45 ℓ)
 - Rear axle : 45 ℓ (axle only 40 ℓ)
- ▲ As the machine is hot after operation, wait until the temperature has dropped.
- If operating conditions require frequent use of the brakes, increase the changer interval accordingly.

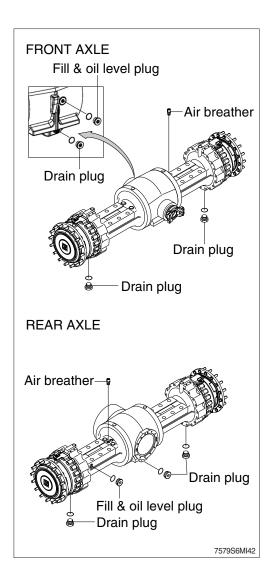

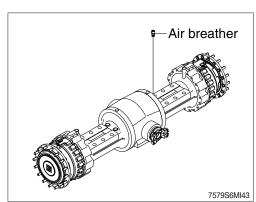


32) LUBRICATION

- (1) Supply grease through the grease nipple, using grease gun.
- (2) After lubricating, clean off spilled grease.
- ⚠ Press the parking brake switch and fix front and rear frames using the safety lock bar.
- ▲ Set the work equipment in a stable position and push the pilot cut off switch to the OFF position.
- (3) Rear axle pivot: 2EA
- (4) Steering cylinder pin: 4EA

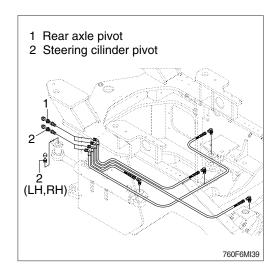

- (5) Center pivot pin: 2EA
- (6) Drive shaft
- ① Front (flange bearing, journal bearing): 2EA
- ② Center (sleeve yoke, journal bearing): 4EA
- ③ Rear (sleeve yoke, journal bearing): 3EA

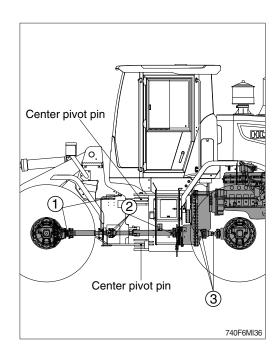


33) REPLACEMENT OF BOLT ON CUTTING EDGE


(1) Replacement time

Replace the cutting edge before it is worn to the welded edge of the bucket.

(2) Replacement method

- ▲ Make sure the work equipment does not move when replacing the cutting edge. Set the work equipment in a stable position, put the pilot cut off switch in the OFF position.
- ① Lift the bucket to a proper height and insert blocks so that the bucket does not fall down.
- ② Loosen bolts and nuts, and remove the cutting edge.
- ③ Clean the contacted surface.
- ④ Turn the cutting edge and install on the bucket.
- If both sides have worn out, replace it with new ones.
- If the contacted face of cutting edge has worn out, repair the contacted face of it.
- ⑤ Tighten evenly bolts and nuts to remove the clearance between bucket and cutting edge.
 - \cdot Tightening torque : 62.8 \pm 9.4 kgf \cdot m (454 \pm 68 lbf \cdot ft)
- 6 After a few hours of operation, retighten bolts.

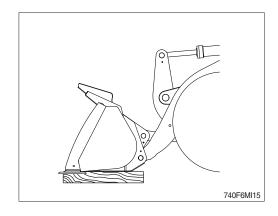

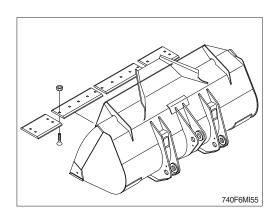


34) REPLACEMENT OF BUCKET TOOTH


(1) Replacement time

Replace the bucket tooth before it has worn out to the end of the bucket.

(2) Replacement method

- ▲ Make sure the work equipment does not move when replacing the bucket tooth. Set the work equipment in a stable position, put the pilot cut off switch in the OFF position and stop the engine.
- ① Lift the bucket to a proper height and insert blocks so that the bucket does not fall down.
- ② Loosen bolts and nuts, and remove bucket tooth.
- ③ Clean the contacted surface.
- If the contacted face of bucket tooth has worn out, repair the contacted face of it.
- ④ Install new bucket tooth on the bucket, and tighten bolts and nuts.
 - \cdot Tightening torque : 57.9 \pm 8.7 kgf \cdot m (418 \pm 63 lbf \cdot ft)
- ⑤ After a few hours of operation, retighten bolts.

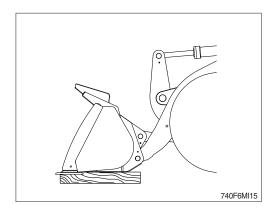

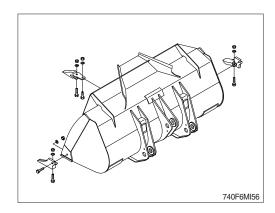



35) MAINTENANCE OF WORK EQUIPMENT

Lubricate to each pin of working device.
 Lubricate the grease to grease nipple in accordance with lubrication intervals.


No.	Description	Qty
Α	Bucket cylinder (front frame side) pin	1
В	Boom cylinder (front frame side) right pin	1
С	Boom-front frame right connection pin	1
D	Boom-front frame left connection pin	1
Е	Boom cylinder (front frame side) left pin	1
F	Boom cylinder-boom connection pin	2
G	Bucket cylinder-bell crank connection pin	1
Н	Boom-bell crank connection pin	1
ı	Bell crank-bucket link connection pin	1
J	Bucket-Bucket link connection pin	2
K	Bucket-boom connection pin	2

- Shorten lubricating interval when working in the water or dusty place.
- (2) Check for wear and tear of work equipment pins and bushings.
- (3) Check for damage of boom and bell crank.

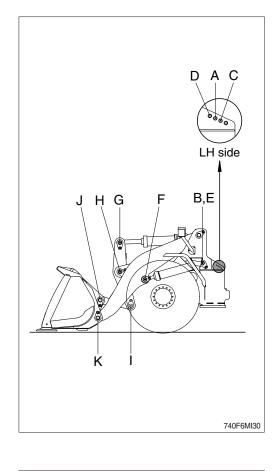

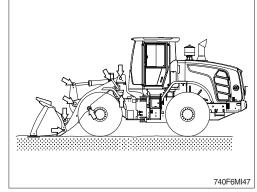


- (4) Dust seal are mounted on the rotating part of working device to extend the lubricating interval.
- Mount the lip to be faced out side when replace the dust seal.
- If it is assembled in wrong direction, it will cause fast wear of pin and bushing, and create noise and vibration during operation.
- Make sure the seals are not damaged or deformed.

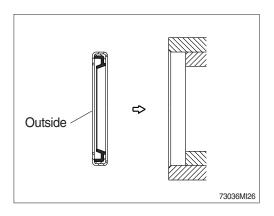

36) WORK EQUIPMENT SUPPORT

When carrying out inspection and maintenance with the equipment raised, fit a stand under the lift arm securely to prevent the work equipment from coming down. In addition, set the work equipment control levers to the Hold position and put the pilot cut off switch to the OFF position.

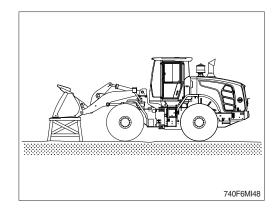

37) BOOM SAFETY LOCK BAR (option)

(1) Supporting


▲ If it is necessary to carry out any maintenance operation or to stop the machine with raised boom, always use the boom safety lock bar and put the pilot cut off switch to the OFF position.

The attachment should be empty.

- ① Raise the boom fully.
- ② Stop the engine and remove the starter key.
- 3 Loosen the two wing bolts and remove safety lock bar from its stowage position.
- ④ Place the safety lock bar onto the boom cylinder and secure the safety lock bar by tyng the string shown as figure.
- ⑤ Slowly lower the boom to fix the safety lock bar.
- When lowering the boom, operate the control lever very slowly.

(2) Lowering


- ① Raise the boom to take the weight off the safety lock bar.
- ② Stop the engine and remove the starter key.
- 3 Loosen the string and remove the safety lock bar carefully.
- Reinstall the safety lock bar onto its stowage position using the wing bolts.

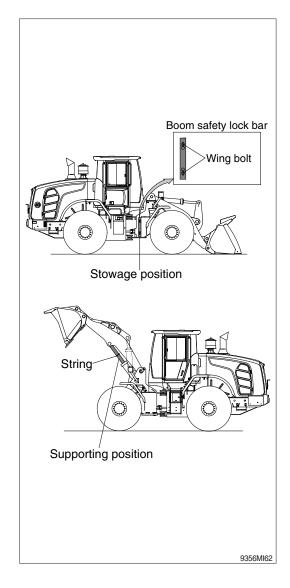

7. ELECTRICAL SYSTEM

1) WIRING, GAUGES

Check regularly and repair loose or malfunctioning gauges when found.

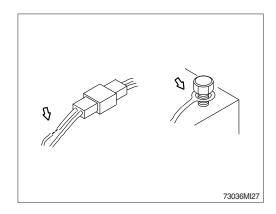


2) BATTERY

(1) Clean

- Wash the terminal with hot water if it is contaminated, and apply grease to the terminals after washing.
- ▲ Battery gas can explode. Keep sparks and flames away from batteries.
- ▲ Always wear protective glasses when working with batteries.
- ♠ Do not stain clothes or skin with electrolyte as it is acid.
 - Be careful not to get the electrolyte in eyes. Wash with clean water and go to the doctor if it enters the eyes.
- Avoid short-circuiting the battery terminals through accidental contact with metallic objects, such as tools, across the terminals.
- ♠ Do not store tools, bucket tooth and other flammable things in battery box. They could cause a fire.
- ▲ Tighten the battery terminals securely.

 Loosened terminals can generate sparks and lead to explosion.
- ▲ Make sure that the battery terminal's caps always are installed.

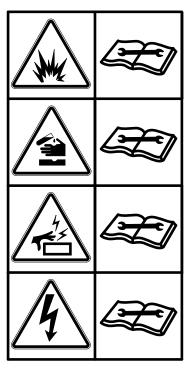

7579A0FW30

(2) Recycle

Never discard a battery.


Always return used batteries to one of the following locations.

- · A battery supplier
- · An authorized battery collection facility
- · Recycling facility

(3) Method of removing the battery cable

Remove the cable from the ground connection first (\ominus terminal side) and reconnect it last when reassembling.

Pay attention to the correct polarity.

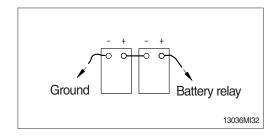

3) STARTING THE ENGINE WITH A BOOSTER CABLE


Keep following order when you are going to start engine using booster cable.


(1) Connection of booster cable

- W Use the same capacity of battery for starting
- ① Connect the red terminal of booster cable to the battery(+) terminal between exhausted and new battery.
- ② Connect the black terminal of the booster cable to the battery (-) terminal between exhausted and new battery.
- ※ Keep firmly all connection, the spark will be caused when connecting finally.

(2) Starting the engine

- ① Start engine with starting key.
- ② If you can not start it by one time, restart the engine after 2 minutes.

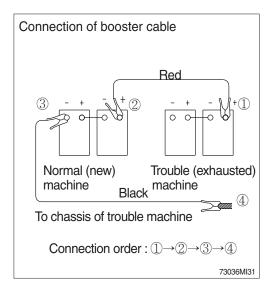

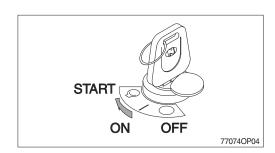

(3) Taking off the booster cable

- ① Take off the booster cable (black).
- ② Take off the booster cable (red) connected to the (+) terminal.
- ③ Run engine with high idle until charging the exhausted battery by alternator, fully.
- ♠ Explosive gas is generated while using the battery or charging it. Keep away flame and be careful not to cause the spark.
- * Charge the battery in the well ventilated place.
- ** Place the machine on the earth or concrete. Avoid to charge the machine on the steel plate.
- ** Do not connect (+) terminal and (-) terminal when connecting booster cable because it will be shorted.


Disconnection of booster cable Red Normal (new) Trouble (exhausted) machine Black To chassis of trouble machine Disconnection order: 4 → 3 → 2 → 1

4) Welding repair

Before start to welding, follow the below procedure.

- (1) Shut off the engine and remove the starting switch.
- (2) Disconnect ground cable from battery by master switch.
- (3) Before carrying out any electric welding on the machine, the battery cables should be disconnected and the connectors pulled out of the electronic control units (MCU, TCU, ECU, cluster, monitor etc).
- (4) Connect the earth (ground) lead of the welding equipment as close to the welding points as possible.
- * Do not weld or flame cut on pipes or tubes that contain flammable fluids. Clean them thoroughly with nonflammable solvent before welding or flame cutting on them.
- ♠ Do not attempt to welding work before carry out the above.


If not, it will caused serious damage at electric system.

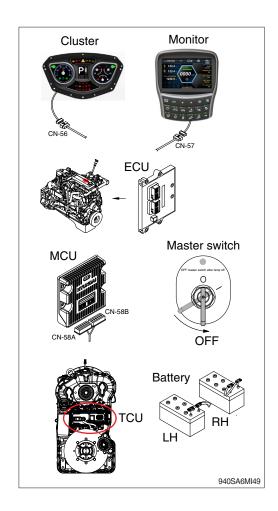

8. AIR CONDITIONER AND HEATER

1) CLEAN AND REPLACE OF INNER AND OUTER FILTER

- * Always stop the engine before servicing.
- (1) Open the air conditioner cover, loosen the wing bolt and remove the inner and outer filter.
- (2) Clean the filter using a pressurized air (below 2 kgf/cm², 28 psi).
- ♠ When using pressurized air, be sure to safety glasses.
- (3) Inspect the filter after cleaning. If it is damaged or badly contaminated, use a new filter.

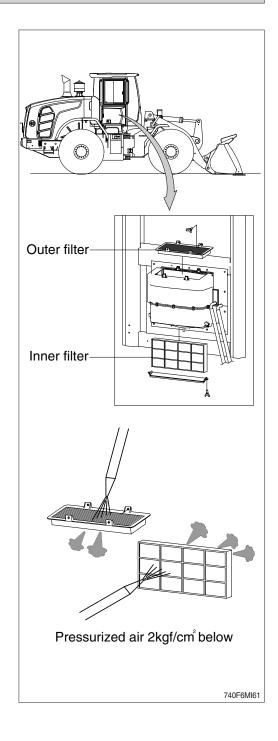

2) PRECAUTIONS FOR USING AIR CONDITIONER

- (1) When using the air conditioner for a long time, open the window once every one hour.
- (2) Be careful not to overcool the cab.
- (3) The cab is properly cooled if the operator feels cool when entering there from outside (about 5°C lower than the outside temperature).
- (4) When cooling, change air occasionally.

3) CHECK DURING SEASON

Contact your local Hyundai dealer annually for AC system inspections.

4) CHECK DURING OFF-SEASON

Operate the air conditioner 2 or 3 times a month (each for a few minutes) to avoid loss of oil film in the compressor.

5) REFRIGERANT

(1) Equipment contains fluorinated greenhouse gas.

Model	Туре	Quantity	GWP: 1430
HL940A	HFC-134a	0.75 kg (1.65 lb)	1.07t CO ₂ eq.

*** GWP**

Global warming potential (GWP) is a measure of how much heat a gas traps in the atmosphere relative to that of carbon dioxide (CO2). GWP is calculated in terms of the 100-year warming potential of 1 kg of a greenhouse gas relative to 1 kg of CO2.

(2) Environmental precautions

The air conditioning system of the machine is filled with HFC-134a refrigerant at the factory. HFC-134a refrigerant is a flourinated greenhouse gas and contributes to global warming. Do not release refrigerant into the environment.

(3) Safety precautions

Work on the air conditioning system must only be performed by a qualified service technician.

Do not attempt to preform work on the air conditioning system.

Wear safety goggles, chemical resistant gloves and appropriate personal protective equipment to protect bare skin when there is a risk of contact with refrigerant.

(4) Action in case of exposure

① Eye contact / Limited skin contact

Rinse with warm water and apply a light bandage. Seek medical attention immediately.

② Extensive skin contact

Rinse with warm water and carefully heat the area with warm water or warm clothing. Seek medical attention immediately.

③ Inhalation

Leave the area and find fresh air. Seek medical attention immediately.

7. TROUBLESHOOTING GUIDE

1. ENGINE

* This guide is not intended to cover every conditions, however many of the more common possibilities are listed.

Trouble	Service	Remark
Engine oil pressure lamp fails to go	· Add the oil to the specified level.	
off immediately after the engine is started.	· Replace the oil filter.	
ota toa	· Check oil leakage from the tube or the joint.	
Steam is emitted from the top part of	· Supply the cooling water and check leakage.	
the radiator (The pressure valve). Engine coolant temperature gauge	· Adjust fan belt tension.	
indicates red range.	· Wash out inside of cooling system.	
	· Clean or repair the radiator fin.	
	· Check the thermostat.	
	· Check the engine coolant temperature gauge.	
	Tighten the radiator cap firmly or replace the gasket of it.	
Engine does not start when the	· Add fuel	
starting motor is turned over.	· Repair where air is inhaled into fuel system.	
	· Check the injection pump or the nozzle.	
	In cold weather, check if fuel warmer system is working normal.	Refer to the pages 4-5.
	· Check the valve clearance.	
Exhaust gas is white or blue.	· Adjust to specified oil quantity.	
	· Replace with specified fuel.	
Exhaust gas occasionally turns	· Clean or replace the air cleaner element.	
black.	· Check the nozzle.	
	· Check engine compression pressure.	
	· Check or replace the turbocharger.	
Combustion noise occasionally	· Check the nozzle.	
changes to breathing sound.	· Check the injection pump.	
Unusual combustion noise or	· Check with specified fuel.	
mechanical noise.	· Check overheating.	
	· Check the muffler.	
	· Adjust valve clearance.	

2. ELECTRICAL SYSTEM

Trouble	Service	Remark
Voltmeter fluctuates largely even with the engine running at a constant speed. Lamp does not glow brightly even when engine runs at high speed. Lamp flickers while engine runs.	Check for loose terminals open-circuit wiring. Adjust belt tension.	
Voltmeter does not fluctuate even with an increase in the engine speed.	Check the alternator. Inspect and repair wiring.	
Starting motor does not turn when starting switch is turned on.	 Inspect and repair the wiring. Charge the battery. Check starting switch. Check battery relay switch. Place the gear selector lever in the neutral. 	
Starting motor turns the engine sluggishly.	Charge the battery. Check the starting motor.	
Starting motor disengages before the engine starts up.	Check and repair the wiring. Charge the battery.	
Engine oil pressure lamp does not light up when engine is stationary (When the starting switch is in ON position).	Check the lamp. Check the oil pressure switch.	
Charge lamp does not light up when the engine is stationary. (When the starting switch is in ON position.)	Check the lamp. Check and repair the wiring.	

3. POWER TRAIN SYSTEM

Trouble	Service	Remark
Engine is running but machine	· Release parking brake.	
will not move.	· Put gear selector lever in position properly.	
	· Add oil to transmission case to the specified level.	
Even at full throttle, machine	· Add oil to transmission case to the specified level.	
moves slowly and lacks power.	· Disassemble transmission strainer and clean.	
Transmission oil overheats.	· Add oil to transmission case to the specified level or drain oil.	
	· Use a suitable gear speed.	
	· Reduce time using torque converter at stall speed. Check engine.	
Abnormal noise is produced.	· Add oil to transmission case to the specified level.	
	· Add oil to axle case to the specified level.	
Brake does not work when pedal	· Raise hydraulic oil pressure to specified level.	
is depressed.	· Add brake oil.	
	· Bleed hydraulic oil from brake system.	
Brake drags or stay when applied.	· Clean breather and bleed air from brake system.	
Brake slips.	· Raise hydraulic oil pressure to the specified level.	
Brake does not work properly.	· Adjust linkage.	
	· Clean brake pad.	
	· Replace spring in hydraulic oil cylinder.	
	· Adjust or replace brake pad.	
Steering wheel is heavy.	· Repair or replace the pump.	
	· Repair, clean and reset the relief valve.	
	 Coat a grease to connections and bearings of steering gear. 	
	· Check the mounting of the steering column.	
Steering wheel turning by itself.	· Replace leaf springs.	
Slow steering.	· Clean spool and sleeve.	
	· Replace leaf springs.	
Impossible to turn the steering	· Check the monitor.	
wheel into neutral position.	· Check and repair the wiring.	

4. HYDRAULIC SYSTEM

Trouble	Service	Remark
Bucket lacks lifting power. Bucket lifting speed is slow.	Check the hydraulic oil level and add if necessary.Replace filter in hydraulic tank.	
Bubbles in oil.	Replace with specified oil.Add oil if needed.	
Oil pressure is too low.	Bleed air from oil line.Add oil and bleed air.	
Cylinder vibrates when operating.	· Add oil.	

1. QUICK COUPLER

- A Always check that the attachment is properly secured to the quick coupler by pressing the front part of the attachment against the ground.
- ▲ Never use an attachment before you have checked its mounting.
- * If you are uncertain if the attachment is securely locked, you must visually check that the lock pins of the quick coupler are in the lock position.
 - (1) Operate the quick coupler switch on the monitor.
 - (2) Switch to the quick coupler function screen and touch the 'Disengage Quick Coupler' button on the screen to release the quick coupler.




- * A warning pop-up message appears on the monitor screen, "Disengaging Quick Coupler" and the warning buzzer rings.
- * The buzzer warning rings until the quick coupler release and lock are complete.
- During release, the red lamp of the quick coupler switch turns ON.



- (3) Loosen the coupling between the hook of the bucket and quick coupler through the bucket dump action.
- (4) Move the machine backward to separate the quick coupler and the bucket.



- (5) Tilt quick coupler forward and align the upper attaching points of the quick coupler with upper attaching points on the bucket.
- (6) Raise the boom until the bucket rests in the quick coupler and tilt the quick coupler rearward until the bucket is level.

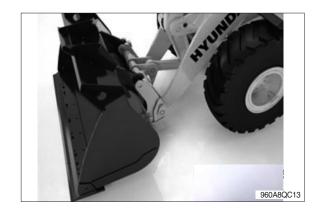

(7) Touch the 'Engage Quick Coupler' button on the monitor screen to lock the quick coupler.




- * A warning pop-up message of "Engaging Quick Coupler" appears on the monitor screen and the warning buzzer rings.
- During locking, the green lamp of the quick coupler switch turns ON.



(8) Check whether the quick coupler is locked and touch the 'Complete' button on the monitor screen.



- * Check for engagement as followings.
- a. Put down pressure on the attachment.
- b. Back up the machine and make sure that there is no movement between the quick coupler and attachment.
- * Check that the indicator is lock position.

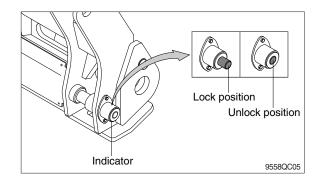

(9) PRECAUTION OF USING QUICK COUPLER

♠ When operating the machine with quick coupler, confirm that the quick coupler switch is lock position.

Operating the machine with quick coupler switch unlock position can cause the bucket to drop off and bring about the accident.

▲ Serious injury or death can result from this accident.



INDEX

A		Loading and unloading	5-6
Air cleaner ·····	6-24	Lubrication ·····	6-39
Air conditioner & heater	3-53	М	
Air conditioner filter	6-47	Machine control unit (MCU) ······	2 61
Axle oil ·····	6-37	Maintenance chart	
В		Maintenance check list ······	
Battery	6-44	Major components	
Before starting engine ·····		Master switch	
Belt tensioner ·····		Monitor ······	
Boom kick out ·····	4-22		0 10
Bucket leveler ·····	4-22	P	
0		Pilot cut off switch ·····	
С		Pilot line filter ·····	6-31
Cab device ·····		R	
Camera ·····		Radiator and oil cooler ······	6-21
Charge air cooler ·····		Radio and USB player ······	
Cigar lighter ·····		Recommended lubricants	
Cluster ·····		Return filter	
Control device ·····		neturi ilitei	0-30
Coolant level ·····	6-17	S	
D		Safety hints	1-1
Drive shaft	6-30	Safety labels ·····	0-4
Drive Statt	0-39	Seat ·····	3-57
E		Specifications	2-2
Engine control module (ECM) ······	3-61	Storage ·····	4-25
Engine oil filter		Switches	3-44
Engine oil level ·····	6-15	Т	
F		Tightening torque ······	6-5
Fan belt ·····	6-22	Tire	
FNR remote control lever ·····		Towing the machine ·····	5-7
Fuel filter		Transmission cold starting	4-6
Fuel prefilter ······		Transmission control unit (TCU) ······	
Fuse box ······		Transmission oil filter	6-35
-	0 00	Transmission oil level ······	6-35
G		Transportation	5-1
Gear selector lever ·····	3-50	Travelling machine	4-10
н		Troubleshooting guide	
Hydraulic oil changing	6-30	W	
Hydraulic oil filling		Warming up operation ······	4-8
Hydraulic oil level ······		Weight	_
	5 25	Working method	
L		Tronaing modified	T 10
I CD	3-12		