



# WARNING

## CALIFORNIA PROPOSITION 65

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go the [www.P65warnings.ca.gov/diesel](http://www.P65warnings.ca.gov/diesel).

91K4-07310-EN

**⚠ Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.**

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

\* For more information go to [www.P65warnings.ca.gov/diesel](http://www.P65warnings.ca.gov/diesel).

# CONTENTS

EC declaration of conformity .....	0-1	9. Operation in the special work sites .....	4-23
Foreword .....	0-2	10. Storage .....	4-25
Emission-related components warranty (USA and CANADA only) .....	0-2-1	11. Exhaust system cleaning .....	4-27
Before servicing this machine .....	0-3	12. Open the engine hood .....	4-28
Table to enter S/No and distribution .....	0-4	13. Attachment manually lowering .....	4-31
EC regulation approved .....	0-5		
Safety labels .....	0-6		
Machine data plate .....	0-16		
Guide (direction, S/No, symbol) .....	0-17		
<b>1. SAFETY HINTS</b>			
1. California proposition 65 .....	1-1	1. Road traveling .....	5-1
2. Safety rules .....	1-2	2. Preparation for transportation .....	5-2
<b>2. SPECIFICATIONS</b>			
1. Major components .....	2-1	3. Loading the machine .....	5-3
2. Specifications .....	2-2	4. Fixing the machine .....	5-4
3. Weight .....	2-6	5. Loading and unloading by crane .....	5-6
4. Specification for major components .....	2-7	6. Towing the machine .....	5-7
<b>3. CONTROL DEVICES</b>			
1. Cab devices .....	3-1		
2. Cluster .....	3-2		
3. Monitors .....	3-13		
4. Switches .....	3-44		
5. Control device .....	3-49		
6. Air conditioner and heater .....	3-53		
7. Others .....	3-56		
<b>4. OPERATION</b>			
1. Suggestion for new machine .....	4-1		
2. Check before starting the engine .....	4-2		
3. Starting and stop the engine .....	4-3		
4. Warming-up operation .....	4-8		
5. Operation of the working device .....	4-9		
6. Traveling of the machine .....	4-10		
7. Efficient working method .....	4-15		
8. Adjustment of the work equipment .....	4-22		
<b>5. TRANSPORTATION</b>			
9. Operation in the special work sites .....	4-23		
10. Storage .....	4-25		
11. Exhaust system cleaning .....	4-27		
12. Open the engine hood .....	4-28		
13. Attachment manually lowering .....	4-31		
<b>6. MAINTENANCE</b>			
1. Instructions .....	6-1		
2. Tightening torque .....	6-5		
3. Spec of fuel, coolant and lubricants .....	6-8		
4. Maintenance check list .....	6-10		
5. Maintenance chart .....	6-13		
6. Service instruction .....	6-15		
7. Electrical system .....	6-50		
8. Air conditioner and heater .....	6-53		
<b>7. TROUBLESHOOTING GUIDE</b>			
1. Engine .....	7-1		
2. Electrical system .....	7-2		
3. Power train system .....	7-3		
4. Hydraulic system .....	7-4		
<b>8. OTHERS</b>			
1. Central grease lubrication system .....	8-1		
2. Quick coupler .....	8-9		
<b>INDEX .....</b>	<b>9-1</b>		