

A

Air cleaner	6-24
Air conditioner & heater	3-53
Air conditioner filter	6-53
Axle oil	6-43

B

Battery	6-50
Before starting engine	4-2
Belt tensioner	6-23
Boom kick out	4-22
Bucket leveler	4-22

C

Cab device	3-1
Camera	3-61
Charge air cooler	6-21
Cigar lighter	3-56
Cluster	3-2
Control device	3-49
Coolant level	6-17

D

DEF/AdBlue® tank	6-27
------------------------	------

E

Engine control module (ECM)	3-61
Engine oil filter	6-15
Engine oil level	6-15
Exhaust system cleaning	4-27

F

Fan belt	6-22
FNR remote control lever	3-47
Fuel filter	6-26
Fuel prefilter	6-25
Fuse box	3-59

G

Gear selector lever	3-50
---------------------------	------

H

Hydraulic oil changing	6-36
Hydraulic oil filling	6-35
Hydraulic oil level	6-35

J

Joystick steering control lever	3-51
---------------------------------------	------

L

LCD	3-12
Loading and unloading	5-6
Lubrication	6-48

M

Machine control unit (MCU)	3-60
Maintenance chart	6-13
Maintenance check list	6-10
Major components	2-1
Master switch	3-58
Monitor	3-13

P

Pilot cut off switch	3-45
Pilot line filter	6-37

R

Radiator and oil cooler	6-21
Radio and USB player	3-62
Recommended lubricants	6-9
Return filter	6-36

S

Safety hints	1-1
Safety labels	0-6
Seat	3-58
Specifications	2-2
Storage	4-25
Switches	3-44

T

Tightening torque	6-5
Tire	6-38
Towing the machine	5-7
Transmission cold starting	4-6
Transmission control unit (TCU)	3-65
Transmission oil filter	6-41
Transmission oil level	6-41
Transportation	5-1
Travelling machine	4-10
Troubleshooting guide	7-1

W

Warming up operation	4-8
Weight	2-6
Working method	4-15