WARNING

CALIFORNIA PROPOSITION 65

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- · Always start and operate the engine in a well-ventilated area.
- $\cdot\,$ If in an enclosed area, vent the exhaust to the outside.
- $\cdot\,$ Do not modify or tamper with the exhaust system.
- $\cdot\,$ Do not idle the engine except as necessary.

For more information go the www.P65warnings.ca.gov/diesel.

91K4-07310-EN

- ▲ Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
 - \cdot Always start and operate the engine in a well-ventilated area.
 - \cdot If in an enclosed area, vent the exhaust to the outside.
 - \cdot Do not modify or tamper with the exhaust system.
 - \cdot Do not idle the engine except as necessary.

* For more informat ion go to www.P65warnings.ca.gov/diesel.

| EC declaration of conformity | 0-1 |
|--|-------|
| Foreword ····· | 0-2 |
| Emission-related components warranty (USA and CANADA only) | 0-2-1 |
| Before servicing this machine | 0-3 |
| Table to enter S/No and distribution | 0-4 |
| EC regulation approved | 0-5 |
| Safety labels | 0-6 |
| Machine data plate | 0-17 |
| Guide (direction, S/No, symbol) | 0-18 |

1. SAFETY HINTS

| 1. California proposition 65 | 1-1 |
|------------------------------|-----|
| 2. Safety rules | 1-2 |

2. SPECIFICATIONS

| 1. Major components | 2 - 1 |
|---------------------------------------|------------------|
| 2. Specifications | 2-2 |
| 3. Weight ····· | 2-6 |
| 4. Specification for major components | 2 - 7 |

3. CONTROL DEVICES

| 1. Cab devices ····· | 3-1 |
|-------------------------------|---------------|
| 2. Cluster ····· | 3-2 |
| 3. Monitors | 3-13 |
| 4. Switches ····· | 3 - 44 |
| 5. Control device | 3-49 |
| 6. Air conditioner and heater | 3-53 |
| 7. Others ····· | 3-56 |
| | |

4. OPERATION

| 1. Suggestion for new machine | 4-1 |
|-------------------------------------|------|
| 2. Check before starting the engine | 4-2 |
| 3. Starting and stop the engine | 4-3 |
| 4. Warming-up operation | 4-8 |
| 5. Operation of the working device | 4-9 |
| 6. Traveling of the machine | 4-10 |
| 7. Efficient working method | 4-15 |
| 8. Adjustment of the work equipment | 4-22 |

| ⊢1 | 9. Operation in the special work sites | 4-23 |
|-----------|--|------|
| -2 | 10. Storage | 4-25 |
| | 11. Exhaust system cleaning | 4-27 |
| 2-1 | 12. Open the engine hood | 4-28 |
| -3 | 13. Attachment manually lowering | 4-31 |

5. TRANSPORTATION

| 1. Road traveling | 5-1 |
|-----------------------------------|--------------|
| 2. Preparation for transportation | 5-2 |
| 3. Loading the machine | 5-3 |
| 4. Fixing the machine | 5 - 4 |
| 5. Loading and unloading by crane | 5-6 |
| 6. Towing the machine | 5-7 |

6. MAINTENANCE

| 1. Instructions | 6-1 |
|---|--------------|
| 2. Tightening torque | 6 - 5 |
| 3. Spec of fuel, coolant and lubricants | 6-8 |
| 4. Maintenance check list | 6-10 |
| 5. Maintenance chart ····· | 6-13 |
| 6. Service instruction | 6-15 |
| 7. Electrical system ····· | 6-50 |
| 8. Air conditioner and heater | 6-53 |

7. TROUBLESHOOTING GUIDE

| 1. Engine | 7-1 |
|-----------------------|--------------|
| 2. Electrical system | 7-2 |
| 3. Power train system | 7-3 |
| 4. Hydraulic system | 7 - 4 |

8. OTHERS

| 1. Central grease lubrication system | 8-1 |
|--------------------------------------|-----|
| 2. Quick coupler | 8-9 |
| INDEX | 9-1 |