



WARNING

CALIFORNIA PROPOSITION 65

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to www.P65warnings.ca.gov/diesel.

91K4-07310-EN

⚠ Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

※ For more information go to www.P65warnings.ca.gov/diesel.

CONTENTS

EC declaration of conformity	0-1	9. Operation in the special work sites	4-23
Foreword	0-2	10. Storage	4-25
Emission-related components warranty (USA and CANADA only)	0-2-1	11. Exhaust system cleaning	4-27
Before servicing this machine	0-3	12. Open the engine hood	4-28
Table to enter S/No and distribution	0-4	13. Attachment manually lowering	4-31
EC regulation approved	0-5		
Safety labels	0-6	5. TRANSPORTATION	
Machine data plate	0-17	1. Road traveling	5-1
Guide (direction, S/No, symbol)	0-18	2. Preparation for transportation	5-2
		3. Loading the machine	5-3
1. SAFETY HINTS		4. Fixing the machine	5-4
1. California proposition 65	1-1	5. Loading and unloading by crane	5-6
2. Safety rules	1-2	6. Towing the machine	5-7
		6. MAINTENANCE	
2. SPECIFICATIONS		1. Instructions	6-1
1. Major components	2-1	2. Tightening torque	6-5
2. Specifications	2-2	3. Spec of fuel, coolant and lubricants	6-8
3. Weight	2-6	4. Maintenance check list	6-10
4. Specification for major components	2-7	5. Maintenance chart	6-13
		6. Service instruction	6-15
3. CONTROL DEVICES		7. Electrical system	6-53
1. Cab devices	3-1	8. Air conditioner and heater	6-56
2. Cluster	3-2		
3. Monitors	3-13	7. TROUBLESHOOTING GUIDE	
4. Switches	3-44	1. Engine	7-1
5. Control device	3-49	2. Electrical system	7-2
6. Air conditioner and heater	3-53	3. Power train system	7-3
7. Others	3-56	4. Hydraulic system	7-4
		8. OTHERS	
4. OPERATION		1. Central grease lubrication system	8-1
1. Suggestion for new machine	4-1	2. Quick coupler	8-9
2. Check before starting the engine	4-2		
3. Starting and stop the engine	4-3	INDEX	9-1
4. Warming-up operation	4-8		
5. Operation of the working device	4-9		
6. Traveling of the machine	4-10		
7. Efficient working method	4-15		
8. Adjustment of the work equipment	4-22		