

A

Air cleaner	6-27
Air conditioner & heater	3-51
Air conditioner filter	6-52
Axle oil	6-42

B

Battery	6-49
Before starting engine	4-2
Belt tensioner	6-26
Boom kick out	4-22
Bucket leveler	4-22

C

Cab device	3-1
Camera	3-59
Charge air cooler	6-24
Cigar lighter	3-54
Cluster	3-2
Control device	3-47
Coolant level	6-17

D

DEF/AdBlue® tank	6-32
------------------------	------

E

Engine control module (ECM)	3-59
Engine oil filter	6-15
Engine oil level	6-15

F

Fan belt	6-24
FNR remote control lever	3-45
Fuel filter	6-29
Fuel return filter	6-28
Fuse box	3-57

G

Gear selector lever	3-48
---------------------------	------

H

Hydraulic oil changing	6-35
Hydraulic oil filling	6-34
Hydraulic oil level	6-34

J

Joystick steering control lever	3-49
---------------------------------------	------

L

LCD	3-10
Loading and unloading	5-6
Lubrication	6-44

M

Machine control unit (MCU)	3-58
Maintenance chart	6-13
Maintenance check list	6-10
Major components	2-1
Master switch	3-56
Monitor	3-13

P

Pilot cut off switch	3-43
Pilot line filter	6-36

R

Radiator and oil cooler	6-23
Radio and USB player	3-60
Recommended lubricants	6-9
Return filter	6-35

S

Safety hints	1-1
Safety labels	0-6
Seat	3-55
Specifications	2-2
Storage	4-25
Switches	3-42

T

Tightening torque	6-5
Tire	6-37
Towing the machine	5-7
Transmission cold starting	4-6
Transmission control unit (TCU)	3-59
Transmission oil filter	6-40
Transmission oil level	6-40
Transportation	5-1
Travelling machine	4-10
Troubleshooting guide	7-1

W

Warming up operation	4-8
Weight	2-4
Working method	4-15