

A

Air cleaner	6-27
Air conditioner & heater	3-53
Air conditioner filter	6-50
Axle oil	6-40

B

Battery	6-47
Before starting engine	4-2
Belt tensioner	6-26
Boom kick out	4-22
Bucket leveler	4-22

C

Cab device	3-1
Camera	3-61
Camera monitor	3-77
Charge air cooler	6-24
Cigar lighter	3-56
Cluster	3-2
Control device	3-49
Coolant level	6-17

E

Eco gauge	3-14
Emergency fire hole	4-28
Engine control module (ECM)	3-61
Engine oil filter	6-15
Engine oil level	6-15

F

Fan belt	6-24
FNR remote control lever	3-47
Fuel filter	6-29
Fuel prefilter	6-28
Fuse box	3-60

G

Gear selector lever	3-50
---------------------------	------

H

Hydraulic oil changing	6-33
Hydraulic oil filling	6-32
Hydraulic oil level	6-32

J

Joystick steering control lever	3-51
---------------------------------------	------

L

LCD	3-10
Loading and unloading	5-6
Lubrication	6-42

M

Machine control unit (MCU)	3-61
Maintenance chart	6-13
Maintenance check list	6-10
Major components	2-1
Master switch	3-59
Monitor	3-13

P

Pilot cut off switch	3-45
Pilot line filter	6-37

R

Radiator and oil cooler	6-23
Radio and USB player	3-62
Recommended lubricants	6-9
Return filter	6-34

S

Safety hints	1-1
Safety labels	0-4
Seat	3-57
Specifications	2-2
Storage	4-25
Switches	3-44

T

Tightening torque	6-5
Tire	6-35
Towing the machine	5-7
Transmission cold starting	4-6
Transmission control unit (TCU)	3-61
Transmission oil filter	6-38
Transmission oil level	6-38
Transportation	5-1
Travelling machine	4-10
Troubleshooting guide	7-1

W

Warming up operation	4-8
Weight	2-4
Working method	4-15