1. ENGINE TROUBLESHOOTING

1) When engine is difficult to start.

| Trouble | Service | Remark |
|---|---|--------|
| Fuel is thick and doesn't flow. | Check the fuel tank and fuel filter. Remove water, dirt and other impurities. As all fuel will be filtered by the filter, if there should be water or other foreign matters on the filter, replace the filter. | |
| Air or water mixed in fuel system. | If air is in the fuel filter or injection lines, the fuel pump will not work properly. To obtain proper fuel injection pressure, unscrew the fuel cap nut and inspect the system. Loosen air vent screw over fuel filter and fuel injection pump to eliminate all the air in the fuel system. | |
| Thick carbon deposits on orifice of injection nozzle. | This is caused when water or dirt is mixed in the fuel. Clean the injection nozzle and check the fuel filler hole for damage. Check to see if nozzle is working properly or not, if not, install a new nozzle. | |
| Valve clearance is wrong. | . Contact your local dealer. | |
| Engine oil become thick in cold weather and engine cranks slow. | . Change grade of oil according to the weather (temperature). | |
| Start motor does not rotate when key switch is turned. | . If the switch or start motor is faulty, have it repaired in a workshop. . If any terminal is loose or corroded, clean or fix it firm. | |

2) When power is insufficient.

| Trouble | Service | Remark |
|-----------------------------------|---|--------|
| Valve out of adjustment. | . Contact your local dealer. | |
| Air cleaner is dirty. | . Clean or replace the element at every 100 of operation. | |
| Fuel injection pressure is wrong. | . Contact your local dealer. | |

3) When color of exhaust is specially bad.

| Trouble | Service | Remark |
|------------------------------------|---|--------|
| Fuel is of extremely poor quality. | . Select good quality fuel. Over -10°C (NO. 2 diesel) / Below -10°C (NO. 1 diesel) | |
| Nozzle is faulty. | . If necessary, replace with new nozzle. | |

2. MACHINE TROUBLESHOOTING

1) When the machine does not move while engine is running.

| Trouble | Service | Remark |
|---------------------------|------------------------------|--------|
| Parking brake is applied. | . Release the parking brake. | |

2) Hydraulic system is faulty.

| Trouble | Service | Remark |
|---------|---|--------|
| 1 | . The pipe clamp is loose. Re-tighten it. | |
| hose | . The pipe is cracked. Have it repaired in a workshop.it. | |

3) Electric system is faulty.

| Trouble | Service | Remark |
|--|--|--------|
| Headlamps cannot be turned on or are dim. | The fuse is blown. Check the wiring and replace the fuse. The bulb is blown. Replace it. The ground and terminal wirings are poorly contacted. Check and clean them. The battery electrolyte level is low. Charge the battery. | |
| Horn does not sound. | . The horn switch is faulty. Replace it. . The wiring is faulty. Repair it. . The horn is damaged. Repair or replace it. | |
| Turn signal lamps do not blink. | . The horn switch is faulty. Replace it. . The blinking device is faulty. Repair or replace it. .The ground and terminal wirings are poorly contacted. Check and clean them. | |
| Battery cannot be charged. | . Check the battery and alternator. | |
| Work lamps do not come on | . The bulb is blown. Replace it. . The ground and terminal wirings are poorly contacted. Check and clean them. | |