

A

Accessories	4-35
Adjusting fan belt tension	6-16
Air cleaner filter	6-20
Air conditioner maintenance	4-38
Anti-freeze	6-22
Aux switch	4-6

B

Battery	6-17
Beacon lamp switch (opt)	4-5
Bleeding fuel system	6-22
Body fuse	6-25
Boom lock	4-42
Bucket attachment (manual type)	4-41

C

Cabin	3-1
California proposition 65	4-32
Changing engine oil and filter	6-6
Charging	6-18
Checking and adding fuel	6-4
Checking and replacing chain case oil	6-10
Checking engine oil level	6-5
Cleaning the radiator	6-10
Controls	4-10

D

Daily check item	6-1
Digging	5-13
Door	4-33
DPF regeneration process indicator	4-21
DPF regeneration switch	4-8
Driving	5-6
Dumping	5-15

E

Emergency exit	4-40
Engine acceleration dial	4-3
Engine serial number	2-1
Enter switch	4-20
Exterior device	4-32
External dimensions	3-1

F

Filters	2-3
Flattening	5-14
Flushing and changing coolant	6-20
Fuel filter	6-13
Fuel gauge	4-18

G

Gneral precautions	1-1
Gneral specifications	3-2

H

Hazard flasher	4-20
Heater and A/C	4-36
High flow switch	4-6
How to operate the auxiliary power	4-15
Hydraulic lock switch	4-7
Hydraulic oil temperature gauge	4-18

I

Initial operation	5-1
Installing and removing the bucket	4-42
Instrument paner	4-17
Instrument panel features	4-17
Interior devices	4-32

J

Jump starting	6-5
---------------------	-----

K

Key switch	4-3
------------------	-----

L

Lever button operation	4-12
Lever operation	4-11
Loading and unloading the machine	5-10
Lowering the canopy and cabin	4-44
Lubricants	6-3
Lubricating grease nipple	6-11

M

Main and sub menu	4-23
Main light switch	4-4
Maintenance	6-1
Maintenance code	6-4
Maintenance schedule chart	6-2
MCU (machine control unit)	4-40

O

Oils and fluids	2-2
Opening the rear door	6-4
Operating the engine	5-2
Other component	2-3

P

Parking and reset switch	4-4
Power socket and USB socket	4-35
Pre-operation check	5-1
Production serial number	2-1

Q

Quick attachment switch (if equipped)	4-7
---	-----

R

Radio and USB player (opt)	4-35
Raising the canopy and cabin	4-44
Refrigerant inspection	6-30
Removing the bucket (manual type)	4-41
Removing water from filter	6-13
Replacing fuel filter	6-13
Replacing air cleaner filter	6-20
Replacing hydraulic oil and filter	6-9
Right control lever (boom and bucket)	4-10

S

Safety bar warning lamp	4-22
Safety precautions	1-1
Seat bar	4-39
Seat belt	4-40
Self-levelling switch (if installed)	4-4
Slow blow fuse	6-27
Starting the engine	5-2
Stopping engine	5-4
Switches	4-2

T

Tachometer/Hour meter	4-18
Temperature control dial	4-37
Throttle pedal	4-16
Tire inflation pressure	4-45
Tires	4-45
Towing	5-10
Troubleshooting	7-1
Turn signal lamp switch	4-6

U

Usage and disposal	7-2
--------------------------	-----

V

Vehicle identification number	2-1
-------------------------------------	-----

W

Warming up	5-4
Wiper	4-33
Work lamp	4-33