

# CONTENTS

|   |      |                                  |            |
|---|------|----------------------------------|------------|
| Foreword .....  | 0-1  | <b>6. MACHINE INSPECTION</b>     |            |
| Emission-related components warranty<br>(USA and CANADA only) ..... | 0-2  | 1. Maintenance check list .....  | 6-1        |
| Before servicing this machine .....                                 | 0-3  | 2. Lubricants .....              | 6-3        |
| Symbols .....   | 0-4  | 3. Maintenance code .....        | 6-4        |
| Table to enter S/No and distribution .....                          | 0-5  | <b>7. STORAGE AND DISPOSAL</b>   |            |
| Safety decal .....  | 0-6  | 1. Storage of machine .....      | 7-1        |
|   |      | 2. Usage and disposal .....      | 7-2        |
| <b>1. SAFETY HINTS</b>  |      | <b>8. TROUBLESHOOTING</b>        |            |
| 1. Safety precautions .....   | 1-1  | 1. Engine troubleshooting .....  | 8-1        |
| 2. Precautions of nameplate management ...                          | 1-24 | 2. Machine troubleshooting ..... | 8-2        |
| 3. California proposition.....                                      | 1-24 |                                  |            |
| <b>2. PRECAUTIONS</b>   |      | <b>INDEX .....</b>               | <b>9-1</b> |
| 1. Vehicle identification number .....                              | 2-1  |                                  |            |
| 2. Essential replacement parts .....                                | 2-2  |                                  |            |
| <b>3. SPECIFICATIONS</b>  |      |                                  |            |
| 1. Dimensions .....   | 3-1  |                                  |            |
| 2. General specifications .....                                     | 3-2  |                                  |            |
| 3. List of option .....   | 3-3  |                                  |            |
| <b>4. CONTROL DEVICES</b>   |      |                                  |            |
| 1. Locations .....  | 4-1  |                                  |            |
| 2. Switches .....   | 4-2  |                                  |            |
| 3. Controls .....   | 4-10 |                                  |            |
| 4. Instrument panel .....   | 4-17 |                                  |            |
| 5. Cabine .....   | 4-32 |                                  |            |
| 6. Other systems .....  | 4-41 |                                  |            |
| <b>5. OPERATION MODE</b>  |      |                                  |            |
| 1. Pre-operation check .....  | 5-1  |                                  |            |
| 2. Operating the engine .....                                       | 5-2  |                                  |            |
| 3. Driving and operation .....                                      | 5-6  |                                  |            |
| 4. Operation .....  | 5-12 |                                  |            |

## FOREWORD

This manual contains a number of instructions and safety recommendations regarding driving, handling, lubrication, maintenance, inspection and adjustment of the machine.

The manual is to promote safety maintenance and enhance machine performance.

Keep this manual handy and have all personnel read it periodically.

If you sell the machine, be sure to give this manual to the new owners.

This machine complies with EC directive "2006/42/EC".

1. **Read and understand** this manual before operating the machine.

This operator's manual may contain attachments and optional equipment that are not available in your area. Please consult your local HD Hyundai Construction Equipment distributor for those items you require.

Improper operation and maintenance of this machine can be hazardous and could result in serious injury or death.

Some actions involved in operation and maintenance of the machine can cause a serious accident, if they are not done in a manner described in this manual.

The procedures and precautions given in this manual apply only to intended uses of the machine. If you use your machine for any unintended uses that are not specifically prohibited, you must be sure that it is safe for you and others. In no event should you or others engage in prohibited uses of actions as described in this manual.

Some illustrations in this manual show details or attachments that can be different from your machine. Covers and guards might have been removed for illustrative purposes.

2. **Inspect** the jobsite and **follow** the safety recommendations in the **safety hints** section before operating the machine.

3. Use **genuine HD Hyundai Construction Equipment spare parts** for the replacement of parts.

We expressly point out that HD Hyundai Construction Equipment will not accept any responsibility for defects resulting from non-genuine parts or non workmanlike repair.

In such cases HD Hyundai Construction Equipment cannot assume liability for any damage.

Continuing improvements in the design of this machine can lead to changes in detail which may not be reflected in this manual. Consult HD Hyundai Construction Equipment or your HD Hyundai Construction Equipment distributor for the latest available information for your machine or for questions regarding information in this manual.

## **EMISSION-RELATED COMPONENTS WARRANTY (USA AND CANADA ONLY)**

HD Hyundai Construction Equipment shall have obligation under the EPA (Environmental Protection Agency) regulation of warranty about Emission-related components. This warranty shall exist for 3,000 hours or five years, whichever occurs first.

Naturally, this warranty does not cover to damage arising from accident, misuse or negligence, use of non-HD Hyundai Construction Equipment parts, or from alterations not authorized by HD Hyundai Construction Equipment.

**※ Emission-related components according to the EPA regulation.**

1. Air-induction system.
2. Fuel system.
3. Ignition system.
4. Exhaust gas recirculation systems.
5. After treatment devices.
6. Crankcase ventilation valves.
7. Sensors.
8. Electronic control units.

## **BEFORE SERVICING THIS MACHINE**

It is the responsibility of the owner and all service and maintenance personnel to avoid accidents and serious injury by keeping this machine properly maintained.

It also is the responsibility of the owner and all service and maintenance personnel to avoid accidents and serious injury while servicing the machine.

No one should service or attempt to repair this machine without proper training and supervision.

All service and maintenance personnel should be thoroughly familiar with the procedures and precautions contained in this manual.

All personnel also must be aware of any federal, state, provincial or local laws or regulations covering the use and service of construction equipment.

The procedures in this manual do not supersede any requirements imposed by federal, state, provincial or local laws.

HD Hyundai Construction Equipment can not anticipate every possible circumstance or environment in which this machine may be used and serviced.

All personnel must remain alert to potential hazards.

Work within your level of training and skill.

Ask your supervisor if you are uncertain about a particular task. Do not try to do too much too fast.

Use your common sense.

|  |
|--|
| <b>TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR</b> |
|--|

|   |  |
|---|--|
| Machine Serial No.                        |  |
| Engine Serial No.                         |  |
| Manufacturing year                        |  |
| Manufacturer<br>Address                   | HD Hyundai Construction Equipment co., Ltd.<br>477 Bundangsuseo-ro, Bundang-gu,<br>Seongnam-si, Gyeonggi-do 13553, Korea |
| Distributor for North Americas<br>Address | HD Hyundai Construction Equipment Americas, Inc<br>6100 Atlantic Boulevard Norcross<br>GA 30071<br>U.S.A                 |
| Distributor for Europe<br>Address         | HD Hyundai Construction Equipment Europe N. V.<br>Hyundailaan 4<br>3980 Tessenderlo<br>Belgium                           |
| Dealer<br>Address                         |  |

## SYMBOLS

 
 
▲ Important safety hint.

△ It indicates matters which can cause the great loss on the machine or the surroundings.

※ It indicates the useful information for operator.

## SAFETY DECALS

### 1) DECAL MOUNTING LOCATION

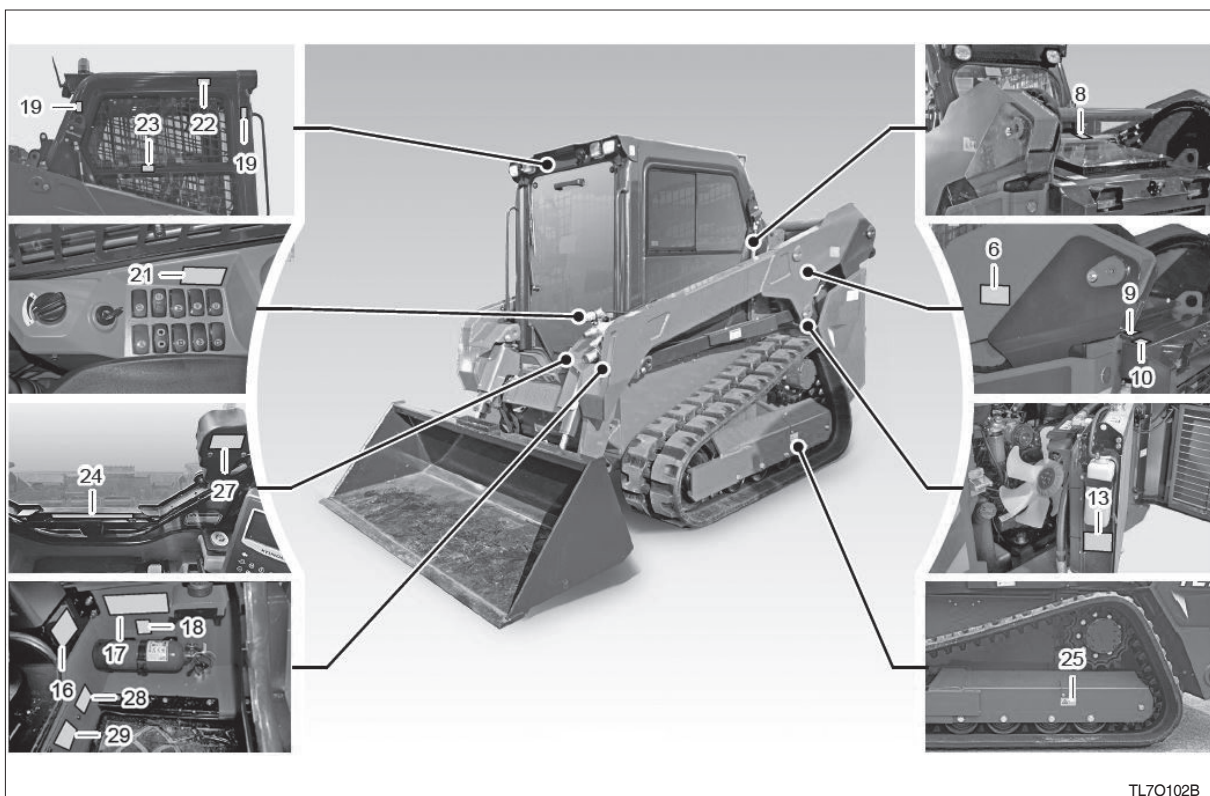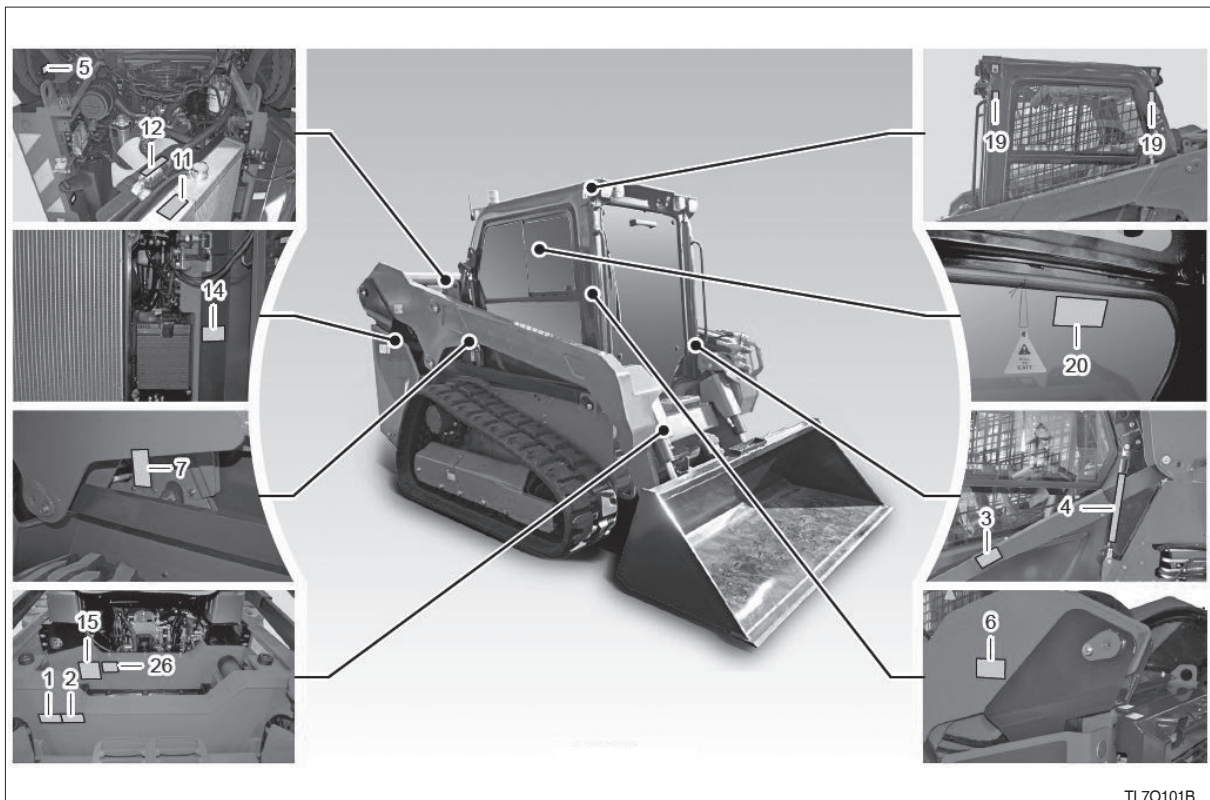


## 2) DESCRIPTION


(1)



 
(2)

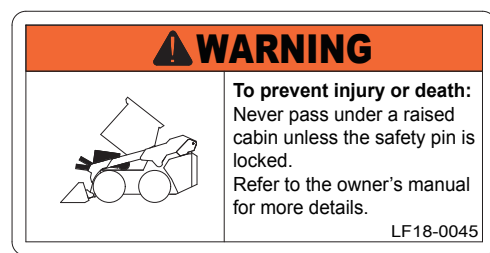

 (3)

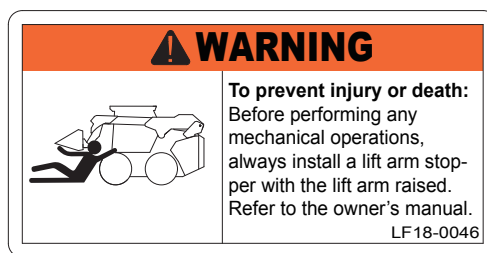

 
(4)




(5)



 
(6)

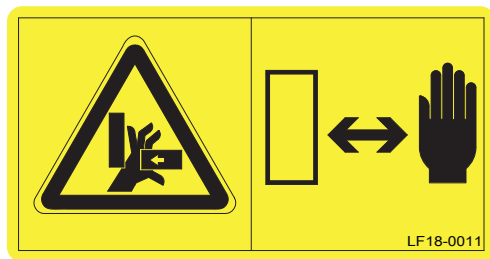

 
(7)

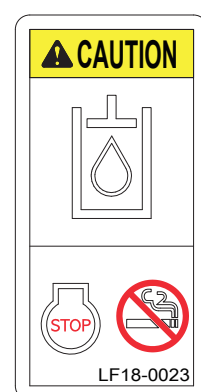

 (8)

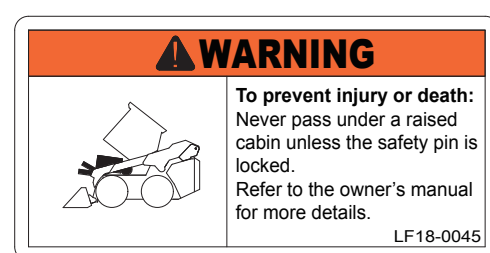


 (9)

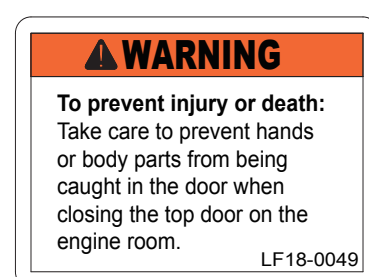



 (10)

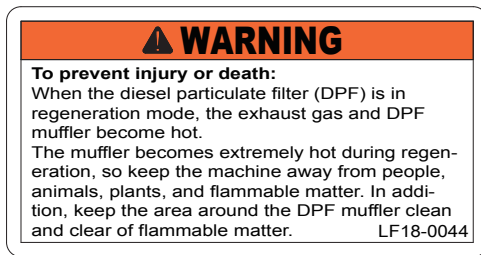

(11)



 
(12)



(13)




(14)

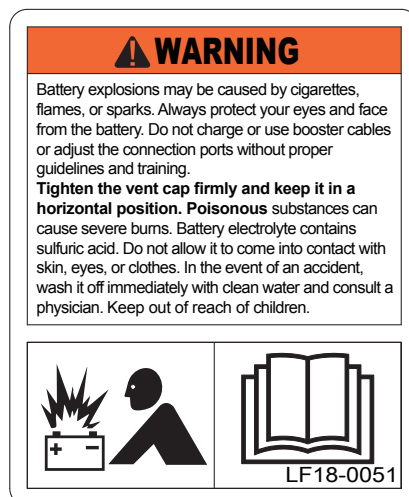


(15)



 (16)

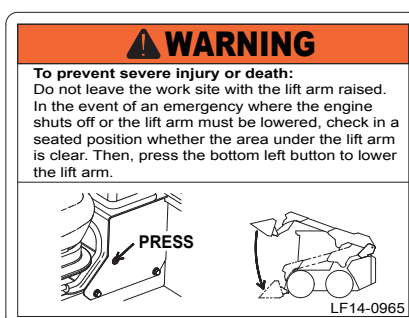

 
(17)

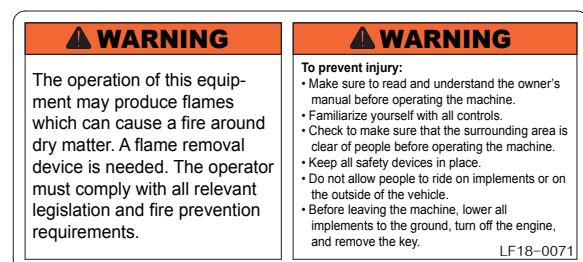


(18)



 
(19)

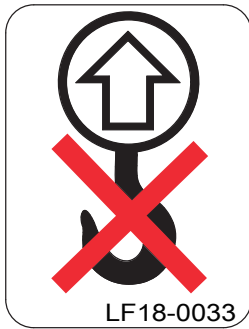

 (20)

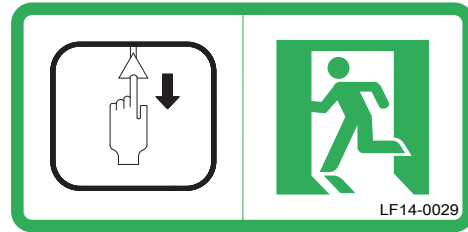

 (21)

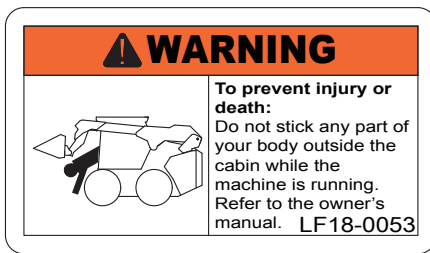


(22)




(23)



 
(26)

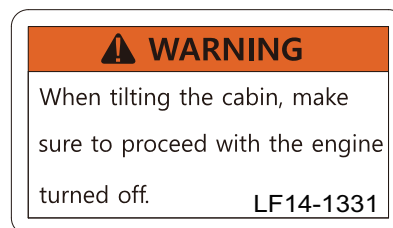

 
(24)



 (25)

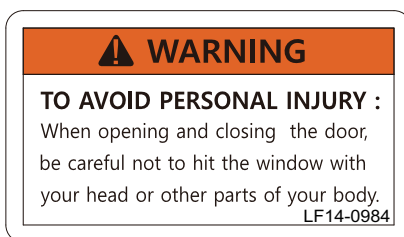

 (28)

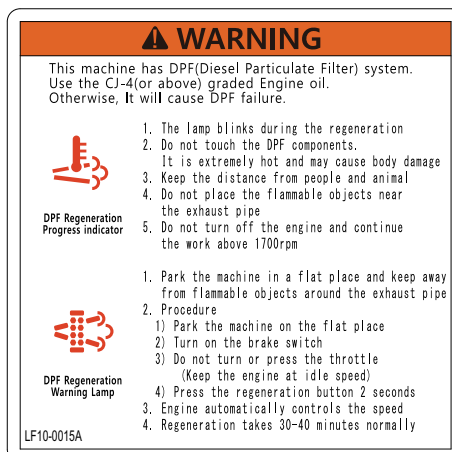

(27)

