

A

AAVM	3-35
Accelerator pedal	3-50
After engine start	4-5
Air breather element	6-36
Air cleaner filter	6-26
Air conditioner & heater	3-36
Air conditioner filter	6-51
Attachment lowering	4-27
Axle gear oil	6-41

B

Battery	6-48
Before starting engine	4-2
Bluetooth	3-61
Boom lowering	4-27
Brake pedal	3-50
Bucket clearance adjustment	6-46
Bucket replacement	6-44
Bucket selection guide	2-14
Bucket tooth replacement	6-45

C

Cab air filter	6-51
Cab device	3-1
Changing machine control pattern	4-30
Charge air cooler	6-23
Cigar lighter	3-52
Cluster	3-2
Coolant	6-20
Cooling fan	6-24
Crankcase breather filter	6-29

D

DEF/AdBlue® supply module filter	6-32
DEF/AdBlue® tank	6-31
Dimension and weight	5-3
Drain filter	6-36
Drive shaft lubricate	6-38

E

Emergency engine speed control connector ...	3-79
Engine ECM	4-9
Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3

Engine starting by booster	6-49
Engine stop	4-6
ESL	3-28

F

Fan belt	6-24
Fan belt tensioner	6-25
Fuel filter	6-28
Fuel leakage	6-31
Fuel system bleeding	6-28
Fuel tank	6-27
Fuel warmer	3-14
Fuse & relay box	3-78

G

Gauge	3-3
-------------	-----

H

Haptic controller	3-67
HEST	3-11
Hydraulic breaker	8-1
Hydraulic oil changing	6-34-1
Hydraulic oil filling	6-34
Hydraulic oil level	6-34

L

LCD	3-2
Levers & pedals	3-48
Lifting capacities	2-7
Lubricant specification	2-20

M

Maintenance check list	6-11
Major components	2-1
MCU (Machine Control Unit)	3-78
Mode selection system	4-7
Monitor panel	3-2
Mounting and dismounting	1-12
Multifunction switch	3-45
Multimodal dial	3-68

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
Operating pattern	4-30

P

Pedals	3-48
Periodical replacement parts	6-5
Pilot lamps	3-13
Pilot line filter	6-36
Pin & bushing adjustment	6-47
Prefilter	6-27

Q

Quick clamp	8-6
-------------------	-----

R

Radiator flushing	6-20
Radio & USB player	3-53
RCV lever lubricate	6-38
Recommended oils	2-20, 6-10
Relieving pressure	6-3
Return filter	6-35
RCV lever operation pattern	4-30

S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
SCR cleaning	4-32
Seat	3-70
Seat belt	3-77
Select switch (parking / working / traveling)	3-47
Service meter	3-79
Service socket	3-79
Smart key tag	3-40
Speciation for major component	2-16
Specifications	2-2
Start switch	3-40
Storage	4-28
Suction strainer	6-35
Surge tank	6-20
Swing bearing grease	6-37
Swing gear & pinion grease	6-38
Swing lock pin	3-50
Swing reduction gear oil	6-37
Switch panel	3-40
Switches	3-16, 40

T

Tires air pressure	6-40
Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-16
Transportation	5-2
Transmission oil	6-43
Travelling machine	4-13
Troubleshooting guide	7-1

U

USB port	3-68
----------------	------

W

Warming up operation	4-5
Warning lamps	3-6
Weight	2-6
Welding repair	6-50
Windshield	3-80
Working device operation	4-12
Working method	4-19
Working range	2-4