



WARNING

CALIFORNIA PROPOSITION 65

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to www.P65warnings.ca.gov/diesel.

91K4-07310-EN

⚠ Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

※ For more information go to www.P65warnings.ca.gov/diesel.

CONTENTS

Foreword	0-1
Emission-related components warranty (USA and CANADA only)	0-1-1
Before servicing this machine	0-2
EC regulation approved	0-3
Table to enter S/No and distribution	0-4
Safety labels	0-5
Machine data plate	0-22
Guide (direction, S/No, symbol)	0-23

SAFETY HINTS

1. Before operating the machine	1-1
2. During operating the machine	1-16
3. During maintenance	1-23
4. Parking	1-26

SPECIFICATIONS

1. Major components	2-1
2. Specifications	2-2
3. Working range	2-4
4. Weight	2-6
5. Lifting capacities	2-7
6. Bucket selection guide	2-14
7. Specification for major components	2-16
8. Recommended oils	2-20

CONTROL DEVICES

1. Cab devices	3-1
2. Cluster	3-2
3. Switches	3-40
4. Levers and pedals	3-48
5. Others	3-52

OPERATION

1. Suggestion for new machine	4-1
2. Check before starting the engine	4-2
3. Starting and stop the engine	4-3
4. Mode selection system	4-7
5. Operation of the working device	4-12
6. Traveling of the machine	4-13

7. Efficient working method	4-19
8. Operation in the special work sites	4-24
9. Normal operation of excavator	4-26
10. Attachment lowering	4-27
11. Storage	4-28
12. RCV lever operating pattern	4-30
13. SCR system cleaning	4-32

TRANSPORTATION

1. Road traveling	5-1
2. Preparation for transportation	5-2
3. Dimension and weight	5-3
4. Loading the machine	5-5
5. Fixing the machine	5-7
6. Loading and unloading by crane	5-8

MAINTENANCE

1. Instruction	6-1
2. Tightening torque	6-6
3. Fuel, coolant and lubricants	6-9
4. Maintenance check list	6-11
5. Maintenance chart	6-16
6. Service instruction	6-18
7. Electrical system	6-48
8. Air conditioner and heater	6-51

TROUBLESHOOTING GUIDE

1. Engine	7-1
2. Electrical system	7-2
3. Others	7-3

HYDRAULIC BREAKER AND QUICK CLAMP

1. Selecting hydraulic breaker	8-1
2. Circuit configuration	8-2
3. Maintenance	8-3
4. Precaution while operating the breaker	8-4
5. Quick clamp	8-6

INDEX	9-1
-------------	-----

FOREWORD

This manual contains a number of instructions and safety recommendations regarding driving, handling, lubrication, maintenance, inspection and adjustment of the excavator.

The manual is to promote safety maintenance and enhance machine performance.

Keep this manual handy and have all personnel read it periodically.

If you sell the machine, be sure to give this manual to the new owners.

This machine complies with EC directive "2006/42/EC".

1. **Read** and **understand** this manual before operating the machine.

This operator's manual may contain attachments and optional equipment that are not available in your area. Please consult your local HD Hyundai Construction Equipment distributor for those items you require.

Improper operation and maintenance of this machine can be hazardous and could result in serious injury or death.

Some actions involved in operation and maintenance of the machine can cause a serious accident, if they are not done in a manner described in this manual.

The procedures and precautions given in this manual apply only to intended uses of the machine. If you use your machine for any unintended uses that are not specifically prohibited, you must be sure that it is safe for you and others. In no event should you or others engage in prohibited uses of actions as described in this manual.

Some illustrations in this manual show details or attachments that can be different from your machine. Covers and guards might have been removed for illustrative purposes.

2. **Inspect** the jobsite and **follow** the safety recommendations in the **safety hints** section before operating the machine.

3. Use **genuine HD Hyundai Construction Equipment spare parts** for the replacement of parts.

We expressly point out that HD Hyundai Construction Equipment will not accept any responsibility for defects resulting from non-genuine parts or non workmanlike repair.

In such cases HD Hyundai Construction Equipment cannot assume liability for any damage.

Continuing improvements in the design of this machine can lead to changes in detail which may not be reflected in this manual. Consult HD Hyundai Construction Equipment or your HD Hyundai Construction Equipment distributor for the latest available information for your machine or for questions regarding information in this manual.

EMISSION-RELATED COMPONENTS WARRANTY (USA AND CANADA ONLY)

HD Hyundai Construction Equipment shall have obligation under the EPA (Environmental Protection Agency) regulation of warranty about Emission-related components. This warranty shall exist for 3,000 hours or five years, whichever occurs first.

Naturally, this warranty does not cover to damage arising from accident, misuse or negligence, use of non-HD Hyundai Construction Equipment parts, or from alterations not authorized by HD Hyundai Construction Equipment.

※ Emission-related components according to the EPA regulation.

1. Air-induction system.
2. Fuel system.
3. Ignition system.
4. Exhaust gas recirculation systems.
5. After treatment devices.
6. Crankcase ventilation valves.
7. Sensors.
8. Electronic control units.

BEFORE SERVICING THIS MACHINE

It is the responsibility of the owner and all service and maintenance personnel to avoid accidents and serious injury by keeping this machine properly maintained.

It also is the responsibility of the owner and all service and maintenance personnel to avoid accidents and serious injury while servicing the machine.

No one should service or attempt to repair this machine without proper training and supervision.

All service and maintenance personnel should be thoroughly familiar with the procedures and precautions contained in this manual.

All personnel also must be aware of any federal, state, provincial or local laws or regulations covering the use and service of construction equipment.

The procedures in this manual do not supersede any requirements imposed by federal, state, provincial or local laws.

HD Hyundai Construction Equipment can not anticipate every possible circumstance or environment in which this machine may be used and serviced.

All personnel must remain alert to potential hazards.

Work within your level of training and skill.

Ask your supervisor if you are uncertain about a particular task. Do not try to do too much too fast.

Use your common sense.

※ How to set the language of cluster

User can select preferable language and all displays are changed the selected language.



※ Please refer to the page 3-32 for the cluster.

EC REGULATION APPROVED

- Noise level (EN474-1 : 2006 and 2000/14/EC) are as followings.
LWA : 99 dB (EU only)
LPA : 71 dB
- The value of vibrations transmitted by the operator's seat are lower than standard value of (EN474-1 : 2006 and 2002/44/EC)



EC Declaration of Conformity

(Original instruction)

This declaration of conformity is issued under the sole responsibility of manufacturer:

HD HYUNDAI CONSTRUCTION EQUIPMENT CO., LTD.

477 Bundangsuseo-ro, Bundang-gu,
Seongnam-si, Gyeonggi-do 13553, Korea

HD Hyundai Construction Equipment Europe N.V located at Hyundailaan 4, 3980 Tessenderlo, Belgium, as authorized representative in the European Community is authorized to compile the technical construction file and declares that the product:

Type: *****
Model: *****
Serial number (PIN): *****

is in conformity with the relevant provisions of the Community harmonization legislation:

2006/42/EC - Machinery directive
2014/30/EU - Electromagnetic compatibility directive
2000/14/EC - Noise emission outdoor equipment directive
2002/44/EU - Exposure of workers to vibration risks directive
their amendments, and other applicable directives.

EMC (2014/30/EU)

Certificate number: *****
Date: DD/MM/YYYY
Notified body: *****

Noise levels (2000/14/EC)

Certificate number: *****
Date: DD/MM/YYYY
Conformity assessment proc.: Annex VIII Full Quality Assurance
Notified body: *****

Measured sound power level: nnn.n dB(A)
Guaranteed sound power level: nnn.n dB(A)

Engine information

Manufacturer : *****
Engine model name: *****
Type-approval number: *****
Stage (Regulation) : STAGE ** (**/**/**)
Gross Power (SAE J1995): ***kW / ****rpm
Net Power (SAE J1349): ***kW / ****rpm

Harmonized standards, other technical standards and specifications applied:

EN 474-1:2006+A*:**** (EMM - Safety - Part 1); EN 474-3:2006+A*:**** (EMM - Safety - Part 3); EN ISO 3471:2008 (EMM - ROPS: Lateral/Vertical/Longitudinal loads); EN ISO 3449:2008 (EMM - FOPS: Level II cabin); ISO 2631-1:1997 & ISO 2631-1:1997/Amd1 :2010 (Whole-body vibration); EN ISO 5349-1:2001 & EN ISO 5349-2:2001 & EN ISO 5349-2:2001/A1:2015 (Hand-arm vibration)

Managing Director
Place, date of issue: Tessenderlo Belgium, DD MM YYYY


TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR	
---	--

Machine Serial No.	
Engine Serial No.	
Manufacturing year	
Manufacturer Address	HD Hyundai Construction Equipment Co., Ltd. 477 Bundangsuseo-ro, Bundang-gu, Seongnam-si, Gyeonggi-do 13553, Korea
Distributor for U.S.A Address	HD Hyundai Construction Equipment Americas, Inc. 6100 Atlantic Boulevard Norcross GA 30071 U.S.A
Distributor for Europe Address	HD Hyundai Construction Equipment Europe N. V. Hyundailaan 4 3980 Tessenderlo Belgium
Dealer Address	

SAFETY LABELS

1. LOCATION

Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

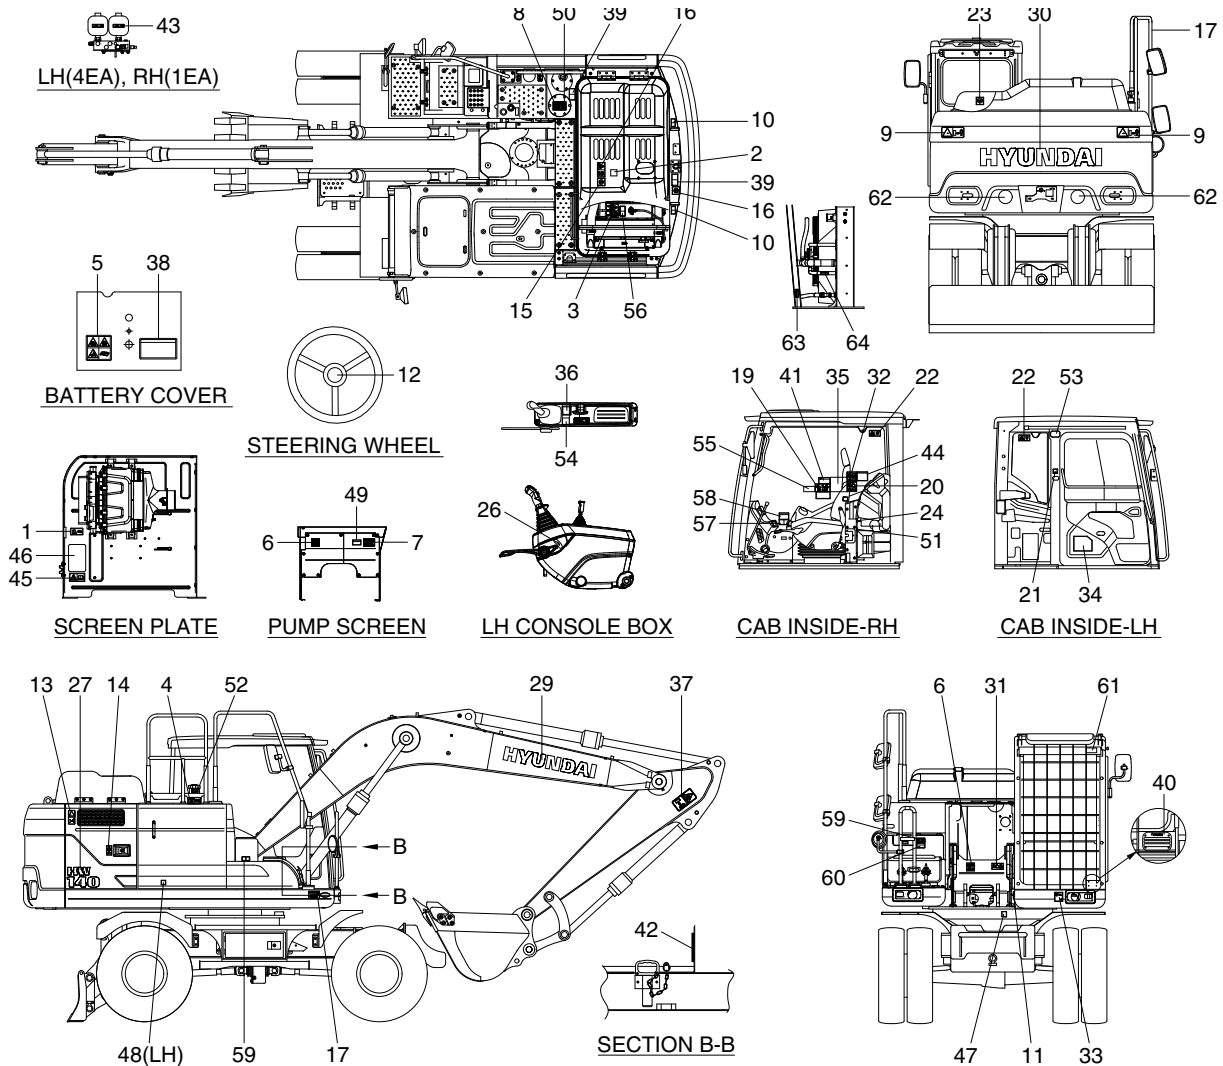

- | | | |
|-----------------------------|--|---------------------------------------|
| 1 Air cleaner filter | 23 Emergency exit | 44 M/control pattern change valve |
| 2 Turbocharger cover | 24 Air conditioner filter | 45 M/control pattern change-w/o valve |
| 3 Radiator cap | 26 Safety knob | 46 M/control pattern change-w/valve |
| 4 Fueling | 27 Model name | 47 Swing bearing grease |
| 5 Battery accident | 29 Trade mark (boom) | 48 Battery position |
| 6 High pressure hose | 30 Trade mark (CWT) | 49 Lubrication oil |
| 7 Hydraulic oil level | 31 Reduction gear grease | 50 Fuel shut off |
| 8 Hydraulic oil lubrication | 32 Clamp locking | 51 MCU/ECM connector |
| 9 Keep clear-rear | 33 Noise level LWA | 52 Ultra low sulfur diesel |
| 10 Lifting eye | 34 Service instruction | 53 ROPS cabin |
| 11 Name plate | 35 Lifting chart | 54 Dozer/outrigger ideogram |
| 12 Steering wheel | 36 Console box tilting | 55 Swing lock |
| 13 Keep clear-side | 37 Keep clear-boom/arm | 56 Surge tank |
| 14 Stay fix | 38 Electric welding | 57 Key off caution |
| 15 Shearing-engine hood | 39 Falling | 58 RCV lever |
| 16 No step | 40 FOPS FOG plate | 59 Diesel exhaust fluid |
| 17 Transporting | 41 Caution (water separator, turbocharger) | 60 DEF/AdBlue® fill up |
| 19 M/control pattern | 42 Swing ideogram | 61 Sliding caution |
| 20 Ref operator's manual | 43 Accumulator | 62 Reflecting |
| 21 Hammer | | 63 Refrigerant |
| 22 Safety front window | | 64 Use handrail |

2. DESCRIPTION


There are several specific warning labels on this machine please become familiarized with all warning labels.

Replace any safety label that is damaged, or missing. If a safety label is attached to a part that is replaced, install a safety label on the replacement part.

1) AIR CLEANER FILTER (item 1)

This warning label is positioned on the screen plate.

- ※ **Periodic and proper inspection, cleaning and change of elements prolong engine life time and maintain the good performance of engine.**

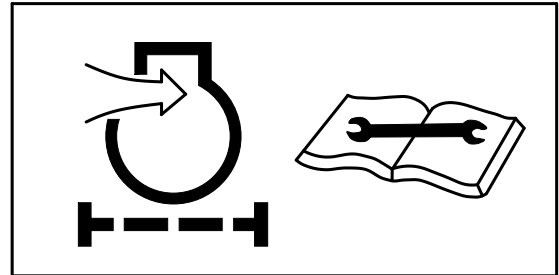

21070FW01

2) TURBOCHARGER COVER (item 2)

This warning label is positioned on the engine hood.

- ⚠ **Do not touch turbocharger or it may cause severe burn. When the engine is running or immediately after engine shut down.**



21070FW02

3) RADIATOR CAP (item 3)

This warning label is positioned on the radiator.

- ⚠ **Never open the filler cap while engine running or at high coolant temperature. Hot coolant can cause serious burns, injury or death.**




14070FW03

4) FUELING (item 4)

This warning label is positioned on the vicinity of fuel filler neck.

- ⚠ Stop the engine when refueling. All lights or flames shall be kept at a safe distance while refueling.

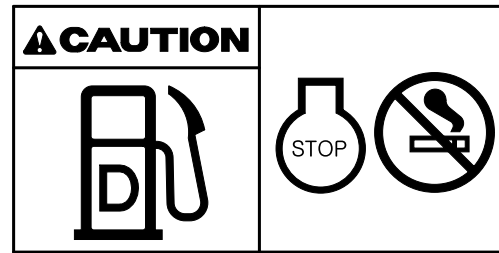

21070FW04

5) BATTERY ACCIDENT (item 5)

This warning label is positioned on the battery cover.

- ⚠ Electrolyte containing sulfuric acid cause severe burns. Avoid being in contact with skin, eyes or clothes. In the event of accident flush with sufficient water, call a physician immediately.
- ※ Maintain the electrolyte at the recommended level. Add distilled water to the battery only when starting up, never when shutting down.
With electrolyte at proper level, less space may cause the gases to be accumulated in the battery.
- ⚠ Extinguish all smoking materials and open flames before checking the battery.
- ⚠ Do not use matches, lighters or torches as a light source near the battery for the probable presence of explosive gas.
- ⚠ Do not allow unauthorized personnel to change the battery or to use booster cables.
- ⚠ For safety from electric shock, do not battery terminal with a wet hand.



36070FW05

6) HIGH PRESSURE HOSE (item 6)

This warning label is positioned on the pump screen and front of the upper frame.

- ▲ Escaping fluid under pressure can penetrate the skin causing serious injury.
- ▲ Avoid the hazard by relieving pressure before disconnecting hydraulic lines or other lines.
- ※ See the maintenance section for details.




14070FW29

7) HYDRAULIC OIL LEVEL (item 7)

This warning label is positioned on the pump screen.

- ▲ Place the bucket on the ground whenever servicing the hydraulic system.
- ※ Check oil level on the level gauge.
- ※ Refill the recommended hydraulic oil up to specified level if necessary.

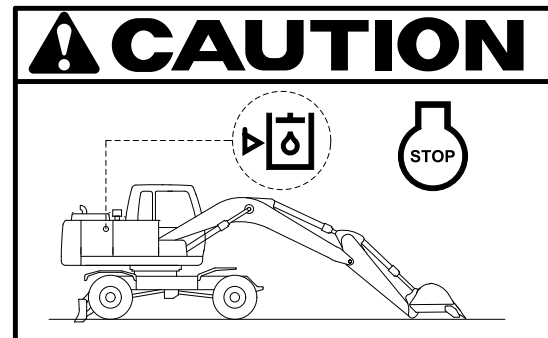


20W70FW07A

8) HYDRAULIC OIL LUBRICATION (item 8)

This warning label is positioned on the top of the hydraulic tank.

- ※ Do not mix with different brand oils.
- ▲ Never open the filler cap while high temperature.
- ▲ Loosen the cap slowly and release internal pressure completely.

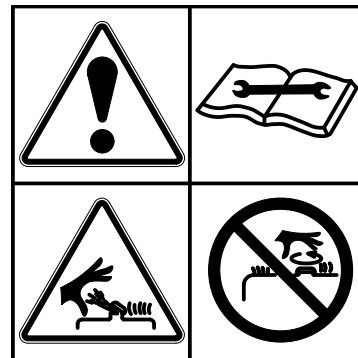


14070FW08

9) KEEP CLEAR-REAR (item 9)

This warning label is positioned on the rear of counterweight.

- ▲ To prevent serious personal injury or death keep clear of machine swing radius.
- ▲ Do not deface or remove this label from the machine.

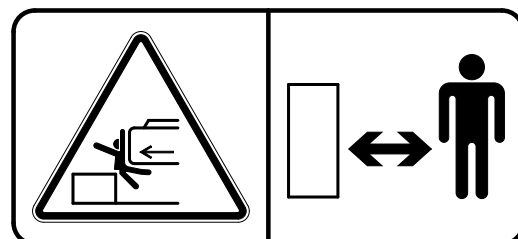


21090FW09

10) LIFTING EYE (item 10)

This warning label is positioned on the counterweight.

- ⚠ **Do not lift the machine by using lifting eyes on the counterweight or the lifting eyes may be subject to overload causing its breaking and possible personal injury.**
- ※ **See page 5-8 for proper lifting method of the machine.**

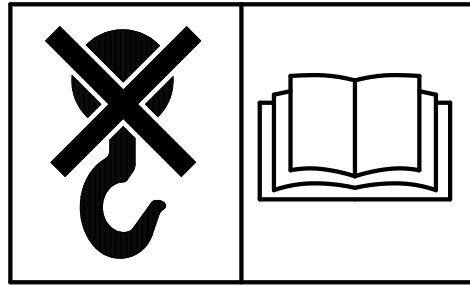


21070FW10

11) KEEP CLEAR-SIDE (item 13)

This warning label is positioned on the LH and RH side cover.

- ⚠ **To prevent serious personal injury or death keep clear of machine swing radius.**
- ⚠ **Do not deface or remove this label from the machine.**

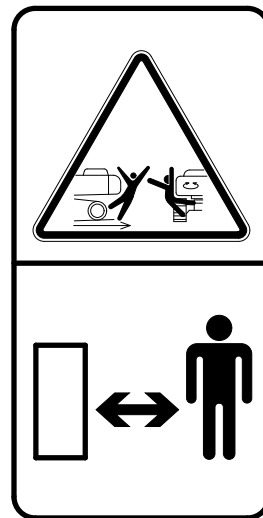

21070FW13

12) STAY FIX (item 14)

This warning label is positioned on the LH and RH side cover.

- ⚠ **Be sure to support the stay when the door needs to be opened.**
- ⚠ **Be careful that the opened door may be closed by the external or natural force like strong wind.**




21070FW14

13) SHEARING-ENGINE HOOD (item 15)

This warning label is positioned on the engine hood.

- ⚠ Do not open the engine hood during the engine's running. Stay clear of rotating parts.
- ⚠ Do not touch exhaust pipe or it may cause severe burn.

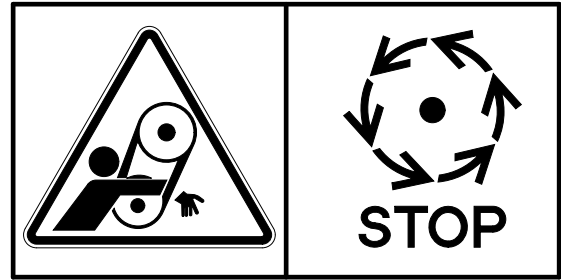


21070FW15

14) NO STEP (item 16)

This warning label is positioned on the engine hood and counterweight.

- ⚠ Do not step on the engine hood and counterweight.

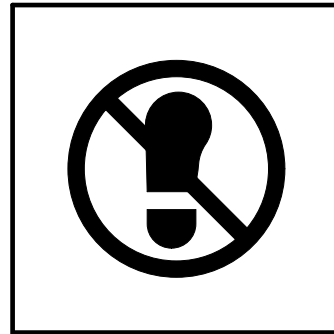


21070FW16

15) TRANSPORTING (item 17)

This warning label is positioned on the right side of upper frame and guardrail.

- ⚠ Study the operator's manual before transporting the machine, if provided and tie down arm and track to the carrier with lashing wire.
- See page 5-7 for details.

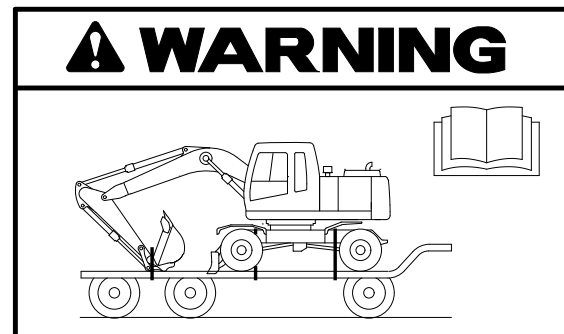


20W70FW17

16) MACHINE CONTROL PATTERN (item 19)

This warning label is positioned in right window of the cab.

- ⚠ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating the machine.
 - ⚠ Failure to do so could result in injury or death.
- See page 4-12 for details.

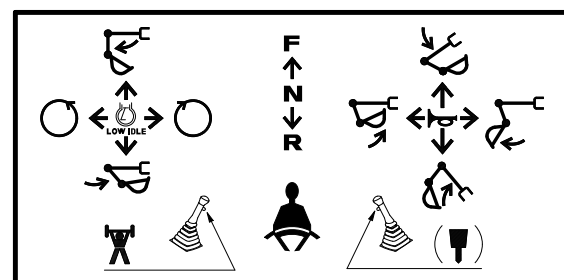

20W70FW19

17) REF OPERATOR'S MANUAL (item 20)

This warning label is positioned on the right side window of the cab.

(1) Ref operator manual


- ▲ Study the operator's manual before starting and operating machine.
- ▲ Do not operate this machine unless you have read and understand the instructions and warnings in this manual. Failure to follow the instructions or warnings could result in injury or death.

(2) Max height

- ▲ Serious injury or death can result from contact with electric lines. An electric shock being received by merely coming into the vicinity of an electric lines, the minimum distance should be kept considering the supply voltage as page 1-7.

(3) Interference

- ▲ Be careful to operate machine equipped with quick clamp or extensions. Bucket may hit cab or boom, boom cylinders when it reached vicinity of them.

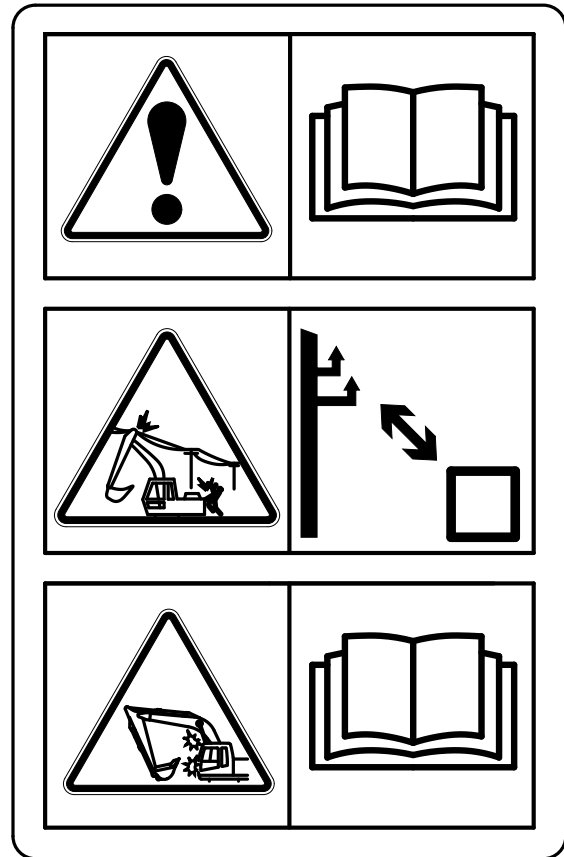


2609A0SL05

18) SAFETY FRONT WINDOW (item 22)

This warning label is positioned on the LH and RH side window of the cab.

- ▲ Be careful that the front window may be promptly closed.
- ※ See page 3-80 for details.

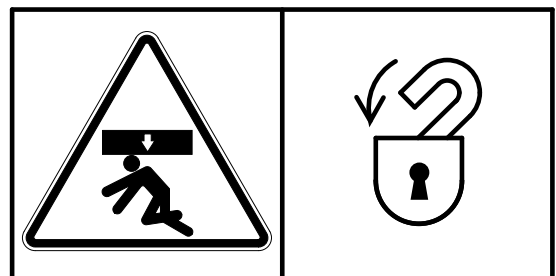

21070FW24

19) EMERGENCY EXIT (item 23)

This warning label is positioned on the inside of rear window.


- ※ The rear window serves us an alternate exit.
- ※ To remove rear window, pull the ring and push out the glass.



20) AIR CONDITIONER FILTER (item 24)

This warning label is positioned on the air conditioner cover.

- ※ Periodic and proper inspection, cleaning and change of filter prolong air conditioner life time and maintain good performance.

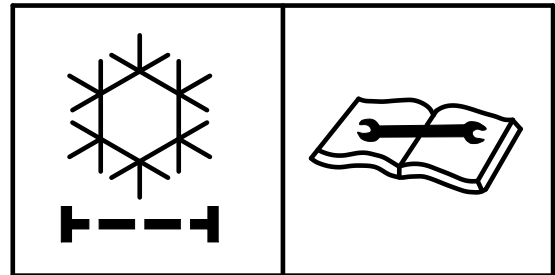


21070FW26

21) SAFETY KNOB (item 26)

This warning label is positioned on the cover of the safety knob.

- ⚠ Before you get off the machine be sure to place the safety knob LOCKED position.

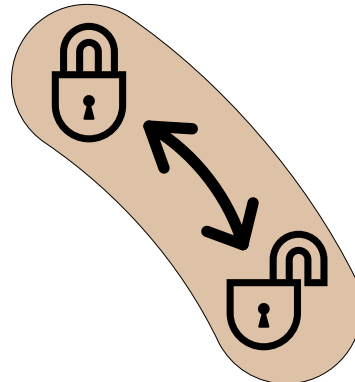


30007A1FW07A

22) REDUCTION GEAR GREASE (item 31)

This warning label is positioned on the front side of upper frame.

- ⚠ Grease is under high pressure. Grease coming out of the grease plug under pressure can penetrate the body causing injury or death.

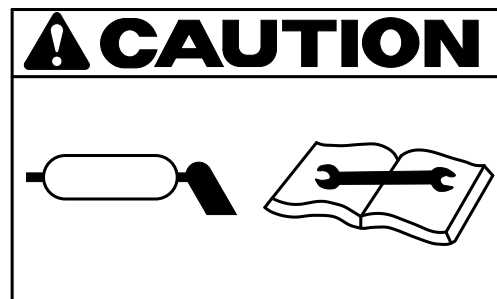


21070FW35

23) CLAMP LOCKING (item 32)

This warning label is positioned on the right side window of cab.

- ⚠ **Serious injury or death can result from dropping bucket.**
- ⚠ **Operating the machine with quick clamp switch unlocked or without safety pin of moving hook can cause the bucket to drop off.**

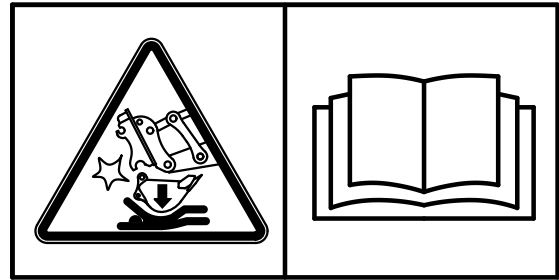


14070FW60

24) CONSOLE BOX TILTING (item 36)

This warning label is positioned on the LH console box.

- ※ **Before you get off the machine be sure to tilt the LH console box.**
- ※ **See page 3-51 for detail.**

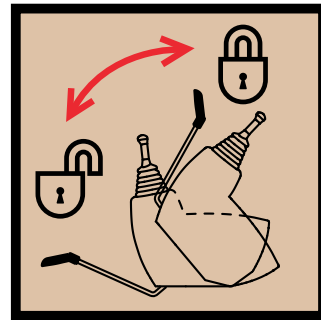

30007A1FW06

25) KEEP CLEAR-BOOM/ARM (item 37)

This warning label is positioned on both side of the arm.

- ⚠ **Serious injury or death can result from falling of the attachment.**
- ⚠ **To prevent serious injury or death, keep clear the underneath of attachment.**




14070FW31

26) ELECTRIC WELDING (item 38)

This warning label is positioned on the battery box cover.

- ⚠ **Before carrying out any electric welding on this machine, follow the below procedure.**
 - Pull the connector out of all electric control units.
 - Connector the ground lead of the welding equipment as close to the welding point as possible.
- ※ **See page 6-50 for detail.**

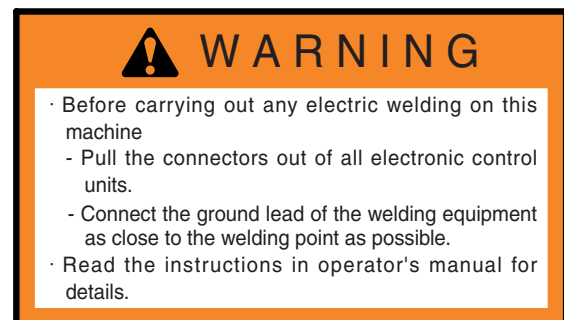


7807AFW20

27) FALLING (item 39)

This warning label is positioned on the top of the counterweight and hydraulic tank.

- ▲ Falling is one of the major cause of personal injury.
- ▲ Be careful of slippery conditions on the platforms, steps and handrails when standing on the machine.

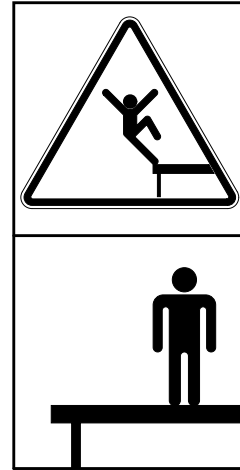


14070FW30

28) CAUTION (W/SEPARATOR, TURBOCHARGER) (item 41)

This warning label is positioned on the right window of the cab.

- ▲ In order to protect high pressure fuel system, please drain water in water separator before starting the engine.
- ▲ In order to prevent turbocharger failure, please allow more than 5 minutes' cool down period (no load low idle operation) before shutting the engine off.

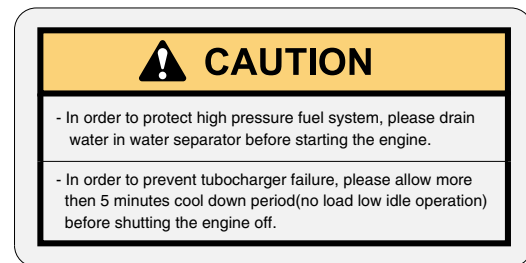


120090SL02

29) SWING IDEOGRAM (item 42)

This warning label is positioned on the inside of the battery box.

- ▲ Before you operating the machine, be sure to release the swing lock pin in the battery box.
- ※ See page 3-50 for detail.

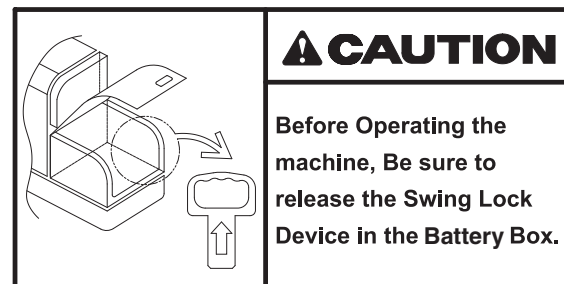

140WF0FW63

30) ACCUMULATOR (item 43)

This warning label is positioned on the accumulator of the solenoid valve.

- ※ The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.

- ▲ Never make any hole in the accumulator expose it to flame or fire.
- ▲ Do not weld anything to the accumulator.
- ※ When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your HD Hyundai Construction Equipment distributor.




1107A0FW46

31) MACHINE CONTROL PATTERN CHANGE VALVE (item 44)

This warning label is positioned on the right side window of the cab.

- ▲ The machine control pattern can easily be changed to the "ISO type" or to the "A type" by changing the position of the lever of the pattern change valve.
- ▲ Before starting this machine, check the lever pattern valve.
- ※ See page 4-31 for detail.

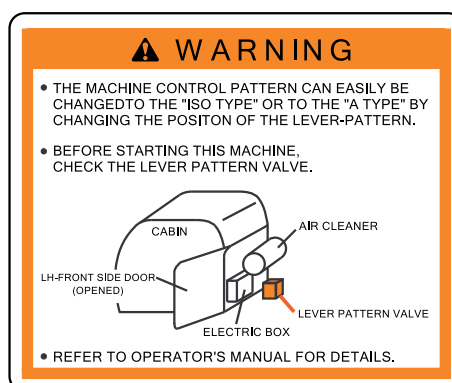

2609A0SL11

32) MACHINE CONTROL PATTERN CHANGE-W/O VALVE (item 45)

This warning label is positioned on the screen plate.

- ▲ Check the machine control pattern before starting this machine.
- ※ See page 4-30 for detail.




14W90FW47

33) MACHINE CONTROL PATTERN CHANGE-W/VALVE (item 46)

This warning label is positioned on the screen plate.

- ⚠ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.
- ⚠ Failure to do so could result in injury or death.
- ※ See page 4-31 for details.

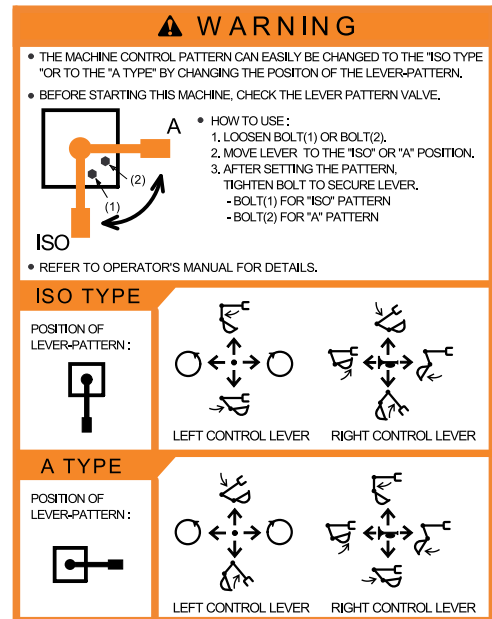


38090FW01A

34) SWING BEARING GREASE (item 47)

This warning label is positioned on the front side of swing ring gear.


- ※ See page 6-37 for details.

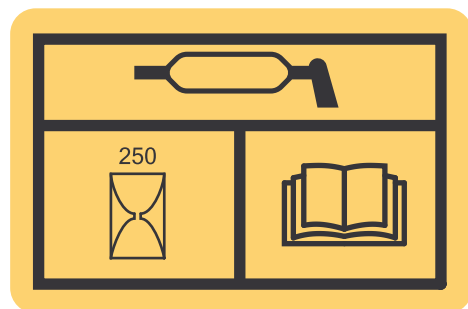

38090FW04

35) BATTERY POSITION (item 48)

This warning label is positioned on the left side cover.

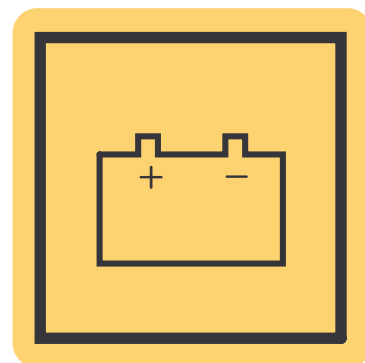

38090FW03

36) LUBRICATION OIL (item 49)

This warning label is positioned on the pump screen.

- ※ Recommended lubrication oil ACEA-E9 is equivalent to API CJ-4.
- ※ See page 6-9 for details.




290F0SL03

37) FUEL SHUT OFF (item 50)

This warning label is positioned on the hydraulic tank.

- ※ Fill only the hydraulic oil.
- ※ Do not fill the diesel fuel.
- ⚠ Relieve tank pressure with the engine off by removing the cap slowly to prevent burns from hot oil.

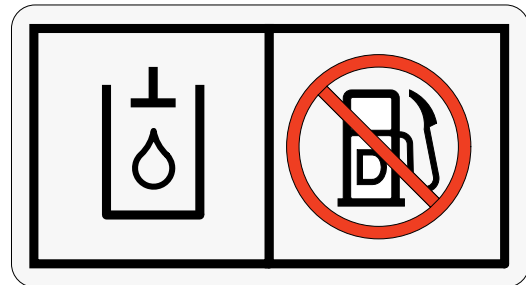

140WH90FW51

38) MCU/ECM CONNECTOR (item 51)

This warning label is positioned on the low cover of the air conditioner in the cab.

- ※ MCU communicates the machine data with Laptop computer through RS232 service socket.
- ※ ECM communicates the engine data with cummins INSITE tool adapter through J1939 service socket.
- ※ See page 3-79 for details.




235Z90FW52

39) ULTRA LOW SULFUR DIESEL (item 52)

This warning label is positioned on the vicinity of fuel filler neck.

- ※ Use ultra low sulfur fuel only.
- ※ Ultra low sulfur fuel sulfur content ≤ 15 ppm

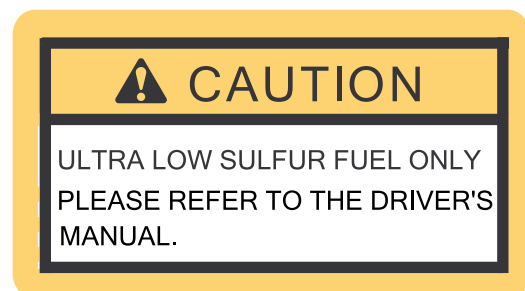


2609A0SL03

40) DOZER/OUTRIGGER IDEOGRAM (item 54)

This warning label is positioned on the LH console box.

- ※ See page 4-12 for details.
- ※ Guidelines for using the general dozer blade.
 - Be careful not to apply an excessive load when using a blade.
 - Avoid impacts and loads on the bottom due to machine modification or excessive working conditions.
 - Check the BLADE UP status before traveling the machine.
 - Avoid any collision with the upper working device and the blade.
 - Do not move machine in the blade jack up state.
 - When using blade jack up, use it in an environment where the ground is not rough and the machine and ground are same level.

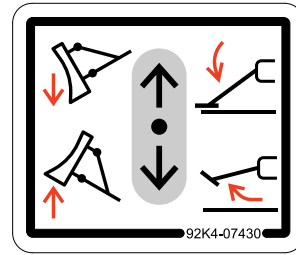


92K4-07430

41) SWING LOCK (item 55)

This warning label is positioned on the right side window of the cab.

- ▲ Before you leaving the machine, always place the swing lock pin securely in the LOCK position.
- ※ See page 3-50 for detail.

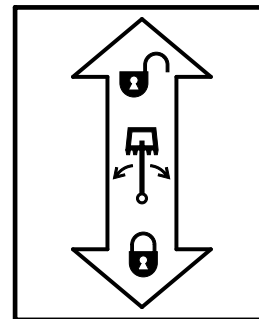


20W70FW64

42) SURGE TANK (item 56)

This warning label is positioned on the top of the surge tank.

This system must be filled slowly to prevent air locks.

- ※ Fill rate ≤ 11 lpm

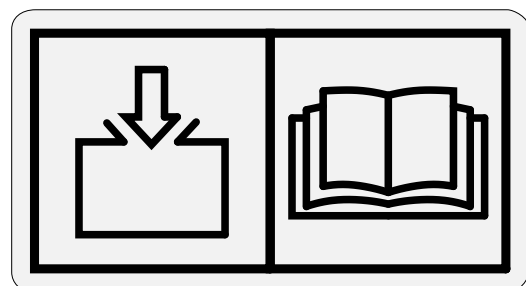


3009A0FW54

43) KEY OFF CAUTION (item 57)

This warning label is positioned on the right side window of the cab.

- ※ **Park on a flat place and stop the engine for inspecting and repairing. Properly TAG machine is not operational. (remove start key)**

Extreme care shall be taken during maintenance work.

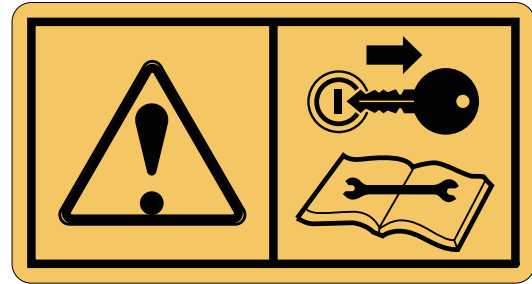

290F0FW05

44) RCV LEVER (item 58)

This warning label is positioned on the right side window of the cab.

- ※ **When you work by moving the seat to the front of cab, it is possible to take place interference between cluster and RCV lever at specific position. To prevent this interference, handle below works.**

- (1) Rotate cluster.
- (2) Adjust seat position for up-and-downward using seat height adjuster knob in suspension.
- (3) Lower the console box height using knob between RH console box and seat cushion.
- (4) Push back console and seat position using seat and console box adjust knob between LH console box and seat cushion.




290F0FW05

45) DIESEL EXHAUST FLUID (item 59)

This warning label is positioned on the front of DEF/AdBlue® tank cover.

- ※ **Fill only the DEF/AdBlue® (Diesel Exhaust Fluid, standardised as ISO 22241). Aqueous urea solution made with 32.5% high-purity urea and 67.5% deionized water.**

- ※ **Do not fill the diesel fuel.**
- ※ **See page 6-31 for detail.**

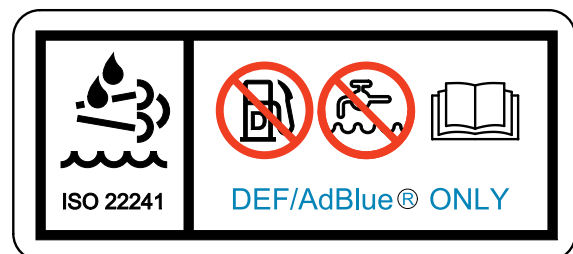

290F0SL04

46) DEF/AdBlue® FILL-UP (item 60)

This warning label is positioned on the front of DEF/AdBlue® tank cover.


- △ **Be careful not to entering dust, sand or other contamination substances when you refill the DEF/AdBlue® into the tank. Otherwise, fatal problem such as engine idle locking, derating or engine stopping can be happen.**

- ※ **Warning lamp turns on when the tank is completely filled with DEF/AdBlue®.**

After turning light on, do not pour DEF/AdBlue® any more. Otherwise DEF/AdBlue® tank may freeze and burst in winter season.

- ※ **Fill the tank with DEF/AdBlue® after key on and then turn off the start key.**

- ※ **See page 6-31 for detail.**

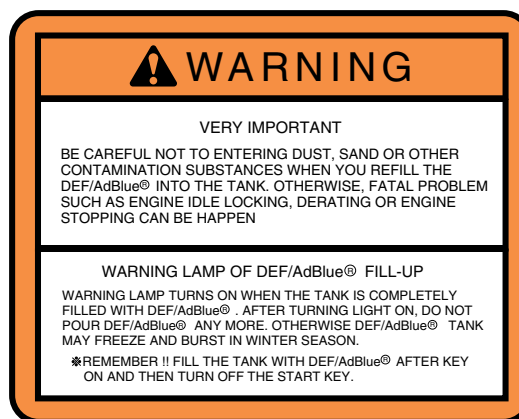


480F0SL06

47) SLIDING CAUTION (item 61)

This warning label is positioned on the front window of the cab.

- ※ **Before opening and general glass window shutting driver's cab pull the steering wheel.**

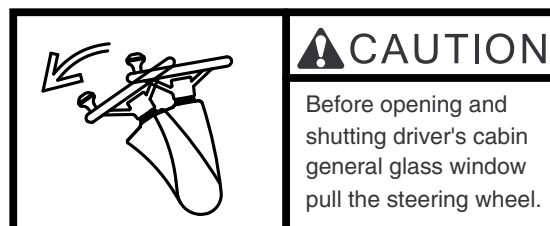

55W91FW04A

48) REFLECTING (item 62)

This warning label is positioned on the rear of counterweight.

- ▲ **To prevent serious personal injury or death keep clear of machine swing radius.**
- ▲ **Do not deface or remove this label from the machine.**




91Q4-07020

49) REFRIGERANT (item 63)

This warning label is positioned on the right side of engine hood.


- ▲ Inhaling air conditioner refrigerant gas through a lit cigarette or other smoking method or inhaling fumes released from a flame contacting air conditioner refrigerant gas, can cause bodily harm or death.

※ Refer to the page 6-53.

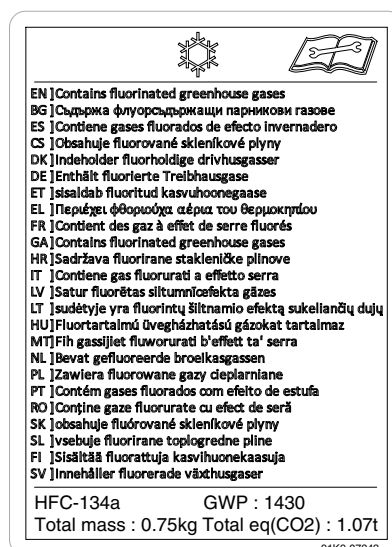


91K9-07252


MACHINE DATA PLATE

DO NOT DEFACE OR REMOVE THIS PLATE 이 명판을 훼손하거나 오손시키지 마시오	
MACHINE TYPE / MODEL	
PRODUCT IDENTIFICATION NUMBER	
ENGINE POWER	
OPERATING MASS	
 477, Bundangseoseo-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13553, Korea 91LM-14112	


For general

DO NOT DEFACE OR REMOVE THIS PLATE 이 명판을 훼손하거나 오손시키지 마시오	
MACHINE TYPE	
MODEL	
MAX. CERTIFIED WEIGHT	
STANDARDS ROPS : ISO 12117-2	
 477, Bundangseoseo-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13553, Korea 91Q6-91295	


For ROPS

CE UK DO NOT DEFACE OR REMOVE THIS PLATE 이 명판을 훼손하거나 오손시키지 마시오	
MACHINE TYPE / MODEL	
PRODUCT IDENTIFICATION NUMBER / VEHICLE IDENTIFICATION NUMBER	
ENGINE POWER	MAX. AXLE LOAD (FRONT / REAR)
OPERATING MASS / GROSS VEHICLE WEIGHT	MFG. YEAR YEAR INTO SERVICE
 477, Bundangseoseo-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13553, Korea 91LM-14142	

For EU only

DO NOT DEFACE OR REMOVE THIS PLATE 이 명판을 훼손하거나 오손시키지 마시오	
MACHINE TYPE	
MODEL	
STANDARDS FOG : ISO 10262 (LEVEL 2)	
 477, Bundangseoseo-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13553, Korea 91N6-01283	

For FOPS/FOG

EAC DO NOT DEFACE OR REMOVE THIS PLATE 이 명판을 훼손하거나 오손시키지 마시오	
MACHINE TYPE / MODEL	
PRODUCT IDENTIFICATION NUMBER	
ENGINE POWER	
OPERATING MASS	
 477, Bundangseoseo-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13553, Korea 91LM-14122	

For EAC only


EX0MD01

※ The machine serial number assigned to this particular machine should be used when requesting information or ordering service parts for this machine from your authorized HD Hyundai Construction Equipment dealer. The machine serial number is also stamped on the frame.

GUIDE

1. DIRECTION

The direction of this manual indicate forward, backward, right and left on the standard of operator when the dozer blade is in the rear and machine is on the traveling direction.

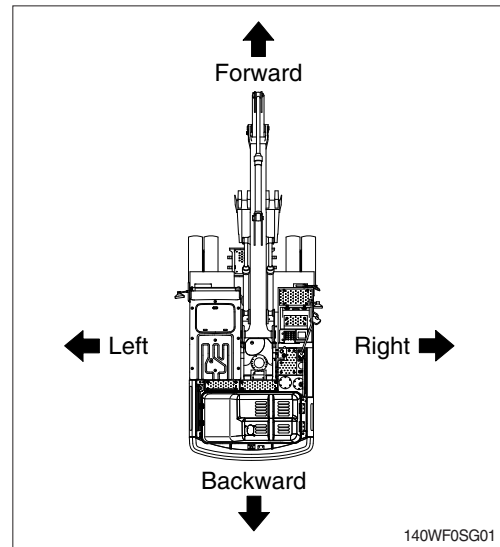


2. SERIAL NUMBER

Inform following when you order parts or the machine is out of order.


1) MACHINE SERIAL NUMBER

The numbers are located below the right window of the operator's cab.

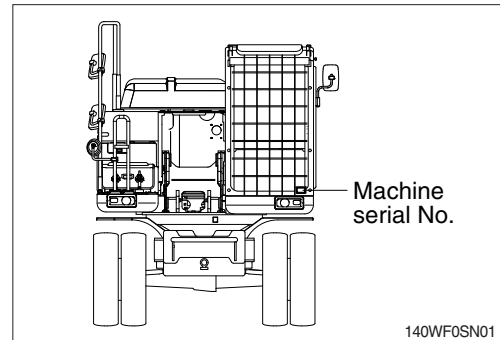

2) ENGINE SERIAL NUMBER

The numbers are located on the engine name plate.

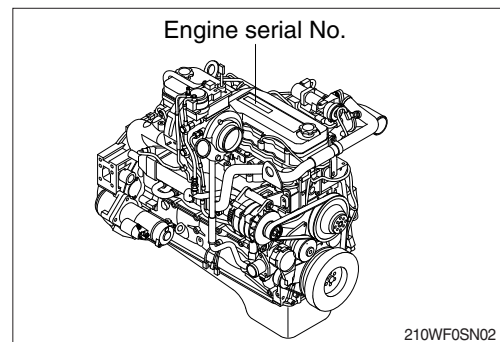

3. INTENDED USE

This machine is designed to be used mainly for the following work.

- Digging work
- Loading work
- Smoothing work
- Ditching work

※ Please refer to the section 4 (efficient working method) further details.

4. SYMBOLS

▲ Important safety hint.

△ It indicates matters which can cause the great loss on the machine or the surroundings.

※ It indicates the useful information for operator.


SAFETY HINTS

1. BEFORE OPERATING THE MACHINE

Think-safety first.


In special situation, wear protective clothing including a safety helmet, safety shoes, gloves, safety glasses and ear protection as required by the job condition.

Almost every accident is caused by disregarding the simple and fundamental safety hints.

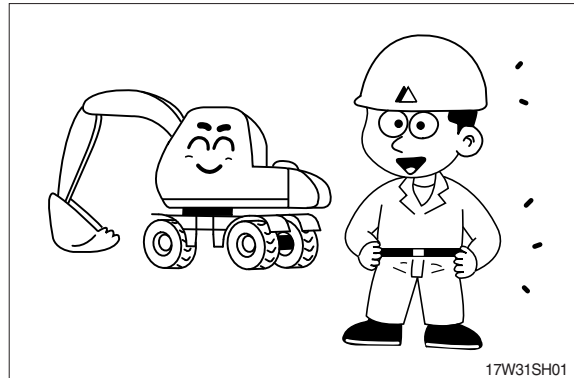


Be sure to understand thoroughly all about the operator's manual before operating the machine.

Proper care is your responsibility.

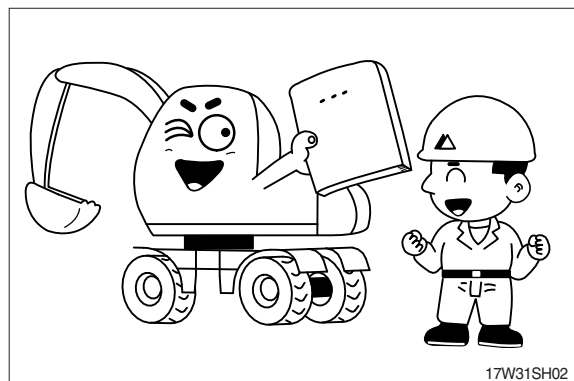


Fully understand the details and process of the construction before starting the work.


If you find anything dangerous on the job, consult with the job supervisor for the preventive measures before operating the machine.

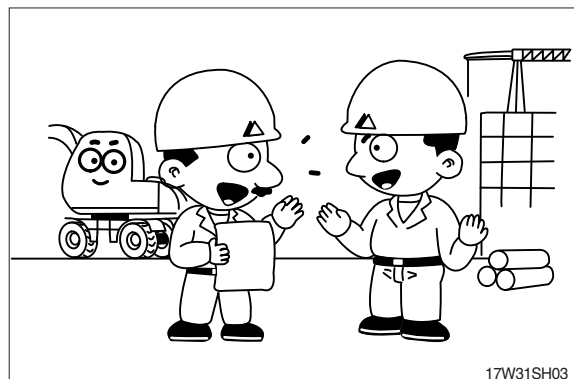


Do not operate when tired, or after drinking alcoholic beverages or any type of drugs.

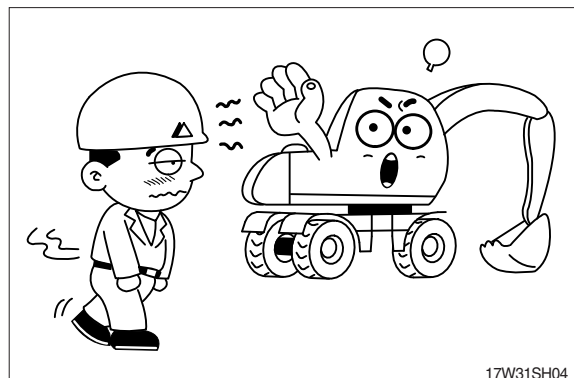


Check daily according to the operation manual.
Repair the damaged parts and tighten the loosened bolts.

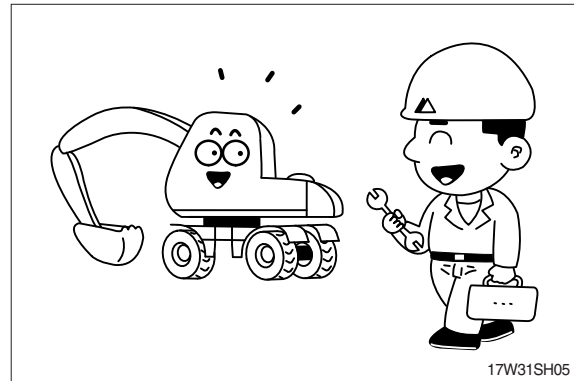


Check for leakage of engine oil, hydraulic oil,
fuel and coolant.
Keep machine clean, clean machine regularly.

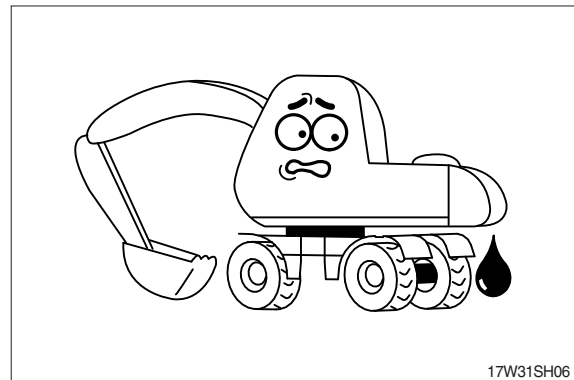

Do not operate the machine if it requires repairs.
Operate after complete repair.

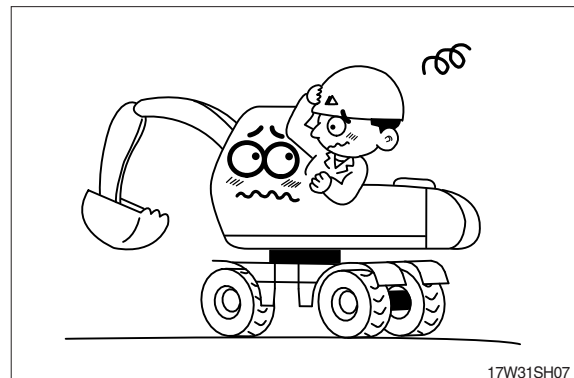

Be prepared if a fire starts.
Keep a fire extinguisher handy and emergency
numbers for a fire department near your tele-
phone.

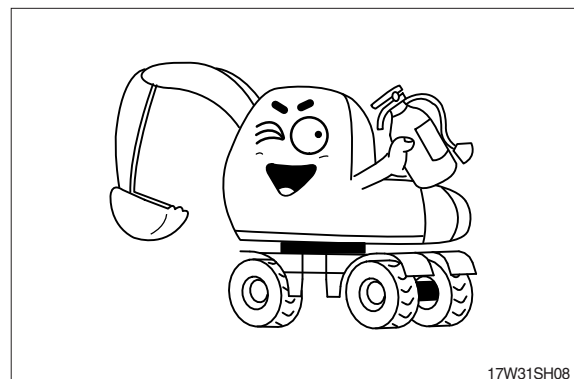


PROTECTION AGAINST FALLING OR FLYING OBJECTS

If there is any danger of falling or flying objects hitting the operator, install protective guards in place to protect the operator as required for each particular situation.

Be sure to close the front window before commencing work.

Make sure to keep all persons other than operator outside the range of falling or flying objects. In case you need top guard, front guard and FOPS (falling object protective structure), please contact HD Hyundai Construction Equipment distributor.

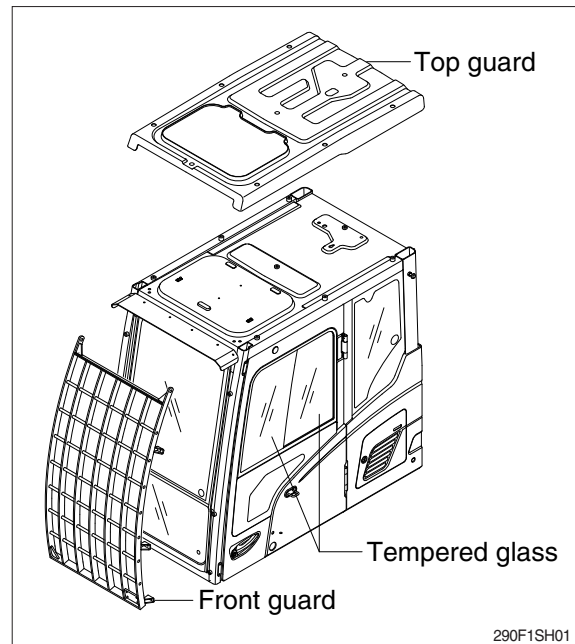

UNAUTHORIZED MODIFICATION


Any modification made without authorization from HD Hyundai Construction Equipment can create hazards.

Before making a modification, consult your HD Hyundai Construction Equipment distributor. HD Hyundai Construction Equipment will not be responsible for any injury or damage caused by any unauthorized modification.

PREPARE FOR EMERGENCY

Only in case of emergency, use the installed hammer for breaking the windshield of the cab, and then exit carefully.


Be sure you know the phone numbers of persons you should contact in case of an emergency.

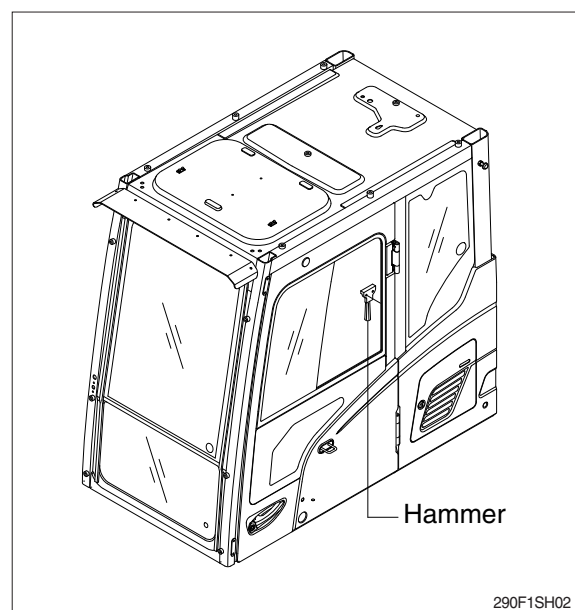

ROTATING BEACON

When you operate a machine on a road or beside a road, a rotating beacon is required to avoid any traffic accident.

Please contact your HD Hyundai Construction Equipment distributor to install it.

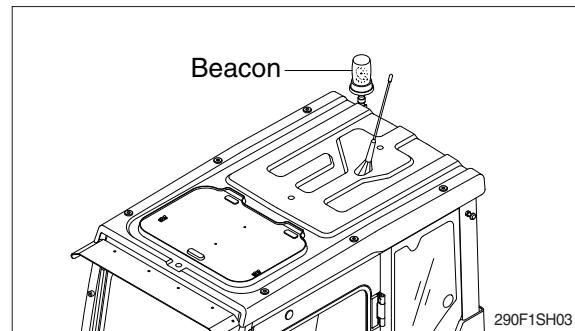

PRECAUTIONS FOR ATTACHMENTS

When installing and using an optional attachment, read the instruction manual for the attachment and the information related to attachments in this manual.

Do not use attachments that are not authorized by HD Hyundai Construction Equipment or your HD Hyundai Construction Equipment distributor. Use of unauthorized attachments could create a safety problem and adversely affect the proper operation and useful life of the machine.

Any injuries, accidents, product failures resulting from the use of unauthorized attachments are not the responsibility of HD Hyundai Construction Equipment.

The stability of this machine is enough to be used for general work. When you operate this machine, allow for the lifting capacity tables. If you want to use other special applications (not covered in this manual), you have to attach additional counterweight or be cautious while running the machine.

SAFETY RULES

Only trained and authorized personnel can operate and maintain the machine.

Follow all safety rules, precautions and instructions when operating or performing maintenance on the machine.

When working with another operator or a person on worksite traffic duty, be sure all personnel understand all hand signals that are to be used.

SAFETY FEATURES

Be sure all guards and covers are in their proper position. Have guards and covers repaired if damaged.

Use safety features such as safety lock and seat belts properly.

Never remove any safety features. **Always** keep them in good operating condition.

Improper use of safety features could result in serious bodily injury or death.

MACHINE CONTROL PATTERN

Check machine control pattern for conformance to pattern on label in cab.

If not, change label to match pattern before operating machine.

Failure to do so could result in injury.

CALIFORNIA PROPOSITION 65

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

This product contains or emits chemicals known to the State of California to cause cancer or birth defects or other reproductive harm.

Battery posts, terminals and related accessories contain lead and lead compounds.

WASH HANDS AFTER HANDLING



13031SH55

Do not load the machine with the lifting eyes on the counterweight.

▲ The wrong loading method can result in serious bodily injury or death.

FIRE PREVENTION AND EXPLOSION PREVENTION

Regeneration

The exhaust gas temperatures during regeneration will be elevated. Follow proper fire prevention instructions and use the disable regeneration function when appropriate.

General

All fuels, most lubricants, and some coolant mixtures are flammable.

To minimize the risk of fire or explosion, the following actions are recommended.

Always perform a Walk-Around Inspection, which may help you identify a fire hazard.

Do not operate a machine when a fire hazard exists. Contact your dealer for service.



3001SH01

Understand the use of the primary exit and alternative exit on the machine.

Do not operate a machine with a fluid leak. Repair leaks and clean up fluids before resuming machine operation. Fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire. A fire may cause personal injury or death.

Do not weld on or drill holes in the engine cover. Flammable material such as leaves, twigs, papers, trash may accumulate in engine compartment.

Remove flammable material such as leaves, twigs, papers, trash and so on. These items may accumulate in the engine compartment or around other hot areas and hot parts on the machine.

Keep the access doors to major machine compartments closed and access doors in working condition in order to permit the use of fire suppression equipment, in case a fire should occur.

Clean all accumulations of flammable materials such as fuel, oil, and debris from the machine.

Do not operate the machine near any flame.

Keep shields in place. Exhaust shields (if equipped) protect hot exhaust components from oil spray or fuel spray in a break in a line, in a hose, or in a seal. Exhaust shields must be installed correctly.

Do not weld or flame cut on tanks or lines that contain flammable fluids or flammable material. Empty and purge the lines and tanks. Then clean the lines and tanks with a nonflammable solvent prior to welding or flame cutting. Ensure that the components are properly grounded in order to avoid unwanted arcs.

Dust that is generated from repairing nonmetallic hoods or fenders may be flammable and/or explosive. Repair such components in a ventilated area away from open flames or sparks. Use suitable Personal Protection Equipment (PPE).

Inspect all lines and hoses for wear or deterioration. Replace damaged lines and hoses. The lines and the hoses should have adequate support and secure clamps. Tighten all connections to the recommended torque. Damage to the protective cover or insulation may provide fuel for fires.

Store fuels and lubricants in properly marked containers away from unauthorized personnel. Store oily rags and flammable materials in protective containers. Do not smoke in areas that are used for storing flammable materials.



3001SH02

Use caution when you are fueling a machine. Do not smoke while you are fueling a machine. Do not fuel a machine near open flames or sparks. Always stop the engine before fueling. Fill the fuel tank outdoors. Properly clean areas of spillage.



3001SH03

Never store flammable fluids in the operator compartment of the machine.

Battery and battery cables

The following actions are recommended to minimize the risk of fire or an explosion related to the battery.



3001SH04

Do not operate a machine if battery cables or related parts show signs of wear or damage. Contact your dealer for service.

Follow safe procedures for engine starting with jump-start cables. Improper jumper cable connections can cause an explosion that may result in injury.

Do not charge a frozen battery. This action may cause an explosion.

Gases from a battery can explode. Keep any open flames or sparks away from the top of a battery. Do not smoke in battery charging areas.

Never check the battery charge by placing a metal object across the terminal posts. Use a voltmeter in order to check the battery charge.

Daily inspect battery cables that are in areas that are visible. Inspect cables, clips, straps, and other restraint for damage. Replace any damaged parts. Check for signs of the following, which can occur over time due to use and environmental factors :

- Fraying
- Abrasion
- Cracking
- Discoloration
- Cuts on the insulation of the cable
- Fouling
- Corroded terminals, damaged terminals, and loose terminals

Replace damaged battery cable (s) and replace any related parts. Eliminate any fouling, which may have caused insulation failure or related component damage or wear. Ensure that all components are reinstalled correctly.

An exposed wire on the battery cable may cause a short ground if the exposed area comes into contact with a grounded surface. A battery cable short produces heat from the battery current, which may be a fire hazard.

An exposed wire on the ground cable between the battery and the disconnect switch may cause the disconnect switch to be bypassed if the exposed area comes into contact with a grounded surface. This action may result in an unsafe condition for servicing the machine. Repair components or replace components before servicing the machine.

▲ Fire on a machine can result in personal injury or death. Exposed battery cables that come into contact with a grounded connection can result in fires. Replace cables and related parts that show signs of wear or damage. Contact your HD Hyundai Construction Equipment dealer.

Wiring

Check electrical wires daily. If any of the following conditions exist, replace parts before you operate the machine.

- Fraying
- Signs of abrasion or wear
- Cracking
- Discoloration
- Cuts on insulation
- Other damage

Make sure that all clamps, guards, clips, and straps are reinstalled correctly. This action will help to prevent vibration, rubbing against other parts, and excessive heat during machine operation.

Attaching electrical wiring to hoses and tubes that contain flammable fluids or combustible fluids should be avoided.

Consult your HD Hyundai Construction Equipment dealer for repair or for replacement parts.

Keep wiring and electrical connections free of debris.

Lines, Tubes, and Hoses

Do not bend high-pressure lines. Do not strike high-pressure lines. Do not install any lines that are bent or damaged. Use the appropriate backup wrenches in order to tighten all connections to the recommended torque.

Check lines, tubes, and hoses carefully. Wear Personal Protection Equipment (PPE) in order to check for leaks. Always use a board or cardboard when you check for a leak. Leaking fluid that is under pressure can penetrate body tissue. Fluid penetration can cause serious injury and possible death. A pin hole leak can cause severe injury. If fluid is injected into your skin, you must get treatment immediately. Seek treatment from a doctor that is familiar with this type of injury.

Replace the affected parts if any of the following conditions are present :

- End fittings are damaged or leaking.
- Outer coverings are chafed or cut.
- Wires are exposed.
- Outer coverings are swelling or ballooning.
- Flexible parts of the hoses are kinked.
- Outer covers have exposed embedded armoring.
- End fittings are displaced.

Make sure that all clamps, guards, and heat shields are installed correctly. During machine operation, this action will help to prevent vibration, rubbing against other parts, excessive heat, and failure of lines, tubes, and hoses.

Do not operate a machine when a fire hazard exists. Repair any lines that are corroded, loose, or damaged. Leaks may provide fuel for fires. Consult your HD Hyundai Construction Equipment dealer for repair or for replacement parts.

Ether

Ether (if equipped) is commonly used in cold weather applications. Ether is flammable and poisonous.

Do not spray ether manually into an engine if the machine is equipped with a thermal starting aid for cold weather starting.

Use ether in ventilated areas. Do not smoke while you are replacing an ether cylinder or while you are using an ether spray.

Do not store ether cylinders in living areas or in the operator compartment of a machine. Do not store ether cylinders in direct sunlight or in temperatures above 49°C(120.2 °F). Keep ether cylinders away from unauthorized personnel.

Fire Extinguisher

As an additional safety measure, keep a fire extinguisher on the machine.

Be familiar with the operation of the fire extinguisher. Inspect the fire extinguisher and service the fire extinguisher regularly. Follow the recommendations on the instruction plate.

Consider installation of an aftermarket Fire Suppression System, if the application and working conditions warrant the installation.

Fire Safety

※ **Locate secondary exits and how to use the secondary exits before you operate the machine.**

※ **Locate fire extinguishers and how to use a fire extinguisher before you operate the machine.**

If you find that you are involved in a machine fire, your safety and that of others on site is the top priority. The following actions should only be performed if the actions do not present a danger or risk to you and any nearby people. At all times you should assess the risk of personal injury and move away to a safe distance as soon as you feel unsafe.

Move the machine away from nearby combustible material such as fuel/oil stations, structures, trash, mulch and timber.

Lower any implements and turn off the engine as soon as possible. If you leave the engine running, the engine will continue to feed a fire. The fire will be fed from away damaged hoses that are attached to the engine or pumps.

If possible, turn the battery disconnect switch to the OFF position. Disconnecting the battery will remove the ignition source in the event of an electrical short. Disconnecting the battery will eliminate a second ignition source if electrical wiring is damaged by the fire, resulting in a short circuit.

Notify emergency personnel of the fire and your location.

If your machine is equipped with a fire suppression system, follow the manufacturers procedure for activating the system.

※ **Fire suppression systems need to be regularly inspected by qualified personnel. You must be trained to operate the fire suppression system.**

Use the on-board fire extinguisher and use the following procedure :

1. Pull the pin.
2. Aim the extinguisher or nozzle at the base of the fire.
3. Squeeze the handle and release the extinguishing agent.
4. Sweep the extinguisher from side to side across the base of the fire until the fire is out.

Remember, if you are unable to do anything else, shut off the machine before exiting. By shutting off the machine, fuels will not continue to be pumped into the fire.

If the fire grows out of control, be aware of the following risks :

- Tires on wheeled machines pose a risk of explosion as tires burn. Hot shrapnel and debris can be thrown great distances in an explosion.
- Tanks, accumulators, hoses, and fittings can rupture in a fire, spraying fuels and shrapnel over a large area.

Remember that nearby all of the fluids on the machine are flammable, including coolant and oils. Additionally, plastics, rubbers, fabrics, and resins in fiberglass panels are also flammable.

Fire extinguisher Location

Make sure that a fire extinguisher is available. Be familiar with the operation of the fire extinguisher. Inspect the fire extinguisher and service the fire extinguisher. Obey the recommendations on the instruction plate.

Mount the fire extinguisher in the accepted location per local regulations.

If your machine is equipped with a ROPS structure, strap the mounting plate to the ROPS in order to mount the fire extinguisher. If the weight of the fire extinguisher exceeds 4.5 kg (10 lb), mount the fire extinguisher near the bottom of the ROPS. Do not mount the fire extinguisher at the upper one-third area on the ROPS.

Do not weld the ROPS structure in order to install the fire extinguisher. Also, do not drill holes in the ROPS structure in order to mount the fire extinguisher on the ROPS.

Consult your HD Hyundai Construction Equipment dealer for the proper procedure for mounting the fire extinguisher.

THE EUROPEAN UNION PHYSICAL AGENTS (VIBRATION) DIRECTIVE 2002/44/EC

Vibration Data for Earth-moving Machines

Information Concerning Hand/Arm Vibration Level

When the machine is operated according to the intended use, the hand/arm vibration of this machine is below 2.5 m/s^2 .

Information Concerning Whole Body Vibration Level

The highest root mean square value of weighted acceleration to which the whole body is subjected, is less than 0.5 m/s^2 .

This section provides vibration data and a method for estimating the vibration level for earth moving machines.

Vibration levels are influenced by many different parameters. Many items are listed below.

- Operator training, behavior, mode and stress
- Job site organization, preparation, environment, weather and material
- Machine type, quality of the seat, quality of the suspension system, attachments and condition of the equipment

It is not possible to get precise vibration levels for this machine. The expected vibration levels can be estimated with the information in below Table in order to calculate the daily vibration exposure. A simple evaluation of the machine application can be used.

Estimate the vibration levels for the three vibration directions. For typical operating conditions, use the average vibration levels as the estimated level. With an experienced operator and smooth terrain, subtract the Scenario Factors from the average vibration level. For aggressive operations and severe terrain, add the Scenario Factors to the average vibration level in order to obtain the estimated vibration level.

※ All vibration levels are in meter per second squared.

ISO Reference Table A – Equivalent vibration levels of whole body vibration emission for earthmoving equipment.

Machine family	Machine kind	Typical operating condition	Vibration Levels			Scenario Factors		
			X axis	Y axis	Z axis	X axis	Y axis	Z axis
Excavator	Compact crawler excavator	Excavating	0.33	0.21	0.19	0.19	0.12	0.10
		Hydraulic breaker app.	0.49	0.28	0.36	0.20	0.13	0.17
		Transfer movement	0.45	0.39	0.62	0.17	0.18	0.28
	Crawler excavator	Excavating	0.44	0.27	0.30	0.24	0.16	0.17
		Hydraulic breaker app.	0.53	0.31	0.55	0.30	0.18	0.28
		Mining application	0.65	0.42	0.61	0.21	0.15	0.32
		Transfer movement	0.48	0.32	0.79	0.19	0.20	0.23
	Wheeled excavator	Excavating	0.52	0.35	0.29	0.26	0.22	0.13
		Transfer movement	0.41	0.53	0.61	0.12	0.20	0.19

ISO Reference Table A – Equivalent vibration levels of whole body vibration emission for earthmoving equipment.

Machine family	Machine kind	Typical operating condition	Vibration Levels			Scenario Factors		
			X axis	Y axis	Z axis	X axis	Y axis	Z axis
Loader	skid steer loader (tracks)	V-shaped motion	1.21	1.00	0.82	0.30	0.84	0.32
	Wheel backhoe loader	Excavating	0.28	0.26	0.20	0.09	0.16	0.06
	Wheel loader	Load and carry motion	0.84	0.81	0.52	0.23	0.20	0.14
		Mining application	1.27	0.97	0.81	0.47	0.31	0.47
		Transfer movement	0.76	0.91	0.49	0.33	0.35	0.17
		V-shape motion	0.99	0.84	0.54	0.29	0.32	0.14

※ Refer to “ISO/TR 25398 Mechanical Vibration-Guideline for the assessment of exposure to whole body vibration of ride on operated earthmoving machines” for more information about vibration. This publication uses data that is measured by international institutes, organizations and manufacturers. This document provides information about the whole body exposure of operators of earthmoving equipment.

Guidelines for Reducing Vibration Levels on Earthmoving Equipment

Properly adjust machines. Properly maintain machines. Operate machines smoothly. Maintain the conditions of the terrain. The following guidelines can help reduce the whole body vibration level :

1. Use the right type and size of machine, equipment, and attachments.
2. Maintain machines according to the manufacturer's recommendations.
 - a. Tire pressures
 - b. Brake and steering systems
 - c. Controls, hydraulic system and linkages
3. Keep the terrain in good condition.
 - a. Remove any large rocks or obstacles.
 - b. Fill any ditches and holes.
 - c. Provide machines and schedule time in order to maintain the conditions of the terrain.
4. Use a seat that meets "ISO 7096". Keep the seat maintained and adjusted.
 - a. Adjust the seat and suspension for the weight and the size of the operator.
 - b. Inspect and maintain the seat suspension and adjustment mechanisms.
5. Perform the following operations smoothly.
 - a. Steer
 - b. Brake
 - c. Accelerate
 - d. Shift the gears.
6. Move the attachments smoothly.
7. Adjust the machine speed and the route in order to minimize the vibration level.
 - a. Drive around obstacles and rough terrain.
 - b. Slow down when it is necessary to go over rough terrain.
8. Minimize vibrations for a long work cycle or a long travel distance.
 - a. Use machines that are equipped with suspension systems.
 - b. Use the ride control system on machines.
 - c. If no ride control system is available, reduce speed in order to prevent bounce.
 - d. Haul the machines between workplaces.
9. Less operator comfort may be caused by other risk factors. The following guidelines can be effective in order to provide better operator comfort:
 - a. Adjust the seat and adjust the controls in order to achieve good posture.
 - b. Adjust the mirrors in order to minimize twisted posture.
 - c. Provide breaks in order to reduce long periods of sitting.
 - d. Avoid jumping from the cab
 - e. Minimize repeated handling of loads and lifting of loads.
 - f. Minimize any shocks and impacts during sports and leisure activities.

Sources

The vibration information and calculation procedure is based on "ISO/TR 25398 Mechanical Vibration- Guideline for whole body vibration exposure of operators of earthmoving equipment. The method is based on measured vibration emission under real working conditions for all machines.

You should check the original directive. This document summarizes part of the content of the applicable law. This document is not meant to substitute the original sources. Other parts of these documents are based on information from the United Kingdom Health and Safety Executive.

MODIFICATIONS

Modifications to the machine, including use of unauthorized accessories and spare parts, may affect the machine's condition and its ability to function as it was designed. No changes of any kind may be performed without first obtaining written approval from HD Hyundai Construction Equipment. HD Hyundai Construction Equipment reserves the right to refuse all warranty claims that have resulted due to or can be attributed to unauthorized modifications.

Never modify the operator's cabin by welding, grinding, drilling holes or adding attachments unless instructed by HD Hyundai Construction Equipment in writing. Changes to the cabin can cause loss of operator protection from roll-over and falling objects, and result in death or serious injury.

The person who performs unauthorized modifications assumes all responsibility for consequences that arise due to the modification or can be attributed to the modification, including damage to the machine.


Modifications may be considered to be officially approved, if at least one of the following conditions has been met :

1. The attachment, the accessory, or the spare part has been made or distributed by HD Hyundai Construction Equipment and has been installed according to approved methods described in a publication available from HD Hyundai Construction Equipment; or
2. The modification has been approved in writing by the Engineering Department at each product company within HD Hyundai Construction Equipment.

2. DURING OPERATING THE MACHINE


Use the handle and footstep when getting on or off the machine.

Do not jump on or off the machine.

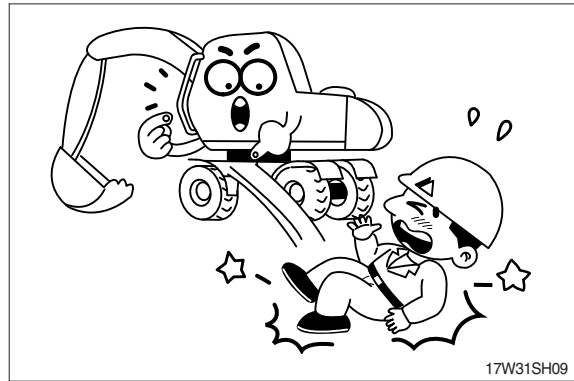


Sound the horn to warn nearby personnel before operating the machine.

Remove all the obstacles like frost on the window before operating the machine for the good visibility.

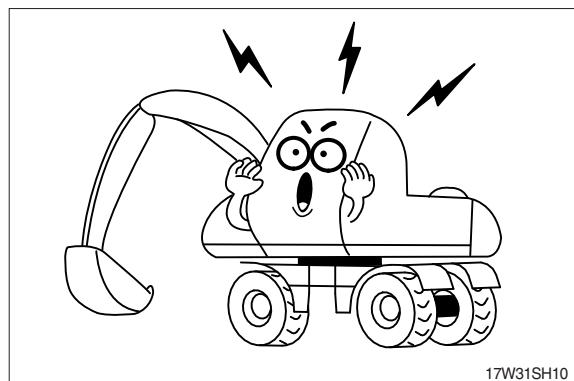

Operate carefully to make sure all personnel or obstacles are clear within the working range of the machine.


Place safety guards if necessary.

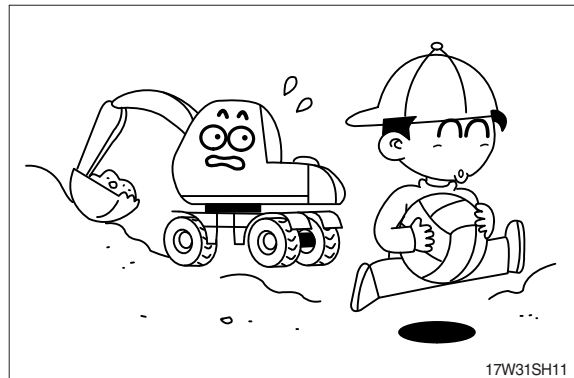


When using the work equipment, pay attention to job site.



Provide proper ventilation when operating engine in a closed area to avoid the danger of exhaust gases.

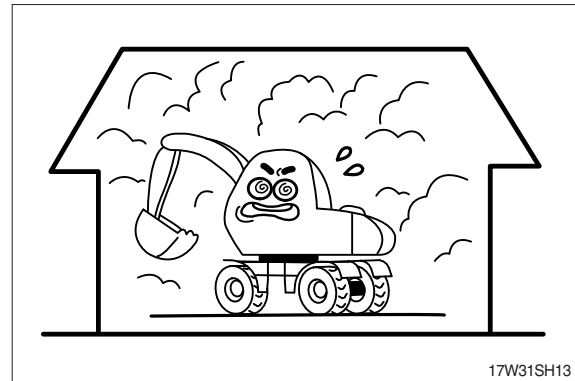


Check the locations of underground gas pipes or water line and secure the safety before operation.

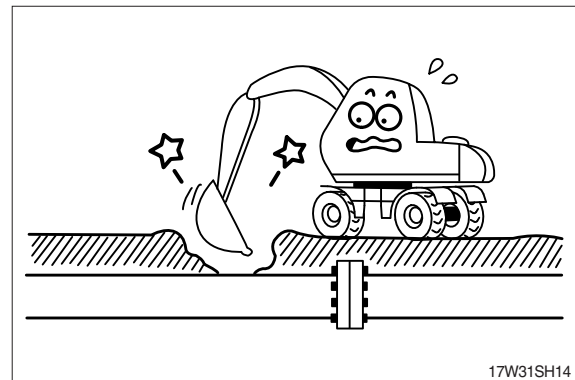


The operating near the electrical lines is very dangerous.

Operate within safe working range permitted as below.

Supply voltage	Min safe separation
6.6 kV	3 m (10 ft)
33.0 kV	4 m (13 ft)
66.0 kV	5 m (16 ft)
154.0 kV	8 m (26 ft)
275.0 kV	10 m (33 ft)

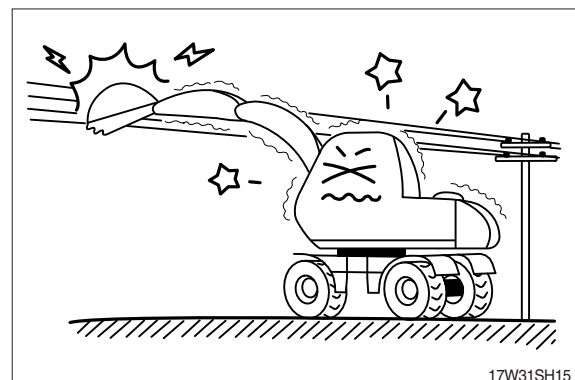


If the machine touches the electric power lines, keep sitting on the operator's seat and make sure the personnel on the ground not to touch the machine until turning off the electric current. Jump off the machine without contacting the machine when you need to get off.

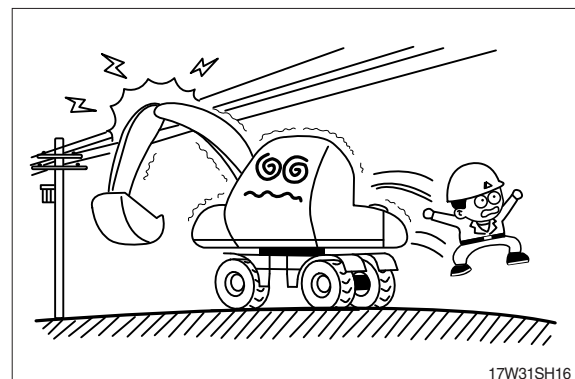


Watch out for obstacles.

Be particularly careful to check the machine clearance during the swing.

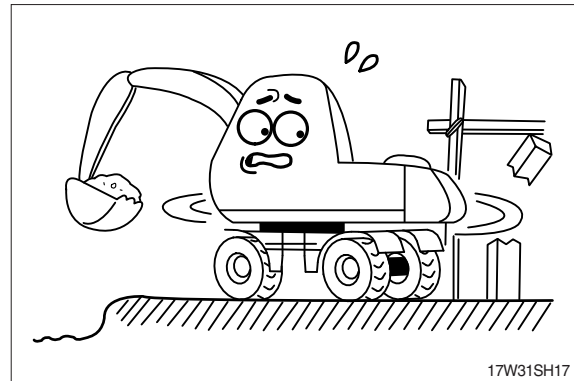


When using the machine as breaker or working in a place where stones may fall down, cab roof guard and head guard should be provided for proper protection.

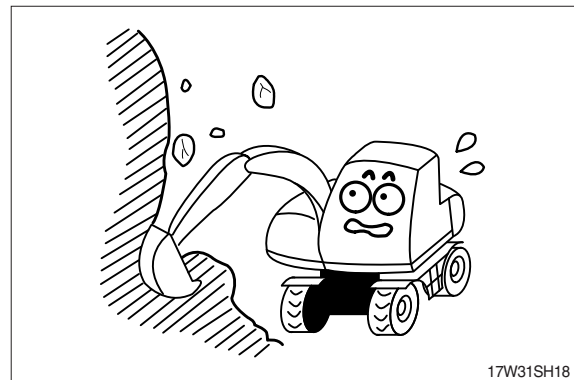


Avoid operating on a cliff or soft ground as there is danger of rolling over.

Make sure to get off easily as keeping the track at a right angle and putting the travel motor into the backward position when working on a cliff or soft ground inevitably.

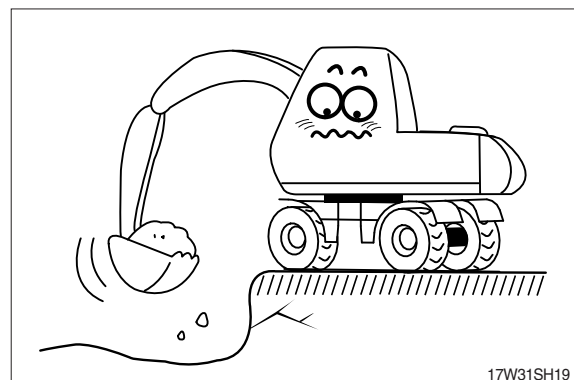


Operate for the lifting work considering the capacity of machine, weight and width of the load.


Be careful not to lift exceeding the machine capacity as it can be the cause of machine damage and safety accident.

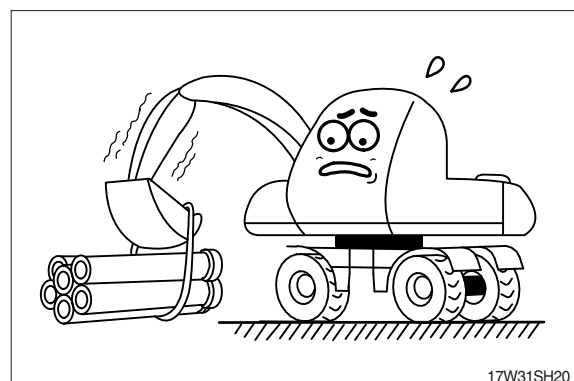


Avoid traveling in a cross direction on a slope as it can cause the danger of rolling over and sliding.

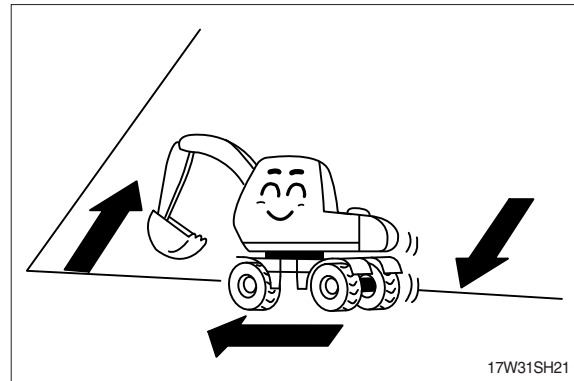


Traveling on a slope is dangerous.
Be sure to operate slowly when traveling down a slope and maintain the bucket at a height of 20~30 cm (1 ft) above the ground so that it can be used as brake in an emergency.

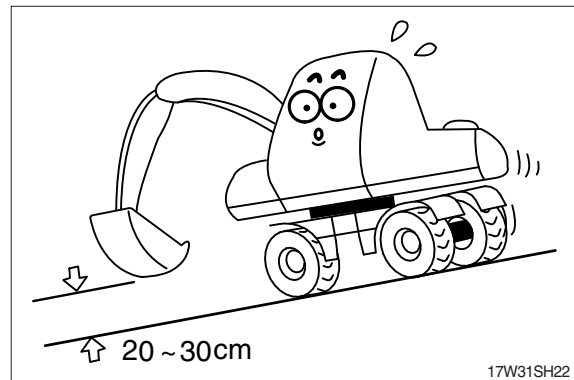


Steering of the machine while traveling on a slope is dangerous.
When an inevitable turning of direction is required, turn on the flat and solid ground.

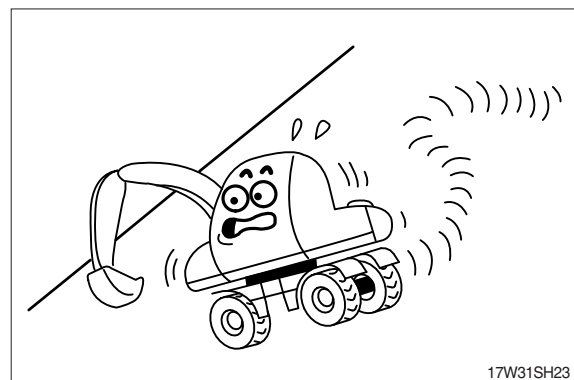


The engine angularity limits are 35 degree.
Do not operate by more than the engine limits in any case.

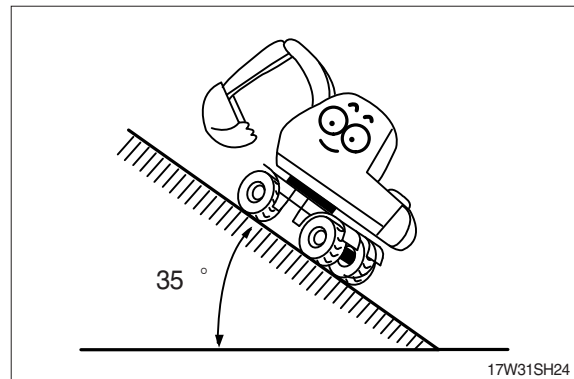


The operation on a slope is dangerous.
Avoid operating the machine on a slope of over
10 degree.

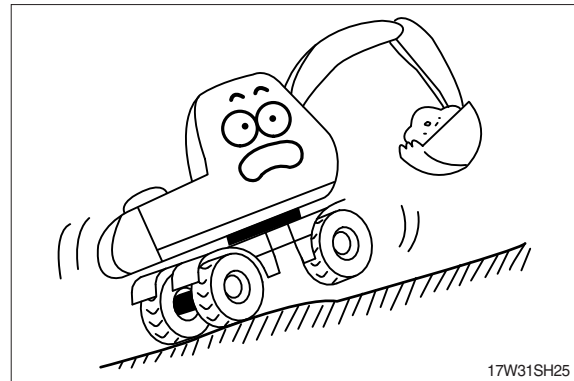


Operate the machine after making ground flat
when operation is required on a slope.

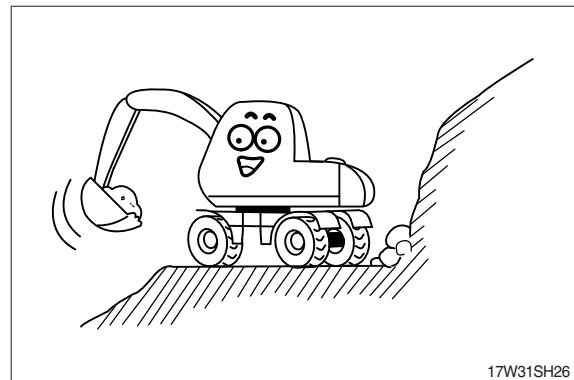

The swing on the slope can be danger of rolling
over.
Do not operate to swing the machine with the
bucket loaded on a slope since the machine
may lose its balance under such an instance.

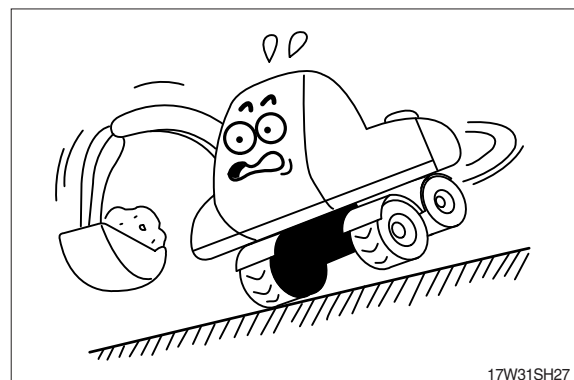


Avoid parking and stopping on a slope.
Lower the bucket to the ground and block the
tires when parking.

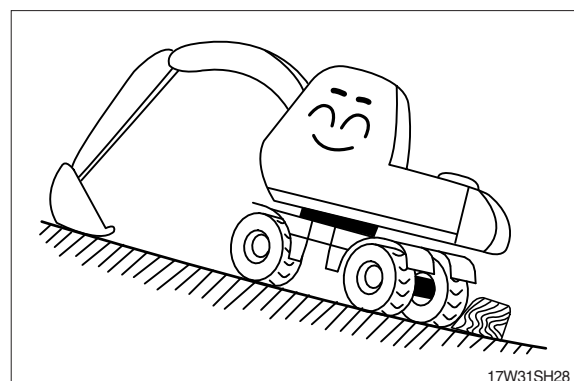


Before traveling the machine, sound the horn to warn nearby personnel.


Operate forward and backward correctly with confirming the location of the travel motor.

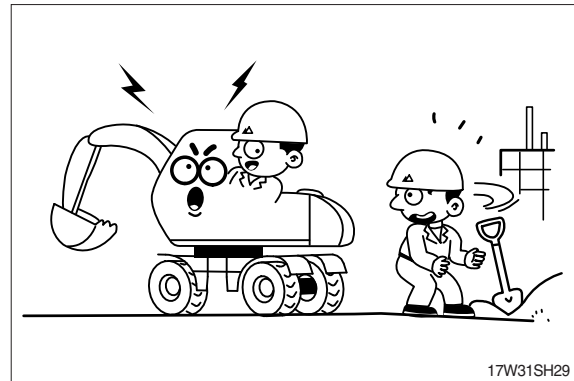


Slow down when traveling through obstacles or uneven ground.

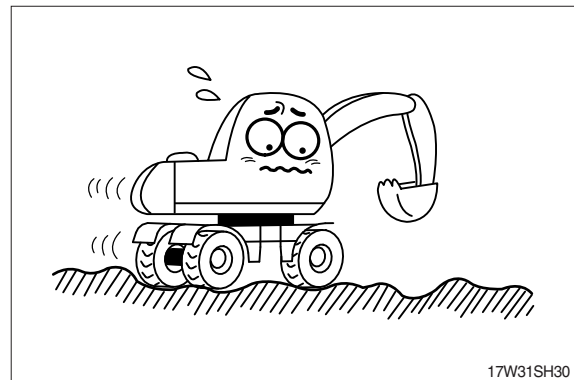

When operating in water or when crossing shallow, check the bed soil condition and depth and flow speed of water, then proceed taking care that water is not above axle center.

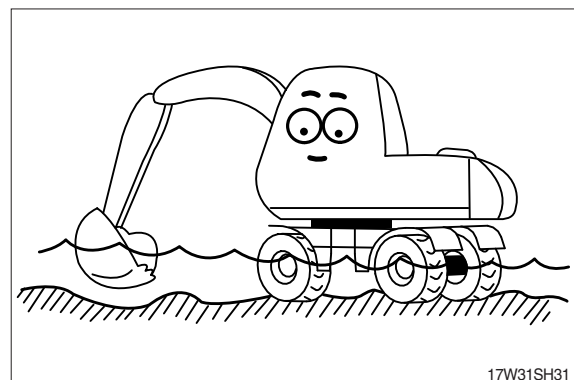

This machine has ROPS / FOG with option.
Do not attempt to repair a rollover protective structure (ROPS) after an accident.
Repaired structures do not provide the original structure and protection.
Test and approved as a protective CAB according to ROPS and FOG standard.
Meets : ISO 10262 / 3449 / 12117-2
SAE J1356 / JISO 3449

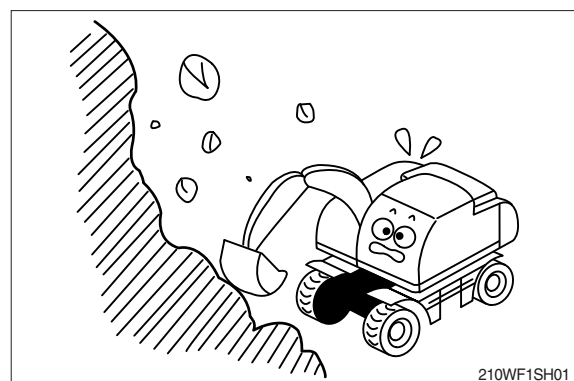

MOUNTING AND DISMOUNTING

Never jump on or off the machine. **Never** get on or off a moving machine.


When mounting or dismounting, always face the machine and use the handrails, machine or foot steps. In this case please contact your HD Hyundai Construction Equipment distributor.

Do not hold any control levers when getting on or off the machine.

Ensure safety by always maintaining at least three-point contact of hands and feet with the handrails, foot steps.

Always remove any oil or mud from the handrails, foot steps. If they are damaged, repair them and tighten any loose bolts.

If grasping the door handrail when mounting or dismounting or moving on the tires, open and lock the door securely in the open position. Otherwise, the door may move suddenly, causing you to lose balance and fall.

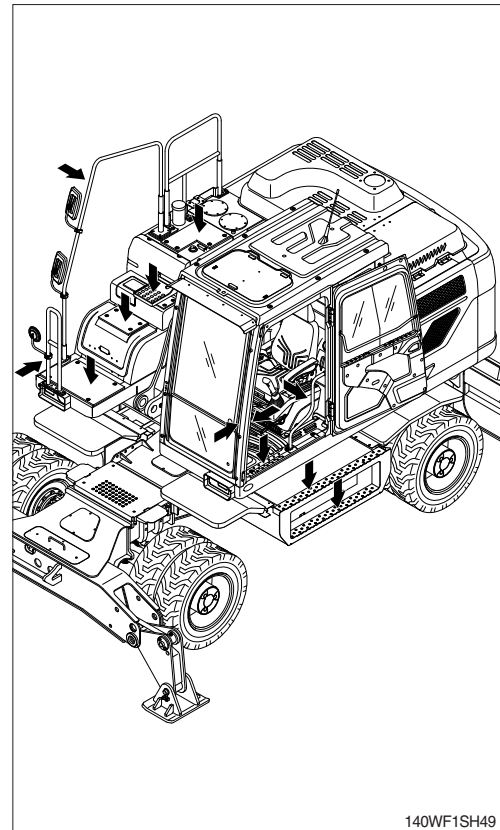

140WF1SH49

KEEP RIDERS OFF MACHINE

Riders on a machine are subject to injury such as being struck objects and being thrown off the machine.


Only allow the operator on the machine. Keep riders off.

ALWAYS APPLY LOCK WHEN LEAVING MACHINE

When leaving the machine, always place the swing lock pin securely in the LOCK position.

If you accidentally touch the travel or swing lever when they are not locked, the work equipment may suddenly move and cause serious injury or damage.

When leaving the machine, lower the work equipment completely to the ground, stop the engine and use the key to lock all the equipment. Then set the swing lock pin to the lock position. Always take the key with you.

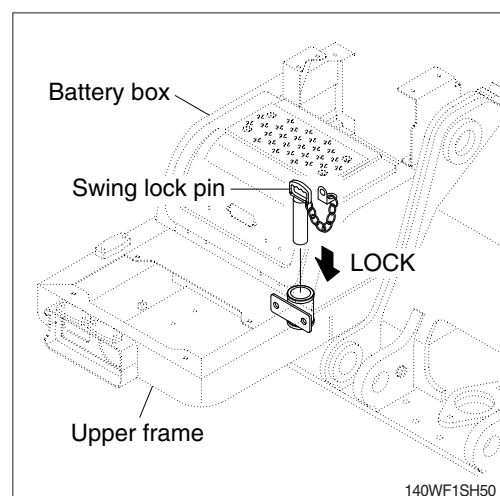


140WF1SH50

3. DURING MAINTENANCE

Stop the engine immediately when the trouble of the machine is found.


Inspect immediately the cause of trouble such as vibration, overheating and trouble in the cluster then repair.

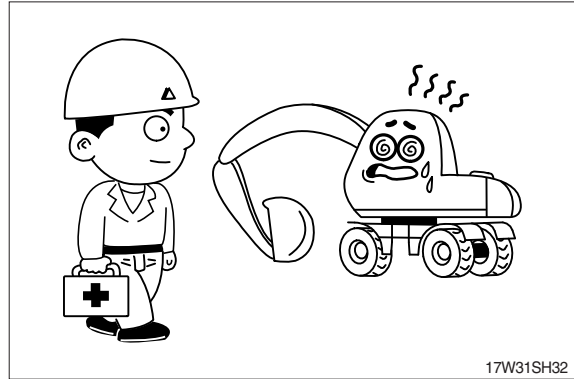

Park on a flat place and stop the engine for inspecting and repairing. Properly TAG machine is not operational. (remove start key)

Extreme care shall be taken during maintenance work. Parts may require additional safe guard.

Lower the dozer blade and/or outrigger to the ground.

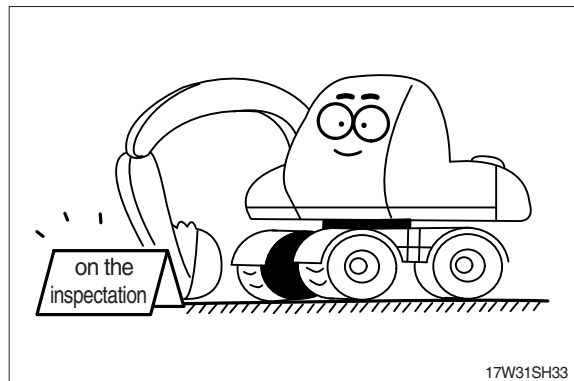


Do not remove the radiator cap from hot engine. Open the cap after the engine cools, below 50°C (122°F) to prevent personal injury from heated coolant spray or steam.




Do not work below the machine.

Be sure to work with proper safety supports.


Do not depend on the hydraulic cylinders to hold up the equipment and attachment.

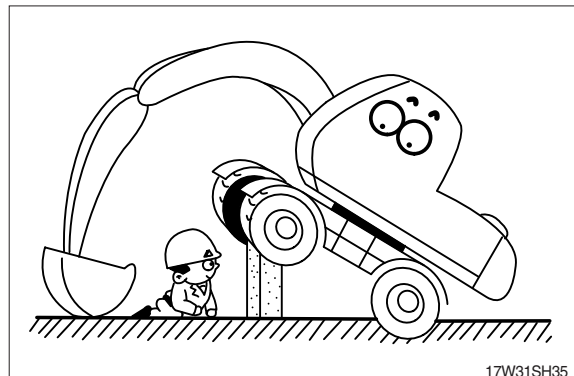

There is the danger of fire in fuel and oil.
Store in cool and dry area, away from any open flames.

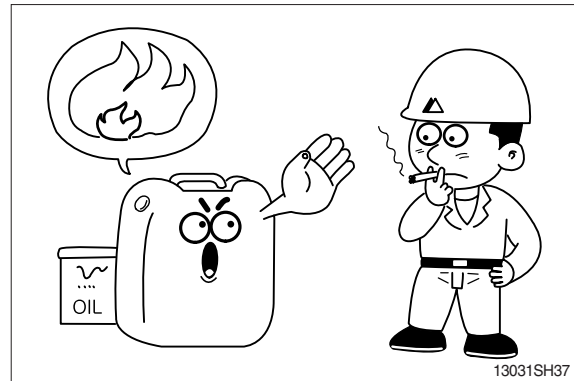


Do not touch exhaust pipe, or may cause severe burn.

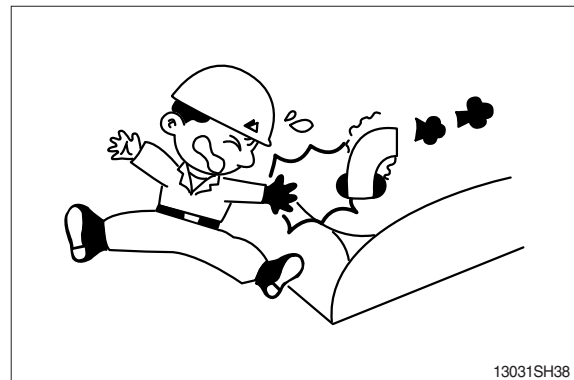

Do not open the engine hood and covers while the engine is running.



Be careful of not hitting the edges when you service engine.

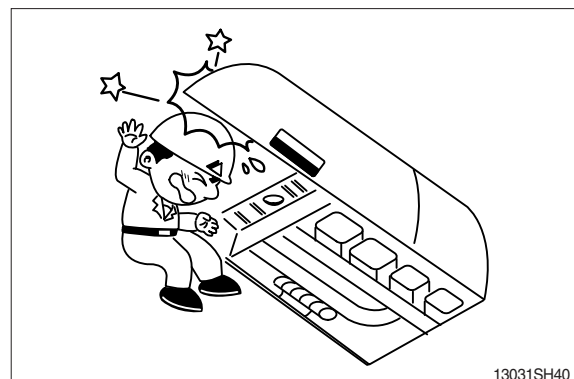

Be careful that the front window may be promptly closed.


Be sure to support stay, when the side door needs to be opened.

Be careful that the open side door may closed by the external or natural force like strong wind.




The antislip protection should be replaced if they have become worn or have been printed over.

Be sure to free of oil, water and grease etc.

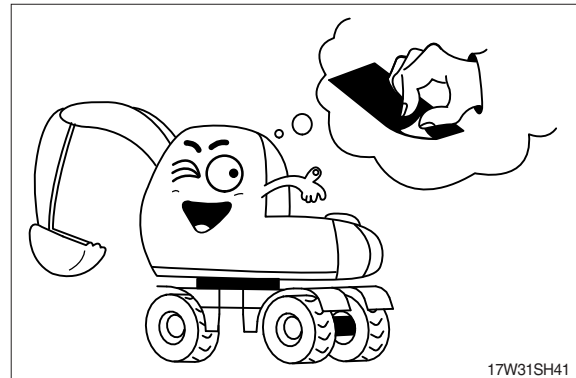

Be careful of not touching slip, fall down etc., when you work at the upper frame to service engine and/or other component.

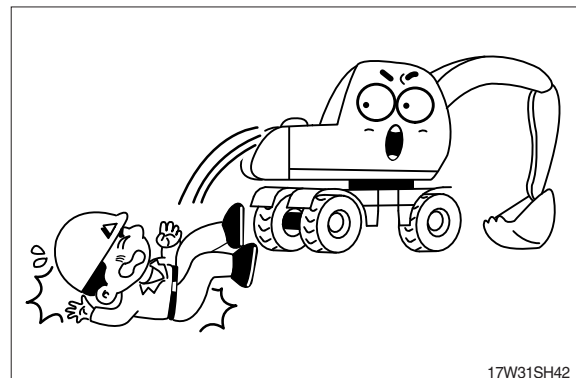


HIGH PRESSURE GAS

Contain high pressure gas.

To avoid explosion and personal injury, do not expose to fire, do not weld, do not drill.

Relieve pressure before discharging.

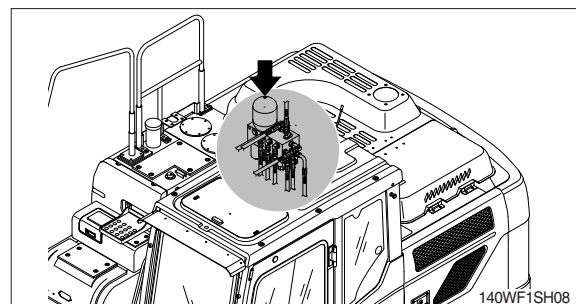

LIFT EYES CAN FAIL


Lift eyes or tank can fail when lifting tank containing fluids resulting in possible personal injury.

Drain tank of all fluids before lifting.


4. PARKING

When leaving the machine after parking, lower the bucket to the ground completely and put the safety knob at the LOCK position then remove the key.

Lock the cab door.

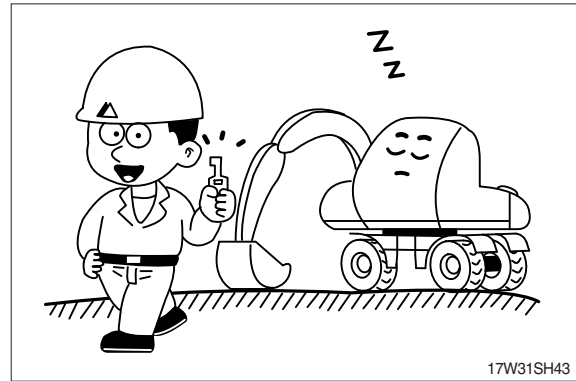


Park the machine in the flat and safe place.

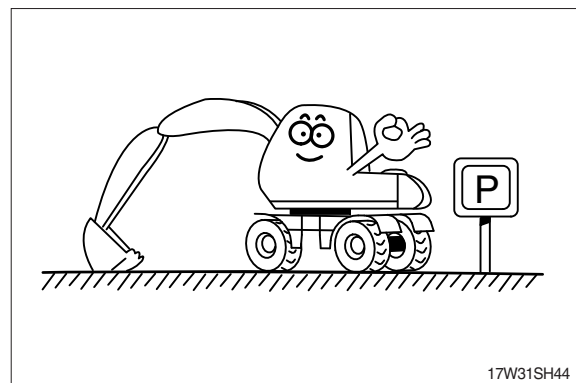


Hope you can work easily and safely observing safety rules.

For safe operation, observe all safety rules.

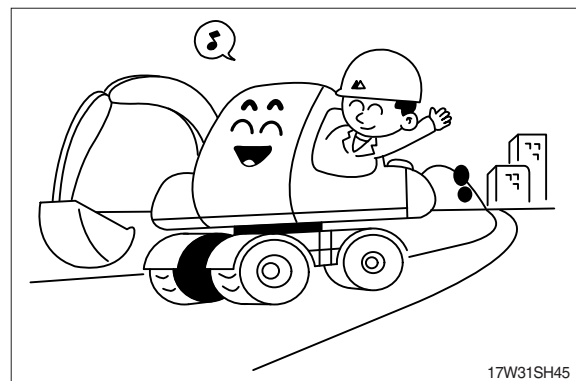

SPECIFICATIONS


1. MAJOR COMPONENTS

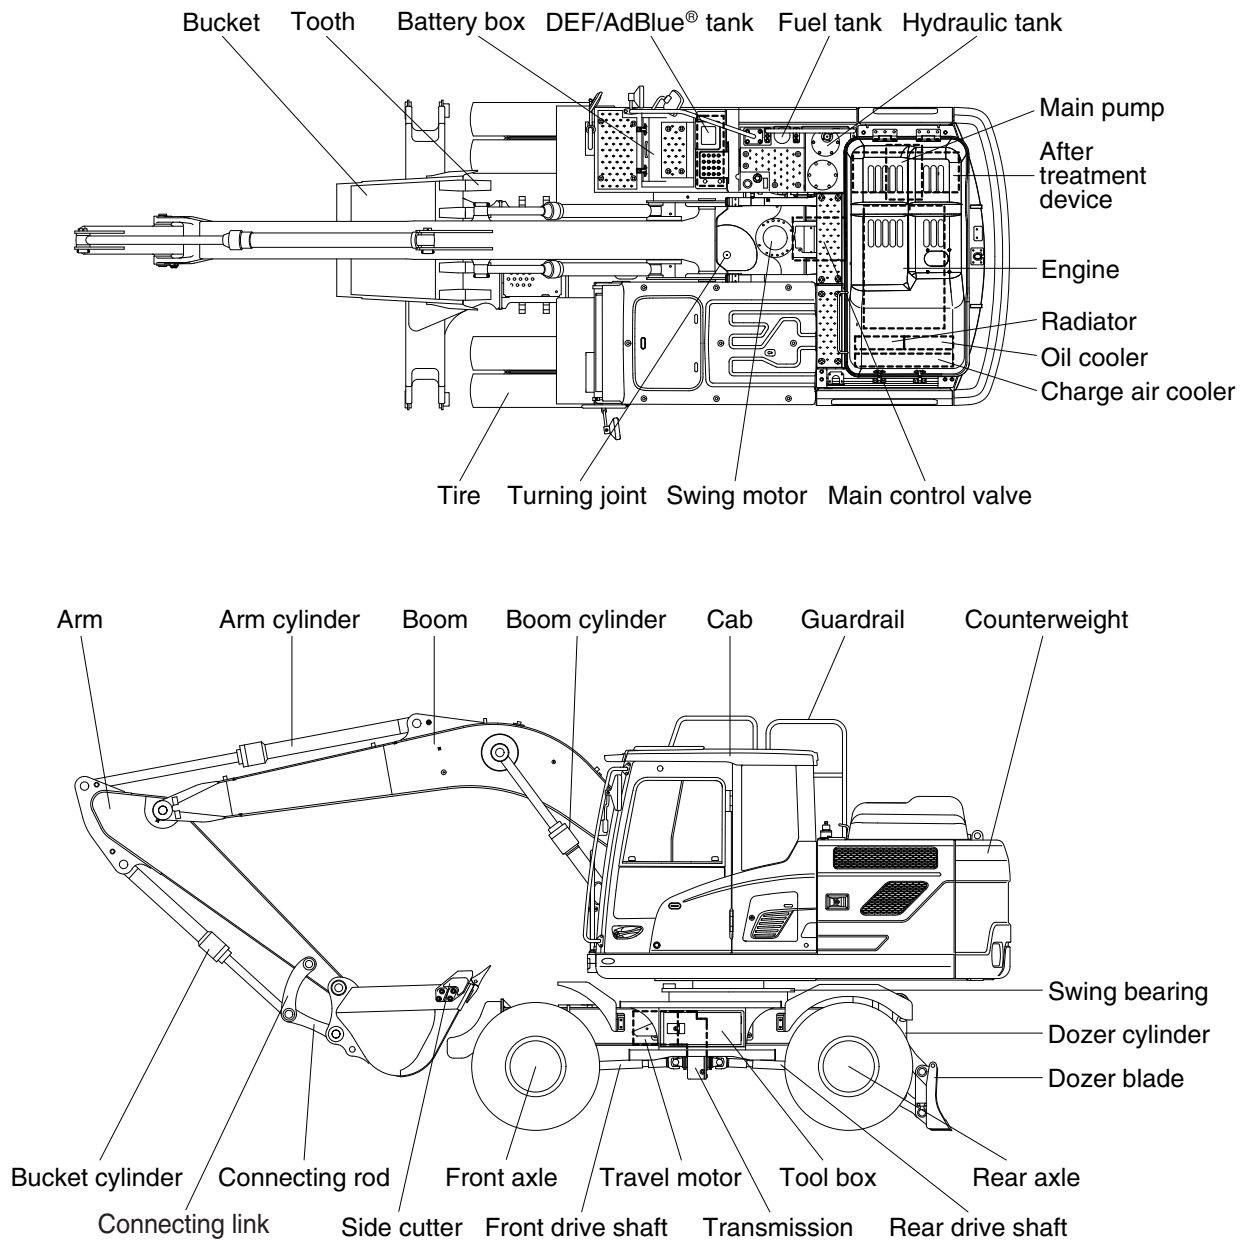

140WF2SP01

2. SPECIFICATIONS


1) 4.6 m (15' 1") MONO BOOM, 2.1 m (6' 11") ARM AND REAR DOZER BLADE

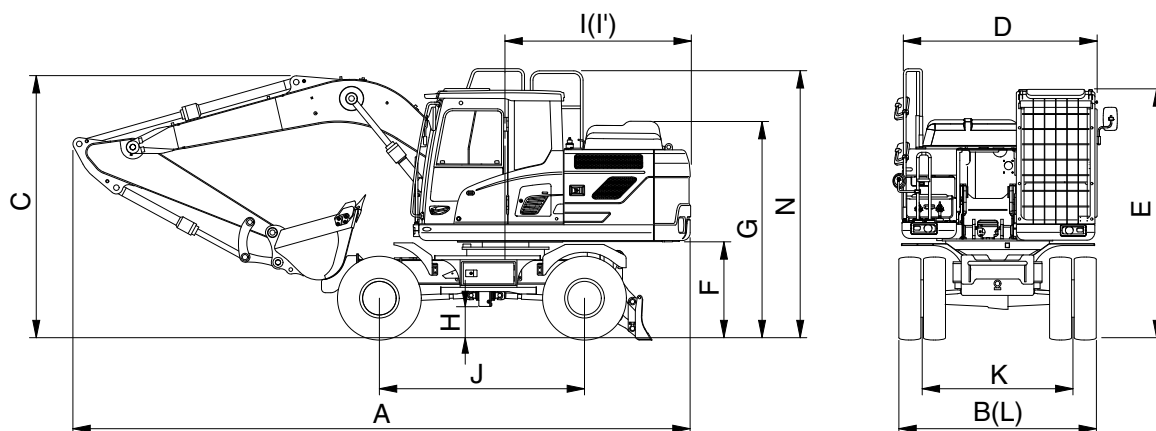

140WF2SP02

Description		Unit	Specification
Operating weight		kg (lb)	13880 (30600)
Bucket capacity (SAE heaped), standard		m ³ (yd ³)	0.58 (0.76)
Overall length	A	mm (ft-in)	7760 (25' 6")
Overall width	B		2500 (8' 2")
Overall height of boom	C		3500 (11' 6")
Upperstructure width	D		2475 (8' 1")
Cab height	E		3140 (10' 4")
Ground clearance of counterweight	F		1210 (4' 0")
Engine cover height	G		2740 (9' 0")
Minimum ground clearance	H		397 (1' 4")
Rear-end distance	I		2330 (7' 8")
Rear-end swing radius	I'		2330 (7' 8")
Wheel base	J		2600 (8' 6")
Tread	K		1944 (6' 5")
Dozer blade width	L		2490 (8' 2")
Overall height of guardrail	N		3390 (11' 1")
Travel speed	Low	km/hr (mph)	10 (6.2)
	High		39 (24.2)
	Creep		3.5 (2.2)
Swing speed		rpm	11.6
Gradeability		Degree (%)	35 (70)
Max traction force		kgf (lbf)	7800 (17200)

2) 4.9 m (16' 1") ADJUST BOOM, 2.1 m (6' 11") ARM AND REAR DOZER BLADE

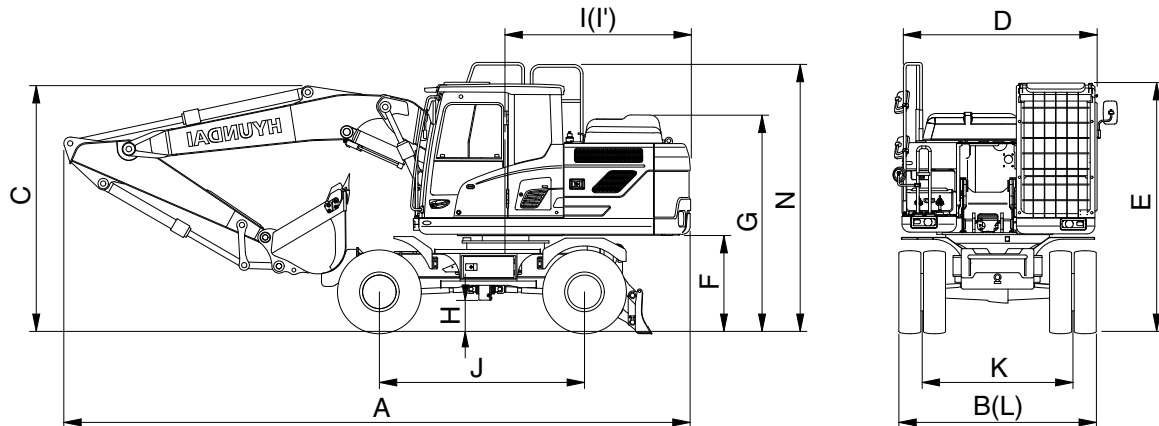


140WF2SP03

Description		Unit	Specification
Operating weight		kg (lb)	14280 (31480)
Bucket capacity (SAE heaped), standard		m ³ (yd ³)	0.58 (0.76)
Overall length	A	mm (ft-in)	6110 (20' 1")
Overall width	B		2500 (8' 2")
Overall height of boom	C		3980 (13' 1")
Upperstructure width	D		2475 (8' 1")
Cab height	E		3140 (10' 4")
Ground clearance of counterweight	F		1210 (4' 0")
Engine cover height	G		2740 (9' 0")
Minimum ground clearance	H		397 (1' 4")
Rear-end distance	I		2330 (7' 8")
Rear-end swing radius	I'		2330 (7' 8")
Wheel base	J		2600 (8' 6")
Tread	K		1944 (6' 5")
Dozer blade width	L		2490 (8' 2")
Overall height of guardrail	N		3390 (11' 1")
Travel speed	Low	km/hr (mph)	10 (6.2)
	High		39 (24.2)
	Creep		3.5 (2.2)
Swing speed		rpm	11.6
Gradeability		Degree (%)	35 (70)
Max traction force		kgf (lbf)	7800 (17200)

3. WORKING RANGE

1) 4.6 m (15' 1") MONO BOOM

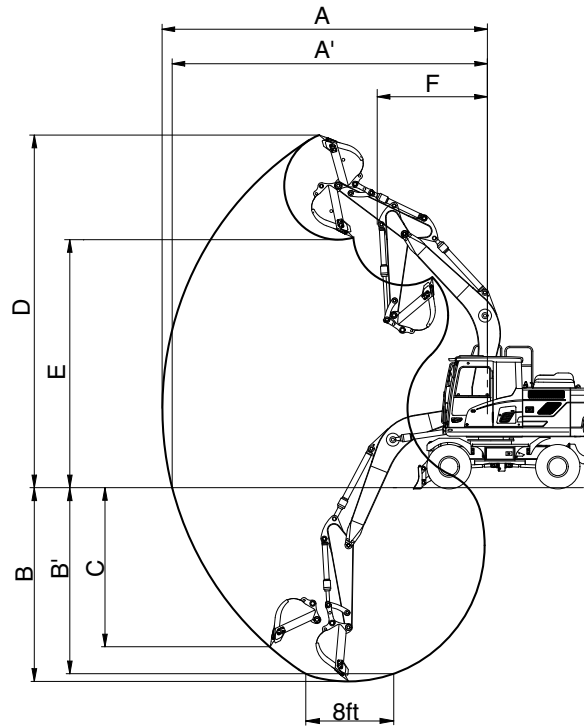


140WF2SP04

Description		1.9 m (6' 3") Arm	*2.1 m (6' 11") Arm	2.5 m (8' 2") Arm	3.0 m (9' 10") Arm
Max digging reach	A	7750 mm (25' 5")	7920 mm (26' 0")	8320 mm (27' 4")	8780 mm (28'10")
Max digging reach on ground	A'	7530 mm (24' 8")	7700 mm (25' 3")	8120 mm (26' 8")	8590 mm (28' 2")
Max digging depth	B	4650 mm (15' 3")	4850 mm (15'11")	5250 mm (17' 3")	5750 mm (18'10")
Max digging depth (8 ft level)	B'	4390 mm (14' 5")	4600 mm (15' 1")	5040 mm (16' 6")	5570 mm (18' 3")
Max vertical wall digging depth	C	4350 mm (14' 3")	4460 mm (14' 8")	5030 mm (16' 6")	5550 mm (18' 3")
Max digging height	D	8400 mm (27' 7")	8470 mm (27' 9")	8790 mm (28'10")	9070 mm (29' 9")
Max dumping height	E	5960 mm (19' 7")	6040 mm (19'10")	6350 mm (20'10")	6620 mm (21' 9")
Min swing radius	F	2620 mm (8' 7")	2670 mm (8' 10")	2650 mm (8' 8")	2670 mm (8' 9")
Bucket digging force	SAE	87.3 [95] kN	87.3 [95] kN	87.3 [95] kN	87.3 [95] kN
		8800 [9660] kgf	8800 [9660] kgf	8800 [9660] kgf	8800 [9660] kgf
		19620 [21300] lbf	19620 [21300] lbf	19620 [21300] lbf	19620 [21300] lbf
	ISO	102 [110.8] kN	102 [110.8] kN	102 [110.8] kN	102 [110.8] kN
		10400 [11290] kgf	10400 [11290] kgf	10400 [11290] kgf	10400 [11290] kgf
		22930 [24890] lbf	22930 [24890] lbf	22930 [24890] lbf	22930 [24890] lbf
Arm digging force	SAE	76.5 [83.1] kN	73.6 [79.9] kN	62.8 [68.2] kN	55.9 [60.7] kN
		7800 [8470] kgf	7500 [8140] kgf	6400 [6950] kgf	5700 [6190] kgf
		17200 [18670] lbf	16530 [17950] lbf	14110 [15320] lbf	12570 [13640] lbf
	ISO	80.4 [87.3] kN	77.5 [84.1] kN	65.7 [71.4] kN	57.9 [62.8] kN
		8200 [8900] kgf	7900 [8580] kgf	6700 [7270] kgf	5900 [6410] kgf
		18080 [19630] lbf	17420 [18910] lbf	14770 [16040] lbf	13010 [14120] lbf

* : Standard [] : Power boost

2) 4.9 m (16' 1") ADJUST BOOM

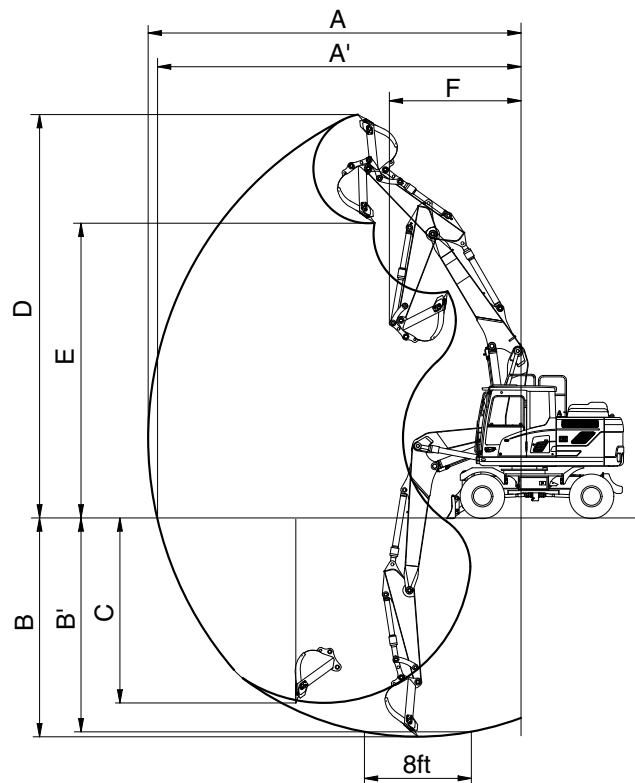

140WF2SP05

Description		1.9 m (6' 3") Arm	2.1 m (6' 11") Arm	2.5 m (8' 2") Arm
Max digging reach	A	8140 mm (26' 8")	8310 mm (27' 3")	8720 mm (28' 7")
Max digging reach on ground	A'	7930 mm (26' 0")	8110 mm (26' 7")	8530 mm (28' 0")
Max digging depth	B	4810 mm (15' 9")	5010 mm (16' 5")	5410 mm (17' 9")
Max digging depth (8 ft level)	B'	4700 mm (15' 5")	4890 mm (16' 1")	5310 mm (17' 5")
Max vertical wall digging depth	C	4190 mm (13' 9")	4360 mm (14' 4")	4820 mm (15'10")
Max digging height	D	9100 mm (29'10")	9180 mm (30' 1")	9560 mm (31' 4")
Max dumping height	E	6620 mm (21' 9")	6700 mm (22' 0")	7070 mm (23' 2")
Min swing radius	F	2660 mm (8' 9")	2820 mm (9' 3")	2690 mm (8'10")
Bucket digging force	SAE	87.3 [94.8] kN	87.3 [94.8] kN	87.3 [94.8] kN
		8800 [9600] kgf	8800 [9600] kgf	8800 [9600] kgf
		19620 [21300] lbf	19620 [21300] lbf	19620 [21300] lbf
	ISO	102 [110.8] kN	102 [110.8] kN	102 [110.8] kN
		10400 [11290] kgf	10400 [11290] kgf	10400 [11290] kgf
		22930 [24890] lbf	22930 [24890] lbf	22930 [24890] lbf
Arm digging force	SAE	76.5 [83.1] kN	73.6 [79.9] kN	62.8 [68.2] kN
		7800 [8470] kgf	7500 [8140] kgf	6400 [6950] kgf
		17200 [18670] lbf	16530 [17950] lbf	14110 [15320] lbf
	ISO	80.4 [87.3] kN	77.5 [84.1] kN	65.7 [71.4] kN
		8200 [8900] kgf	7900 [8580] kgf	6700 [7270] kgf
		18080 [19630] lbf	17420 [18910] lbf	14770 [16040] lbf



[] : Power boost


4. WEIGHT








 


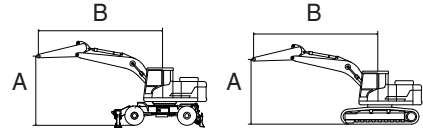Item	HW140	
	kg	lb
Upperstructure assembly	4510	9940
Main frame weld assembly	1180	2600
Engine assembly	520	1150
Main pump assembly	100	220
Main control valve assembly	135	300
Swing motor assembly	120	265
Hydraulic oil tank assembly	180	400
Fuel tank assembly	140	310
Counterweight	1700	3750
Cab assembly	500	1100
Lower frame weld assembly	1340	2950
Swing bearing	210	465
Travel motor assembly	60	130
Turning joint	120	265
Transmission assembly	140	310
Front axle assembly	520	1150
Rear axle assembly	480	1060
Dozer blade assembly (front)	590	1300
Dozer blade assembly (rear)	560	1240
Front attachment assembly (4.6 m boom, 2.1 m arm, 0.58 m ³ SAE heaped bucket)	2380	5250
4.6 m boom assembly	830	1830
4.9 m adjustable boom assembly	1150	2540
2.1 m arm assembly	385	850
0.58 m ³ SAE heaped bucket assembly	480	1060
Boom cylinder assembly	121	267
Arm cylinder assembly	171	377
Bucket cylinder assembly	123	271
Bucket control link assembly	90	200
2.5 m arm assembly	435	960
Oscillating cylinder assembly	30	70
Front outrigger assembly	800	1765
Rear outrigger assembly	790	1740
Adjustable boom cylinder assembly	120	260
Adjustable cylinder assembly	180	400
Outrigger cylinder assembly	110	240
Blade cylinder assembly (front)	45	100
Blade cylinder assembly (rear)	50	110

5. LIFTING CAPACITIES

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	1900	1700	-	500	-	Down	-	-

 : Rating over-front
  : Rating over-side or 360 degree



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*4140 *9130	*4140 *9130			*3560 *7850	*3560 *7850	4.95 (16.2)
4.5 m (14.8 ft)	kg lb					*4450 *9810	4200 9260			*3320 *7320	2690 5930	5.92 (19.4)
3.0 m (9.8 ft)	kg lb					*5400 *11900	3990 8800	3600 7940	2580 5690	3250 7170	2330 5140	6.39 (21.0)
1.5 m (4.9 ft)	kg lb					5480 12080	3790 8360	3510 7740	2500 5510	3120 6880	2230 4920	6.49 (21.3)
Ground Line	kg lb			*6540 *14420	*6540 *14420	5360 11820	3680 8110	3460 7630	2450 5400	3290 7250	2340 5160	6.22 (20.4)
-1.5 m (-4.9 ft)	kg lb	*6610 *14570	*6610 *14570	*9530 *21010	7060 15560	5360 11820	3680 8110			3910 8620	2760 6080	5.54 (18.2)
-3.0 m (-9.8 ft)	kg lb			*7420 *16360	7250 15980					*5070 *11180	4170 9190	4.24 (13.9)

Note 1. Lifting capacity are based on SAE J1097 and ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. *Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.


The difference between the weight of a work tool attachment must be subtracted.




 




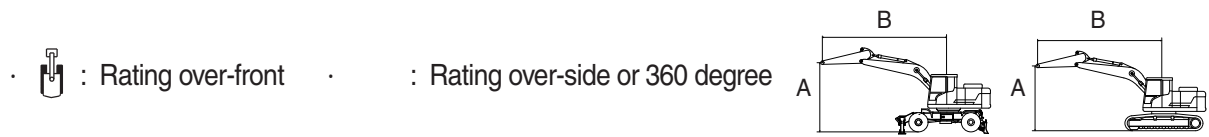

Consult your HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause possible personal injury or property damage.


Make adjustments to the rated load as necessary for non-standard configurations.






 



 
Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	1900	1700	-	500	-	Up	-	-

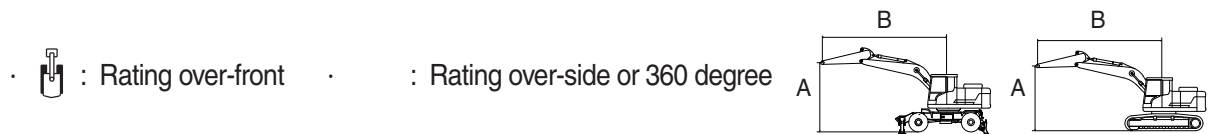


Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m	kg					*4140	*4140			*3560	*3560	4.95
(19.7 ft)	lb					*9130	*9130			*7850	*7850	(16.2)
4.5 m	kg					*4450	4210			*3320	2700	5.92
(14.8 ft)	lb					*9810	9280			*7320	5950	(19.4)
3.0 m	kg					*5400	4000	3600	2580	3250	2340	6.39
(9.8 ft)	lb					*11900	8820	7940	5690	7170	5160	(21.0)
1.5 m	kg					5480	3800	3510	2510	3120	2240	6.49
(4.9 ft)	lb					12080	8380	7740	5530	6880	4940	(21.3)
Ground	kg			*6540	*6540	5360	3690	3460	2460	3290	2340	6.22
Line	lb			*14420	*14420	11820	8140	7630	5420	7250	5160	(20.4)
-1.5 m	kg	*6610	*6610	*9530	7080	5360	3690			3910	2760	5.54
(-4.9 ft)	lb	*14570	*14570	*21010	15610	11820	8140			8620	6080	(18.2)
-3.0 m	kg			*7420	7270					*5070	4180	4.24
(-9.8 ft)	lb			*16360	16030					*11180	9220	(13.9)




 

 



 
Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	1900	2200	-	500	-	Down	-	-

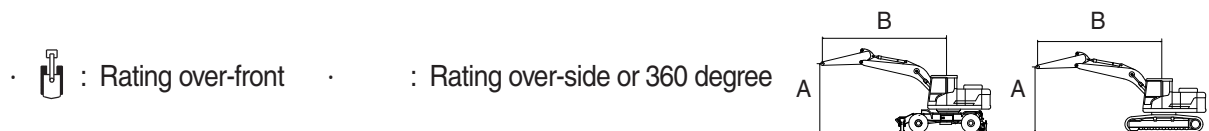

Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m	kg					*4140	*4140			*3560	*3560	4.95
(19.7 ft)	lb					*9130	*9130			*7850	*7850	(16.2)
4.5 m	kg					*4450	*4450			*3320	2960	5.92
(14.8 ft)	lb					*9810	*9810			*7320	6530	(19.4)
3.0 m	kg					*5400	4380	3910	2840	*3350	2580	6.39
(9.8 ft)	lb					*11900	9660	8620	6260	*7390	5690	(21.0)
1.5 m	kg					5960	4180	3830	2770	3410	2470	6.49
(4.9 ft)	lb					13140	9220	8440	6110	7520	5450	(21.3)
Ground Line	kg			*6540	*6540	5840	4070	3780	2720	3590	2590	6.22
	lb			*14420	*14420	12870	8970	8330	6000	7910	5710	(20.4)
-1.5 m	kg	*6610	*6610	*9530	7780	5840	4070			4260	3050	5.54
(-4.9 ft)	lb	*14570	*14570	*21010	17150	12870	8970			9390	6720	(18.2)
-3.0 m	kg			*7420	*7420					*5070	4590	4.24
(-9.8 ft)	lb			*16360	*16360					*11180	10120	(13.9)

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	1900	2200	-	500	-	Up	-	-




Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m	kg					*4140	*4140			*3560	*3560	4.95
(19.7 ft)	lb					*9130	*9130			*7850	*7850	(16.2)
4.5 m	kg					*4450	*4450			*3320	2970	5.92
(14.8 ft)	lb					*9810	*9810			*7320	6550	(19.4)
3.0 m	kg					*5400	4390	3910	2850	*3350	2580	6.39
(9.8 ft)	lb					*11900	9680	8620	6280	*7390	5690	(21.0)
1.5 m	kg					5960	4180	3830	2770	3410	2480	6.49
(4.9 ft)	lb					13140	9220	8440	6110	7520	5470	(21.3)
Ground Line	kg			*6540	*6540	5840	4080	3780	2730	3590	2600	6.22
	lb			*14420	*14420	12870	8990	8330	6020	7910	5730	(20.4)
-1.5 m	kg	*6610	*6610	*9530	7800	5840	4080			4260	3060	5.54
(-4.9 ft)	lb	*14570	*14570	*21010	17200	12870	8990			9390	6750	(18.2)
-3.0 m	kg			*7420	*7420					*5070	4600	4.24
(-9.8 ft)	lb			*16360	*16360					*11180	10140	(13.9)

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2100	1700	-	500	-	Down	-	-



: Rating over-front

: Rating over-side or 360 degree

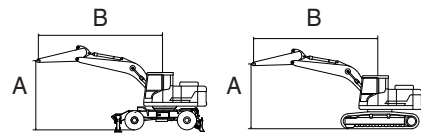


Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m	kg					*3870	*3870			*3400	3390	5.17
(19.7 ft)	lb					*8530	*8530			*7500	7470	(17.0)
4.5 m	kg					*4230	4220	3660	2640	*3200	2560	6.10
(14.8 ft)	lb					*9330	9300	8070	5820	*7050	5640	(20.0)
3.0 m	kg					*5200	4000	3590	2570	3110	2230	6.57
(9.8 ft)	lb					*11460	8820	7910	5670	6860	4920	(21.5)
1.5 m	kg					5470	3780	3500	2490	2990	2130	6.66
(4.9 ft)	lb					12060	8330	7720	5490	6590	4700	(21.8)
Ground Line	kg			*6800	*6800	5340	3660	3440	2430	3130	2220	6.40
	lb			*14990	*14990	11770	8070	7580	5360	6900	4890	(21.0)
-1.5 m	kg	*6280	*6280	*9720	7000	5320	3640			3680	2600	5.74
(-4.9 ft)	lb	*13850	*13850	*21430	15430	11730	8020			8110	5730	(18.8)
-3.0 m	kg			*7820	7180	*5030	3770			*5020	3770	4.50
(-9.8 ft)	lb			*17240	15830	*11090	8310			*11070	8310	(14.8)

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2100	1700	-	500	-	Up	-	-



: Rating over-front

: Rating over-side or 360 degree

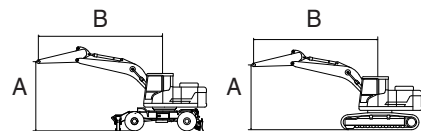


Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m	kg					*3870	*3870			*3400	3400	5.17
(19.7 ft)	lb					*8530	*8530			*7500	7500	(17.0)
4.5 m	kg					*4230	4220	3660	2640	*3200	2560	6.10
(14.8 ft)	lb					*9330	9300	8070	5820	*7050	5640	(20.0)
3.0 m	kg					*5200	4010	3590	2580	3110	2230	6.57
(9.8 ft)	lb					*11460	8840	7910	5690	6860	4920	(21.5)
1.5 m	kg					5470	3790	3500	2490	2990	2140	6.66
(4.9 ft)	lb					12060	8360	7720	5490	6590	4720	(21.8)
Ground Line	kg			*6800	*6800	5340	3670	3440	2440	3130	2230	6.40
	lb			*14990	*14990	11770	8090	7580	5380	6900	4920	(21.0)
-1.5 m	kg	*6280	*6280	*9720	7020	5320	3650			3680	2600	5.74
(-4.9 ft)	lb	*13850	*13850	*21430	15480	11730	8050			8110	5730	(18.8)
-3.0 m	kg			*7820	7190	*5030	3780			*5020	3770	4.50
(-9.8 ft)	lb			*17240	15850	*11090	8330			*11070	8310	(14.8)

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2100	2200	-	500	-	Down	-	-



: Rating over-front

: Rating over-side or 360 degree

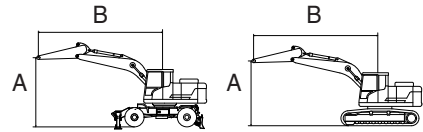


Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m	kg					*3870	*3870			*3400	*3400	5.17
(19.7 ft)	lb					*8530	*8530			*7500	*7500	(17.0)
4.5 m	kg					*4230	*4230	*3740	2900	*3200	2820	6.10
(14.8 ft)	lb					*9330	*9330	*8250	6390	*7050	6220	(20.0)
3.0 m	kg					*5200	4390	3910	2840	*3240	2470	6.57
(9.8 ft)	lb					*11460	9680	8620	6260	*7140	5450	(21.5)
1.5 m	kg					5950	4170	3820	2750	3260	2370	6.66
(4.9 ft)	lb					13120	9190	8420	6060	7190	5220	(21.8)
Ground	kg			*6800	*6800	5820	4050	3760	2700	3420	2470	6.40
Line	lb			*14990	*14990	12830	8930	8290	5950	7540	5450	(21.0)
-1.5 m	kg	*6280	*6280	*9720	7720	5800	4030			4020	2880	5.74
(-4.9 ft)	lb	*13850	*13850	*21430	17020	12790	8880			8860	6350	(18.8)
-3.0 m	kg			*7820	*7820	*5030	4160			*5020	4150	4.50
(-9.8 ft)	lb			*17240	*17240	*11090	9170			*11070	9150	(14.8)

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2100	2200	-	500	-	Up	-	-



: Rating over-front

: Rating over-side or 360 degree

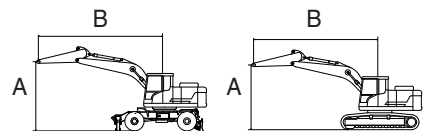


Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m	kg					*3870	*3870			*3400	*3400	5.17
(19.7 ft)	lb					*8530	*8530			*7500	*7500	(17.0)
4.5 m	kg					*4230	*4230	*3740	2910	*3200	2820	6.10
(14.8 ft)	lb					*9330	*9330	*8250	6420	*7050	6220	(20.0)
3.0 m	kg					*5200	4390	3910	2840	*3240	2470	6.57
(9.8 ft)	lb					*11460	9680	8620	6260	*7140	5450	(21.5)
1.5 m	kg					5950	4180	3820	2760	3260	2370	6.66
(4.9 ft)	lb					13120	9220	8420	6080	7190	5220	(21.8)
Ground	kg			*6800	*6800	5820	4050	3760	2700	3420	2470	6.40
Line	lb			*14990	*14990	12830	8930	8290	5950	7540	5450	(21.0)
-1.5 m	kg	*6280	*6280	*9720	7740	5800	4040			4020	2880	5.74
(-4.9 ft)	lb	*13850	*13850	*21430	17060	12790	8910			8860	6350	(18.8)
-3.0 m	kg			*7820	*7820	*5030	4170			*5020	4160	4.50
(-9.8 ft)	lb			*17240	*17240	*11090	9190			*11070	9170	(14.8)

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2500	1700	-	500	-	Down	-	-



: Rating over-front

: Rating over-side or 360 degree

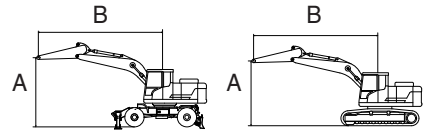


Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg					*3390	*3390			*2350	*2350	5.69
	lb					*7470	*7470			*5180	*5180	(18.7)
4.5 m (14.8 ft)	kg					*3820	*3820	3690	2660	*2200	*2200	6.54
	lb					*8420	*8420	8140	5860	*4850	*4850	(21.5)
3.0 m (9.8 ft)	kg			*6900	*6900	*4820	4030	3600	2580	*2210	2020	6.98
	lb			*15210	*15210	*10630	8880	7940	5690	*4870	4450	(22.9)
1.5 m (4.9 ft)	kg			*6400	*6400	5490	3790	3490	2480	*2350	1930	7.06
	lb			*14110	*14110	12100	8360	7690	5470	*5180	4250	(23.2)
Ground Line	kg			*6930	6900	5310	3630	3410	2400	*2660	2000	6.82
	lb			*15280	15210	11710	8000	7520	5290	*5860	4410	(22.4)
-1.5 m (-4.9 ft)	kg	*5450	*5450	*10010	6900	5260	3590	3400	2390	3240	2290	6.21
	lb	*12020	*12020	*22070	15210	11600	7910	7500	5270	7140	5050	(20.4)
-3.0 m (-9.8 ft)	kg	*9870	*9870	*8500	7040	5350	3670			4430	3090	5.09
	lb	*21760	*21760	*18740	15520	11790	8090			9770	6810	(16.7)

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2500	1700	-	500	-	Up	-	-




 
: Rating over-front


: Rating over-side or 360 degree

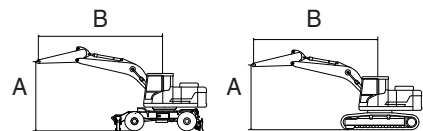




 



 


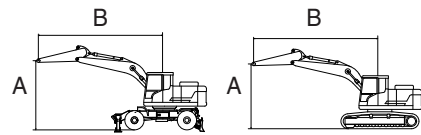Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg					*3390	*3390			*2350	*2350	5.69
	lb					*7470	*7470			*5180	*5180	(18.7)
4.5 m (14.8 ft)	kg					*3820	*3820	3690	2660	*2200	*2200	6.54
	lb					*8420	*8420	8140	5860	*4850	*4850	(21.5)
3.0 m (9.8 ft)	kg			*6900	*6900	*4820	4040	3600	2580	*2210	2020	6.98
	lb			*15210	*15210	*10630	8910	7940	5690	*4870	4450	(22.9)
1.5 m (4.9 ft)	kg			*6400	*6400	5490	3800	3490	2480	*2350	1940	7.06
	lb			*14110	*14110	12100	8380	7690	5470	*5180	4280	(23.2)
Ground Line	kg			*6930	6920	5310	3640	3410	2410	*2660	2010	6.82
	lb			*15280	15260	11710	8020	7520	5310	*5860	4430	(22.4)
-1.5 m (-4.9 ft)	kg	*5450	*5450	*10010	6920	5260	3600	3400	2400	3240	2290	6.21
	lb	*12020	*12020	*22070	15260	11600	7940	7500	5290	7140	5050	(20.4)
-3.0 m (-9.8 ft)	kg	*9870	*9870	*8500	7060	5350	3670			4430	3100	5.09
	lb	*21760	*21760	*18740	15560	11790	8090			9770	6830	(16.7)


 
Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2500	2200	-	500	-	Down	-	-


 : Rating over-front
  : Rating over-side or 360 degree







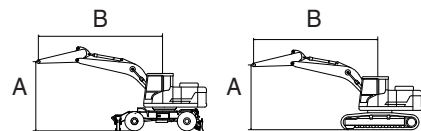


 


Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*3390 *7470	*3390 *7470			*2350 *5180	*2350 *5180	5.69 (18.7)
4.5 m (14.8 ft)	kg lb					*3820 *8420	*3820 *8420	*3690 *8140	2920 6440	*2200 *4850	*2200 *4850	6.54 (21.5)
3.0 m (9.8 ft)	kg lb			*6900 *15210	*6900 *15210	*4820 *10630	4420 9740	3920 8640	2840 6260	*2210 *4870	*2210 *4870	6.98 (22.9)
1.5 m (4.9 ft)	kg lb			*6400 *14110	*6400 *14110	*5920 *13050	4170 9190	3810 8400	2740 6040	*2350 *5180	2150 4740	7.06 (23.2)
Ground Line	kg lb			*6930 *15280	*6930 *15280	5790 12760	4020 8860	3730 8220	2670 5890	*2660 *5860	2230 4920	6.82 (22.4)
-1.5 m (-4.9 ft)	kg lb	*5450 *12020	*5450 *12020	*10010 *22070	7620 16800	5740 12650	3980 8770	3720 8200	2660 5860	*3300 *7280	2540 5600	6.21 (20.4)
-3.0 m (-9.8 ft)	kg lb	*9870 *21760	*9870 *21760	*8500 *18740	7760 17110	*5670 *12500	4050 8930			*4700 *10360	3420 7540	5.09 (16.7)


Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	2500	2200	-	500	-	Up	-	-









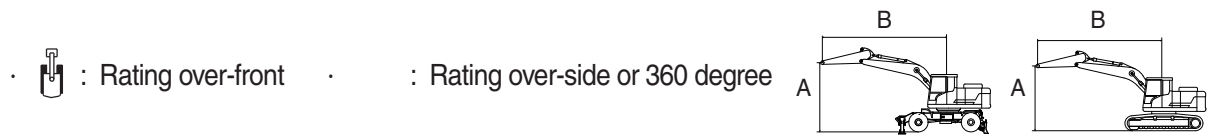



 : Rating over-front
  : Rating over-side or 360 degree




Lift-point height (A)		Lift-point radius (B)								At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
												m (ft)
6.0 m (19.7 ft)	kg lb					*3390 *7470	*3390 *7470			*2350 *5180	*2350 *5180	5.69 (18.7)
4.5 m (14.8 ft)	kg lb					*3820 *8420	*3820 *8420	*3690 *8140	2930 6460	*2200 *4850	*2200 *4850	6.54 (21.5)
3.0 m (9.8 ft)	kg lb			*6900 *15210	*6900 *15210	*4820 *10630	4430 9770	3920 8640	2850 6280	*2210 *4870	*2210 *4870	6.98 (22.9)
1.5 m (4.9 ft)	kg lb			*6400 *14110	*6400 *14110	*5920 *13050	4180 9220	3810 8400	2750 6060	*2350 *5180	2150 4740	7.06 (23.2)
Ground Line	kg lb			*6930 *15280	*6930 *15280	5790 12760	4030 8880	3730 8220	2670 5890	*2660 *5860	2230 4920	6.82 (22.4)
-1.5 m (-4.9 ft)	kg lb	*5450 *12020	*5450 *12020	*10010 *22070	7640 16840	5740 12650	3990 8800	3720 8200	2660 5860	*3300 *7280	2550 5620	6.21 (20.4)
-3.0 m (-9.8 ft)	kg lb	*9870 *21760	*9870 *21760	*8500 *18740	7780 17150	*5670 *12500	4060 8950			*4700 *10360	3430 7560	5.09 (16.7)










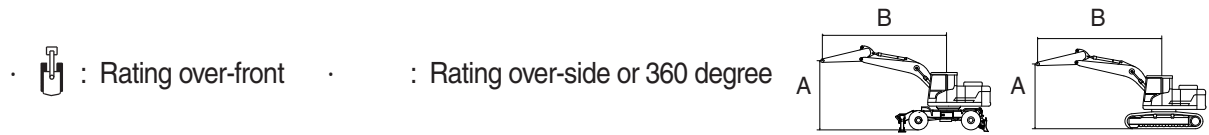


Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	3000	1700	-	500	-	Down	-	-




Lift-point height (A)		Lift-point radius (B)										At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		Capacity		Reach
														m (ft)
7.5 m (24.6 ft)	kg											*2290	*2290	4.89
	lb											*5050	*5050	(16.0)
6.0 m (19.7 ft)	kg							*2550	*2550			*1970	*1970	6.25
	lb							*5620	*5620			*4340	*4340	(20.5)
4.5 m (14.8 ft)	kg							*3330	2700			*1870	*1870	7.04
	lb							*7340	5950			*4120	*4120	(23.1)
3.0 m (9.8 ft)	kg			*5760	*5760	*4320	4100	3630	2600			*1880	1820	7.44
	lb			*12700	*12700	*9520	9040	8000	5730			*4140	4010	(24.4)
1.5 m (4.9 ft)	kg			*8800	7300	*5540	3830	3500	2480	*2110	1760	*1990	1750	7.52
	lb			*19400	16090	*12210	8440	7720	5470	*4650	3880	*4390	3860	(24.7)
Ground Line	kg			*7320	6920	5320	3640	3400	2390			*2230	1800	7.30
	lb			*16140	15260	11730	8020	7500	5270			*4920	3970	(23.9)
-1.5 m (-4.9 ft)	kg	*4810	*4810	*9880	6840	5240	3560	3360	2350			*2710	2010	6.73
	lb	*10600	*10600	*21780	15080	11550	7850	7410	5180			*5970	4430	(22.1)
-3.0 m (-9.8 ft)	kg	*8180	*8180	*9190	6940	5270	3590					3670	2570	5.71
	lb	*18030	*18030	*20260	15300	11620	7910					8090	5670	(18.7)

 








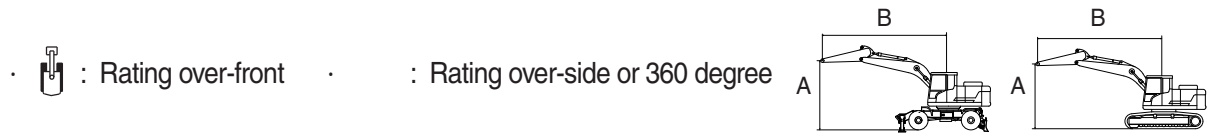


Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	3000	1700	-	500	-	Up	-	-



Lift-point height (A)		Lift-point radius (B)										At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		Capacity		Reach
														m (ft)
7.5 m (24.6 ft)	kg lb											*2290 *5050	*2290 *5050	4.89 (16.0)
6.0 m (19.7 ft)	kg lb							*2550 *5620	*2550 *5620			*1970 *4340	*1970 *4340	6.25 (20.5)
4.5 m (14.8 ft)	kg lb							*3330 *7340	2700 5950			*1870 *4120	*1870 *4120	7.04 (23.1)
3.0 m (9.8 ft)	kg lb			*5760 *12700	*5760 *12700	*4320 *9520	4110 9060	3630 8000	2610 5750			*1880 *4140	1820 4010	7.44 (24.4)
1.5 m (4.9 ft)	kg lb			*8800 *19400	7320 16140	*5540 *12210	3840 8470	3500 7720	2490 5490	*2110 *4650	1760 3880	*1990 *4390	1750 3860	7.52 (24.7)
Ground Line	kg lb			*7320 *16140	6940 15300	5320 11730	3650 8050	3400 7500	2400 5290			*2230 *4920	1800 3970	7.30 (23.9)
-1.5 m (-4.9 ft)	kg lb	*4810 *10600	*4810 *10600	*9880 *21780	6860 15120	5240 11550	3570 7870	3360 7410	2360 5200			*2710 *5970	2020 4450	6.73 (22.1)
-3.0 m (-9.8 ft)	kg lb	*8180 *18030	*8180 *18030	*9190 *20260	6950 15320	5270 11620	3600 7940					3670 8090	2570 5670	5.71 (18.7)

 Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	3000	2200	-	500	-	Down	-	-




Lift-point height (A)		Lift-point radius (B)										At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		Capacity		Reach
														m (ft)
7.5 m (24.6 ft)	kg lb											*2290 *5050	*2290 *5050	4.89 (16.0)
6.0 m (19.7 ft)	kg lb							*2550 *5620	*2550 *5620			*1970 *4340	*1970 *4340	6.25 (20.5)
4.5 m (14.8 ft)	kg lb							*3330 *7340	2960 6530			*1870 *4120	*1870 *4120	7.04 (23.1)
3.0 m (9.8 ft)	kg lb			*5760 *12700	*5760 *12700	*4320 *9520	*4320 *9520	*3760 *8290	2870 6330			*1880 *4140	*1880 *4140	7.44 (24.4)
1.5 m (4.9 ft)	kg lb			*8800 *19400	8020 17680	*5540 *12210	4220 9300	3820 8420	2750 6060	*2110 *4650	1960 4320	*1990 *4390	1950 4300	7.52 (24.7)
Ground Line	kg lb			*7320 *16140	*7320 *16140	5800 12790	4030 8880	3720 8200	2660 5860			*2230 *4920	2010 4430	7.30 (23.9)
-1.5 m (-4.9 ft)	kg lb	*4810 *10600	*4810 *10600	*9880 *21780	7560 16670	5720 12610	3950 8710	3680 8110	2620 5780			*2710 *5970	2240 4940	6.73 (22.1)
-3.0 m (-9.8 ft)	kg lb	*8180 *18030	*8180 *18030	*9190 *20260	7650 16870	5750 12680	3980 8770					*3820 *8420	2850 6280	5.71 (18.7)

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	MONO BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		4600	3000	2200	-	500	-	Up	-	-




: Rating over-front

: Rating over-side or 360 degree

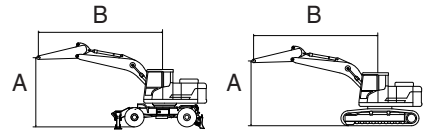








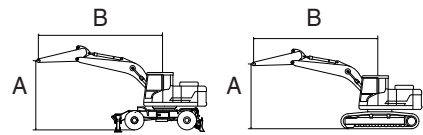

Lift-point height (A)		Lift-point radius (B)										At max. reach		
		1.5 m (4.9 ft)		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		Capacity		Reach
														m (ft)
7.5 m (24.6 ft)	kg											*2290	*2290	4.89
	lb											*5050	*5050	(16.0)
6.0 m (19.7 ft)	kg							*2550	*2550			*1970	*1970	6.25
	lb							*5620	*5620			*4340	*4340	(20.5)
4.5 m (14.8 ft)	kg							*3330	2970			*1870	*1870	7.04
	lb							*7340	6550			*4120	*4120	(23.1)
3.0 m (9.8 ft)	kg			*5760	*5760	*4320	*4320	*3760	2870			*1880	*1880	7.44
	lb			*12700	*12700	*9520	*9520	*8290	6330			*4140	*4140	(24.4)
1.5 m (4.9 ft)	kg			*8800	8040	*5540	4230	3820	2750	*2110	1960	*1990	1950	7.52
	lb			*19400	17730	*12210	9330	8420	6060	*4650	4320	*4390	4300	(24.7)
Ground Line	kg			*7320	*7320	5800	4040	3720	2660			*2230	2010	7.30
	lb			*16140	*16140	12790	8910	8200	5860			*4920	4430	(23.9)
-1.5 m (-4.9 ft)	kg	*4810	*4810	*9880	7580	5720	3960	3680	2620			*2710	2250	6.73
	lb	*10600	*10600	*21780	16710	12610	8730	8110	5780			*5970	4960	(22.1)
-3.0 m (-9.8 ft)	kg	*8180	*8180	*9190	7670	5750	3990					*3820	2860	5.71
	lb	*18030	*18030	*20260	16910	12680	8800					*8420	6310	(18.7)

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	2-PIECE BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5000	1900	1700	-	500	-	Down	-	-

 : Rating over-front

 : Rating over-side or 360 degree










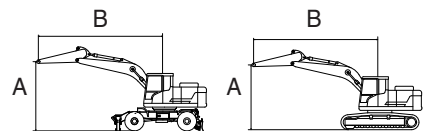

Lift-point height (A)		Lift-point radius (B)						At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
										m (ft)
7.5 m (24.6 ft)	kg lb							*4580 *10100	*4580 *10100	3.81 (12.5)
6.0 m (19.7 ft)	kg lb			*4060 *8950	*4060 *8950			*4260 *9390	3100 6830	5.46 (17.9)
4.5 m (14.8 ft)	kg lb	*5850 *12900	*5850 *12900	*4620 *10190	4200 9260	3680 8110	2640 5820	3340 7360	2390 5270	6.35 (20.8)
3.0 m (9.8 ft)	kg lb			5680 12520	3940 8690	3590 7910	2560 5640	2950 6500	2100 4630	6.79 (22.3)
1.5 m (4.9 ft)	kg lb			5420 11950	3710 8180	3490 7690	2460 5420	2840 6260	2010 4430	6.88 (22.6)
Ground Line	kg lb			5300 11680	3600 7940	3420 7540	2400 5290	2970 6550	2100 4630	6.63 (21.8)
-1.5 m (-4.9 ft)	kg lb	*10350 *22820	6950 15320	5300 11680	3600 7940	3450 7610	2420 5340	3450 7610	2420 5340	6.00 (19.7)

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	2-PIECE BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5000	1900	1700	-	500	-	Up	-	-

 : Rating over-front

 : Rating over-side or 360 degree




Lift-point height (A)		Lift-point radius (B)						At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
										m (ft)
7.5 m (24.6 ft)	kg lb							*4580 *10100	*4580 *10100	3.81 (12.5)
6.0 m (19.7 ft)	kg lb			*4060 *8950	*4060 *8950			*4260 *9390	3110 6860	5.46 (17.9)
4.5 m (14.8 ft)	kg lb	*5850 *12900	*5850 *12900	*4620 *10190	4210 9280	3680 8110	2640 5820	3340 7360	2390 5270	6.35 (20.8)
3.0 m (9.8 ft)	kg lb			5680 12520	3940 8690	3590 7910	2560 5640	2950 6500	2100 4630	6.79 (22.3)
1.5 m (4.9 ft)	kg lb			5420 11950	3710 8180	3490 7690	2460 5420	2840 6260	2020 4450	6.88 (22.6)
Ground Line	kg lb			5300 11680	3610 7960	3420 7540	2410 5310	2970 6550	2100 4630	6.63 (21.8)
-1.5 m (-4.9 ft)	kg lb	*10350 *22820	6970 15370	5300 11680	3610 7960	3450 7610	2430 5360	3450 7610	2430 5360	6.00 (19.7)

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	2-PIECE BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5000	1900	2200	-	500	-	Down	-	-



: Rating over-front

: Rating over-side or 360 degree

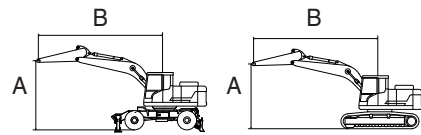


Lift-point height (A)		Lift-point radius (B)						At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
										m (ft)
7.5 m (24.6 ft)	kg lb							*4580 *10100	*4580 *10100	3.81 (12.5)
6.0 m (19.7 ft)	kg lb			*4060 *8950	*4060 *8950			*4260 *9390	3400 7500	5.46 (17.9)
4.5 m (14.8 ft)	kg lb	*5850 *12900	*5850 *12900	*4620 *10190	4580 10100	4000 8820	2900 6390	3630 8000	2640 5820	6.35 (20.8)
3.0 m (9.8 ft)	kg lb			*5740 *12650	4320 9520	3910 8620	2820 6220	3210 7080	2320 5110	6.79 (22.3)
1.5 m (4.9 ft)	kg lb			5900 13010	4090 9020	3800 8380	2720 6000	3100 6830	2230 4920	6.88 (22.6)
Ground Line	kg lb			5780 12740	3990 8800	3740 8250	2670 5890	3250 7170	2330 5140	6.63 (21.8)
-1.5 m (-4.9 ft)	kg lb	*10350 *22820	7670 16910	5780 12740	3990 8800	3770 8310	2690 5930	3770 8310	2690 5930	6.00 (19.7)

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	2-PIECE BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5000	1900	2200	-	500	-	Up	-	-



: Rating over-front

: Rating over-side or 360 degree

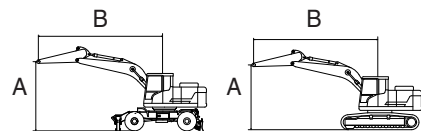


Lift-point height (A)		Lift-point radius (B)						At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
										m (ft)
7.5 m (24.6 ft)	kg lb							*4580 *10100	*4580 *10100	3.81 (12.5)
6.0 m (19.7 ft)	kg lb			*4060 *8950	*4060 *8950			*4260 *9390	3410 7520	5.46 (17.9)
4.5 m (14.8 ft)	kg lb	*5850 *12900	*5850 *12900	*4620 *10190	4590 10120	4000 8820	2910 6420	3630 8000	2640 5820	6.35 (20.8)
3.0 m (9.8 ft)	kg lb			*5740 *12650	4330 9550	3910 8620	2830 6240	3210 7080	2330 5140	6.79 (22.3)
1.5 m (4.9 ft)	kg lb			5900 13010	4100 9040	3800 8380	2730 6020	3100 6830	2240 4940	6.88 (22.6)
Ground Line	kg lb			5780 12740	3990 8800	3740 8250	2670 5890	3250 7170	2330 5140	6.63 (21.8)
-1.5 m (-4.9 ft)	kg lb	*10350 *22820	7690 16950	5780 12740	4000 8820	3770 8310	2690 5930	3770 8310	2690 5930	6.00 (19.7)

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	2-PIECE BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5000	2100	1700	-	500	-	Down	-	-



: Rating over-front

: Rating over-side or 360 degree

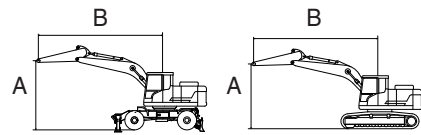


Lift-point height (A)		Lift-point radius (B)						At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
										m (ft)
7.5 m (24.6 ft)	kg lb							*4290 *9460	*4290 *9460	4.13 (13.6)
6.0 m (19.7 ft)	kg lb			*3820 *8420	*3820 *8420			*4060 *8950	2910 6420	5.68 (18.6)
4.5 m (14.8 ft)	kg lb	*5410 *11930	*5410 *11930	*4400 *9700	4210 9280	3690 8140	2640 5820	3180 7010	2270 5000	6.54 (21.5)
3.0 m (9.8 ft)	kg lb			*5540 *12210	3950 8710	3590 7910	2550 5620	2820 6220	2000 4410	6.97 (22.9)
1.5 m (4.9 ft)	kg lb			5420 11950	3700 8160	3480 7670	2440 5380	2720 6000	1920 4230	7.06 (23.2)
Ground Line	kg lb			5270 11620	3570 7870	3400 7500	2380 5250	2830 6240	1990 4390	6.82 (22.4)
-1.5 m (-4.9 ft)	kg lb	*10390 *22910	6880 15170	5260 11600	3560 7850	3410 7520	2380 5250	3260 7190	2280 5030	6.21 (20.4)

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	2-PIECE BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5000	2100	1700	-	500	-	Up	-	-





: Rating over-front

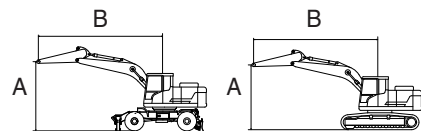
: Rating over-side or 360 degree









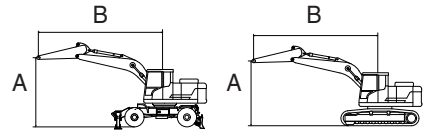

Lift-point height (A)		Lift-point radius (B)						At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
										m (ft)
7.5 m (24.6 ft)	kg lb							*4290 *9460	*4290 *9460	4.13 (13.6)
6.0 m (19.7 ft)	kg lb			*3820 *8420	*3820 *8420			*4060 *8950	2920 6440	5.68 (18.6)
4.5 m (14.8 ft)	kg lb	*5410 *11930	*5410 *11930	*4400 *9700	4220 9300	3690 8140	2650 5840	3180 7010	2280 5030	6.54 (21.5)
3.0 m (9.8 ft)	kg lb			*5540 *12210	3950 8710	3590 7910	2560 5640	2820 6220	2010 4430	6.97 (22.9)
1.5 m (4.9 ft)	kg lb			5420 11950	3710 8180	3480 7670	2450 5400	2720 6000	1930 4250	7.06 (23.2)
Ground Line	kg lb			5270 11620	3580 7890	3400 7500	2380 5250	2830 6240	2000 4410	6.82 (22.4)
-1.5 m (-4.9 ft)	kg lb	*10390 *22910	6900 15210	5260 11600	3570 7870	3410 7520	2390 5270	3260 7190	2290 5050	6.21 (20.4)


 
Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	2-PIECE BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5000	2100	2200	-	500	-	Down	-	-


 : Rating over-front
  : Rating over-side or 360 degree









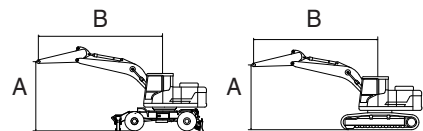

Lift-point height (A)		Lift-point radius (B)						At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
										m (ft)
7.5 m (24.6 ft)	kg lb							*4290 *9460	*4290 *9460	4.13 (13.6)
6.0 m (19.7 ft)	kg lb			*3820 *8420	*3820 *8420			*4060 *8950	3190 7030	5.68 (18.6)
4.5 m (14.8 ft)	kg lb	*5410 *11930	*5410 *11930	*4400 *9700	*4400 *9700	4010 8840	2910 6420	3460 7630	2510 5530	6.54 (21.5)
3.0 m (9.8 ft)	kg lb			*5540 *12210	4330 9550	3910 8620	2820 6220	3080 6790	2220 4890	6.97 (22.9)
1.5 m (4.9 ft)	kg lb			5890 12990	4090 9020	3790 8360	2710 5970	2970 6550	2140 4720	7.06 (23.2)
Ground Line	kg lb			5750 12680	3960 8730	3720 8200	2640 5820	3100 6830	2220 4890	6.82 (22.4)
-1.5 m (-4.9 ft)	kg lb	*10390 *22910	7600 16760	5740 12650	3950 8710	3720 8200	2650 5840	3560 7850	2540 5600	6.21 (20.4)


Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	2-PIECE BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5000	2100	2200	-	500	-	Up	-	-




 




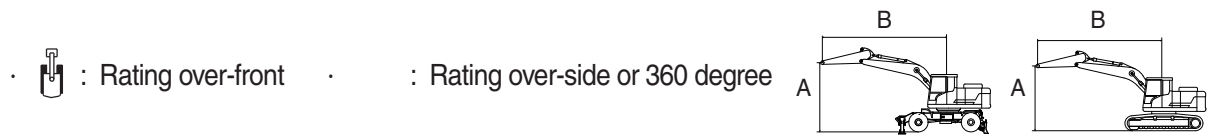

 : Rating over-front
  : Rating over-side or 360 degree




Lift-point height (A)		Lift-point radius (B)						At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		Capacity		Reach
										m (ft)
7.5 m (24.6 ft)	kg lb							*4290 *9460	*4290 *9460	4.13 (13.6)
6.0 m (19.7 ft)	kg lb			*3820 *8420	*3820 *8420			*4060 *8950	3200 7050	5.68 (18.6)
4.5 m (14.8 ft)	kg lb	*5410 *11930	*5410 *11930	*4400 *9700	*4400 *9700	4010 8840	2910 6420	3460 7630	2520 5560	6.54 (21.5)
3.0 m (9.8 ft)	kg lb			*5540 *12210	4340 9570	3910 8620	2820 6220	3080 6790	2230 4920	6.97 (22.9)
1.5 m (4.9 ft)	kg lb			5890 12990	4100 9040	3790 8360	2720 6000	2970 6550	2140 4720	7.06 (23.2)
Ground Line	kg lb			5750 12680	3970 8750	3720 8200	2650 5840	3100 6830	2220 4890	6.82 (22.4)
-1.5 m (-4.9 ft)	kg lb	*10390 *22910	7620 16800	5740 12650	3960 8730	3720 8200	2650 5840	3560 7850	2540 5600	6.21 (20.4)




 




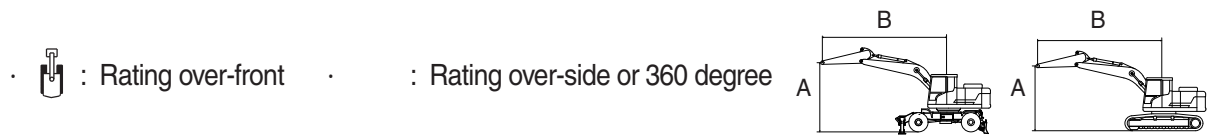

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	2-PIECE BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5000	2500	1700	-	500	-	Down	-	-




Lift-point height (A)		Lift-point radius (B)								At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		Capacity		Reach
												m (ft)
7.5 m	kg			*3680	*3680					*3350	*3350	4.80
(24.6 ft)	lb			*8110	*8110					*7390	*7390	(15.8)
6.0 m	kg			*3370	*3370	*3610	2690			*2840	2540	6.18
(19.7 ft)	lb			*7430	*7430	*7960	5930			*6260	5600	(20.3)
4.5 m	kg			*3980	*3980	3720	2660			*2660	2040	6.98
(14.8 ft)	lb			*8770	*8770	8200	5860			*5860	4500	(22.9)
3.0 m	kg			*5130	3990	3600	2560			2570	1820	7.39
(9.8 ft)	lb			*11310	8800	7940	5640			5670	4010	(24.2)
1.5 m	kg			5430	3710	3470	2430			2480	1750	7.47
(4.9 ft)	lb			11970	8180	7650	5360			5470	3860	(24.5)
Ground	kg	*4990	*4990	5250	3550	3370	2350			2570	1800	7.24
Line	lb	*11000	*11000	11570	7830	7430	5180			5670	3970	(23.8)
-1.5 m	kg	*9190	6760	5200	3510	3350	2330			2900	2030	6.67
(-4.9 ft)	lb	*20260	14900	11460	7740	7390	5140			6390	4480	(21.9)
-3.0 m	kg			5280	3580							
(-9.8 ft)	lb			11640	7890							


 






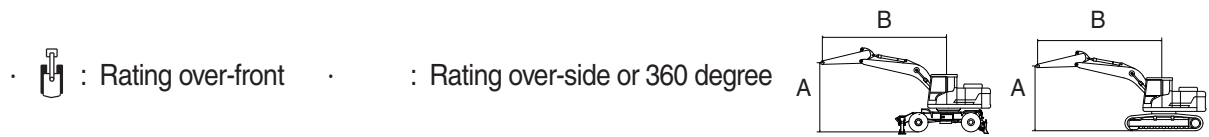

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	2-PIECE BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5000	2500	1700	-	500	-	Up	-	-



Lift-point height (A)		Lift-point radius (B)								At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		Capacity		Reach
												m (ft)
7.5 m	kg			*3680	*3680					*3350	*3350	4.80
(24.6 ft)	lb			*8110	*8110					*7390	*7390	(15.8)
6.0 m	kg			*3370	*3370	*3610	2700			*2840	2540	6.18
(19.7 ft)	lb			*7430	*7430	*7960	5950			*6260	5600	(20.3)
4.5 m	kg			*3980	*3980	3720	2670			*2660	2040	6.98
(14.8 ft)	lb			*8770	*8770	8200	5890			*5860	4500	(22.9)
3.0 m	kg			*5130	3990	3600	2560			2570	1820	7.39
(9.8 ft)	lb			*11310	8800	7940	5640			5670	4010	(24.2)
1.5 m	kg			5430	3720	3470	2440			2480	1750	7.47
(4.9 ft)	lb			11970	8200	7650	5380			5470	3860	(24.5)
Ground	kg	*4990	*4990	5250	3550	3370	2350			2570	1810	7.24
Line	lb	*11000	*11000	11570	7830	7430	5180			5670	3990	(23.8)
-1.5 m	kg	*9190	6780	5200	3510	3350	2330			2900	2030	6.67
(-4.9 ft)	lb	*20260	14950	11460	7740	7390	5140			6390	4480	(21.9)
-3.0 m	kg			5280	3580							
(-9.8 ft)	lb			11640	7890							

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	2-PIECE BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5000	2500	2200	-	500	-	Down	-	-




Lift-point height (A)		Lift-point radius (B)								At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		Capacity		Reach
												m (ft)
7.5 m (24.6 ft)	kg lb			*3680 *8110	*3680 *8110					*3350 *7390	*3350 *7390	4.80 (15.8)
6.0 m (19.7 ft)	kg lb			*3370 *7430	*3370 *7430	*3610 *7960	2960 6530			*2840 *6260	2790 6150	6.18 (20.3)
4.5 m (14.8 ft)	kg lb			*3980 *8770	*3980 *8770	*3760 *8290	2930 6460			*2660 *5860	2260 4980	6.98 (22.9)
3.0 m (9.8 ft)	kg lb			*5130 *11310	4370 9630	3910 8620	2820 6220			*2650 *5840	2020 4450	7.39 (24.2)
1.5 m (4.9 ft)	kg lb			5910 13030	4100 9040	3780 8330	2700 5950			2720 6000	1950 4300	7.47 (24.5)
Ground Line	kg lb	*4990 *11000	*4990 *11000	5730 12630	3930 8660	3690 8140	2610 5750			2820 6220	2010 4430	7.24 (23.8)
-1.5 m (-4.9 ft)	kg lb	*9190 *20260	7480 16490	5680 12520	3890 8580	3670 8090	2590 5710			3170 6990	2260 4980	6.67 (21.9)
-3.0 m (-9.8 ft)	kg lb			5760 12700	3960 8730							

Model	Type	Boom	Arm	Counterweight	Shoe	Wheel	Dozer		Outrigger	
HW140	2-PIECE BOOM	Length [mm]	Length [mm]	weight [kg]	width [mm]	width [mm]	Front	Rear	Front	Rear
		5000	2500	2200	-	500	-	Up	-	-



: Rating over-front



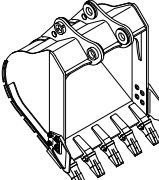
: Rating over-side or 360 degree

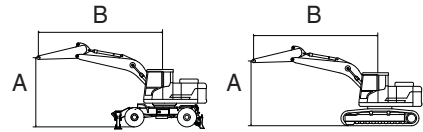

Lift-point height (A)		Lift-point radius (B)								At max. reach		
		3.0 m (9.8 ft)		4.5 m (14.8 ft)		6.0 m (19.7 ft)		7.5 m (24.6 ft)		Capacity		Reach
												m (ft)
7.5 m	kg			*3680	*3680					*3350	*3350	4.80
(24.6 ft)	lb			*8110	*8110					*7390	*7390	(15.8)
6.0 m	kg			*3370	*3370	*3610	2960			*2840	2800	6.18
(19.7 ft)	lb			*7430	*7430	*7960	6530			*6260	6170	(20.3)
4.5 m	kg			*3980	*3980	*3760	2940			*2660	2260	6.98
(14.8 ft)	lb			*8770	*8770	*8290	6480			*5860	4980	(22.9)
3.0 m	kg			*5130	4380	3910	2830			*2650	2030	7.39
(9.8 ft)	lb			*11310	9660	8620	6240			*5840	4480	(24.2)
1.5 m	kg			5910	4100	3780	2700			2720	1950	7.47
(4.9 ft)	lb			13030	9040	8330	5950			6000	4300	(24.5)
Ground	kg	*4990	*4990	5730	3940	3690	2620			2820	2020	7.24
Line	lb	*11000	*11000	12630	8690	8140	5780			6220	4450	(23.8)
-1.5 m	kg	*9190	7500	5680	3900	3670	2600			3170	2270	6.67
(-4.9 ft)	lb	*20260	16530	12520	8600	8090	5730			6990	5000	(21.9)
-3.0 m	kg			5760	3970							
(-9.8 ft)	lb			12700	8750							

6. BUCKET SELECTION GUIDE

1) GENERAL BUCKET

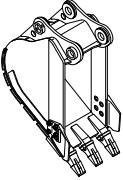		
0.23 m³ SAE heaped bucket	0.40, 0.46 m³ SAE heaped bucket	0.52, ※0.58, 0.65, 0.71 m³ SAE heaped bucket

Capacity		Width		Weight	Recommendation						
					4.6 m (15' 1") Mono boom				4.9 m (16' 9") Adjust boom		
SAE heaped	CECE heaped	Without side cutter	With side cutter		1.9 m arm (6' 3")	2.1 m arm (6' 11")	2.5 m arm (8' 2")	3.0 m arm (9' 10")	1.9 m arm (6' 3")	2.1 m arm (6' 11")	2.5 m arm (8' 2")
0.23 m³ (0.30 yd³)	0.20 m³ (0.26 yd³)	520 mm (20.5")	620 mm (24.4")	335 kg (740 lb)	○	○	○	○	○	○	○
0.40 m³ (0.52 yd³)	0.35 m³ (0.46 yd³)	760 mm (29.9")	860 mm (33.9")	410 kg (900 lb)	○	○	○	○	○	○	○
0.46 m³ (0.60 yd³)	0.40 m³ (0.52 yd³)	850 mm (33.5")	950 mm (37.4")	435 kg (960 lb)	○	○	●	●	○	○	●
0.52 m³ (0.68 yd³)	0.45 m³ (0.59 yd³)	935 mm (36.8")	1035 mm (40.7")	460 kg (1010 lb)	○	●	●		○	●	●
※0.58 m³ (0.76 yd³)	0.50 m³ (0.65 yd³)	1030 mm (40.6")	1130 mm (44.5")	480 kg (1060 lb)	○	●	●		●	●	●
0.65 m³ (0.85 yd³)	0.55 m³ (0.72 yd³)	1110 mm (43.7")	1210 mm (47.6")	500 kg (1100 lb)	●	●			●	●	
0.71 m³ (0.93 yd³)	0.60 m³ (0.78 yd³)	1205 mm (47.4")	1305 mm (51.4")	540 kg (1190 lb)	●	●			●		

※ : Standard bucket

○ Applicable for materials with density of 2000 kg/m³ (3370 lb/yd³) or less

● Applicable for materials with density of 1600 kg/m³ (2700 lb/yd³) or less

● Applicable for materials with density of 1100 kg/m³ (1850 lb/yd³) or less



※ These recommendations are for general conditions and average use.

Work tools and ground conditions have effects on machine performance.

Select an optimum combination according to the working conditions and the type of work that is being done.

Consult your HD Hyundai Construction Equipment dealer for information on selecting the correct boom-arm-bucket combination.

2) Special bucket
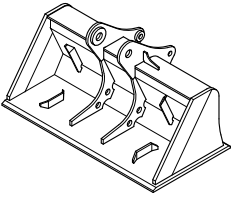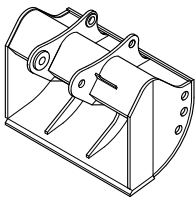
<p>Slope finishing bucket</p> 	<p>Ditch cleaning bucket</p> 
<p>◎ 0.55 m³ SAE heaped bucket</p>	<p>★ 0.45 m³ SAE heaped bucket</p>

Capacity		Width		Weight	Recommendation					
					4.6 m (15' 1") Mono boom			4.9 m (16' 9") Adjust boom		
SAE heaped	CECE heaped	Without side cutter	With side cutter		1.9 m arm (6' 3")	2.1 m arm (6' 11")	2.5 m arm (8' 2")	1.9 m arm (6' 3")	2.1 m arm (6' 11")	2.5 m arm (8' 2")
◎ 0.55 m³ (0.72 yd³)	0.45 m³ (0.59 yd³)	1800 mm (70.9")	-	585 kg (1290 lb)	○	●	●	○	●	●
★ 0.45 m³ (0.59 yd³)	0.40 m³ (0.52 yd³)	1520 mm (59.8")	-	410 kg (900 lb)	○	○	○	○	○	●

◎ : Slope finishing bucket

★ : Ditch cleaning bucket

○ Applicable for materials with density of 2000 kg/m³ (3370 lb/yd³) or less

○ Applicable for materials with density of 1600 kg/m³ (2700 lb/yd³) or less

● Applicable for materials with density of 1100 kg/m³ (1850 lb/yd³) or less

7. SPECIFICATIONS FOR MAJOR COMPONENTS

1) ENGINE

Item	Specification
Model	Cummins QSB 6.7
Type	4-cycle turbocharged diesel engine, low emission
Cooling method	Water cooling
Number of cylinders and arrangement	6 cylinders, in-line
Firing order	1-5-3-6-2-4
Combustion chamber type	Direct injection type
Cylinder bore × stroke	107 × 124 mm (4.2" × 4.9")
Piston displacement	6700 cc (409 cu in)
Compression ratio	17.3 : 1
Rated net horse power (SAE J1349)	149 Hp (111 kW) at 2150 rpm
Rated gross horse power (SAE J1995)	157 Hp (117 kW) at 2150 rpm
Maximum torque	68.6 kgf · m (496 lbf · ft) at 1500 rpm
Engine oil quantity	23.7 ℓ (6.3 U.S. gal)
Dry weight	520 kg (1145 lb)
High idling speed	2100 ± 50 rpm
Low idling speed	850 ± 100 rpm
Rated fuel consumption	171.5 g/Hp · hr at 2150 rpm
Starting motor	Nippon denso (24 V-4.8 kW)
Alternator	Denso (24 V-95 A)
Battery	2 × 12 V × 100 Ah

2) MAIN PUMP

Item	Specification
Type	Variable displacement tandem axis piston pumps
Capacity	2 × 27.5 cc/rev
Maximum pressure	350 kgf/cm ² (4980 psi) [380 kgf/cm ² (5400 psi)]
Rated oil flow	2 × 172 ℓ/min (45.4 U.S. gpm / 37.0 U.K. gpm)
Rated speed	2100 rpm

[]: Power boost

3) GEAR PUMP

Item	Specification
Type	Fixed displacement gear pump single stage
Capacity	15cc/rev
Maximum pressure	40 kgf/cm ² (570 psi)
Rated oil flow	32.3 ℓ /min (8.5 U.S. gpm/7.1 U.K. gpm)

4) MAIN CONTROL VALVE

Item	Specification
Type	11 spools two-block
Operating method	Hydraulic pilot system
Main relief valve pressure	350 kgf/cm ² (4980 psi) [380 kgf/cm ² (5400 psi)]
Overload relief valve pressure	400 kgf/cm ² (5690 psi)

[]: Power boost

5) SWING MOTOR

Item	Specification
Type	Fixed displacement axial piston motor
Capacity	71 cc/rev
Relief pressure	285 kgf/cm ² (4054 psi)
Braking system	Automatic, spring applied hydraulic released
Braking torque	30 kgf · m (217 lbf · ft)
Brake release pressure	15~50 kgf/cm ² (213~711 psi)
Reduction gear type	2 - stage planetary

6) TRAVEL MOTOR

Item	Specification
Type	Variable displacement bent-axis axial piston motor
Relief pressure	380 kgf/cm ² (5400 psi)
Counter balance valve	Applied
Capacity (max/min)	107/40 cc/rev

7) POWER TRAIN

Item	Description		Specification
Transmission	Type		2 speed power shift transmission
	Gear ratio	1st	4.87
		2nd	1.20
	Clutch pressure		30~32 kgf /cm ² (427~455 psi)
Parking brake	Type		Multi disc brake integrated in transmission
	Maximum braking torque		2124 kgf · m (15360 lbf · ft)
Axle	Type		4 wheel drive with differential
	Gear ratio		16.0
	Brake		Multi disc brake
	Brake pressure		60 kgf /cm ² (850 psi)
	Steering pressure		180 kgf /cm ² (2560 psi)

8) POWER TRAIN GEAR PUMP

Item	Description
Type	Fixed displacement gear pump (tanedm)
Capacity	Steering + brake : 16.6 + 8.2 cc / rev (pump PTO) [22.4] + 8.2 cc / rev (pump PTO)
Rated flow	Steering + brake : 26.6 + 13.1 lpm (pump PTO) (7.0 + 3.5 U.S.gpm / 5.8 +2.9 U.K.gpm) [35.8] + 13.1 lpm (pump PTO) ([9.5] + 3.5 U.S.gpm / [7.9] + 2.9 U.K.gpm)

※ [] Rotating option

9) CYLINDER

Item			Specification
Boom cylinder	Bore dia × Rod dia × Stroke		Ø 105 × Ø 75 × 1075mm
	Cushion		Extend only
Arm cylinder	Bore dia × Rod dia × Stroke		Ø 115 × Ø 80 × 1138mm
	Cushion		Extend and retract
Bucket cylinder	Bore dia × Rod dia × Stroke		Ø 100 × Ø 70 × 840mm
	Cushion		Extend only
Dozer cylinder	Rear	Bore dia × Rod dia × Stroke	Ø 100 × Ø 60 × 236mm
	Front	Bore dia × Rod dia × Stroke	Ø 100 × Ø 60 × 240mm
	Cushion		-
Outrigger cylinder	Bore dia × Rod dia × Stroke		Ø 110 × Ø 65 × 446mm
	Cushion		-
Adjust cylinder	Bore dia × Rod dia × Stroke		Ø 145 × Ø 90 × 613mm
	Cushion		-
Adjust boom cylinder	Bore dia × Rod dia × Stroke		Ø 105 × Ø 75 × 975mm
	Cushion		Extend only

10) BUCKET

Item	Capacity		Tooth quantity	Width	
	SAE heaped	CECE heaped		Without side cutter	With side cutter
Standard	※ 0.58 m ³ (0.76 yd ³)	0.50 m ³ (0.65 yd ³)	5	1030 mm (40.6")	1130 mm (44.5")
Option	0.23 m ³ (0.30 yd ³)	0.20 m ³ (0.26 yd ³)	3	520 mm (20.5")	620 mm (24.4")
	0.40 m ³ (0.52 yd ³)	0.35 m ³ (0.46 yd ³)	4	760 mm (29.9")	860 mm (33.9")
	0.46 m ³ (0.60 yd ³)	0.40 m ³ (0.52 yd ³)	4	850 mm (33.5")	950 mm (37.4")
	0.52 m ³ (0.68 yd ³)	0.45 m ³ (0.59 yd ³)	5	935 mm (36.8")	1035 mm (40.7")
	0.65 m ³ (0.85 yd ³)	0.55 m ³ (0.72 yd ³)	5	1110 mm (43.7")	1210 mm (47.6")
	0.71 m ³ (0.93 yd ³)	0.60 m ³ (0.78 yd ³)	5	1205 mm (47.4")	1305 mm (51.4")
	◎ 0.55 m ³ (0.72 yd ³)	0.45 m ³ (0.59 yd ³)	-	1800 mm (70.9")	-
	★ 0.45 m ³ (0.59 yd ³)	0.40 m ³ (0.52 yd ³)	-	1520 mm (59.8")	-

◎ : Slope finishing bucket

★ : Ditch cleaning bucket

8. RECOMMENDED OILS

HD Hyundai Construction Equipment genuine lubricating oils have been developed to offer the best performance and service life for your equipment. These oils have been tested according to the specifications of HD Hyundai Construction Equipment and, therefore, will meet the highest safety and quality requirements. We recommend that you use only HD Hyundai Construction Equipment genuine lubricating oils and grease officially approved by HD Hyundai Construction Equipment.

Service point	Kind of fluid	Capacity ℓ (U.S. gal)	Ambient temperature °C (°F)							
			-50 (-58)	-30 (-22)	-20 (-4)	-10 (14)	0 (32)	10 (50)	20 (68)	30 (86)
Engine oil pan	Engine oil	23.7 (6.3)	★SAE 5W-40					SAE 30		
Transmission case			SAE 10W							
		SAE 10W-30								
		2.5 (0.7)	SAE 15W-40							
DEF/ AdBlue® tank	Mixture of urea and deionized water	27.0 (7.1)	ISO 22241, High-purity urea + deionized water (32.5:67.5)							
Swing drive	Gear oil	TYPE 1 : 3.5 (0.9)	★SAE 75W-90							
		TYPE 2 : 2.5 (0.7)	SAE 80W-90							
Front axle	Gear oil	Center : 9.0 (2.38) Hub : 2.4×2 (0.63×2)	SAE 85W-90 LSD or UTTO							
Rear axle		Center : 11.2 (2.96) Hub : 2.4×2 (0.63×2)								
Hydraulic tank	Hydraulic oil	Tank: 124 (32.8) System: 210 (55.5)	★ISO VG 15							
			ISO VG 32							
			ISO VG 46, HBHO★ ³							
			ISO VG 68							
Fuel tank	Diesel fuel★ ¹	270 (71.3)	★ASTM D975 NO.1							
			ASTM D975 NO.2							
Fitting (Grease nipple)	Grease	As required	★NLGI NO.1							
			NLGI NO.2							
Radiator (Reservoir tank)	Mixture of antifreeze and soft water★ ²	19.5 (5.2)	Ethylene glycol base permanent type (50 : 50)							
			★ Ethylene glycol base permanent type (60 : 40)							

SAE : Society of Automotive Engineers

API : American Petroleum Institute

ISO : International Organization for Standardization

NLGI : National Lubricating Grease Institute

ASTM : American Society of Testing and Material

UTTO : Universal Tractor Transmission Oil

DEF : Diesel Exhaust Fluid, DEF compatible with AdBlue®

★ : Cold region (Russia, CIS, Mongolia)

★¹ : Ultra low sulfur diesel
- sulfur content ≤ 15 ppm

★² : Soft water
City water or distilled water

★³ : HD Hyundai Construction Equipment
Bio Hydraulic Oil

※ Using any lubricating oils other than HD Hyundai Construction Equipment genuine products may lead to a deterioration of performance and cause damage to major components.

※ Do not mix HD Hyundai Construction Equipment genuine oil with any other lubricating oil as it may result in damage to the systems of major components.

※ Do not use any engine oil other than that specified above, as it may clog the diesel particulate filter(DPF).

※ For HD Hyundai Construction Equipment genuine lubricating oils and grease for use in regions with extremely low temperatures, please contact HD Hyundai Construction Equipment dealers.


CONTROL DEVICES

1. CAB DEVICES

- 1) The ergonomically designed console box and suspension type seat provide the operator with comfort.

2) ELECTRONIC MONITOR SYSTEM

- (1) The centralized electronic monitor system allows the status and conditions of the machine to be monitored at a glance.
- (2) It is equipped with a safety warning system for early detection of machine malfunction.

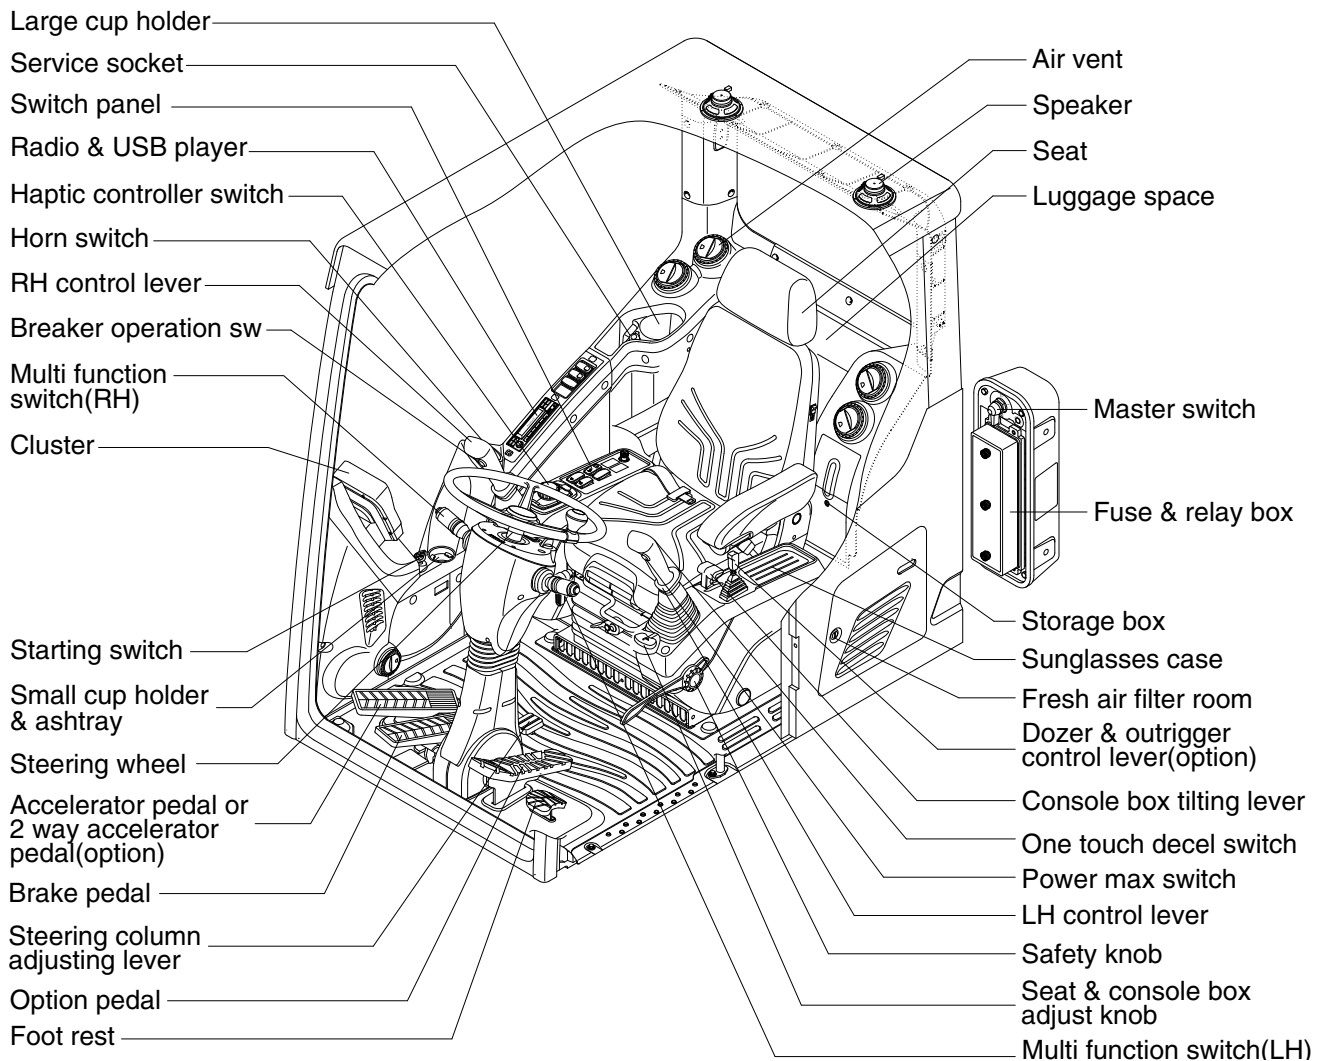

210WF3CD01

2. CLUSTER

1) STRUCTURE

The cluster consists of LCD and switches as shown below. The LCD is to warn the operator in case of abnormal machine operation or conditions for the appropriate operation and inspection. Also, The LCD is to set and display for modes, monitoring and utilities with the switches.

The switches or touch screen are to set the machine operation modes.

- ※ The cluster installed on this machine does not entirely guarantee the condition of the machine. Daily inspection should be performed according to chapter 6, Maintenance.
- ※ When the cluster provides a warning immediately check the problem, and perform the required action.




210WF3CD50K

- ※ The warning lamp pops up and/or blinks and the buzzer sounds when the machine has a problem.

The warning lamp blinks until the problem is cleared. Refer to page 3-6 for details.

- ※ This cluster is adjustable.


- Vertical (forward/backward) : each 15°
- Horizontal (left only) : 15°

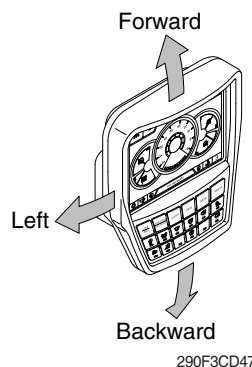

2) GAUGE

(1) Operation screen

When you first turn starting switch ON, the operation screen will appear.

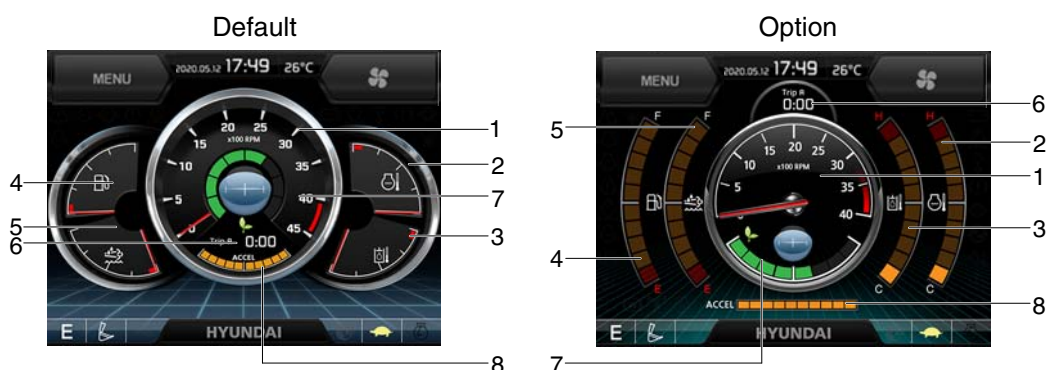

210WF3CD51K

- | | |
|------------------------------------|---------------------------|
| 1 RPM / Speed gauge | 5 DEF/AdBlue® level gauge |
| 2 Engine coolant temperature gauge | 6 Tripmeter display |
| 3 Hydraulic oil temperature gauge | 7 Eco guage |
| 4 Fuel level gauge | 8 Accel dial gauge |

※ Operation screen type can be set by the screen type menu of the display.

Refer to page 3-32 for details.


(2) RPM / Speed gauge



210WF3CD49

① This display the engine speed.


(3) Engine coolant temperature gauge

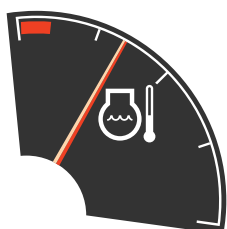


290F3CD53


① This gauge indicates the temperature of coolant.

- White range : 40-107°C (104-225°F)
- Red range : Above 107°C (225°F)



② If the indicator is in the red range or  lamp pops up and the buzzer sounds turn OFF the engine and check the engine cooling system.

※ If the gauge indicates the red range or  lamp blinks in red even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.

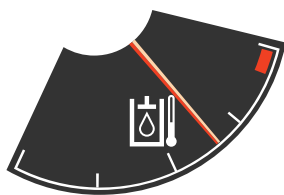
(4) Hydraulic oil temperature gauge





290F3CD54

- ① This gauge indicates the temperature of hydraulic oil.
 - White range : 40-105°C(104-221°F)
 - Red range : Above 105°C(221°F)
- ② If the indicator is in the red range or  lamp pops up and the buzzer sounds reduce the load on the system. If the gauge stays in the red range, stop the machine and check the cause of the problem.
- ※ If the gauge indicates the red range or  lamp blinks in red even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.

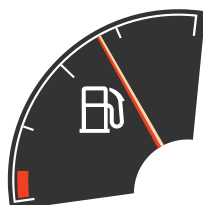(5) Fuel level gauge





290F3CD55

- ① This gauge indicates the amount of fuel in the fuel tank.
- ② Fill the fuel when the red range, or  lamp pops up and the buzzer sounds.
- ※ If the gauge indicates the red range or  lamp blinks in red even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.

 
(6) DEF/AdBlue® Level gauge



290F3CD57

- ① This gauge indicates the amount of liquid in the DEF/AdBlue® tank.
- ② Fill the DEF/AdBlue® when the red range, or  lamp pops up and the buzzer sounds.
- ③ Do not pour DEF/AdBlue® any more when the DEF/AdBlue® fill up warning lamp lights ON.
- ※ Refer to page 3-12.
- ※ If the gauge indicates the red range or  lamp blinks in red even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.

(7) Tripmeter display



290F3CD56

- ① This displays the engine the tripmeter.
- ※ Refer to page 3-34 for details.

(8) Eco gauge



210WF3CD58

- ① This gauge indicates the fuel consumption rate and machine load status. So that operators can be careful with fuel economy.
- ② The fuel consumption rate or machine load is higher, the number of segment is increased.
- ③ The color of Eco gauge indicates operation status.
 - White : Idle operation
 - Green : Economy operation
 - Yellow : Non-economy operation at a medium level.
 - Red : Non-economy operation at a high level.


(9) Accel dial gauge



290F3CD59



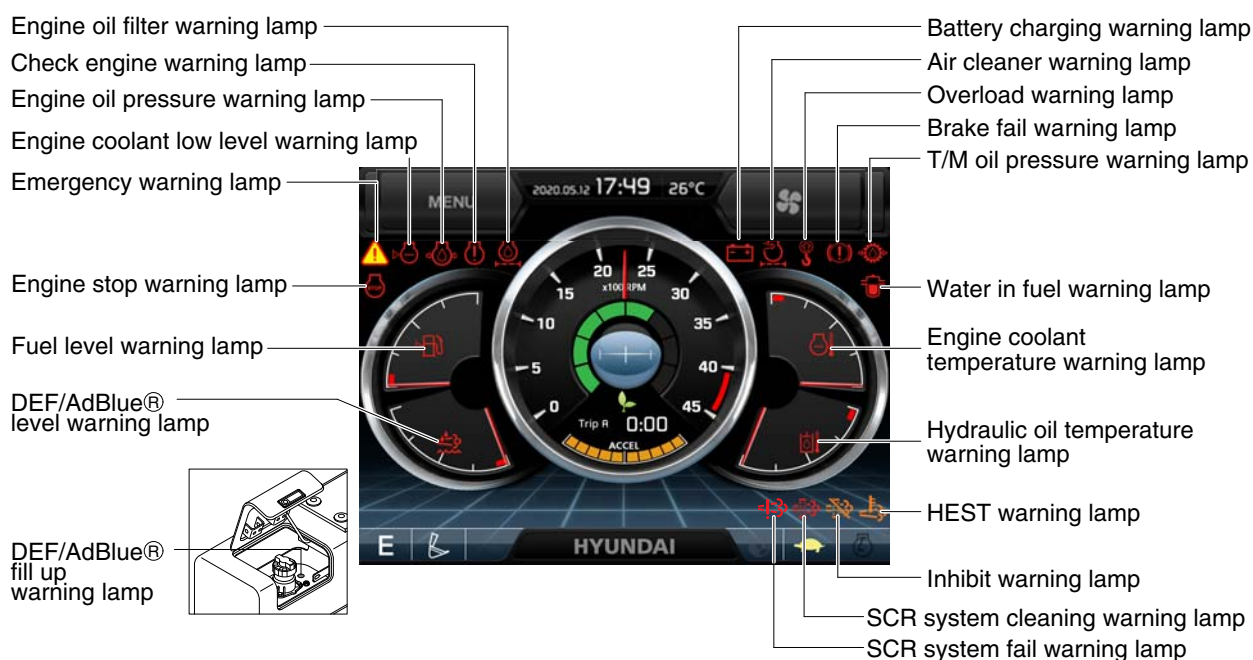


 



- ① This gauge indicates the level of accel dial.

3) WARNING LAMPS




140W3CD60A

※ Warning lamps and buzzer


 





Warnings	When error happened	Lamps and buzzer
All warning lamps except below	Warning lamp pops up on the center of the LCD and the buzzer sounds	<ul style="list-style-type: none"> The pop-up warning lamp moves to the original position and blinks, and the buzzer stops when ; - the buzzer stop switch  is pushed - the knob of the haptic controller is pushed - the lamp of the LCD is touched
	Warning lamp pops up on the center of the LCD and the buzzer sounds	<ul style="list-style-type: none"> The pop-up warning lamp moves to the original position and light ON or blinks, and the buzzer stops when ; - the buzzer stop switch  is pushed - the knob of the haptic controller is pushed - the lamp of the LCD is touched <p>※ Refer to page 3-12 for details.</p>
  	Warning lamp pops up on the center of the LCD and the buzzer sounds	<ul style="list-style-type: none"> The pop-up warning lamp moves to the original position and lights ON, and the buzzer stops when 2 seconds elapsed.
	Warning lamp pops up on the center of the LCD and the buzzer sounds	<ul style="list-style-type: none"> The pop-up warning lamp moves to the original position and blinks, and the buzzer stops when 2 seconds elapsed.
 	Warning lamp pops up on the center of the LCD and the buzzer sounds	<p>※ Refer to page 3-7 for details.</p>

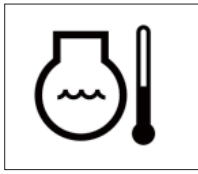※ Refer to page 3-17 for the buzzer stop switch  and page 3-67 for the haptic controller.


(1) Engine coolant temperature warning lamp








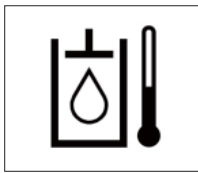

290F3CD61

 - ① Engine coolant temperature warning is indicated two steps.
 - 103°C over : The  lamp pops up and the buzzer sounds.
 - 107°C over : The  lamp pops up and the buzzer sounds.
- ② The pop-up ,  lamps move to the original position and blinks when the buzzer stop switch  is pushed. And the buzzer stops and ,  lamps keep blink.
- ③ Check the cooling system when the lamps keep blink.


(2) Hydraulic oil temperature warning lamp



290F3CD62

- ① Hydraulic oil temperature warning is indicated two steps.
 - 100°C over : The  lamp pops up and the buzzer sounds.
 - 105°C over : The  lamp pops up and the buzzer sounds.
- ② The pop-up ,  lamps move to the original position and blinks when the buzzer stop switch  is pushed. And the buzzer stops and ,  lamps keep blink.
- ③ Check the hydraulic oil level and hydraulic oil cooling system.

(3) Fuel level warning lamp

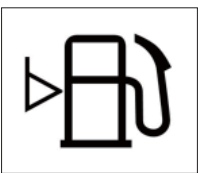


290F3CD63

- ① This warning lamp pops up and the buzzer sounds when the level of fuel is below 31 ℓ (8.2 U.S. gal).
- ② Fill the fuel immediately when the lamp blinks.

(4) Emergency warning lamp



290F3CD64

- ① This warning lamp pops up and the buzzer sounds when each of the below warnings is happened.
 - Engine coolant overheating (over 107°C)
 - Hydraulic oil overheating (over 105°C)
 - MCU input voltage abnormal
 - Cluster communication data error
 - Engine ECM communication data error
- ※ The pop-up warning lamp moves to the original position and blinks when the buzzer stop switch  is pushed. And the buzzer stops.
- ② When this warning lamp blinks, machine must be checked and serviced immediately.


(5) Engine oil pressure warning lamp



290F3CD65

- ① This warning lamp pops up and the buzzer sounds when the engine oil pressure is low.
- ② If the lamp blinks, shut OFF the engine immediately. Check oil level.


(6) Engine coolant low level warning lamp

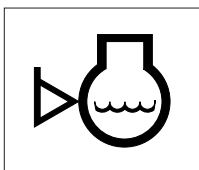

760F3CD58

- ① This warning lamp pops up and the buzzer sounds when the level of coolant is low.
- ② Fill the coolant immediately when the lamp is ON.

(7) Check engine warning lamp

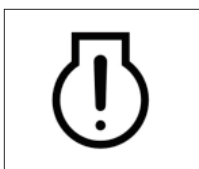

290F3CD66

- ① This warning lamp pops up and the buzzer sounds when the communication between MCU and engine ECM on the engine is abnormal, or if the cluster received specific fault code from engine ECM.
- ② Check the communication line between them.
If the communication line is OK, then check the fault codes on the cluster.


(8) Engine stop warning lamp



290F3CD252

- ① This warning lamp pops up and the buzzer sounds when 30 minutes elapsed with empty condition of the DEF/AdBlue® tank, stop the engine immediately and check the DEF/AdBlue® tank.
- ② Fill the DEF/AdBlue® immediately in the DEF/AdBlue® tank.
※ Refer to page 3-12.
- ③ This lamp pops up and the buzzer sounds when the stationary SCR system cleaning is not performed.
※ Refer to page 3-10.
※ Please contact your HD Hyundai Construction Equipment service center or local dealer.

(9) Battery charging warning lamp

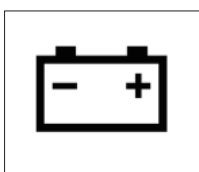

290F3CD67

- ① This warning lamp pops up and the buzzer sounds when the battery charging voltage is low.
- ② Check the battery charging circuit when this lamp blinks.

(10) Air cleaner warning lamp



290F3CD68

- ① This warning lamp pops up and the buzzer sounds when the filter of air cleaner is clogged.
- ② Check the filter and clean or replace it.

(11) Water in fuel warning lamp



210WF3CD02

- ① This warning lamp pops up and the buzzer sounds when the water separator is full of water or malfunctioning.
- ※ **When this lamp blinks, stop the machine and spill water out of the separator.**


(12) Overload warning lamp (opt)



290F3CD69

- ① When the machine is overload, the overload warning lamp pops up and the buzzer sounds during the overload switch is ON. (if equipped)
- ② The pop-up warning lamp moves to the original position and blinks, and the buzzer stops when 2 seconds elapsed.
- ③ Reduce the machine load.

(13) SCR (selective catalytic reduction) system cleaning warning lamp

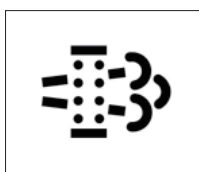


290F3CD70

① This warning lamp lights ON or blinks when the SCR system cleaning is needed as table below.

Warning lamp			Description
SCR	Check engine	Stop engine	
Off	Off	Off	· Automatic SCR system cleaning
Blink	Off	Off	· The status of a manual (stationary) SCR system cleaning when the SCR system cleaning switch has been activated. ※ Refer to page 3-11.
On	On	Off	· The aftertreatment SCR system needs to be cleaned immediately. · Engine power will be reduced automatically if action is not taken. ※ The SCR system cleaning can be accomplished by : - Changing to more challenging duty cycle. - Performing a manual SCR system cleaning.
On	On	On	· These lamps will be ON when a stationary (manual) SCR system cleaning is not performed. · Stop the engine immediately. · Please contact your HD Hyundai Construction Equipment service center or local dealer.

(14) SCR system cleaning inhibit warning lamp

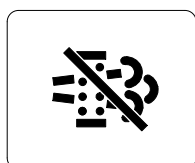


2609A3CD20

① This warning lamp indicates, when illuminated, the SCR system cleaning switch is pushed inhibit position, therefore automatic and manual SCR system cleaning can not occur.

※ Refer to the page 3-43 for the SCR system cleaning switch.

※ Manual SCR system cleaning

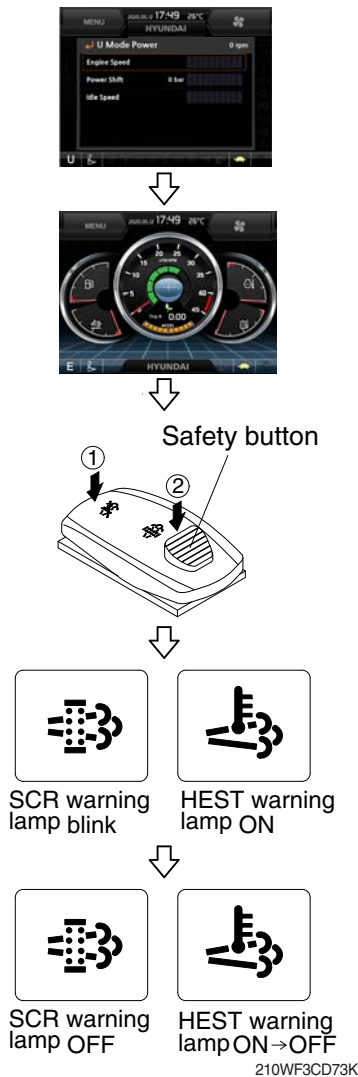

※ Manual SCR system cleaning applies if the machine is in a fireproof area.

※ To stop a manual SCR system cleaning before it has completed, set to the SCR system cleaning switch to the inhibit position or turn OFF the engine.

① Stop and park the machine.

② Pull the safety button and push the switch to position ② to initiate the manual SCR system cleaning.


※ Refer to the page 3-43 for the SCR system cleaning switch operation.

※ The engine speed may increase to 950~1050 rpm and SCR system cleaning begins and it will take approximately 20~60 minutes.

③ The SCR system cleaning warning lamp will blink and HEST warning lamp will light ON during the SCR system cleaning is operating.

④ The SCR system cleaning and/or HEST warning lamp will light OFF when the SCR system cleaning is completed.

(15) HEST (High exhaust system temperature) warning lamp

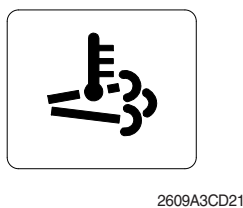

① This warning lamp indicates, when illuminated, that exhaust temperatures are high due to SCR system cleaning.

② The lamp will also illuminate during a manual SCR system cleaning.

③ When this lamp is illuminated, be sure the exhaust pipe outlet is not directed at any surface or material that can melt, burn, or explode.

⚠ When this lamp is illuminated, the exhaust gas temperature could reach 800°C [1500°F], which is hot enough to ignite or melt common materials, and to burn people.

※ The lamp does not signify the need for any kind of equipment or engine service; It merely alerts the equipment operator to high exhaust temperatures. It will be common for the lamp to illuminate on and off during normal equipment operation as the engine completes SCR system cleaning.

(16) DEF/AdBlue® level warning lamp




290F3CD257

① This warning lamp indicates when ON or blinking, that the DEF/AdBlue® level is low as table below.

※ It is recommended that the DEF/AdBlue® tank be filled completely full of the DEF/AdBlue® in order to correct any fault conditions.

Warning lamp			Description
DEF/AdBlue® level	Check engine	Stop engine	
On	Off	Off	<ul style="list-style-type: none"> The DEF/AdBlue® level has fallen below the initial warning level (10%).
Blink	Off	Off	<ul style="list-style-type: none"> The DEF/AdBlue® level has fallen below the critical warning level (5%).
Blink	On	Off	<ul style="list-style-type: none"> The DEF/AdBlue® level has fallen below the initial derate level (2.5%). The engine power will be limited automatically.
Blink	On	On	<ul style="list-style-type: none"> This is happened when 30 minutes elapsed with empty conditions (0%) of the DEF/AdBlue® tank. The engine will enter the final derate level which may include low idle lock or engine shutdown with restart limitations. In order to remove the final derate, the DEF/AdBlue® tank must be filled to above 10 percent gauge reading.

(17) DEF/AdBlue® fill up warning lamp

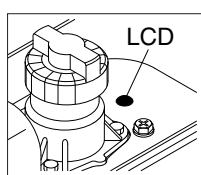


290F3CD272

① This lamp lights ON when the DEF/AdBlue® tank is completely filled with DEF/AdBlue®.

※ Fill the tank with the DEF/AdBlue® after start switch ON and then turn OFF the start switch.


※ Do not pour DEF/AdBlue® any more when this lamp lights ON. Otherwise DEF/AdBlue® tank may freeze and burst in winter season.

(18) SCR system fail warning lamp

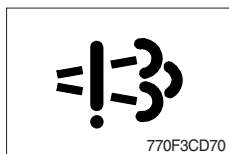


① This warning lamp lights ON if there are faults on the SCR system.

 - ※ In the case of some faults, the torque is reduced.
- ※ Please contact your HD Hyundai Construction Equipment service center or local dealer.

Warning lamp		Torque reduction
	Time	
On	Fault detected	-
Blink	After 2 h 30 min	· Torque is reduced to 50% of the highest torque.
Blink	After 3 h 45 min	· Torque is reduced to 40% of the highest torque.
Blink rapidly	After 4 hours	· Torque is reduced to 0% (low idling) of the highest torque within 2~10 min.





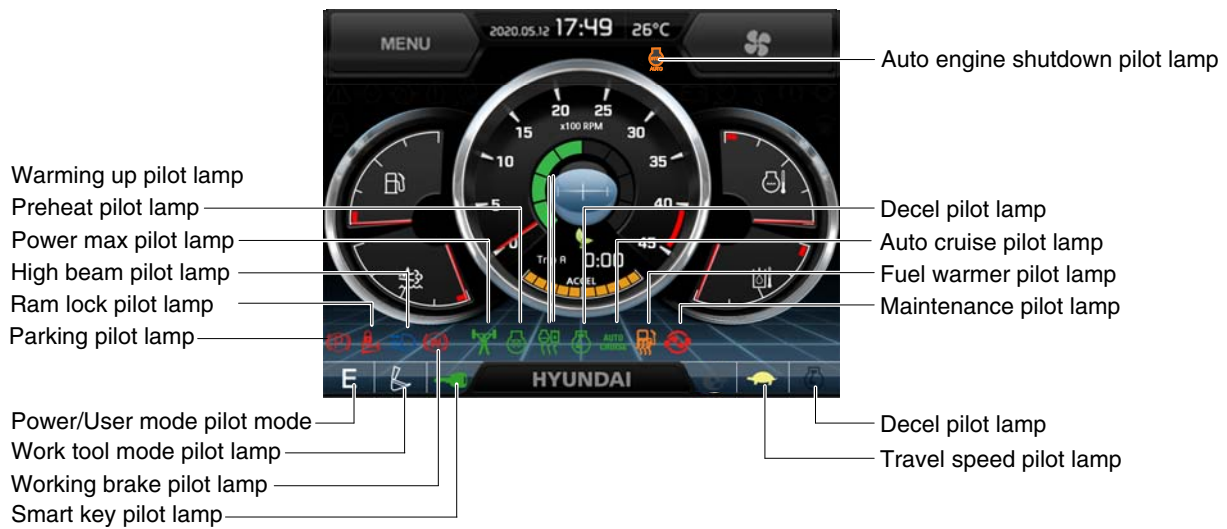






- ※ If a new fault occurs within 40 hours of operation since the first fault, the warning lamp will come ON. After 2 hours of operation, the warning lamp will blink rapidly and torque will be reduced to 0% (low idling) within 2~10 min.
- ※ Once the fault has been remedied and the engine control unit has received an indication that it is working, torque returns to the normal level.

4) PILOT LAMPS



140W3CD74A

(1) Mode pilot lamps

No	Mode	Pilot lamp	Selected mode
1	Power mode	  	Heavy duty power work mode Standard power mode Economy power mode
2	User mode		User preferable power mode
3	Work mode	  	General operation mode Breaker operation mode Crusher operation mode
4	Travel mode	  	Creep mode traveling Low speed traveling High speed traveling
5	Auto idle mode		Auto idle

(2) Power max pilot lamp



290F3CD78

① The lamp will be ON when pushing power max switch on the LH RCV lever.

② The power max function is operated maximum 8 seconds.

※ Refer to the page 3-42 for power max function.


(3) Preheat pilot lamp



290F3CD79

- ① Turning the start key switch ON position starts preheating in cold weather.
- ② Start the engine after this lamp is OFF.

(4) Warming up pilot lamp

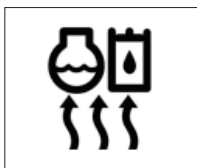

290F3CD80

- ① This lamp is turned ON when the coolant temperature is below 30°C (86°F).
- ② The automatic warming up is cancelled when the engine coolant temperature is above 30°C, or when 10 minutes have passed since starting the engine.


(5) Decel pilot lamp



290F3CD81

- ① Operating one touch decel switch on the RCV lever makes the lamp ON.
 - ② Also, the lamp will be ON and engine speed will be lowered automatically to save fuel consumption when all levers and pedals are at neutral position, and the auto idle function is selected.
 - ③ If it follows the case below, decel goes off in the idle state.
 - Auto idle button off
 - Working/Travel
 - One touch decel button off
 - Safety knob unlock
- ※ Refer to page 3-42.

(6) Fuel warmer pilot lamp

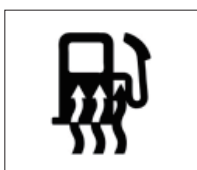

290F3CD82

- ① This lamp is turned ON when the coolant temperature is below 10°C (50°F) or the hydraulic oil temperature 20°C (68°F).
- ② The automatic fuel warming is cancelled when the engine coolant temperature is above 60°C, and the hydraulic oil temperature is above 45°C since the start switch was ON position.


(7) Maintenance pilot lamp



290F3CD83

- ① This lamp will be ON when the consuming parts are needed to change or replace. It means that the change or replacement interval of the consuming parts remains below 30 hours.
 - ② Check the message in maintenance information of main menu. Also, this lamp lights ON for 3 minutes when the start switch is ON position.
- ※ Refer to page 3-27.

(8) Smart key pilot lamp (opt)

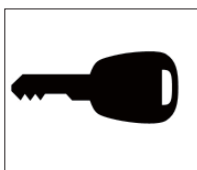

290F3CD214

- ① This lamp is ON when the engine is started by the start button.
- ② This lamp is red when the authentication fails, green when succeeds.

※ Refer to the page 3-28.

(9) Ram lock pilot lamp



210WF3CD04

- ① This lamp is on when the ram lock switch is set to the LOCK position.

※ Refer to the page 3-47.

(10) Parking pilot lamp




210WF3CD05

- ① This lamp is on when the parking switch is set to the parking position.

※ Refer to the page 3-47.

(11) High beam pilot lamp

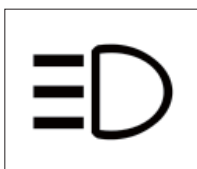

210WF3CD06

- ① The lamp is on when the head lamp switch is set to the high beam position.

- ② When passing other machines ahead, this lamp must be used for a few seconds to give other machines warning for a few seconds.

(12) Working brake pilot lamp



210WF3CD07

- ① This lamp is ON when the working brake switch is set to working position.

※ Refer to page 3-47.

(13) Auto engine shutdown pilot lamp




220A3CD202A

- ① This lamp is turned ON when the auto engine shutdown is activated.

※ Refer to the page 3-23.


5) SWITCHES

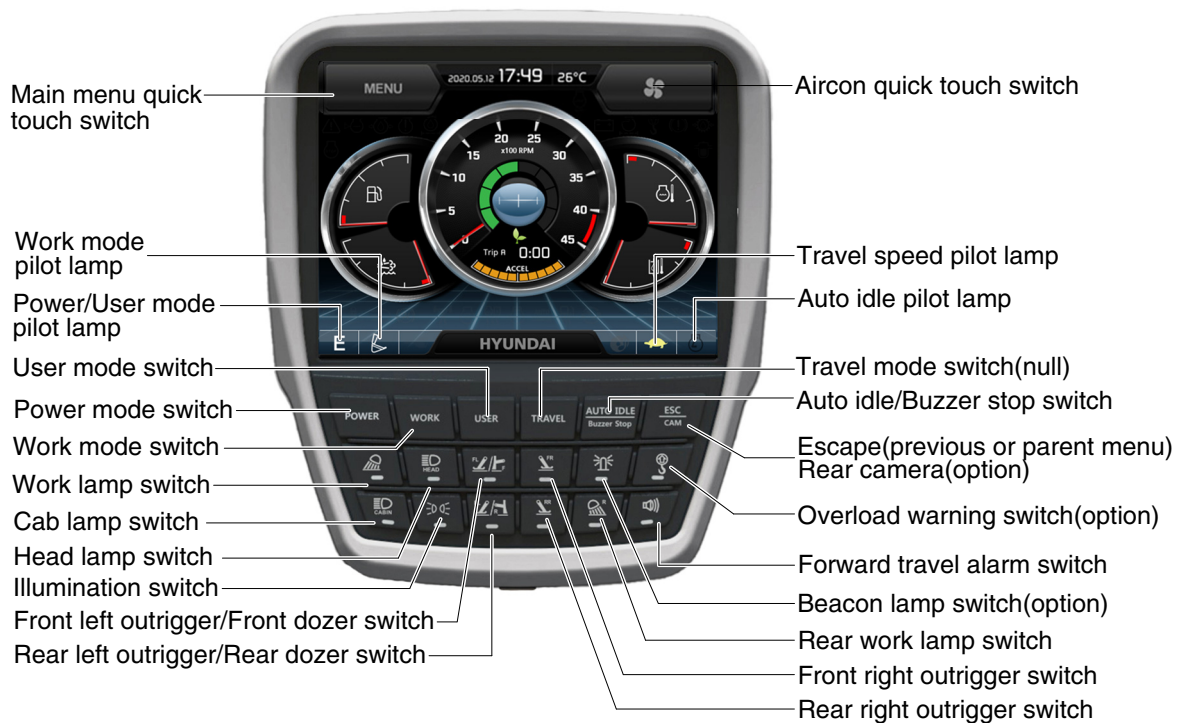

140W3CD86B

※ When some of the switches are selected, the pilot lamps are displayed on the LCD. Refer to the page 3-13 for details.

(1) Power mode switch

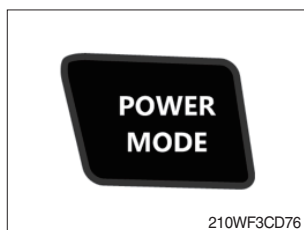

- ① This switch is to select the machine power mode and selected power mode pilot lamp is displayed on the pilot lamp position.
 - P : Heavy duty power work.
 - S : Standard power work.
 - E : Economy power work.
- ② The pilot lamp changes E → S → P → E in order.


(2) Work mode switch



- ① This switch is to select the machine work mode, which shifts from general operation mode to optional attachment operation mode.
 - : General operation mode
 - : Breaker operation mode (if equipped)
 - : Crusher operation mode (if equipped)
 - Not installed : Breaker or crusher is not installed.

※ Refer to the page 4-7 for details.

(3) User mode switch

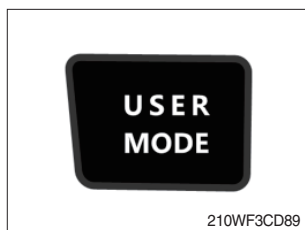

- ① This switch is used to select the user mode.
- ② Refer to page 3-22 for another set of the user mode.



(4) Auto idle/ buzzer stop switch



- ① This switch is used to activate or cancel the auto idle function.
 - Pilot lamp ON : Auto idle function is activated.
 - Pilot lamp OFF : Auto idle function is cancelled.
- ② The buzzer sounds when the machine has a problem.
In this case, push this switch and buzzer stops, but the warning lamp blinks until the problem is cleared.

(5) Travel mode switch (null)



- ① This switch is used to select the travel speed alternatively.
 -  : Low speed
 -  : High speed

※ Do not change the setting of the travel mode switch.
Machine stability may be adversely affected.


⚠ Personal injury can result from sudden changes in machine stability.

(6) Escape/Camera switch



- ① This switch is used to return to the previous menu or parent menu.
- ② In the operation screen, pushing this switch will display the view of the camera on the machine (if equipped).
Please refer to page 3-34 for the camera.
- ③ If the camera is not installed, this switch is used only ESC function.

(7) Work lamp switch

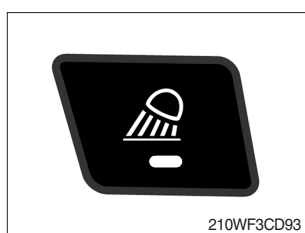

- ① This switch is used to operate the work lamp.
- ② The pilot lamp is turned ON when operating the switch.

(8) Head lamp switch



- ① This switch is used to operate the head lamp.
- ② The pilot lamp is turned ON when operating the switch.

(9) Front left outrigger/Front dozer switch



- ① This switch is used to select the front left outrigger or front dozer blade operation.
- ② The pilot lamp is turned ON when operating the switch.
- ※ **Please check the installed equipment (outrigger or dozer) on your machine before selecting the switch.**
- ※ **Refer to page 3-49 for the dozer and outrigger lever.**

(10) Front right outrigger switch



- ① This switch is used to select the front right outrigger operation if equipped.
- ② The pilot lamp is turned ON when operating the switch.
- ※ **Refer to page 3-49 for the dozer and outrigger lever.**

(11) Rear left outrigger/Rear dozer switch




- ① This switch is used to select the rear left outrigger or rear dozer blade operation.
- ② The pilot lamp is turned ON when operating the switch.
- ※ **Please check the installed equipment (outrigger or dozer) on your machine before selecting the switch.**
- ※ **Refer to page 3-49 for the dozer and outrigger lever.**

(12) Rear right outrigger switch




- ① This switch is used to select the rear right outrigger operation if equipped.
- ② The pilot lamp is turned ON when operating the switch.
- ※ **Refer to page 3-49 for the dozer and outrigger lever.**

(13) Illumination switch

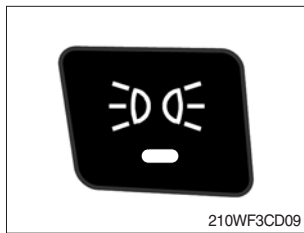


- ① This switch is used to turn on the clearance lamp and all panel lamps.
- ② The pilot lamp is turned ON when operating the switch.

(14) Beacon lamp switch

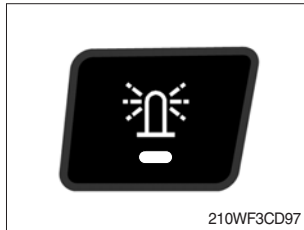

- ① This switch turns ON the beacon lamp on the cab.
- ② The pilot lamp is turned ON when operating the switch.


(15) Overload warning switch

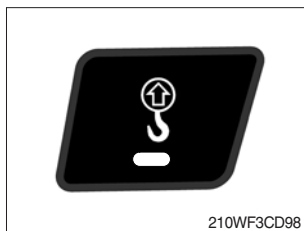

- ① When this switch turned ON, buzzer makes sound and overload warning lamp blinks in case that the machine is overload.
- ② When it turned OFF, buzzer stops and warning lamp goes out.
- ③ The pilot lamp is turned ON when operating the switch.

⚠ Overloading the machine could impact the machines stability which could result in tipover hazard. A tipover hazard could result in serious injury or death. Always activate the overload warning device before you handle or lift objects.

(16) Cab lamp switch

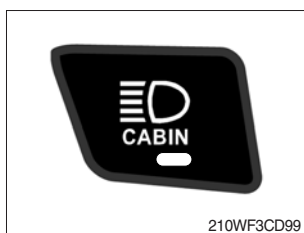


- ① This switch turns ON the cab lamp on the cab.
- ② The pilot lamp is turned ON when operating the switch.

(17) Rear work lamp switch



- ① This switch is used to operate the rear work lamp.
- ② The pilot lamp is turned ON when operating the switch.

(18) Travel alarm switch

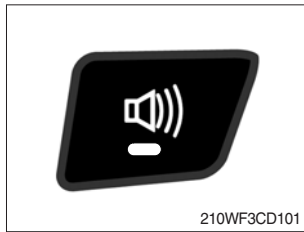

- ① The alarm makes sound when the machine travels to backward.
- This switch is for Crawler excavators only.

(19) Air conditioner quick touch switch



- ① This switch used to select air conditioner control mode.
- ※ **Refer to the page 3-36.**

(20) Main menu quick touch switch



- ① This switch is to activate the main menu in the cluster.
- ※ **Refer to the page 3-21.**

6) MAIN MENU

※ You can select or set the menu by the haptic controller or touch screen.

On the operation screen, tap MENU to access the main menu screen.

On the sub menu screen, you can tap the menu bar to access functions or applications.






· Operation screen



140W3CD102A

※ Please refer to the haptic controller, page 3-67 for selection and change of menu and input value.

(1) Structure

No	Main menu	Sub menu	Description
1	 Mode 290F3CD103	Work tool U mode power Boom/Arm speed Auto power boost Auto engine shutdown (option) Initial mode Emergency mode	Breaker, Crusher, Not installed User mode only Boom speed, Arm speed Enable, Disable One time, Always, Disable Key on initial mode, Accel initial mode / step Switch function
2	 Monitoring 290F3CD104	Active fault Logged fault Delete logged fault Monitoring	MCU, Engine ECM MCU, Engine ECM All logged fault delete, Initialization canceled Machine information, Switch status, Output status,
3	 Management 290F3CD105	Fuel rate information Maintenance information Machine security Machine information Contact Service menu Clinometer Update	General record, Hourly, Daily, Mode record Replacement, Change interval oils and filters ESL mode setting, Password change Model, MCU, Monitor, Haptic / switch controller, RMCU, Relay drive unit, FATC, AAVM (opt) A/S phone number, A/S phone number change Power shift, Operating hour, IPC mode, Breaker mode pump acting, EPPR current level, Overload pressure Clinometer setting Cluster, ETC device
4	 Display 290F3CD106	Display item Clock Brightness Unit setup Language selection Screen type	Engine speed, Tripmeter A, Tripmeter B, Tripmeter C Clock Manual, Auto Temperature, Pressure, Flow, Distance, Date format Korean, English, Chinese, ETC A type, B type
5	 Utilities 290F3CD107	Tripmeter Camera	3 kinds (A, B, C) Number of active, Display order, AAVM (opt)

④ Auto power boost



- The power boost function can be activated or cancelled.
 Enable - The digging power is automatically increased as working conditions by the MCU.
 It is operated max 8 seconds.
 Disable - Not operated.

⑤ Automatic engine shutdown (option)



- The automatic engine shutdown function can be set by this menu.
 - One time
 - Always
 - Disable

⑥ Initial mode



- **Key on initial mode**
 - Selected the power mode is activated when the engine is started.
- **Accel initial mode**
 - Last setting value
 - User setting value
- **Accel initial step**
 - 0~9 step

⑦ Emergency mode



- This mode can be use when the switches are abnormal on the cluster.
- The cluster switches will be selected by touched each icon.

(3) Monitoring

① Active fault



- The active faults of the MCU, engine ECM or air conditioner can be checked by this menu.

② Logged fault



- The logged faults of the MCU, engine ECM or air conditioner can be checked by this menu.

③ Delete logged fault



- The logged faults of the MCU, engine ECM or air conditioner can be deleted by this menu.

④ Monitoring



- The machine status such as the engine rpm, oil temperature, voltage and pressure etc. can be checked by this menu (Analog input).
- The switch status or output status can be confirmed by this menu (Digital input & Digital output).
- The activated switch or output pilot lamps ● are light ON.

(4) Management


① Fuel rate information



140W3CD14A



140W3CD15A

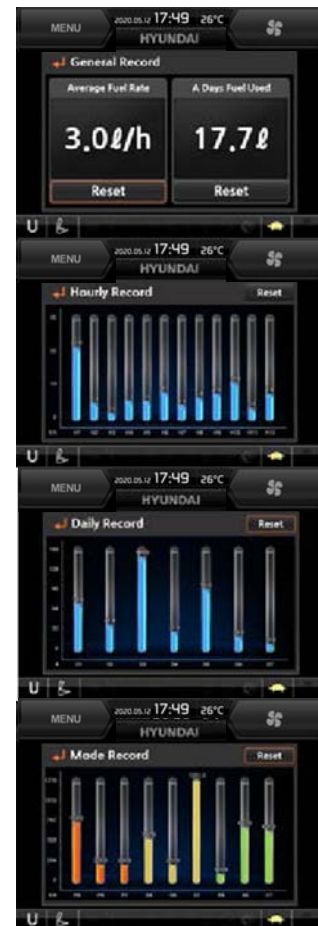

140W3CD16A

- 1 General record
- 2 Hourly record
- 3 Daily record
- 4 Mode record

② Maintenance information



- Alarm lamp (●) is ON when oil or filter needs to be changed or replaced.
 - Replacement : The elapsed time will be reset to zero (0).
 - Change interval : The change or replace interval can be changed in the unit of 50 hours.
- ※ Refer to the maintenance chart for further information of maintenance interval.

③ Machine security



· ESL mode setting

- ESL : Engine Starting Limit
- ESL mode is desgined to be a theft deterrent or will prevent the unauthorized operation of the machine.
- When you Enable the ESL mode, the password will be required when the starting switch is turned to the on position.

- Machine security

Disable : ESL function is disabled and password is not required to start engine.

Enable (always) : The password is required whenever the operator starts engine.

- Interval : The password is required when the operator starts engine first. But the operator can restart the engine within the interval time without inputting the password. The interval time can be set to a maximum 4 hours.

※ Default password : 00000 +

※ Password length : (5~10 digits) +

- Smart key (option) : Refer to next page.



· Password change

- The password is 5~10 digits.



※ Before first use, please set user password and owner password in advance for machine security.


- Smart key




210WF3CD190A




290F3CD135C

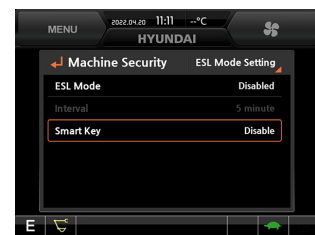


290F3CD001

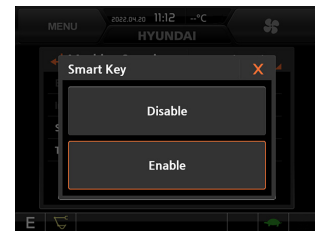

290F3CD002

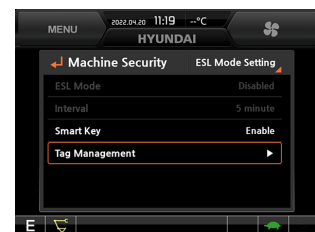


290F3CD003

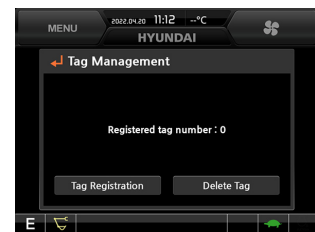


290F3CD004

Registering

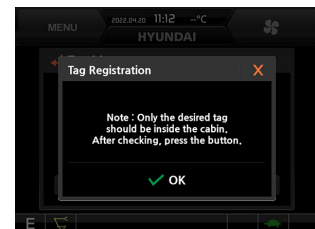

290F3CD005

Deleting

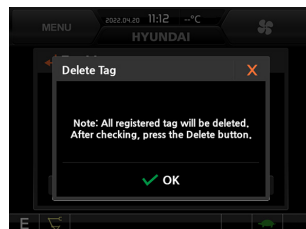


290F3CD006

- Smart key is registered when equipped with optional smart key. If smart key is not inside of the cabin, authentication process fails and the password is needed.
- Tag management menu is activated when the Smart key menu is Enabled.
You can register and delete the tags.

- Tag management

- When registering a tag : Only the tag you want to register must be in the cabin.
- When deleting a tag : All registered tags are deleted.

④ Machine Information

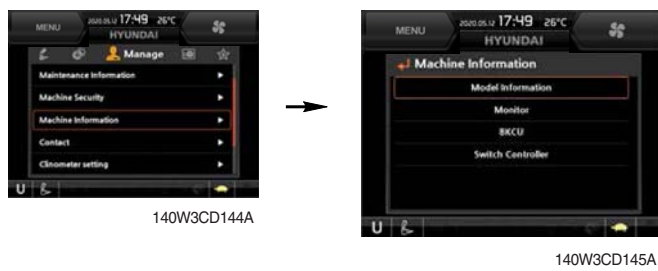


- This can confirm the identification of the model information (ECU), MCU, monitor, haptic controller, switch controller, RMCU, relay driver unit, FATC (air conditioner controller), AAVM (opt).

⑤ Contact (A/S phone number)




Enter the new A/S phone number

⑥ Clinometer

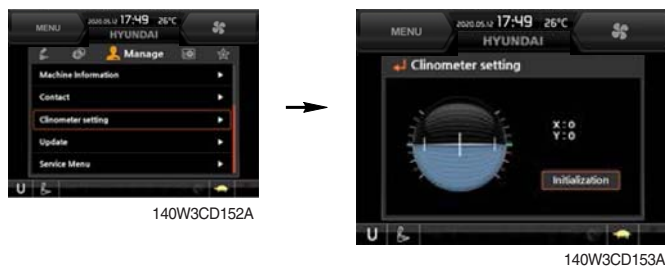

- When the machine is on the flatland, if tap the "initialization", the values of X, Y reset "0".
- You can confirm tilt of machine in cluster's operating screen.

⑦ Update (cluster & ETC devices)

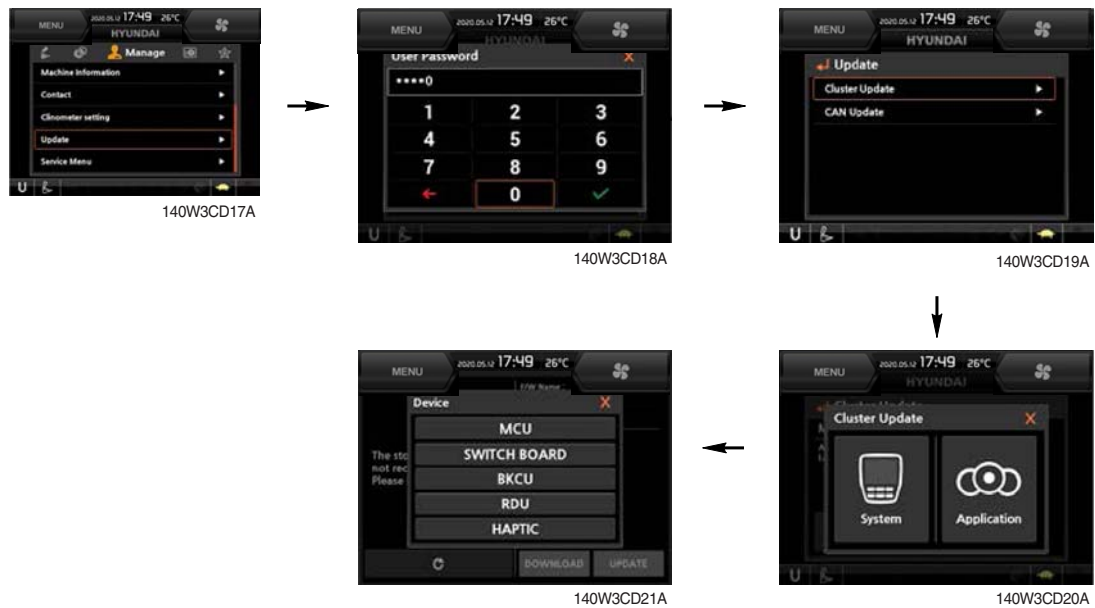

- ETC devices and cluster can be updated through CAN 2 network.
- Insert USB memory stick which includes program files, start download.

⑧ Service menu



- Power shift (standard/option) : Power shift pressure can be set by option menu.
- Operating hours : Operating hours since the machine line out can be checked by this menu.
- IPC mode : IPC mode 1, IPC mode 2, Not used.
- Breaker mode pump acting (1 pump/2 pump)
- EPPR current level (attach flow EPPR 1 & 2, boom priority EPPR, attach relief pressure EPPR 1 & 2)
- Overload pressure : 100 ~ 350 bar


(5) Display

① Display item



- The center display type of the LCD can be selected by this menu.
- The engine speed, each of the tripmeter (A,B,C) or the fuel rate information item is displayed on the center display.

② Clock

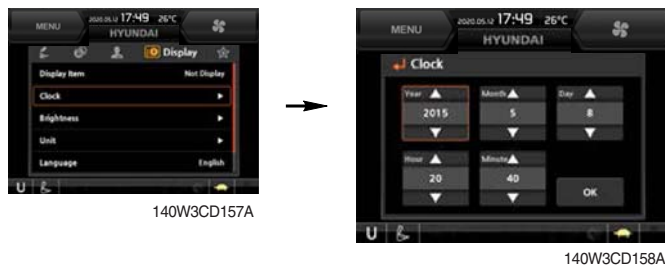

- The first line's three spots "**/**/****" represent Month/Day/Year each.
- The second line shows the current time. (0:00~23:59)

③ Brightness



- If "Auto" is chosen, brightness for day and night can be differently set up. Also by using the bar in lower side, users can define which time interval belongs to day and night. (in bar figure, white area represents night time while orange shows day time)

④ Unit




- Temperature : °C ↔ °F
- Pressure : bar ↔ MPa ↔ kgf/cm²
- Volume : ℓ ↔ gal
- Flow : lpm ↔ gpm
- Distance : km ↔ mile
- Date format : yy/mm/dd ↔ mm/dd/yy ↔ dd-mm-yy

⑤ Language



- User can select preferable language and all displays are changed the selected language.

⑥ Screen type

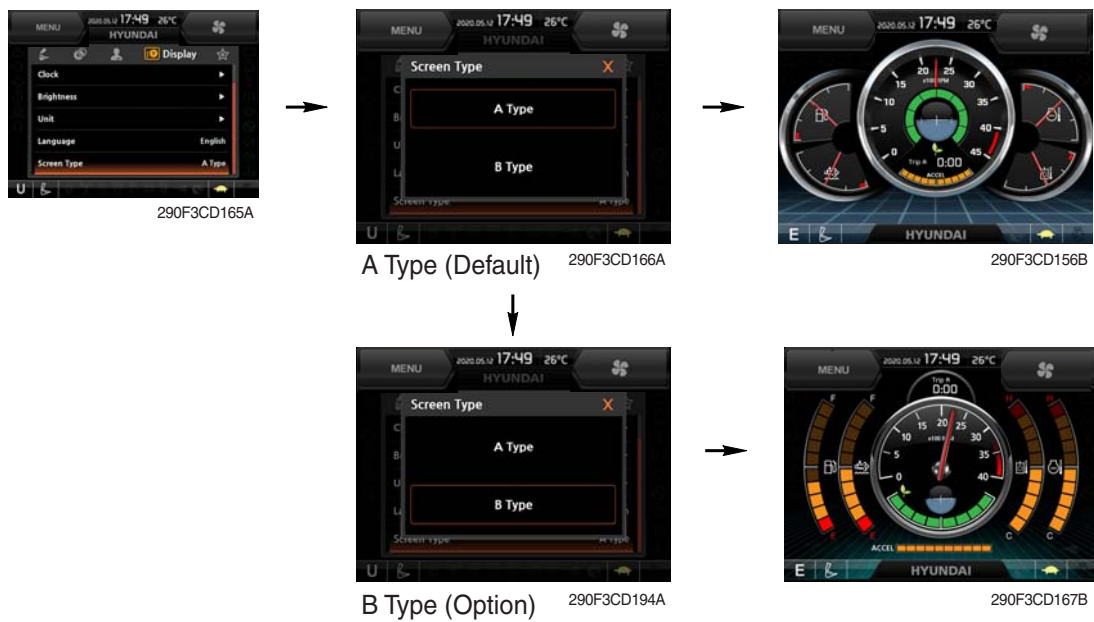

(6) Utilities

① Tripmeter



140W3CD168A



140W3CD169A

- Maximum 3 kinds of tripmeters can be used at the same time.
- Each tripmeter can be turned on by choosing "Start" while it also can be turned off by choosing "Stop".
- If the tripmeter icon is activated in the operation screen, it can be controlled directly there.

② Camera setting

- If the rear camera is not installed on the machine, set disable.
- If the rear camera installed on the machine, set enable.



140W3CD200A



140W3CD255A



140W3CD256A

- In the operation screen, rear camera screen show up when ESC/CAM button is pushed.



140WF3CD156A



290F3CD221


③ AAVM (All Around View Monitoring, option)

- The AAVM buttons of the cluster consist of ESC/CAM and AUTO IDLE/Buzzer stop.



- Escape button

- It will enter into the AAVM mode from the beginning screen if the AAVM is installed.
- While in the AAVM mode, select the ESC button to return to the beginning screen.

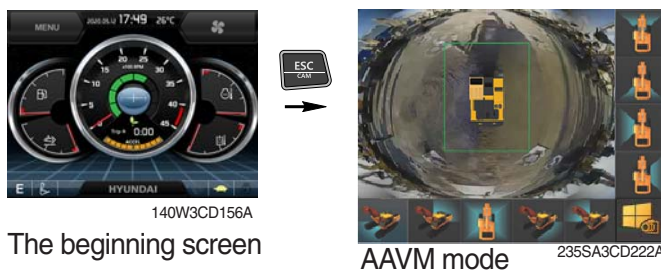

- Buzzer stop button

- In AAVM mode, it detects surrounding pedestrians or objects and the warning buzzer sounds.
- User can turn OFF the warning sound by pressing buzzer stop button.



- When the worker or pedestrian go to the blue line (radius 5 m), an external danger area of equipping on the cluster screen, the warning buzzer sounds and it displays the blue rectangular box for the recognition of the worker and pedestrian. At this time, the operator should stop work immediately, and stop the buzzer by pressing the buzzer stop button. And then, please work after you check whether the danger factors are solved.




- When the worker or pedestrian go inside of red line (radius 3 m), an internal danger area of equipping on the cluster screen, the warning buzzer sounds and it displays the red rectangular box for the recognition of the worker and pedestrian. At this time, the operator should stop work immediately, and stop the buzzer by pressing the buzzer stop button. And then, please work after you check whether the danger factors are solved.

※ In AAVM mode, a touch screen of the LCD is available only. The multimodal dial of the haptic controller is not available.

7) AIR CONDITIONER AND HEATER



Full auto temperature control air conditioner and heater system automatically keeps the optimum condition in accordance with operator's temperature configuration sensing ambient and cabin inside temperature.

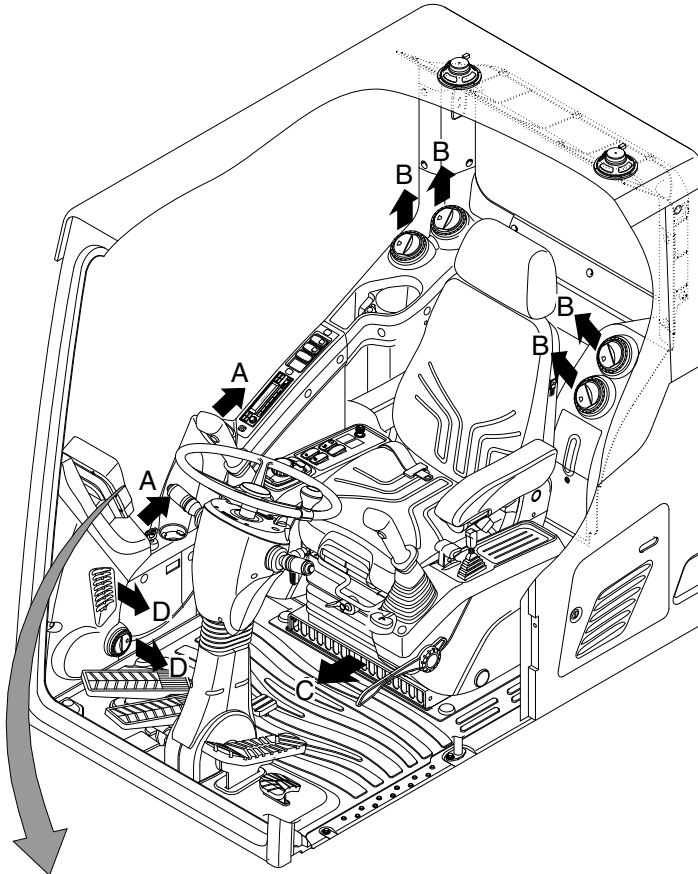
· Location of air flow ducts



Cluster LCD



Cluster :  or
Haptic controller : 

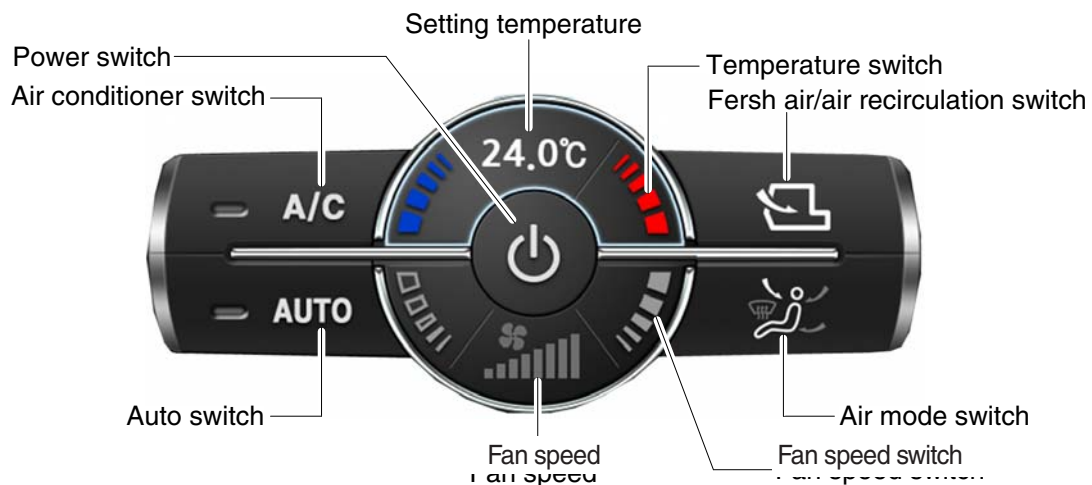

※ Haptic controller : Refer to page 3-67.

(1) Power switch



- ① This switch makes the system ON/OFF.
Just before the power OFF, set values are stored.
- ② Default setting values

Function	Air conditioner	In/outlet	LCD	Temperature	Mode
Value	OFF	Inlet	OFF	Previous sw OFF	Previous sw OFF

(2) Air conditioner switch



- ① This switch turns the compressor ON/OFF.
- ※ **Air conditioner operates to remove vapor and drains water through a drain hose. Water can be sprayed into the cab in case that the drain cock at the ending point of drain hose has a problem.**
In this case, exchange the drain cock.

(3) Auto switch




- ① Auto air conditioner and heater system automatically keeps the optimum condition in accordance with operator's temperature configuration sensing ambient and cabin inside temperature.

(4) Setting temperature



- ① Display the temperature setting out.

(5) Temperature switch

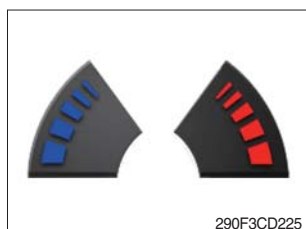


- ① Setting temperature indication
· Lo (17°C), 17.5~31.5°C, Hi (32°C)
- ② Max cool and max warm beeps 5 times.
- ③ The max cool or the max warm position operates as following table.

Temperature	Compressor	Fan speed	In/outlet	Mode
Max cool	ON	Hi (8 step)	Recirculation	Face
Max warm	OFF	Hi (7 step)	Fresh	Def/Foot

- ④ Temperature unit can be changed between celsius (°C) and fahrenheit (°F)
 - a. Default status (°C)
 - b. Push Up/Down temperature switch simultaneously more than 5 second displayed temperature unit change (°C → °F)

(6) Fan speed switch

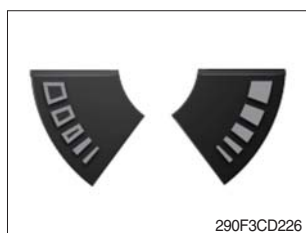

- ① Fan speed is controlled automatically by set temperature.
- ② This switch controls fan speed manually.
 - There are 8 up/down steps to control fan speed.
 - The maximum step or the minimum step beeps 5 times.

(7) Fan speed



- ① Steps 1 through 8 to display the amount of wind.

(8) Fresh air/air recirculation switch



- ① It is possible to change the air-inlet method.
 - a. **Fresh air** (🌬️)
Inhaling air from the outside.
 - b. **Air recirculation** (🔄)
It recycles the heated or cooled air to increase the energy efficiency.
- ※ **Change air occasionally when using recirculation for a long time.**
- ※ **Check out the fresh air filter and the recirculation filter periodically to keep a good efficiency.**

(9) Air mode switch



- ① Operating this switch, it beeps and displays symbol of each mode in order. (Face → Face/Rear → Face/Rear/Foot → Foot → Def/Foot)

Mode switch		Face	Face/Rear	Face/Rear/Foot	Foot	Def/Foot
		👤	👤	👤	👤	👤
Outlet	A	●	●	●		
	B		●	●		
	C			●	●	●
	D					●

- ② When defroster mode operating, FRESH AIR/AIR RECIRCULATION switch turns to FRESH AIR mode and air conditioner switch turns ON.


8) SELF DIAGNOSIS FUNCTION

(1) Diagnostic methods : Diagnostic information window, select

(2) Diagnostic indication (Displays fault)



Fault code	Description	Fail safe function
F01	Ambient temperature sensor open	20°C alternate value control
F02	Ambient temperature sensor short	
F03	Cab inside temperature sensor open	25°C alternate value control
F04	Cab inside temperature sensor short	
F05	Evaporate temperature sensor open	0°C alternate value control
F06	Evaporate temperature sensor short	
F07	Null	-
F08	Null	-
F09	Mode 1 actuator open/short	The alternate value is face
F10	Mode 1 actuator drive circuit malfunction	If not, the alternate value is Def/Foot
F11	Intake actuator open/short	The alternate value is air recirculation
F12	Intake actuator drive circuit malfunction	The alternate fresh air
F13	Temperature actuator open/short	If opening amount is 0 %, the alternate value is 0 %
F14	Temperature actuator drive circuit malfunction	If not, the alternate value is 100 %
F15	Null	-
F16	Null	-

3. SWITCHES

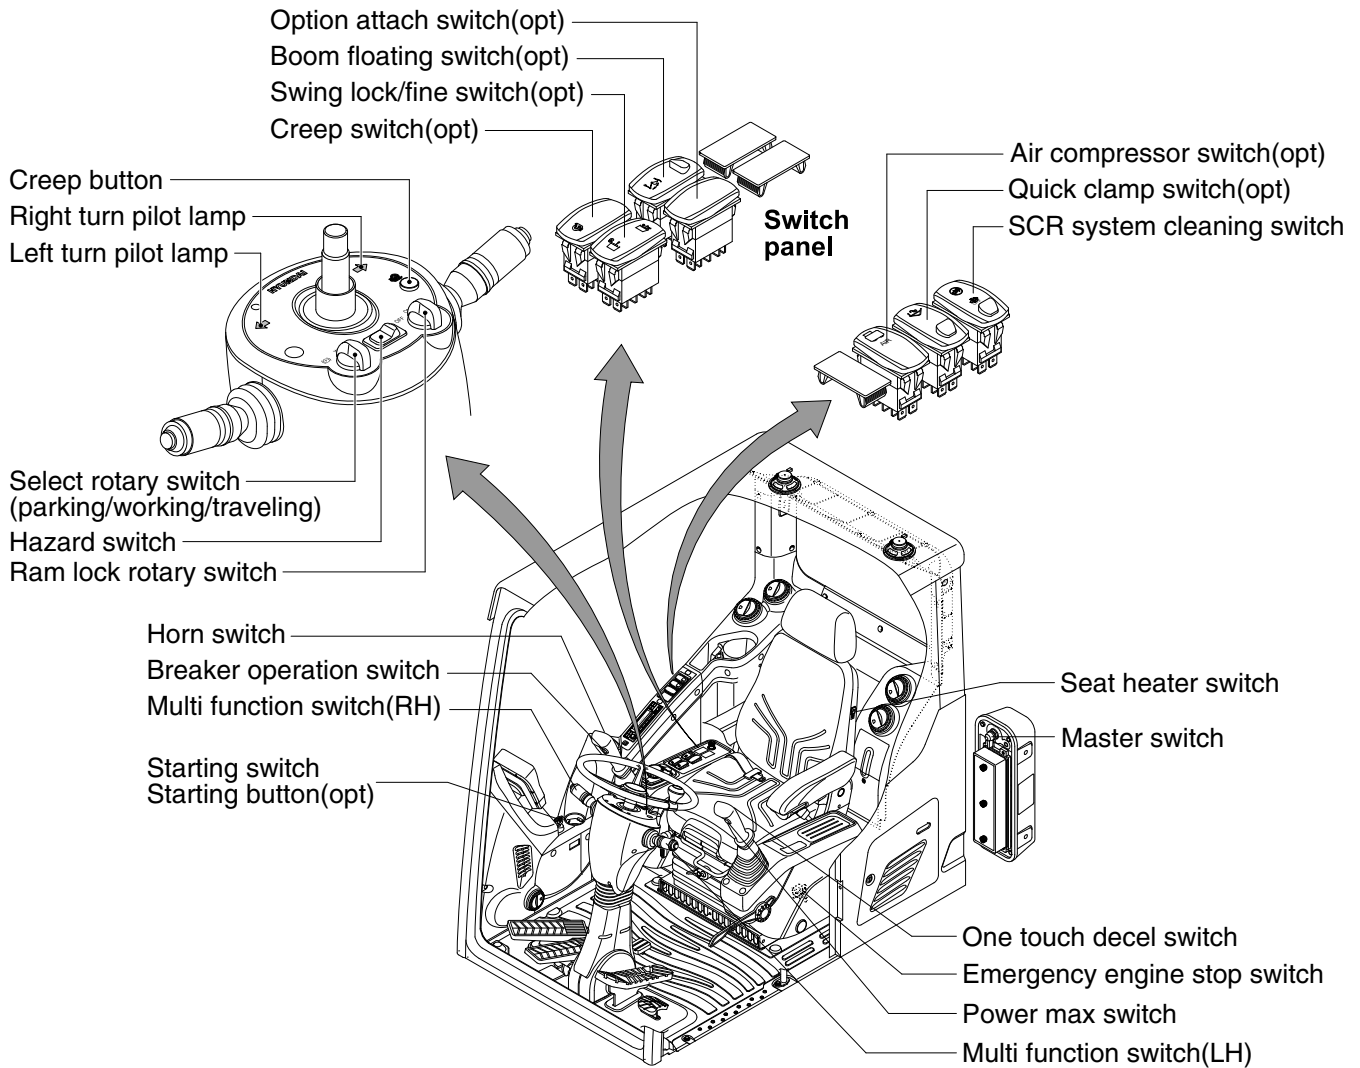

210WF3CD46

1) STARTING SWITCH & STARTING BUTTON (OPT)

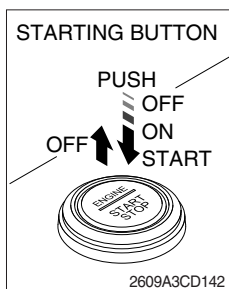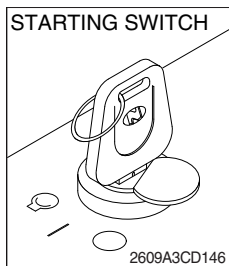

Starting button with smart key tag (opt)


(1) There are three positions, OFF, ON and START.

- ○ (OFF) : None of electrical circuits activate.
- | (ON) : All the systems of machine operate.
- ⦿ (START) : Use when starting the engine.

Release key immediately after starting.


- ※ If you turn ON the starting switch in cold weather, the fuel warmer is automatically operated to heat the fuel by sensing the coolant temperature. Start the engine in 1~2 minutes after turning ON the starting switch. More time may take according to ambient temperature.
- ※ Key must be in the ON position with engine running to maintain electrical and hydraulic function and prevent serious machine damage.

2) MASTER SWITCH

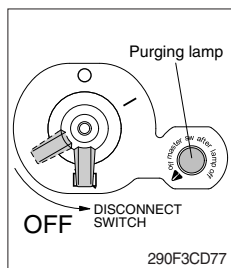


- (1) This switch is used to shut off the entire electrical system.
- (2) I : The battery remains connected to the electrical system.
O : The battery is disconnected to the electrical system.
- ※ **Never turn the master switch to O (OFF) with the engine running.**
Engine and electrical system damage could result.
- ※ **Off the master switch after purging lamp OFF.**

3) QUICK CLAMP SWITCH (option)

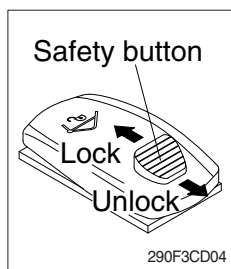


- (1) This switch is used to engage or disengage the moving hook on quick clamp.
- ※ **Refer to the page 8-6 for details.**

4) SEAT HEAT SWITCH (option)

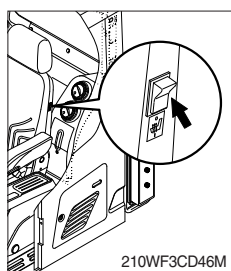


- (1) The seat heater can be turned on/off by pressing the switch.
- ※ **Refer to the page 3-72.**

5) HORN SWITCH

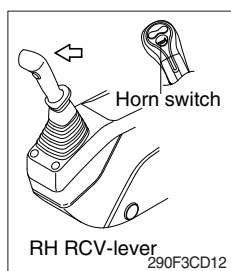


- (1) This switch is at the top of right side control lever.
On pressing, the horn sounds.

6) BREAKER OPERATION SWITCH

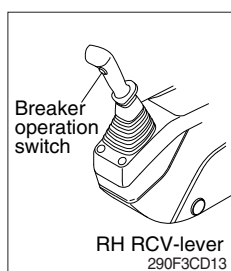


- (1) On pressing this switch, the breaker operates only when the breaker operation mode is selected.

7) ONE TOUCH DECEL SWITCH

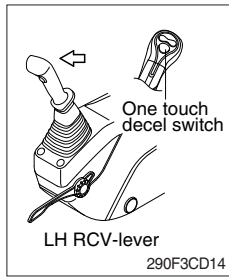


- (1) This switch is used to actuate the deceleration function quickly.
- (2) The engine speed is increased to previous setting value by pressing the switch again or operating state (working/travel).

8) POWER MAX SWITCH

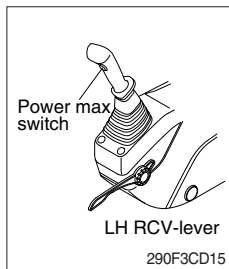

- (1) This switch activate power max function.
When this switch is kept pressed, hydraulic power of work equipment will be increased to approx 110 percent during 8 seconds.
 - (2) After 8 seconds, function is cancelled automatically even the switch keeps pressed.
- ※ **Do not use for craning purposes.**

9) SCR (selective catalytic reduction) SYSTEM CLEANING SWITCH

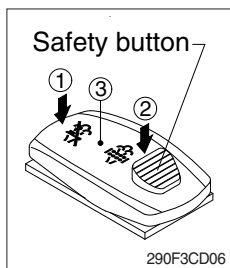

(1) This switch is used to select the SCR system cleaning.

(2) Inhibit position (①)

- ① The inhibit position disallows any automatic or manual SCR system cleaning.
- ② This may be used by operator to prevent SCR system cleaning when the machine is operating in a hazardous environment is concerned about high temperature.
- ③ It is strongly recommended that this position is only activated when high temperatures may cause a hazardous condition.


(3) Auto position (③)

This position will initiate a automatic SCR system cleaning.

(4) Manual position (②)

- ① This position will only initiate a manual SCR system cleaning when the machine is in non-mission condition, engine must run at low idle speed and SCR system levels are high enough to allow cleaning.
 - ② HEST lamp will be illuminated during the entire SCR system cleaning.
- ※ Refer to the page 3-10 for details.
- ※ This switch can be move to the manual position (②) only when the safety button is pulled to backward.
- ※ Also, this switch return to the auto position when released the manual position (②).


10) AIR COMPRESSOR SWITCH (option)

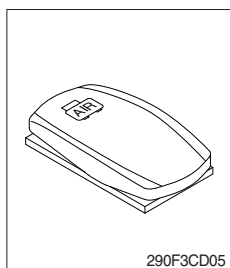

(1) This switch is used to activate the air compressor.

(2) The indicator lamp is turned on when operating the switch.


11) BOOM FLOATING SWITCH (option)

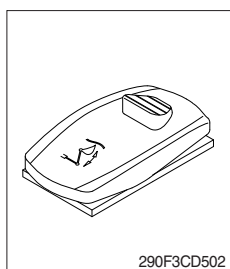

(1) This mode is used to smooth boom operation.

(2) Rod and head of boom cylinder are connected to the tank at the same time. So boom can be moved by the ground shape though only arm operation.

12) SWING LOCK / FINE SWITCH (option)

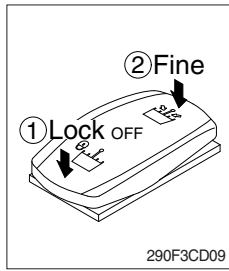

(1) OFF position

Normal operation.

(2) Lock position (①)

In this position, the swing parking brake is locked and swing control is not available by shut off the swing pilot pressure to the swing spool.

(3) Fine position (②)


① In this position, the swing parking brake is released.

② Swing control improves during deceleration of a swing because the swing is allowed the drift instead of stopping abruptly.

▲ If the machine is operating on a slope with the switch in this position, swing motion may become uncontrollable which could result in property damage, personal injury or death.

Do not use this position when the machine is operating on a slope.

13) CREEP BUTTON

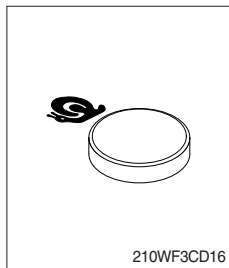


(1) This switch is used to very low speed traveling more than 1st speed.

(2) The indicator lamp is turned ON when operating this switch.

• Speed : 3.5 km/h (2.2 mph)


14) EMERGENCY ENGINE STOP SWITCH

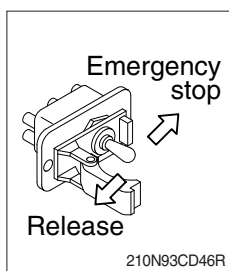

(1) This switch is used to emergency stop the engine.

※ **Be sure to keep the emergency switch on the release position when restart the engine.**

15) OPTION ATTACHMENT SWITCH (option)

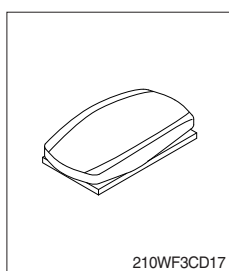


(1) This switch is used to select the option attachment operation by the option pedal if equipped.

※ **Refer to the page 3-51 for option pedal.**

16) RH MULTI FUNCTION SWITCH

(1) FNR lever

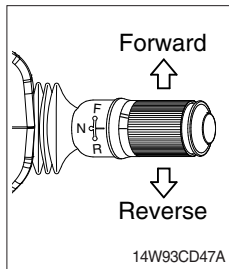

① This lever changes travel direction of machine.

- F : Machine moves forward
- N : Neutral position
- R : Machine moves backward


▲ Travel direction will be reversed if lower structure is positioned with dozer in front.

② The warning buzzer sounds when the lever is in the reverse position.

▲ If this lever is not in the neutral position, engine does not started.

▲ Be sure to stop the machine when changing the direction forward or backward while traveling.


(2) Travel speed switch

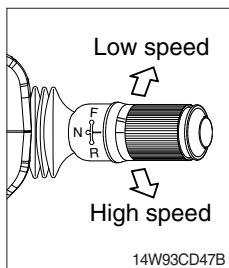

① This switch is for selecting travelling speed between high and low.

- Low speed (—) : 10 km/hr (6.2 mph)
- High speed (=) : 39 km/hr (24.2 mph)

(3) Auto cruise switch

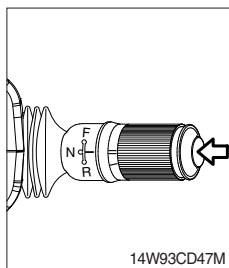


① This switch is for kept uniform motion while driving.

② Auto cruise function is available when the FNR lever is forward and high speed position.

17) LH MULTI FUNCTION SWITCH

(1) Direction indication lamp switch

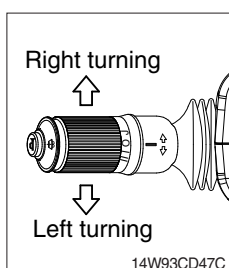





① This switch is used to warn or signal the turning direction of the machine to other machines or equipment.

② Push the lever to forward for turning right (↗), pull the lever to backward for turning left (↖).


③ The turning pilot lamp comes ON at the travel pilot lamp on the steering column.

  (2) Dimmer switch

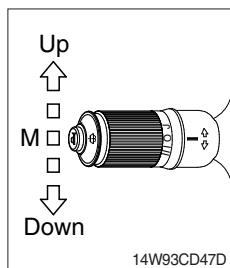


- ① This switch is used to turn the head lights direction.
- ② Switch positions.
 - Up () : To flash for passing
 - Middle () : Head lights low beam ON
 - Down () : Head lights high beam ON
- ③ If you release the switch when it's in up position, the switch will return to middle.

(3) WIPER SWITCH

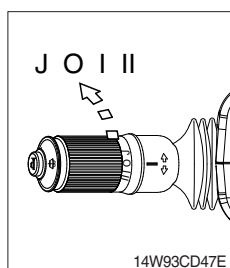


- ① When the switch is in J position, the wiper moves intermittently.
- ② When placed in I or II position, the wiper moves continuously.
- ※ If the wiper does not operate with the switch in operation position, turn the switch OFF immediately. Check the cause. If the switch remains operation position , motor failure can result.

(4) WASHER SWITCH

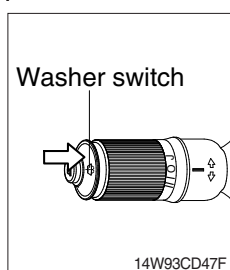


- ① If you push the grip of the lever, washer liquid will be sprayed and the wiper will be activated 2-3 times.
- ※ Check the quantity of washer liquid in the tank. If the level of the washer liquid is LOW, add the washer liquid (in cold, winter days) or water. The capacity of tank is 1.5 liter.

(5) HORN SWITCH

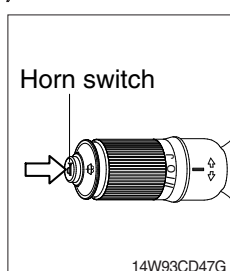


- ① This switch is at the end of left side multifunction switch. On pressing, the horn sounds.

18) HAZARD SWITCH

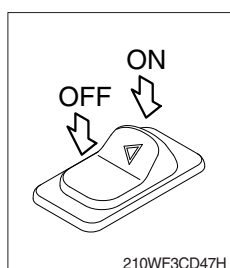

- (1) Use for parking, or roading machine.
- (2) LH and RH turn signal lamps come ON at the same time by this switch.
- ※ If the switch is left ON for a long time, the battery may be discharged.

19) RAM LOCK ROTARY SWITCH

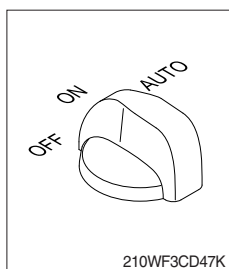


(1) This switch activate front axle oscillation cylinder to locking position for increase of stability.

- ON : Set front axle to locking position for excavation work or travels even ground. Also, the ram lock pilot lamp comes ON at the cluster.
- OFF : Front axle will be oscillate depend on ground condition when the machine travel uneven ground.
- AUTO : Set front axle to locking or unlocking as table.

Select switch (parking/working/ traveling)	Ram lock	Conditions
Parking	Locking	· Always
Traveling	Unlocking	· Always
Working	Locking	· FNR lever in neutral position · Service brake pedal is depressed.
	Unlocking	· FNR lever in forward/reverse position and service brake pedal is not depressed. · 2 way pedal is equipped and service brake pedal is not depressed.

20) SELECT ROTARY SWITCH (parking / working / traveling)

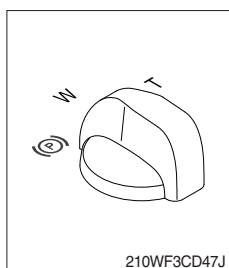


(1) This switch is used to select the operation mode as below.

- Parking (P) : The parking brake is applied.
- Working (W) : The machine needs to be working.
- Traveling (T) : The machine needs to be traveling.

Mode		Working	Traveling
P	Parking	O	X
W	Working	O	O
T	Traveling	X	O


(2) When you set this switch to parking or working, the parking or working lock pilot lamp lights up at the cluster.

21) LEFT TURNING PILOT LAMP

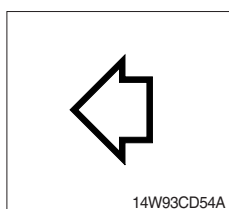


① This lamp flashes with sound when the LH multifunction switch is move to backward position.

22) RIGHT TURNING PILOT LAMP

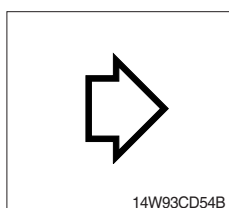


① This lamp flashes with sound when the LH multifunction switch is move to forward position.

4. LEVERS AND PEDALS

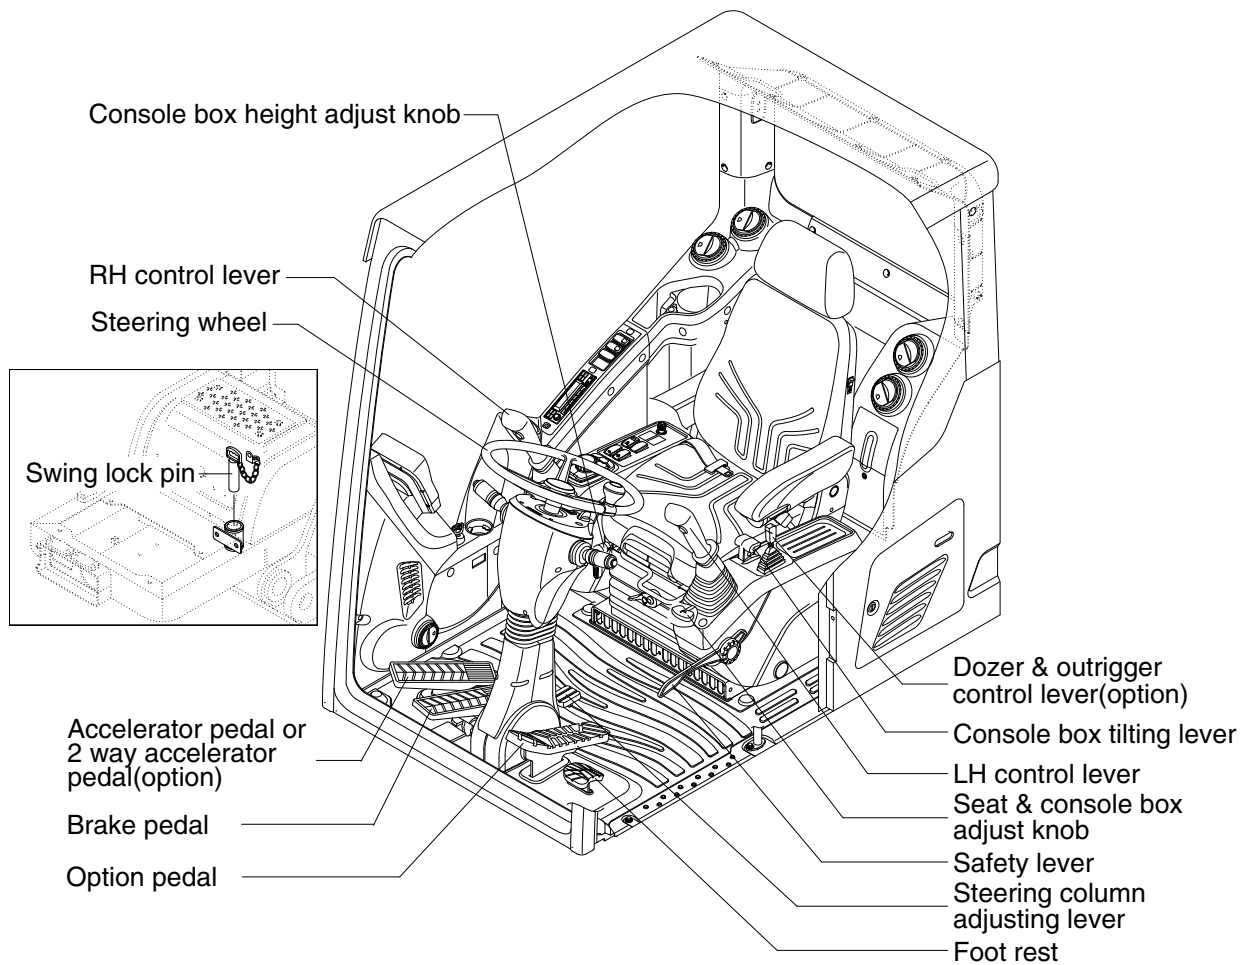


140WF3CD48

1) LH CONTROL LEVER

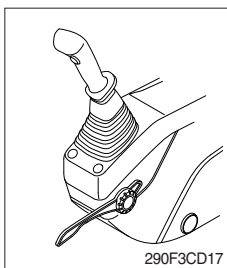


- (1) This joystick is used to control the swing and the arm.
- (2) Refer to operation of working device in chapter 4 for details.

2) RH CONTROL LEVER

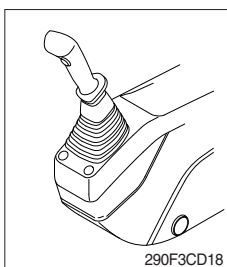

- (1) This joystick is used to control the boom and the bucket.
- (2) Refer to operation of working device in chapter 4 for details.

3) SAFETY LEVER

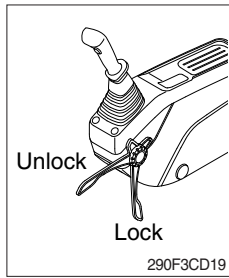

(1) All control levers and pedals are disabled from operation by locating the lever to lock position as shown.


※ **Be sure to lower the lever to LOCK position when leaving from operator's seat.**

(2) By pull lever to UNLOCK position, the machine is operational.

※ **Do not use the safety lever for handle when getting on or off the machine.**

▲ The machine is able to travel even when the safety lever is in the LOCK position.


4) STEERING WHEEL

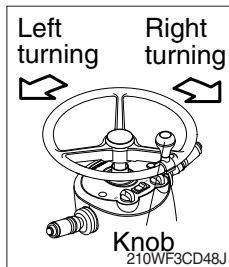

(1) If the steering wheel is turned to left, the machine will move to the left and turn it to the right, the machine will move to the right.

(2) As the handle is equipped with a knob, it is convenient to operate with one hand or quickly.

5) DOZER AND OUTRIGGER CONTROL LEVER

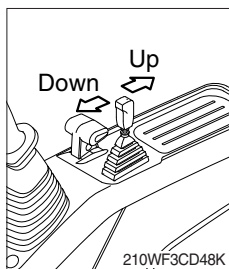


(1) This lever is used to operate dozer blade or outrigger by selecting the switches on the cluster.

※ **Please refer to the switch (dozer / outrigger) at page 3-18.**

(2) If the lever is pushed forward, the dozer blade or outrigger will be going down. And if the lever is pulled back, the dozer blade or outrigger will be going up.


6) SEAT AND CONSOLE BOX ADJUST KNOB (forward / backward)

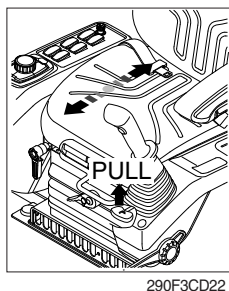

(1) This knob is used to move the seat and console box to fit the contours of the operator's body.

(2) Pull the knob to adjust forward or backward over 150 mm (5.9").


7) CONSOLE BOX HEIGHT ADJUST KNOB

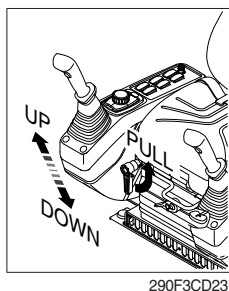

(1) This knob is used to move the LH and RH control lever to fit the contours of the operator's body.

(2) The control lever can be moved upward and downward over 75 mm (3.0").


8) ACCELATOR PEDAL

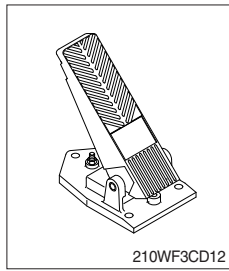

(1) When this pedal is stepped, the machine starts traveling.

▲ Before starting the machine with stepping on the pedal, check if the underframe is certainly in the traveling direction.


9) 2 WAY ACCELATOR PEDAL (option)

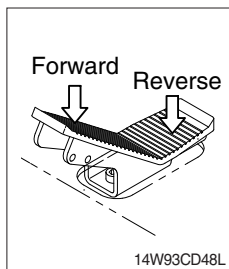

(1) This pedal is used to select traveling direction and to accelerate of the machine.

(2) Push the pedal to front for forward traveling, push the pedal to rear for reverse traveling regardless FNR lever at working mode of select switch.

10) BRAKE PEDAL

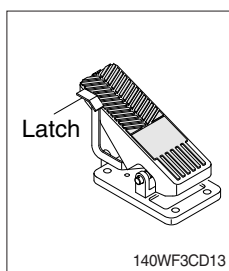

(1) Pedal and latch provide two kinds of service brake function.

(2) To operate service brake, push pedal with latch by foot.


▲ Push pedal and latch at once to avoid unexpected locking of pedal in traveling condition.

▲ During travel, do not push pedal only in full stroke. It is dangerous due to the locking of service brake.

(3) If you want to choose working brake, just push pedal in full stroke without latch then the latch locks pedal and service brake is working continuously until you push the latch to release the pedal.

(4) Push latch to release working brake.

11) SWING LOCK PIN

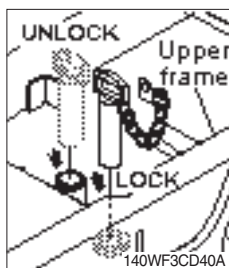


(1) This is the system to lock the swing by connecting the upper swing part and the lower frame mechanically.

(2) The swing is locked when the pin is down and unlocked when the pin is up.


※ Before operating the machine, be sure to unlock the swing lock device.

12) CONSOLE BOX TILTING LEVER

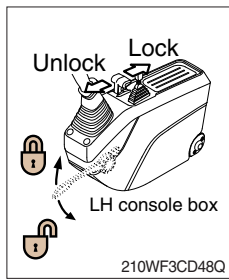


- (1) All control levers and pedals are disabled from operation by locating the lever to lock position as shown.
 - ※ **Be sure to tilt the lever to LOCK position when leaving from operator's seat.**
- (2) By push lever to UNLOCK position, the machine is operational.
 - ※ **Do not use the tilt lever for handle when getting on or off the machine.**

13) OPTION PEDAL

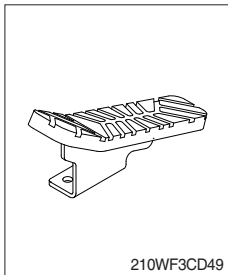


- (1) This pedal is used to operate the option attachment if equipped.
 - ※ **Refer to the page 3-44 for the option switch.**

14) STEERING COLUMN ADJUSTING LEVER

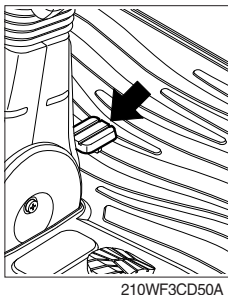


- (1) By pulling down the lever, the wheel is adjustable to tilt.
 - Tilting : 18.5°
- (2) By pulling up the lever, the wheel is adjustable to telescope.
 - Telescoping : 60 mm (2.4")

5. OTHERS

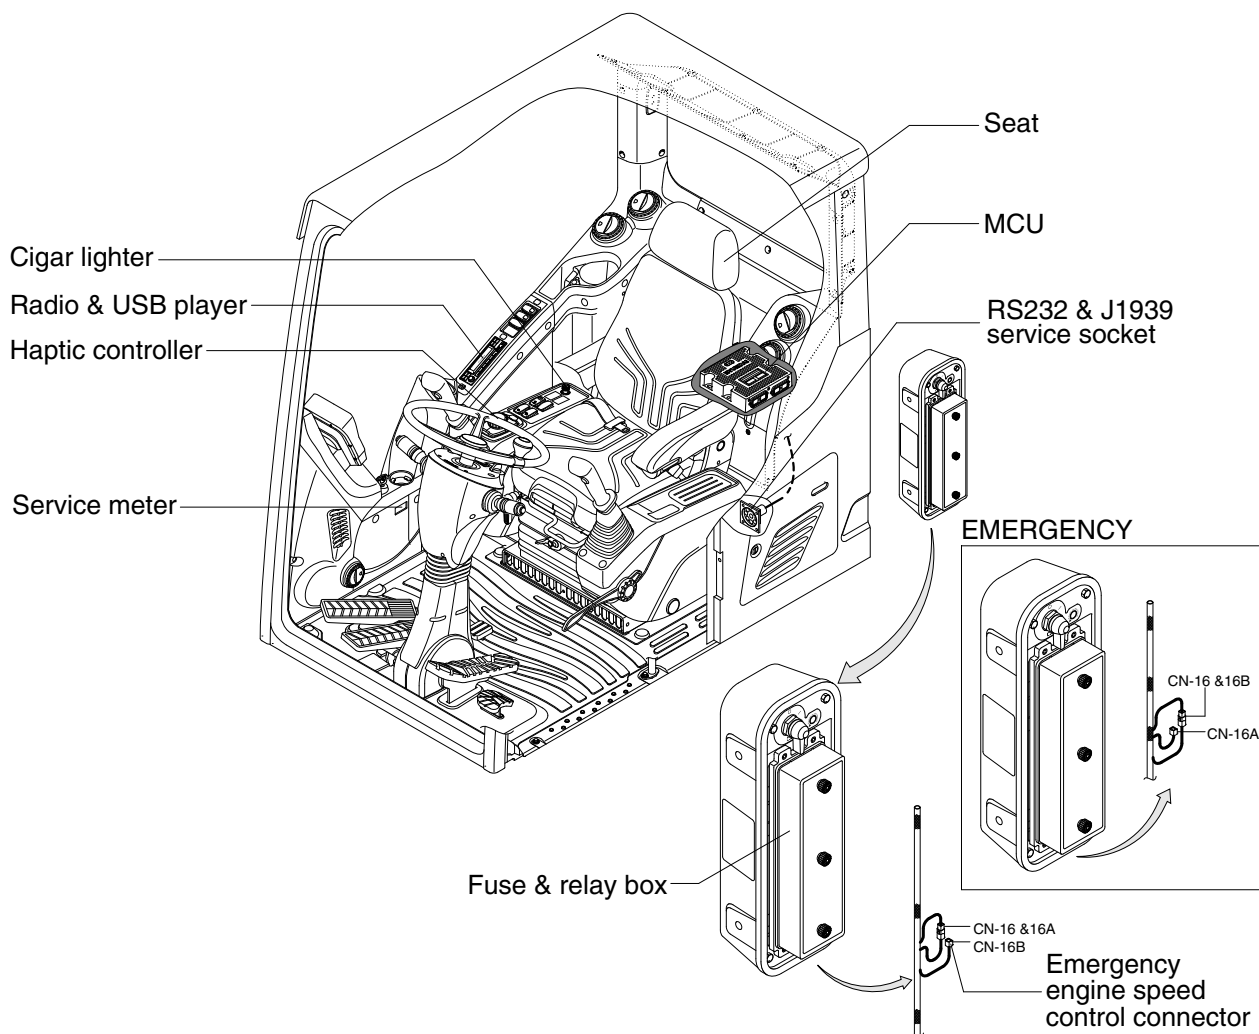

140WF3CD50

1) CIGAR LIGHTER

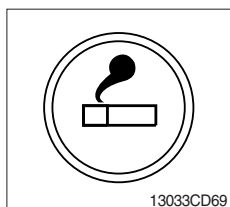


- (1) This can be used when the engine starting switch is ON.
- (2) The lighter can be used when it springs out in a short while after being pressed down.

※ Service socket

**Use cigar lighter socket when you need emergency power.
Do not use the lighter exceeding 24 V, 100 W.**

2) RADIO AND USB PLAYER : MACHINE SERIAL NO.: -#0168

■ BASIC FUNCTIONS

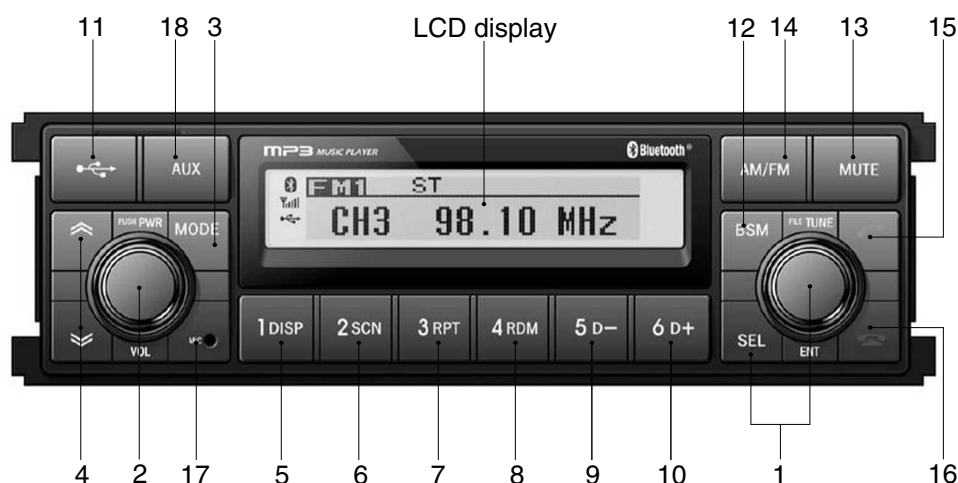


75793CD62-2

■ FRONT PANEL PRESENTATION

- | | | | | | |
|---|--|--|----|--|---|
| 1 | | Audio selection button | 10 | | Preset memory button 6
D+ Directory up |
| | | Audio selection knob | 11 | | Aux function |
| 2 | | Power and volume button | 12 | | Preset scan (PS)
Best station memory (BSM) |
| 3 | | Mode button
(select RADIO / USB / AUX) | 13 | | Audio mute button |
| 4 | | UP / DOWN tuning button | 14 | | AM / FM button (radio) |
| 5 | | Preset memory button 1
DISP ID3 v2 display | 15 | | Send |
| 6 | | Preset memory button 2
SCN File scan | 16 | | End |
| 7 | | Preset memory button 3
RPT Repeat play selector | 17 | | MIC (microphone) |
| 8 | | Preset memory button 4
RDM Random play selector | 18 | | Aux connector |
| 9 | | Preset memory button 5
D- Directory down | | | |

■ GENERAL

(1) Power and volume button

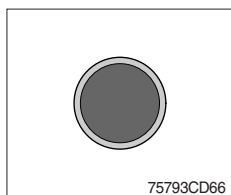

① Power ON/OFF button


Press power button to turn the unit ON or OFF shortly.

When the power is ON, the previous mode (last memory) will appear.

② Volume up / down control

Turn volume up / down button right to increase the volume level. The level will be shown in VOLUME xx on the LCD display. Turn it left to decrease the volume level. After 5 seconds of volume indication, display will return to the previous mode.


(2) Sound function selection button/knob (audio selection)

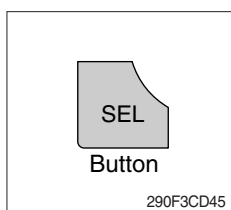

① This button is to adjust the sound. Each time you press SEL button shortly, LCD displays each mode as follows :

BASS → TREBLE → BAL → LOUD → EQ → BASS

※ When this button is pressed, LCD display shows selected function for 5 seconds and then returns back to the previous mode. On selected function, level can be controlled by turning this button. The display will automatically return to normal indication in 5 seconds after the last adjustment is made or when another function is activated.

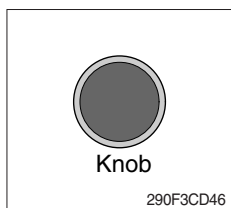

② Bass control

To adjust the bass level, first select the bass mode by pressing the SEL button until BASS indication appears on the LCD display. Within 5 seconds of choosing the bass mode, turn selection knob right / left to adjust the bass level as desired.

The bass level will be shown on the LCD display from a minimum of BASS -10 to a maximum of BASS +10.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.

③ Treble control

To adjust the treble level, first select the treble mode by pressing the SEL button until TREBLE indication appears on the LCD display. Within 5 seconds of choosing the treble mode, turn selection knob right / left to adjust the treble level as desired.

The treble level will be shown on the LCD display from a minimum of TREBLE -10 to a maximum of TREBLE +10.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.

④ Balance control

To adjust the left-right speaker balance, first select the balance mode by pressing the SEL button until the BAL indication appears on the LCD display.

Within 5 seconds of choosing the balance mode, turn selection knob right / left to adjust the balance as desired.

The balance position will be shown on the LCD display from BAL 10L (full left) to BAL 10R (full right).

When the volume level between the left and right speakers is equal, BAL L=R will be shown on the LCD display panel.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.

⑤ Loud control

When listening to music at low volume levels, this feature will boost the bass and treble response.

This action will compensate for the reduction in bass and treble performance experienced at low volume.


To select the loudness feature, press SEL button until LOUD ON or LOUD OFF is displayed, then turn selection knob left or right to activate or deactivate loudness.

⑥ Equalizer (EQ)

You can select an equalizer curve designed for 4 music types (POP, ROCK, CLASSIC, JAZZ).


To select the desired curve, first select the EQ mode by pressing SEL button until the "EQ OFF" indication appears on the display panel. Within 5 seconds of choosing the EQ mode, turn selection knob to select an equalizer curve as desired.

(3) Mode button

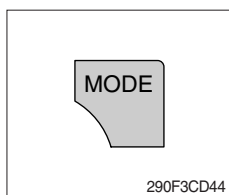

- ① Press mode button to select RADIO / USB / AUX / BT audio.

(4) Audio mute button

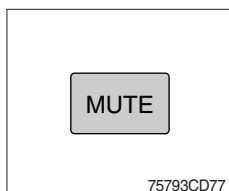


- ① Press mute button momentarily to mute volume and MUTE mark will blink on the LCD display.

Press the button again to return to the mode in use before the mute mode was activated.

■ RADIO

(1) AM / FM / LW band selector

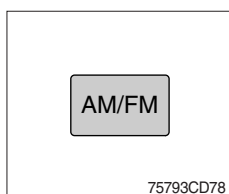




- ① Each time this button is pressed, the radio button is changed. Each time this button is pressed, LCD displays each band as follows :

FM1 → FM2 → FM3 → AM → LW → FM1

※ LW band is only available for Europe.

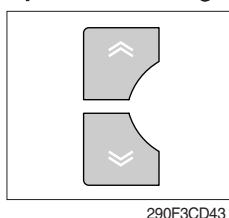(2) Up / down tuning




- ① To automatically select a radio station, momentarily press the up tune seek button  or down tune seek button  for less than 3 seconds to search for the closest radio station.

To manually select a radio station, press the up tuning & down tuning button for longer than 3 seconds.

The radio frequency will move up or down step by step each time you press button.

(3) Station pre-set button

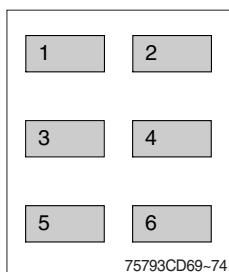


- ① Pressing these buttons shortly will recall your favorite pre-set radio stations.

To store your favorite stations into any of the 6 pre-set memories in each band (AM/FM/LW), use the following procedure :

- Turn the radio ON and select the desired band.
- Select the first station to be pre-set using the manual up/down or automatic seek tuning control button.
- Press the chosen pre-set button to store your selected station into and continue to hold it in. The beep sound will be momentarily heard and the pre-set number will appear on the LCD display indicating that the station is now set into that pre-set memory position and can be recalled at any time, by pressing that pre-set button.

(4) Pre-set scan (PS) / Best station memory (BSM) button

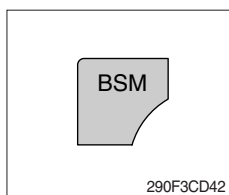

① Pre-set scan (PS)

Press BSM button shortly to scan the 6 pre-set station stored the memories on each band (AM/FM/LW).

The unit will stop at each pre-set station (the pre-set number on the LCD display will flash during pre-set scan operation) and remain on the selected frequency. Press the button momentarily again to remain on the station currently being heard.

② Best station memory (BSM)

Pressing BSM button for longer than 2 seconds will activate the BSM tuning feature which will automatically scan and enter each station into memory.

If you have already set the pre-set memories to your favorite stations, activating the BSM tuning feature will erase those stations and enter the new ones.

This BSM feature is most useful when traveling in a new area where you are not familiar with the local stations.

■ USB PLAYER



75793CD81-1

(1) USB function

① Connect a USB device if you want to listen to MP3 file in a USB device.

② It will automatically play MP3 file in the USB device and the LCD display will show "READING USB".

※ If there are no files on USB device, playback will revert back to the previous mode after displaying "NO FILE".


(2) AUX function

① If you want to listen to music of a external audio device, connect a external audio device through AUX cable.

② Change AUX mode by pressing MODE button.

If audio file of Audio device is playing, you can listen to music through speaker.

(3) File selection & cue / review button

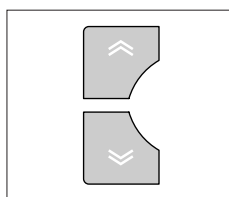

290F3CD43

① File selection function

This button is used to select file up / down.

Each time the forward file select ⏮ is pressed, file number is increased.

Each time the backward file select ⏭ is pressed, file number is decreased.

② Cue / review functions

High-speed audible search of file on a USB can be made by this button (the cue and review functions).

Press and hold the cue button ⏮ to advance rapidly in the forward direction or the review button ⏭ to advance rapidly in the backward direction.

(4) MP3 directory / file searching

① The D-, D+ button is used to select a particular directory and file.

Press and hold for more than 3 seconds while playing MP3 file.

Turn right / left the selection knob to search the directory. Press the button when you find the wanted directory.

For example, the directory search generally changes in two methods depending on the order of writing as follows.

· Method 1 : ROOT → Dir01 → Dir02 → Dir03 → Dir04 → Dir05 → Dir06 → Dir07 → ROOT


· Method 2 : ROOT → Dir01 → Dir02 → Dir05 → Dir03 → Dir06 → Dir04 → Dir07 → ROOT

If you want to search the file in the located directory, turn right / left the selection knob consecutively. Press the button when you find the wanted file. The unit will then play the selected file.


For instance, the file search changes in Dir01 as follows.

File01 → File02 → File03 → File04 → File01


※ MP3 directory / file configuration

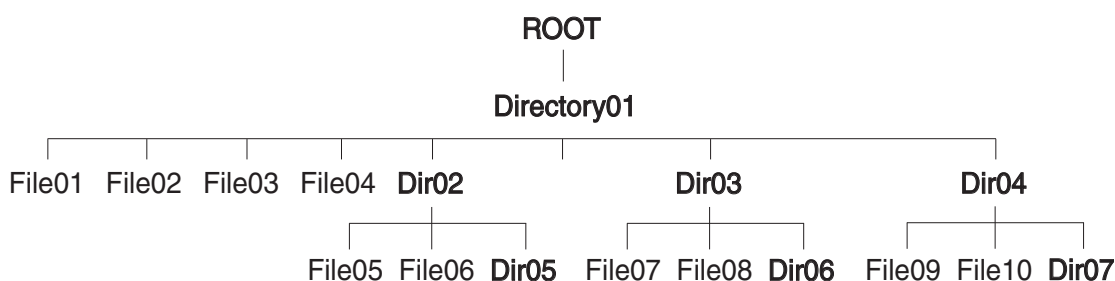


(5) ID3 v2 display

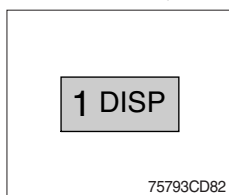

- ① Disp button is used to change the display information.
While playing an MP3 file, you can change the file information shown on the LCD display.
Each time you press DISP (display), the display changes to show the following.
- ※ If the MP3 disc does not have any ID3 information, the display will show NO ID3 on LCD display.

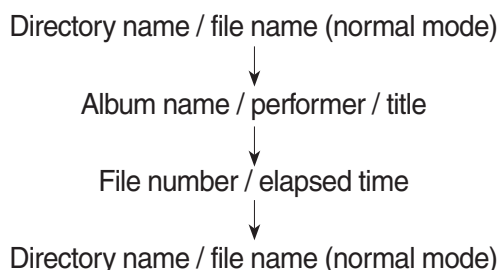


(6) File scan (SCN)

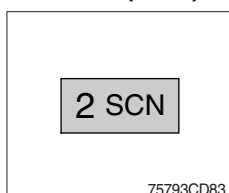


- ① During USB play, press SCN button to play the first 10 seconds of each file on the whole file on the USB (SCN mark will appear on the LCD display).
When a desired file is reached, press the SCN button again to cancel the function.
The unit will then play the selected file.
- ※ In case of playing MP3 file, when the SCN (scan) button is pressed and held for longer than 2 seconds, the SCN mark will blink on the LCD display and all files in the selected directory will be introduced until the file scan mode is cancelled by pressing the SCN button again or by activating the random or repeat functions.

(7) Repeat play selector (RPT)

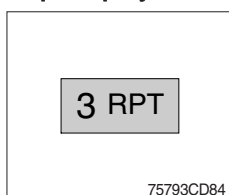

- ① During USB play, press RPT button to play the selected file repeatedly (RPT will appear on the LCD display).
Play of the file will continue to repeat until this button is pressed again and the RPT disappears from the LCD display.
- ※ In case of playing MP3 file, when the RPT button is pressed and held longer than 2 seconds, the RPT mark will blink on the LCD display and play all files in the selected directory and will be repeated until the directory repeat mode is cancelled by pressing the repeat button again or by activating the scan or random functions (RPT mark will disappear from LCD display).

(8) Random play selector (RDM)

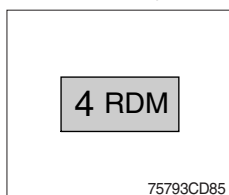


- ① During USB play, press RDM button to play the files on the USB in a random shuffled order (RDM will appear on the LCD display). The file select function will also select file in the random order instead of the normal process.

The random play mode can be cancelled by this button again.


- ※ In case of MP3 file, when the random button is pressed and held longer than 2 seconds, the RDM mark will blink on the LCD display and play all files in directory randomly until the directory random mode is cancelled by pressing the random button again or by activating the scan or repeat functions (RDM mark will disappear from LCD display).

(9) Directory down

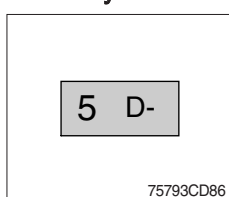

- ① Press D- button briefly while playing MP3. The previous directory is located each time you press this button.

(10) Directory up

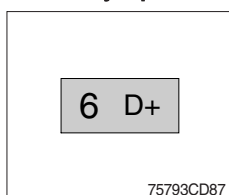

- ① Press D+ button briefly while playing MP3 . The next directory is located each time you press this button.
- ※ If the MP3 file does not have a directory, the unit play MP3 at 10-file intervals.
- ※ If any MP3 file does not exist in USB, this button can not operate.

■BLUETOOTH

(1) Introduce


The bluetooth radio supports bluetooth wireless technology. Bluetooth technology provides a wireless link between a bluetooth mobile phone or bluetooth music player and the HD Hyundai Construction Equipment bluetooth radio.

The bluetooth radio features a hands-free system so that you may talk on the telephone without taking your eyes off the road or your hands off the wheel. A microphone built into the front of the radio receives your voice and the calling party can be heard through the speakers.

Additionally, a bluetooth music player can be wirelessly connected to be the bluetooth radio and playback music tracks in high quality sound through the speakers. Many bluetooth mobile phones include a music player and can provide both hands-free calling and music playback.


Check your mobile phone owner's manual for details.

- ※ When the starting switch is in the ON position, the bluetooth radio is on standby to connect with your mobile phone even if the radio is switched off. The machine battery may therefore become drained if the ignition switch remains in the ON position for an extended period of time.
- ※ Bluetooth technology uses low power radio transmission to connect to your bluetooth mobile phone or bluetooth music player. As radio signal strength reduces over distance, the quality of sound performance during phone calls and music playback may become poor if the distance between the radio and device widens. It is recommended that the mobile phone or music player is kept inside the cab for best results.
- ※ As a bluetooth wireless connection can extend to 10 meters, your bluetooth device may automatically connect to the bluetooth radio even if the device is not in the machine.
- ※ The bluetooth radio uses the latest digital noise & echo suppression system to provide the best sound clarity with little or no distortion, but in some conditions there may be some echo and noise experienced. It is recommended to keep the car windows closed during hands-free calls for best results.

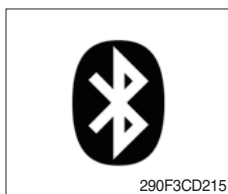

① Bluetooth indicator

The bluetooth logo is displayed when a bluetooth device is connected, and not displayed, when no bluetooth device is connected. If the bluetooth mobile phone is connected but the connection is not of satisfactory quality, the bluetooth logo is not displayed.

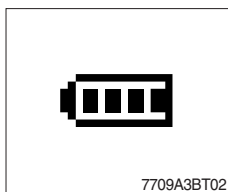

② Battery strength indicator

This is an indication of your mobile phone battery condition. If your mobile phone is unable to transmit battery condition level, the indicator is not displayed.



③ Single level indicator

This is an indication of the mobile phone network signal strength in your current location. If your mobile phone is not able to transmit signal level, the indicator is not displayed.

(2) Bluetooth function

① Pairing a bluetooth mobile phone or music player

A bluetooth connection must first be established between your bluetooth mobile phone or bluetooth music player and the bluetooth radio. The first step to connecting the bluetooth radio and bluetooth device is to introduce or "Pair" the bluetooth radio and bluetooth device together.

It is recommended that you have the instruction manual for your bluetooth mobile phone or music player with you during the pairing process described below to understand how to set your device to pair with the bluetooth radio.

- ※ It is recommended that all other bluetooth devices other than mobile phones are switched off during the registration or pairing process.

a. Connection method

- a) Press SEND button for 2 seconds in any mode, **PAIRING** appears on the bluetooth radio display.
 - b) Browse your mobile phone or music player menu to find the **SETTINGS** or **CONNECTIVITY** section to find the bluetooth connection section.
 - c) Find the command that may be called search for bluetooth device or discovery mode so that your bluetooth device can locate all the bluetooth devices within range that may be connected.
 - d) After the search is complete, **HFI AUDIO** should appear on your mobile phone or music player screen.
 - e) Select **CONNECT** or **SELECT** on your mobile phone or music player.
 - f) The mobile phone or music player should now prompt you to enter a PIN code. Enter 0000 into your bluetooth device and select OK.
 - g) The mobile phone or music player should confirm that it has established a new paired connection with the bluetooth radio.
 - h) The connecting process is now complete.
 - i) If the connecting process is successful, the bluetooth logo appears on the radio display and paired phone name (e.g. Samsung or LG) and **CONNECTED** appear on the display for 2 seconds.
 - j) Your bluetooth device is now ready for use with the bluetooth radio.
 - k) If the pairing failed, **FAIL** appears on the bluetooth radio display.
- ※ (a) The bluetooth radio allows a maximum of 6 bluetooth devices to be paired.
 - (b) Bluetooth technology only allows one phone to be connected to your bluetooth radio at one time.
 - (c) If a bluetooth music player is to be connected together with a mobile phone, refer to the page 3-65, PLAYING MUSIC USING BLUETOOTH AUDIO.
 - (d) Bluetooth connection with a mobile phone is normally established using the Hands-Free Profile (HFP). However, in some cases, the connection may use Head Set Profile (HSP) and some functions may not be available.
 - (e) As each mobile phone or music player brand and model has a different menu structure and control names, you may need to refer to the user manual of your bluetooth device for the correct procedure to connect to another bluetooth device.
 - (f) Once the bluetooth pairing is complete, automatic connection between mobile phone and the bluetooth radio is possible whenever the starting switch is switched ON.

The mobile phone must be set to automatically connect to the bluetooth radio to allow this automatic connection.

- (g) The bluetooth radio will give connection priority to the last connected mobile phone.
- (h) It is recommended that all other bluetooth devices other than mobile phones are switched off during the registration or pairing process.

② Disconnecting a bluetooth device

If you need to disconnect your bluetooth mobile phone or music player with the bluetooth radio, follow the steps below.

- a. Press END button for 2 seconds in any mode.
- b. When the bluetooth connection is lost, bluetooth logo disappears and the previously connected device name (e.g. Samsung or LG) and **DISCONNECTED** appear on the display.

③ Select a bluetooth device


The bluetooth radio can pair up to 6 bluetooth devices. A previously paired mobile phone or music player can be selected for connection using the method described below. Refer to the table 2-1 for examples.

Preset No.	Bluetooth device name (for example)
1	Samsung
2	LG
3	Apple
4	Motorola
5	EMPTY
6	EMPTY

Table 2-1

- a. Press SEND button, to select **BLUETOOTH** mode.
- b. Press SEL button. **SELECT PHONE** will appear on the display.
- c. Turn selection knob, until **SELECT PHONE** is displayed.
- d. When **SELECT PHONE** appears on the display, press SEL button.
- e. Press the preset button to display the name of the bluetooth device name of the mobile phones or music players previously paired. You may also turn selection knob to display the paired devices.
 - Each time you turn or selection knob, the LCD displays as follows :

SAMSUNG → LG → APPLE → MOTOROLA → BACK → SAMSUNG

- f. If the bluetooth mobile phone name is Samsung as in the example of table 2-1, then **Samsung** appears on the display. When preset button  is pressed or selection knob is turned 1 click to the right.
- g. Once the name of the bluetooth device you wish to connect is displayed, in this example **Samsung**, press SEL button to have the Samsung device connected.
- h. If the connection is successful, the bluetooth logo appears on the display and paired phone name **Samsung** and **CONNECTED** appears on the display for 2 seconds.

④ Deleting a previously paired bluetooth device

If you no longer need to use a paired bluetooth device with the bluetooth radio, it can be deleted.

It is from the registration assignment for another mobile phone.

Refer to the example of paired devices shown table 2-1.

- a. Press SEND button, to select **BLUETOOTH** mode.
- b. Press SEL button and **SELECT PHONE** appears on the display.
- c. Turn selection knob, until **DELETE PHONE** is displayed.
- d. When **DELETE PHONE** appears on the display, press SEL button.
- e. Press the preset button to display the name of the bluetooth device name of the mobile phones or music players previously paired. You may also turn selection knob to display the paired devices.
- f. Once the name of the bluetooth device you wish to delete is displayed, in this example **Samsung**, press SEL button to have the Samsung device deleted.
- g. The display will then show **DELETE NO** or if selection knob is turned, **DELETE OK** on the display.
- h. To confirm your wish to delete the selected device, when **DELETE OK** appears on the display press SEL button.
- i. If the bluetooth device being deleted (in this example) was connected, the display will show previous paired phone name "Samsung" and DISCONNECTED.
- j. In the example above, the number of paired devices is now reduced to 3, leaving 3 vacant memory locations for additional devices. Table 2-2 shows the example.

Preset No.	Bluetooth device name (for example)
1	LG
2	Apple
3	Motorola
4	EMPTY
5	EMPTY
6	EMPTY

Table 2-2

⑤ Basic telephone operation

a. Using the bluetooth radio for hands-free calls

- a) When an **INCOMING** call arrives at the bluetooth radio via your connected bluetooth mobile phone, **INCOMING CALL** appears on the display for 3 seconds then the calling telephone number is shown.
 - b) Press SEND button to answer the **INCOMING** call. **HANDSFREE** appears on the display.
 - c) To end the call, press END button and the call will end and **END CALL** is displayed.
 - d) If you wish to reject an **INCOMING** call, press END button.
 - e) To make an **OUTGOING** call use the keypad of the connected bluetooth mobile phone to enter a number and press the **OFF-HOOK** (SEND) button on your mobile phone.
 - f) **OUTGOING CALL** is displayed on the bluetooth radio and the call continues in hands-free mode.
 - g) The call can be ended by pressing END button the **ON-HOOK** (END) button of the connected mobile phone.
- ※ Some mobile phones may not reject an **INCOMING** call using the action of d) above. In this case, press the **ON-HOOK** button on the connected mobile phone to reject.

b. Last call number redials

Select **BLUETOOTH** mode by pressing SEND button. To making a call to the last dialed number, press SEND button again. **OUTGOING CALL** appears on the radio display for 1 second.

- ※ Some mobile phones may require an additional press of SEND button to start the last number redial call.

c. Switching to private (headset) mode during a call

During an INCOMING or OUTGOING call started in hands-free mode, it is possible to switch to the private call mode using the mobile phone handset to speak and to hear the calling party in private.

- a) Press SEND button during the conversation ; **PRIVATE** appears on the display.
- b) To switch back to hands-free mode using the bluetooth radio, press SEND button again during the private conversation ; **HANDSFREE** is shown on the display and hands-free call operation continues.

- ※ The above switching function may cause disconnection of the bluetooth link between the bluetooth radio and some mobile phones.

If SEND button is pressed during the private conversation, the bluetooth connection will return automatically.

(3) Function of bluetooth audio player

① Playing music using bluetooth audio

The bluetooth radio supports the bluetooth profile Audio Advanced Distribution Profile (A2DP). If your mobile phone or music player supports this profile then it is possible to listen to music tracks located on your bluetooth device through the bluetooth radio and speakers.

Additionally, the bluetooth radio supports the Audio Video Remote Control Profile (AVRCP).

If your bluetooth mobile phone or music player supports this profile then it is possible to advance to the next track or replay previous tracks on using the buttons on the front of the bluetooth radio your machine.

- a. Press MODE button until **BT AUDIO** is displayed.
 - b. When **BT AUDIO** appears on the display, select the music player feature on your bluetooth device. And then bluetooth device play automatically to begin playback.
 - c. To pauses the bluetooth audio playback, press SEL button for 2 seconds. Press the knob again for 2 seconds to resume playback.
 - d. Press buttons (⏮, ⏭) advance to the next or previous music track.
- ※ (a) Check your bluetooth device owner's manual for details of how to play music tracks via an external bluetooth audio system such as the bluetooth radio.
 - (b) Some bluetooth mobile phones cannot play music at all or may play music tracks in low-quality audio through the bluetooth radio.
 - (c) Some mobile phones require additional pairing to allow bluetooth audio playback.
 - (d) Information about songs (ID3) (e.g. the elapsed playing time, song titles, song index, etc.) playing using bluetooth audio profile cannot be displayed on this bluetooth radio.

② Connecting a bluetooth music player and mobile phone simultaneously

It is possible to connect a bluetooth mobile phone and a separate bluetooth music player to the bluetooth radio at the same time. Phone calls can be sent and received using the hands-free feature while music is playing using the bluetooth audio feature.

(4) Bluetooth setting

① Setting the automatic call answer feature

If this function is selected, the bluetooth radio automatically answers all INCOMING calls.

This feature enhances safety as the driver does not need to take their hands from the steering wheel to accept an INCOMING call.

Note that this feature cannot be set at different settings for each of the paired mobile phones.

- a. Press SEND button to select BLUETOOTH mode.
- b. Turn selection knob until **SETTINGS** is displayed.
- c. Press SEL button until **AUTO ANSWERING** is displayed.
- d. Press SEL button and turn selection knob. The LCD then displays as follows :

ANSWER OFF → ANSWER 5 SEC → ANSWER 10 SEC → RETURN → ANSWER OFF

- ANSWER OFF = Automatic answer function is not active.
- ANSWER 5 SEC = Automatic answers all INCOMING calls after a 5 second delay.
- ANSWER 10 SEC = Automatic answers all INCOMING calls after a 10 second delay.
- RETURN = Return to previous menu.

- e. After making your selection, press SEL button to store the selection.
- f. **SETTINGS** is then displayed for adjustment if required.
- g. If you do not wish to adjust any further bluetooth settings, press END button to return to the last selected mode.

② Setting calling voice volume

This function is to set the level of the mobile phone's calling voice volume to be heard through the bluetooth radio and speakers.

- a. Follow steps a. to c. of above setting below ①.
- b. When **VOICE VOLUME** appears on the display, press SEL button to display the current level of the calling voice. Turn selection knob right or left to adjust the calling voice volume as desired. This is the level the calling voice volume will be set to each time the bluetooth radio is used after the stating switch is turned off and then on again.
- c. After making your selection, press SEL button to store the selection.
- d. **SETTINGS** is then displayed for adjustment if required.
- e. If you do not wish to adjust any further bluetooth settings, press END button to return to the last selected mode.

③ Setting the ring volume

This function is to set the level of the mobile phones ring tone volume to be heard through the bluetooth radio and speakers.




 
 
 
 
 
 
 
 

 
 
 
 

- a. After making your selection, press SEL button to store the selection.
- b. When **RING VOLUME** appears on the display, press the SEL button to display the current level of the ring tone. Turn selection knob right or left to adjust the ring tone volume as desired. This is the level the ringer volume will be set to each time the bluetooth radio is used after the starting switch is turned off and then on again.
- c. After making your selection, press SEL button to store the selection.
- d. The press END button to return to the last selected mode.

RADIO AND USB PLAYER (WITH BLUETOOTH) : MACHINE SERIAL NO.: #0169-



9403CD100

■ FRONT PANEL PRESENTATION




 
 
 
 
 
 
 
 
 
 
 

 
- | | |
|---|---|
| <p>1  Power ON/OFF,
Volume UP/DOWN button</p> <p>2  Manual UP/DOWN Tuning,
File search, SEL button</p> <p>3  Mode button,
Audio mute button</p> <p>4  Call & Pair button</p> <p>5  Call end button</p> <p>6  Station preset 1
DIS Display button</p> <p>7  Station preset 2</p> <p>8  Station preset 3
RPT Repeat play button</p> <p>9  Station preset 4
RDM Random play button</p> | <p>10  Station preset 5
DIR- Directory down button</p> <p>11  Station preset 6
DIR+ Directory up button</p> <p>12  Scan play button (SCAN)
Best station memory (BSM) button</p> <p>13  Auto tune up, Seek up button</p> <p>14  Auto tune down, Track down button</p> <p>15  USB connector</p> <p>16  AUX IN Jack</p> <p>17  MIC hole</p> |
|---|---|

RADIO AND USB PLAYER (WITHOUT BLUETOOTH) : MACHINE SERIAL NO.: #0169-



9403CD101

■ FRONT PANEL PRESENTATION

- | | |
|--|---|
| <p>1  Power ON/OFF,
Volume UP/DOWN button</p> <p>2  Manual UP/DOWN Tuning,
File search, SEL button</p> <p>3  Mode button,
Audio mute button</p> <p>4  Radio seek up button</p> <p>5  Radio seek down button</p> <p>6  Station preset 1
DIS Display button</p> <p>7  Station preset 2</p> <p>8  Station preset 3
RPT Repeat play button</p> <p>9  Station preset 4
RDM Random play button</p> | <p>10  Station preset 5
DIR- Directory down button</p> <p>11  Station preset 6
DIR+ Directory up button</p> <p>12  Scan play button (SCAN)
Best station memory (BSM) button</p> <p>13  Track up button</p> <p>14  Track down button</p> <p>15  USB connector</p> <p>16  AUX IN Jack</p> |
|--|---|

■ GENERAL

(1) Power and volume button



① Power ON / OFF button

Press power button (1) to turn the unit on or off.

② Volume UP/DOWN control knob

Turn VOL knob (1) right to increase the volume level.

Turn VOL knob (1) left to decrease the volume.

After 5 seconds the display will return to the previous display mode.

③ Initial volume level set up

I-VOL is the volume level the unit will play at when next turned on.

To adjust the I-VOL level, press and hold VOL button (1) for longer than 2 seconds. The current volume level displays on the display panel.

Then turn button (1) right or left to set the volume level as the I-VOL level.

④ Clock ON/OFF control

The CLOCK was default at off status. To turn CLOCK ON, press and hold VOL button (1) for longer than 2 seconds to display I-VOL, then short press VOL again, turn VOL knob while CLOCK OFF display, then the CLOCK ON will be displayed.

※ Due to time tolerance, the clock display on the Audio unit might have little difference.

⑤ Clock adjustment

With CLOCK ON selected, press VOL knob again after CLOCK ON display, the hour will blink, turn VOL knob right or left to adjust hour.

Simply press VOL again, the minute will blink, turn VOL knob to adjust minute. Then press VOL again to confirm the clock once finished.

(2) Menu Selection



- ① This button can adjust the sound effect and other things.

Each time you press this button (2), LCD displays as follows :

BAS → TREB → BAL L=R → FAD F=R → EQ → LOUD ON →
BEEP 2ND

On each setting, the level can be controlled by turning TUNE knob (2). When the last adjustment is made, after 5 seconds, the display will automatically return to the previous display mode.

② Bass control

To adjust the bass tone level, first select the bass mode by pressing SEL button (2) repeatedly until BASS appears on the display panel. Then turn knob (2) right or left within 5 seconds to adjust the bass level as desired. The bass level will be shown on the display panel from a minimum of BASS-7 to a maximum of BASS+7.

③ Treble control

To adjust the treble tone level, first select the treble mode by pressing SEL button (2) repeatedly until TREB appears on the display panel. Then turn knob (2) right or left within 5 seconds to adjust the treble level as desired. The treble level will be shown on the display panel from a minimum of TREB -7 to a maximum of TREB +7.

④ Balance control

To adjust the left-right speaker balance, first select the balance mode by pressing SEL button (2) repeatedly until BAL indication appears on the display panel. Then turn knob (2) right or left within 5 seconds to adjust the balance as desired. The balance position will be shown by the bars on the display panel from BAL 10R (full right) to BAL 10L (full left).

⑤ Fader control

To adjust the front-rear speaker balance, first select the fader mode by pressing SEL button (2) repeatedly until FADER indication appears on the display panel. Then turn knob (2) right or left within 5 seconds to adjust the front-rear speaker level as desired. The fader position will be shown by the bars on the display panel from FAD 10F (full front) to FAD 10R (full rear).

⑥ EQ control

You can select an equalizer curve for 4 music types (CLASSIC, POP, ROCK, JAZZ). Press button (2) until EQ is displayed, then turn knob (2) right or left to select the desired equalizer curve. Each time you turn the knob, LCD displays as follows :

EQ OFF → CLASSIC → POP → ROCK → JAZZ

※ When the EQ mode is activated, the BASS and TREBLE modes are not displayed.

⑦ Loud control

When listening to music at low volume levels, this feature will boost the bass and treble response. This action will compensate for the reduction in bass and treble performance experienced at low volume.

To select the loudness feature, press button (2) until LOUD is displayed, then turn knob (2) right or left to activate or deactivate loudness.

⑧ Beep control

To adjust the BEEP mode, first select the BEEP mode by pressing button (2) repeatedly until BEEP indication appears on the display panel. Then turn knob (2) left or right within 5 seconds to select BEEP 2ND, BEEP OFF or BEEP ON.

- BEEP 2ND : You will only hear the beep sound when the buttons are held down for more than 2 seconds.
- BEEP OFF : You can not hear the sound beep when you press the buttons.
- BEEP ON : You can hear the beep sound each time you press the buttons.

(3) Mute control

- ① Press and hold MUTE button (3) for over 2 seconds to mute sound output and MUTE ON will blink on the LCD. Press the button again to cancel MUTE function and resume to normal playing mode.

(4) Mode selection

- ① Repeat press MODE button (3) to switch between FM1, FM2, AM, USB, AUX, BT MUSIC.
- ※ If there is no USB, AUX, Bluetooth Phone connected, it would not display USB, AUX, BT when you press button (3).

■ RADIO

(1) Mode button



- ① Repeat press MODE button to select FM1, FM2 or AM.

(2) Manual tuning button



- ① To manually tune to a radio station, simply turn encoder TUNE (2) left or right to increase or decrease the radio frequency.

(3) Auto tuning button



- ① To automatically select a radio station, simply press Seek up or Track down button.




(4) Station preset button



- ① In radio mode, pressing buttons (6) to (11) will recall the radio stations that are memorized. To store desired stations into any of the 6 preset memories, in either the AM or FM bands, use the following procedure :
 - a. Select the desired station.
 - b. Press and hold one of the preset buttons for more than 2 seconds to store the current station into preset memory. Six stations can be memorized on each of FM1, FM2, and AM.

(5) Preset scan (PS) / Best station memory (BSM) button

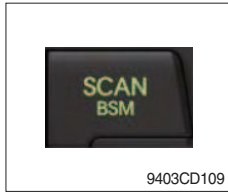

① Press BSM button (12) momentarily to scan the 6 preset stations stored in the selected band. When you hear your desired station, press it again to listen to it.

Press BSM button (12) for longer than 2 seconds to activate the Best Station Memory feature which will automatically scan and enter each station into memory.

※ **If you have already set the preset memories to your favorite stations, activating the BSM tuning feature will erase those stations and enter into the new ones. This BSM feature is most useful when travelling in a new area where you are not familiar with the local stations.**

■ USB PLAYER

(1) USB playback



- ① The unit was equipped with a front USB jack and also a rear USB Jack.

With a USB device plugged in the front USB jack, it will be detected as front USB mode. And with a USB device plugged in the rear USB jack, it will be detected as rear USB. To get to a USB mode, press MODE (3) button momentarily or insert the USB device in front or rear USB jack.

※ If no mp3 or wma files in USB device, it will convert to the previous mode after display NO FILE.

(2) Track Up / Down button



- ① Press SEEK up (13) or TRACK down (14) to select the next or previous track. Press and hold the buttons to advance the track rapidly in the forward or backward direction.



(3) MP3 directory / File searching



- ① Button (2) is used to select a particular directory and file in the device. Turn button (2) right or left to display the available directories. Press button (2) momentarily when the desired directory is displayed, then turn button (2) right or left again to display the tracks in that directory. Press button (2) to begin playback when the desired file is displayed.


(4) Directory Up / Down button



- ① During MP3/WMA playback, simply press DIR- button (10) to select the previous directory (if available in the device); simply press DIR+ button (11) to select the next directory (if available in the device).

※ If the USB device does not contain directories, it would play MP3/WMA tracks at 10- file when you press DIR- button (10), and play MP3/WMA tracks at 10+ file when you press DIR+ (11) button.

(5) Track Scan Play (SCAN) button

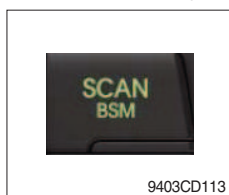

- SCAN playback : Simply press SCAN (12) button to play the first 10 seconds of each track.
- SCAN folder : Press and hold SCAN button for longer than 2 seconds to scan play the tracks in current folder.
- SCAN off : Simply press it again to cancel SCAN feature.

(6) Track Repeat Play (RPT) button



- REPEAT playback : Simply press RPT (8) button to play current track repeatedly.
- REPEAT folder : Press and hold RPT for longer than 2 seconds to repeat play the tracks in current folder.
- REPEAT off : Simply press it again to cancel REPEAT feature.

(7) Track Random Play (RDM) button



- RANDOM playback : Simply press RDM (9) button to play the tracks in the device in a random sequence.
- RANDOM folder : Press and hold RDM button for longer than 2 seconds to random play the tracks in current folder.
- RANDOM off : Simply press it again to cancel RANDOM feature.

(8) ID3 v2 (DISP)



- ① While a MP3 file is playing, press DISP button (6) to display ID3 information. Repeat push DISP button (6) to show directory name / file name and album name / performer / title.

※ **If the MP3 disc does not have any ID3 information, it will show NO ID3.**

* USB Information and Notice

- Playback FILE SYSTEM and condition allowance.
 - FAT, FAT12, FAT16 and FAT32 in the file system.
 - V1.1, V2.2 and V2.3 in the TAG (ID3) version.
 - Display up to 32 characters in the LCD display.
 - No support any of MULTI-CAED Reader.
 - No high speed playback but only playing with normal full speed.
- ※ **DRM files in the USB may cause malfunction to playback in the radio unit.**
- ※ **The temperature below -10 Celsius, the audio unit with USB hook up would be affected to play well.**

■ AUX OPERATION

It is possible to connect your portable media player to the audio system for playback of the audio tracks via the cab speakers.


To get the best results when connecting the portable media to the audio system, follow these steps :

- Use a 3.5 mm stereo plug cable to connect the media player headphone socket at each end as follows.
 - Adjust the portable media player to approximately 3/4 volume and start playback.
 - Press the MODE button (3) on the audio unit to change into AUX mode.
 - The volume and tone can now be adjusted on the audio unit to the desired level.
- ※ The audio quality of your media player and the audio tracks on it may not be of the same sound quality as the audio system is CD Player.
 - ※ If the sound of the media player is too low compared with the radio or CD, increase the volume of the player.
 - ※ If the sound of the media player is too loud and/or distorted, decrease the volume of the player.
 - ※ When in AUX mode, only the Volume, Bass, Treble, EQ and Mode functions of the audio unit can be used.

■ BLUETOOTH (if equipped)


1) Using a bluetooth wireless connection

- (1) Your audio unit supports bluetooth wireless technology. You can set up a wireless link with bluetooth cellular phone.
 - (2) Keep PAIRING the cellular phone with audio unit in a few minutes as the phone are being switched on well enough.
- ※ Since this audio unit is on standby to connect with your cellular phone via bluetooth wireless technology, using this audio unit without running the engine can result battery drainage.
 - ※ This audio unit phone call reception is on standby when ignition switch is set to ACC OFF or ON.
 - ※ The line-of-sight distance between this audio unit and your cellular phone must be 10 meters or less for sending and receiving voice and data via bluetooth wireless technology. However the transmission distance may become shorter than the estimated distance depending on the environment in use.
 - ※ Digital Noise & Echo suppression system provides the best sound clarity with little or no distortion (Echo & side tone will happen depending on cellular phone or service network).
 - ※ To ensure the quality of calling, you should select a proper bluetooth VR level. This audio unit has already set with the best bluetooth VR level.

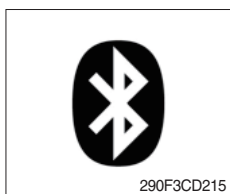

① Bluetooth icon

It will blink while establishing the bluetooth pairing.
It will light after a bluetooth device connected.

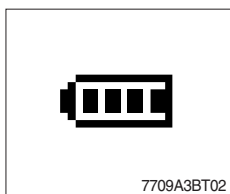

② Battery icon

It indicates the battery status of the connected bluetooth device.



③ Single strength icon

It indicates the signal strength of the connected bluetooth device.

2) Pairing in hands free modes



- (1) Press and hold CALL button (4) for 2 seconds until you hear beep sound, then appears PAIR STR on the display.
- (2) For the next procedure, go to cellular phone pairing mode.
- (3) If it is in pairing status with audio unit and cellular phone, PAIRING will show on the display.
- (4) If you want to exit pairing mode, press CALL END button (5) briefly while pairing, then it will show PAIR CLR on the display.
- (5) Bluetooth Icon and PAIR OK appear on the display when pairing is successful.

3) Cellular phone pairing mode

- (1) Browse your cellular phone menu and find the connectivity or bluetooth connection section.
 - (2) Select search for a new handsfree device function and allow the phone to find the mobile.
 - (3) HYUNDAI should appear on your cellular phone screen.
 - (4) Press connect menu among the handsfree option on your cellular phone.
 - (5) The cellular phone should prompt for a pin code. Insert the pin code 1234.
 - (6) The cellular phone should confirm that it has established a new paired connection.
 - (7) Close the menu. The pairing is now completed. It appears PAIR FAIL on the display for 3 seconds.
- ※ Each cellular phone type has distinct phone menu so you may need to refer to your manufactures instruction for the correct procedure on how to connect a new bluetooth device.
 - ※ Please retry to the pairing instruction if HYUNDAI does not appear on the cellular phone screen.
 - ※ Please select authorized, if there is authorized menu in the menu of bluetooth connection in your cellular phone.
 - ※ Once the bluetooth pairing is completed between your cellular pone and this audio unit, the both units will be automatically recognized on its paring and when you turn on the key in your car even though this audio unit is turned off.
 - ※ This audio unit can store up to 6 phones pairings. If the memory is full, the first stored paired phone will be deleted.
 - ※ The connecting priority will be given to the last connected cellular phone.
 - ※ If you want to change the connecting priority, try to connect this audio unit from the cellular phone.

4) Bluetooth connection and disconnection

- (1) When established bluetooth connection between this audio unit and the cellular phone, bluetooth icon on the display appears and then the display shows HF/AV CONN when handsfree & AV profile connected.



- (2) To disconnect bluetooth link
Press and hold CALL END button (4) for 2 seconds, it shows DIS CON and disappears bluetooth icon on the display.



- (3) To disconnect bluetooth link
Press CALL button (3) briefly, it blinks bluetooth icon on the display while bluetooth is being connected. If the connection is completed, it appears bluetooth icon on the display.

- ※ When your cellular phone battery is at low charge, the bluetooth connection may occasionally be lost. To maintain good connectivity ensure that your phone battery is adequately charged.
- ※ In case of failure of bluetooth pairing :
 - Delete item in paired list on your phone.
 - Reset both phone by power off/on and the audio unit by ACC off/on.
- ※ Connecting priority of handsfree profile is higher than headset profile.
- ※ The headset mode does not support caller ID, reject call and call Transfer.

5) Using the audio unit as a handsfree device

- (1) When the audio unit is ringing, it shows CALL and follows with the phone number ***** on the display.



- (2) To accept call
Press CALL button (4), it appears ANSWER CALL and follows TALKING on the display.
- (3) To end call
To end call, press CALL END button (5), it appears REJECT on the display.
- ※ If reject call is activated in your phone, then your cellular phone does not support reject call function.

6) Audio transfer between the audio unit and phone

The audio transfer function is for switching the call from the audio unit to the cellular phone for private conversation.



(1) Press CALL button (4) briefly during conversation, it appears CALL TRANS on the display. To switch back to the audio unit, press button (4) briefly during private conversation, then it appears CALL TRANS on the display again.

※ This function will be a cause of disconnection of bluetooth link in some nokia phones, but you do not worry just press button (4) during private conversation, then switch back to the audio unit automatically.

※ The quality of calling between cellular phone and audio unit is better than calling between one audio unit and another one.

7) Last call number dialing



(1) Press CALL button (4) briefly, it appears CALL TO, then simply press CALL button once again, it would make the last call with phone number display on LCD.

If Reject call is activated in your phone, then your cellular phone does not support Reject Call function.

※ If you are using SAMSUNG phone, then you may need to press once more send button. First press button shows phone contact list in your phone, then second press make the last call.

8) To make a call by cellular phone

The audio transfer function is for switching the call from the audio unit to the cellular phone for private conversation.

(1) The audio unit activated automatically when you make a call by cellular phone.

(2) When you make a call processing by cellular phone, it shows CALLING on the display.

(3) When you receive a call, the phone number ***** appears on the display.

9) Using the audio unit as bluetooth music

The audio unit supports A2DP (Audio Advanced Distribution Profile) and AVRCP (Audio Video Remote Control Profile), and both profiles are available to listen music at the audio unit via cellular phone which is supporting the two profiles above.

(1) To play music, search the menu on your cellular phone as below :

i.e : Menu → File manager → Music → Option → Play via bluetooth.

It appears BT MP3 on the display.

(2) During BT MP3 playing, you could select the previous or next track by pressing SEEK up or TRACK down button on audio unit or operate via your cellular phone.

(3) To stop music, press button (5) briefly and it will automatically switch into the previous mode.

(4) To resume music playing, press the play button on your cellular phone.

※ This function maybe different depends on cellular phone. Please follow the cellular phone menu. Some kinds of phone need to pair once more for bluetooth MP3 connection.

※ This function will be caused to disconnect A2DP, AVRCP depends on cellular phone.

※ Information about songs (e.g.: the elapsed playing time, song title, song index, etc.) cannot be displayed on this audio unit.

■ RESET AND PRECAUTIONS

1) Reset function

Interfere noise or abnormal compressed files in the MP3 disc or USB instrument may cause extraordinary operation (or unit frozen/locking up). It's strongly recommended to use appropriate USB storage not cause any malfunction to the audio unit. In the unlikely event that the player fails to operate correctly, try out to reset unit by any of following two methods.

- (1) press and hold   simultaneously for about 5 seconds. (without Bluetooth)

Press and hold   simultaneously for about 5 seconds. (with Bluetooth)

- (2) Take out the fuse for the audio system in the vehicle once and then plug again.

※ It will be necessary to re-enter the radio preset memories as these will have been erased when the microprocessor was reset.

After resetting the player, ensure all functions are operation correctly.

2) Precautions

When the inside of the car is very cold and the player is used soon after switching on the heater, moisture may form on the disc or the optical parts of the player and proper playback may not be possible.

If moisture forms on the optical parts of the player, do not use the player for about one hour. The condensation will disappear naturally allowing normal operation.

- (1) Operation voltage : 9~32 volts DC, negative
(2) Output power : 40 watts maximum (20 watts x 2 channels)
(3) Tuning range

Area	Band	Frequency range	Step
USA	FM	87.5~107.9 MHZ	200K
	AM	530~1710 KHZ	10K
EUROPE	FM	87.5~108.0 MHZ	50K
	AM	522~1620 KHZ	9K
ASIA	FM	87.5~108.0 MHZ	100K
	AM	531~1602 KHZ	9K
LATIN	FM	87.5~107.9 MHZ	100K
	AM	530~1710 KHZ	10K

● AREA Selection :

- To select an area, press and hold related buttons at FM1 band for about 3 seconds.
- USA Area: Press and hold mode + 1DIS buttons for 3 seconds
- EUROPE Area: Press and hold mode + 2 buttons for 3 seconds
- ASIA Area: Press and hold mode + 3RPT buttons for 3 seconds
- LATIN Area: Press and hold mode + 4RDM buttons for 3 seconds.

- (4) USB version : USB 1.1

- (5) Bluetooth version : V2.1

- (6) Bluetooth supported profile :

- A2DP : Advanced Audio Distribution Profile
- AVRCP : Audio/Video Remote Control Profile
- HFP : Hands-Free Profile

3) HAPTIC CONTROLLER

The haptic controller consists of buttons, multimodal dial and USB port.



290F3CD173

(1) Cluster button



290F3CD174

- ① When you push this button, haptic controller execute cluster interlocked mode.
- ② In cluster interlocked mode, if you push the cluster button, the haptic controller return to previous mode.
- ③ Cluster interlocked mode ON : Blue lamp is turn ON
Cluster interlocked mode OFF : Blue lamp is turn OFF

(2) Air conditioner button



290F3CD175

- ① When you push this button, air conditioner system is operated.
- ② Determines whether to perform a cooling function of air conditioner.
 - Blue lamp ON : Air conditioner operation
 - Amber lamp ON : Fan only

(3) Set button



290F3CD176

- ① When you push this button, the haptic controller executes air conditioner mode and displays air conditioner control mode in cluster.
- ② Air conditioner control mode will be disappear when you push SET button again within 10 seconds or when you do not touch anything more than 10 seconds.

(4) OFF button



290F3CD177

- ① Only while air conditioner system is operating you can use this button.
- ② This button is only for air conditioner system off.


(5) Auto button



290F3CD178

- ① This button controls air conditioner ON/OFF.
- ※ Refer to the page 3-37 for the auto switch of the air conditioner.

(6) USB port

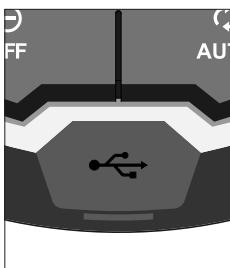


290F3CD179

- ① This port updates firmware using a dedicated cable.
- ② Haptic controller has built-in charging circuit supply max 500 mA current.

(7) Multimodal dial

- Cluster interlocked mode OFF

① Acceleration mode

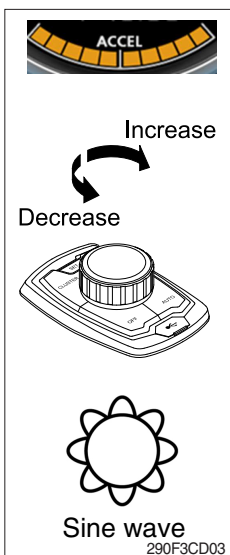


290F3CD03

- There are 10 dial setting.
- Setting 1 is low idle and setting 10 is high idle.
 - By rotating the dial to right : Engine speed increases
 - By rotating the dial to left : Engine speed decreases
- Dial operating pattern is sine wave torque.

- Cluster interlocked mode ON

① Cluster main menu

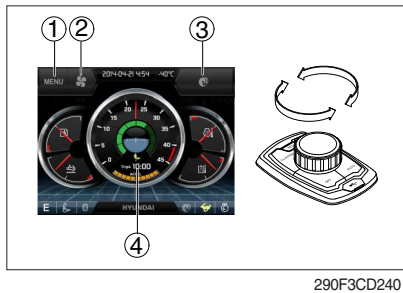


- You can select the quick menu by rotating the dial as below.



- CW rotation : move to right direction
- CCW rotation : move to left direction

② Cluster menu move

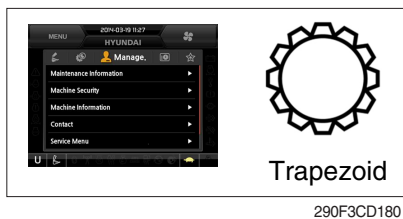


- You can move up and down of the cluster sub menu.
- Dial operating pattern is continuous rotation trapezoid torque.

③ Air conditioner menu




 - You can move the menu of the air conditioner control mode.




- Dial operating pattern is mixed type trapezoid torque.

④ Slide choice menu

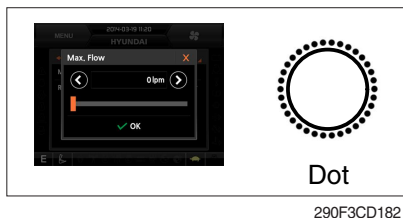


- You can increase or decrease the slide choice bar.
- Dial operating pattern is repeat dot interval torque.

⑤ Level choice menu

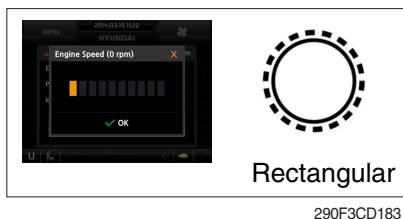

- You can increase or decrease the level choice bar.
- Dial operating pattern is integrate rectangular torque.


⑥ Push button

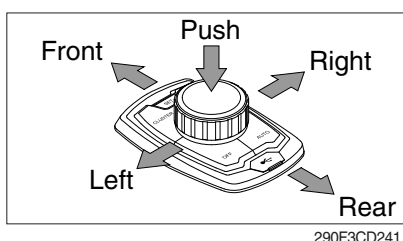

- **Push** : Select the current menu or the pop-up warning lamp move to the original position when warning lamp is happened.
- **Left** : ESC
- **Right** : CAM
- **Front** : Cluster main menu
- **Rear** : Return to acceleration mode


4) SEAT (SUSPENSION, STD)

The seat is adjustable to fit the contours of the operator's body. It will reduce operator fatigue due to long work hours and enhance work efficiency.

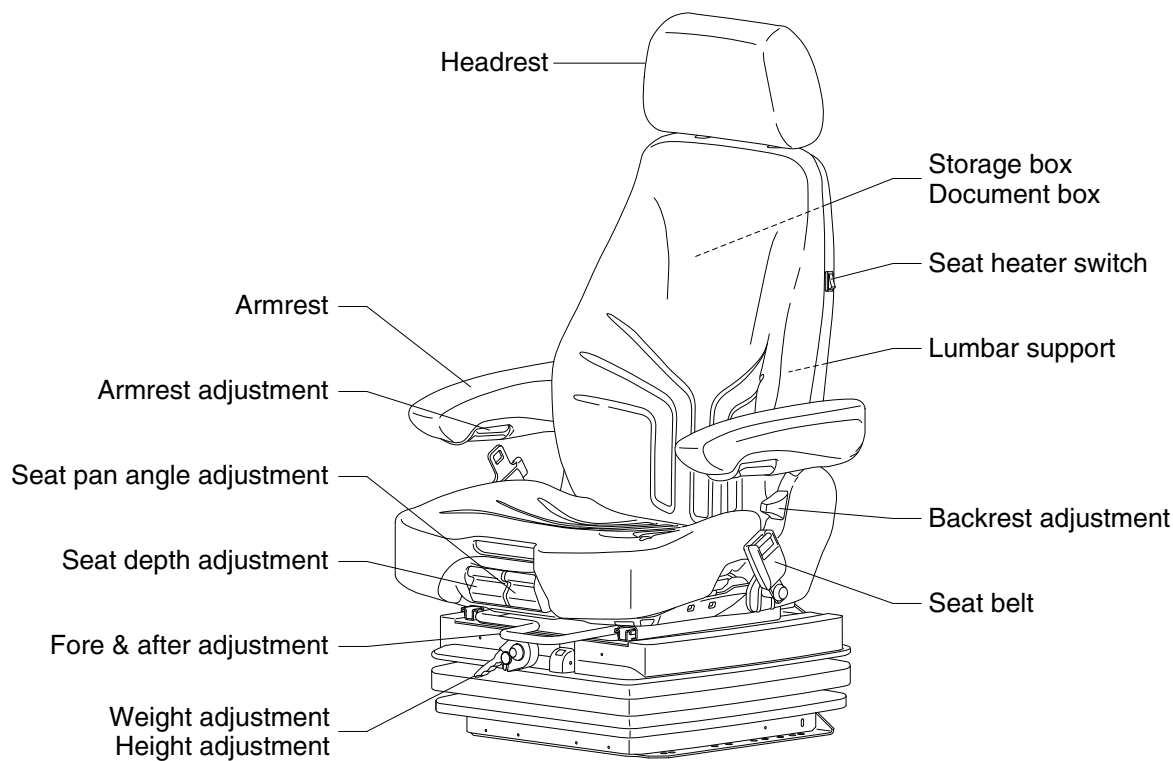

290F3CD270

(1) Weight and height adjustment

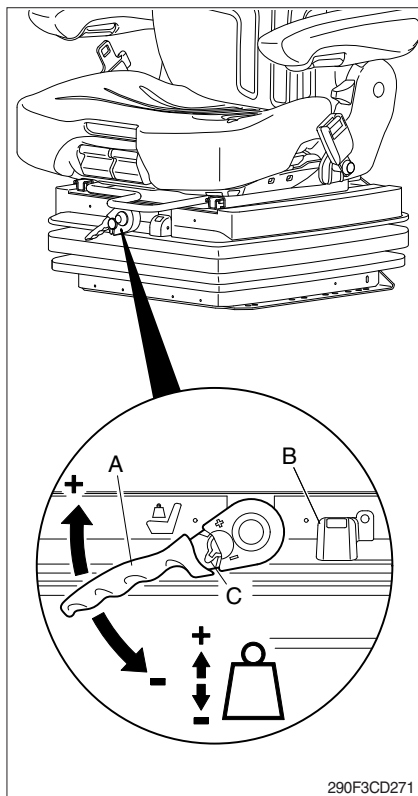


290F3CD271

With socket wrench (A) :

- ① The seat has to be adjusted for the operator's weight and height by tilting the handle (+) up or down (-) with the operator not sitting on the seat.
- ② The rotational direction is reversed by toggling the ratchet with the switch (C).
- ③ The operator's weight and the seat height are adjusted correctly when the green marking is completely visible in the indicator window (B) for weight and height.
- ④ The height can be adjusted individually as long as the green marking is visible.

(2) Fore/after adjustment

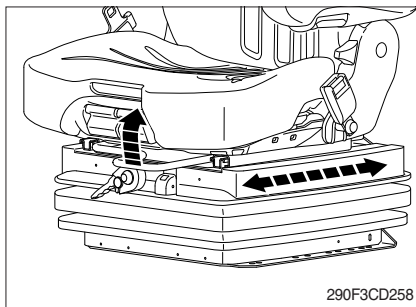


- ① The fore/after adjustment is released by lifting the locking lever.

⚠ Do not operate the locking lever while operating.


- ※ After the adjustment, the locking lever must latch into the desired position with an audible click. It should not be possible to move the operator's seat into another position when it is locked.
- ※ Do not lift the locking lever with your leg or calf.

(3) Seat depth adjustment

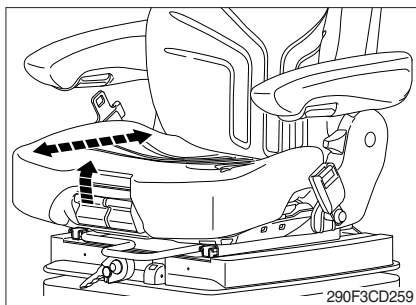


- ① The depth of the seat pan can be individually adjusted.
- ② To adjust the depth of the seat cushion, pull the right handle upwards. By moving the seat pan backwards or forwards the desired seating position can be reached.

(4) Seat pan angle adjustment

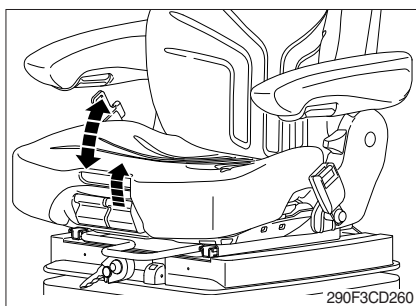


- ① The angle of the seat pan can be individually adjusted.
- ② To adjust the angle of the seat pan, pull the left handle upwards. By exerting pressure on or off the front or rear part of the seat pan it can be moved to the desired angle position.

(5) Armrests

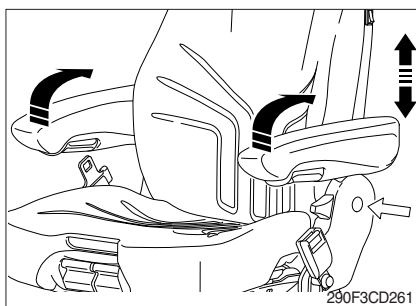


- ① The armrests can be folded up if required and the height can be individually adjusted.
- ② To adjust the armrest for height, separate the round cap (see arrow) from the cover and loosen the hexagon nut (size 13 mm) behind it adjust the armrests to the desired position (5 steps) and tighten the nut again (25 Nm). Replace the cap onto the nut.

(6) Armrest adjustment

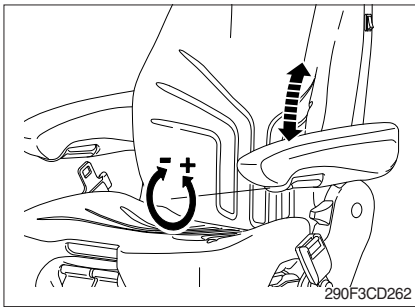


- ① The inclination of the armrest can be modified by turning the adjustment knob.
- ② When turning the knob to the outside (+), the front part of the armrest will be lifted; when turning the knob to the inside (-), it will be lowered.

(7) Headrest

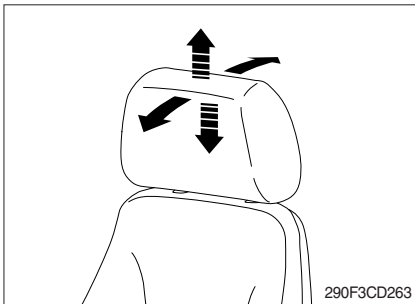


- ① The headrest can be individually adjusted for height by pulling it upward over the various increments up the end stop.
- ② By pushing forwards or rearwards the angle of the headrest can be adjusted individually.
- ③ To remove the headrest, pull it over the end stop.

(8) Document box

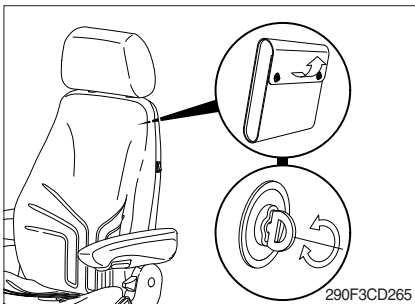


- ① The document box is placed on the rear side of the backrest.
- ② To open the document box, first twist the turn lock closures 90° to the left or the right and then fold the cover of the document box upwards.

(9) Seat heater switch

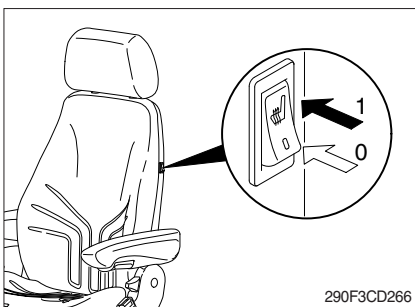


- ① The seat heater can be turned on/off by pressing the switch.

(10) Lumbar support

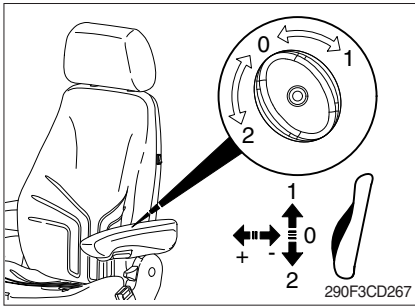

- ① By turning the adjustment knob to the left (2) or right (1), both the height and curvature of the backrest cushion can be individually adjusted.
- ② This increases both the seating comfort and the performance of the operator.

(11) Backrest adjustment

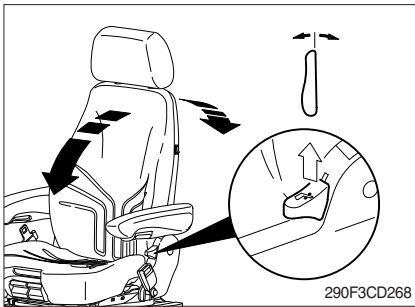

- ① Pull up the locking lever to release the backrest catch. When releasing the backrest, do not load the backrest by pressing against it.
 - ② By exerting pressure on or off the front or rear part of the seat pan it can be moved to the desired position. Release the locking lever to lock the backrest.
- ※ **It should not be possible to move the backrest into another position after it has been locked.**

(12) Maintenance



Dirt can impair the function of the seat, so make sure you keep your seat clean.

Upholstery does not need to be removed from the seat frame for cleaning.

▲ Take care with the backrest - it may jerk forward and cause injury.

When cleaning the backrest cushion, the backrest must be held in place when operating the backrest lever.


※ **Do not clean the seat with a pressure washer.**

During cleaning, the upholstery must not be soaked through.

Use standard commercially available upholstery or plastics cleaning agent. Test first for compatibility on a small, concealed area.


5) SEAT (AIR SUSPENSION, OPTION)

The seat is adjustable to fit the contours of the operator's body. It will reduce operator fatigue due to long work hours and enhance work efficiency.

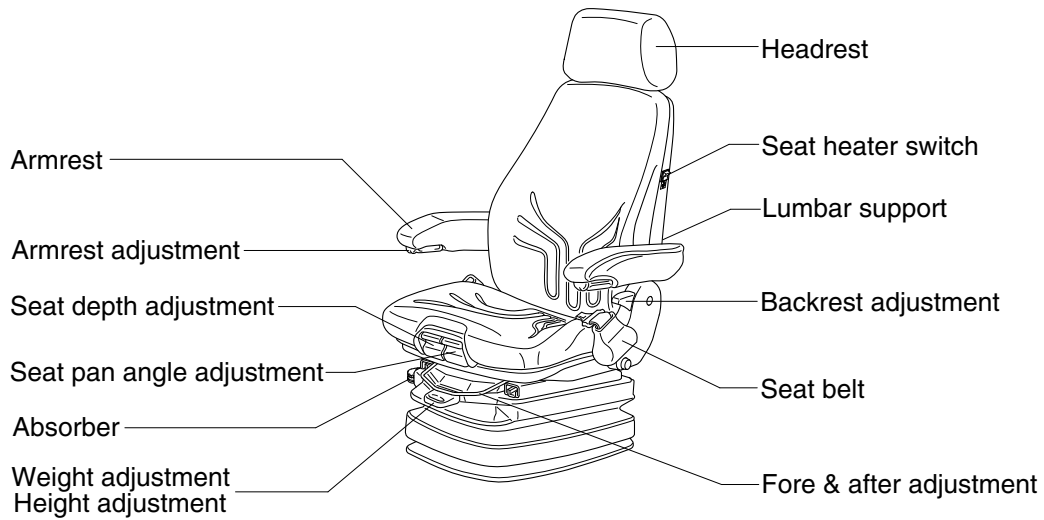

290F3CD28

(1) Weight adjustment

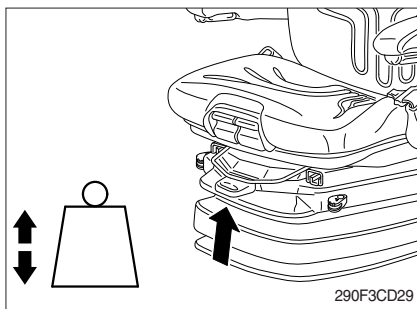


- ① The seat should be adjusted for the operator's weight by briefly pulling the actuator lever of the automatic weight and height adjuster (arrow) with the machine at a standstill and the operator's sitting on the seat.

The operator must sit absolutely still during adjustment.

- ※ **Before adjusting the weight, adjust shock absorbers to the position "soft".**
- ※ **To prevent damage to the health, the setting for the operator's weight must be checked and adjusted before the machine is operated.**


(2) Height adjustment

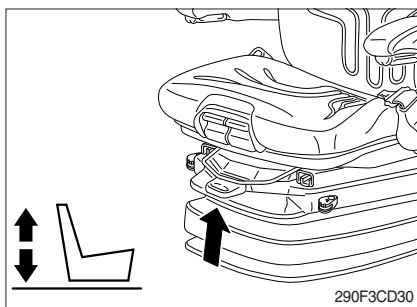

- ① The seat height can be set pneumatically and is continuously adjustable.
- ② The seat height can be altered by pulling or pressing the actuator lever fully out or in (arrow). If the adjustment reaches the top or bottom endstop, the height is adjusted automatically in order to guarantee a minimum spring travel.


- ※ **Before adjusting the weight, adjust shock absorbers to the position "soft".**
- ※ **In order to avoid damage, do not operate compressor for more than 1 minute.**

(3) Seat pan angle adjustment

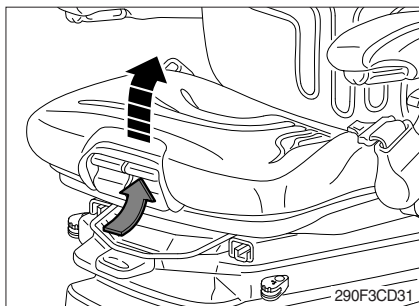


- ① The angle of the seat pan can be individually adjusted.
- ② To adjust the angle of the seat pan, lift the LH handle (see arrow). By exerting pressure on or off the seat pan it can be moved to the desired angle position.

(4) Seat depth adjustment

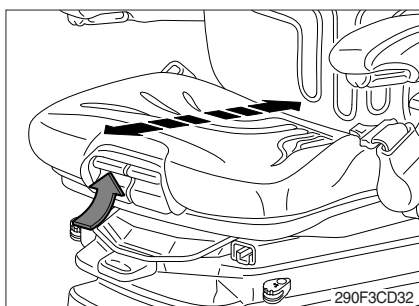

- ① The depth of the seat pan can be individually adjusted.
- ② To adjust the depth of the seat cushion, lift the RH handle (see arrow). By moving the seat cushion backwards or forwards the desired seating position can be reached.

(5) Absorber

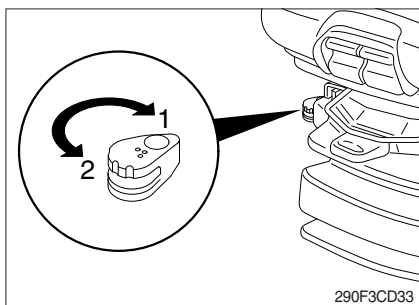


- ① The absorber setting of the seat can be varied to suit the on and off-road working conditions. The cushioning effect can be individually adjusted for this purpose.

Turn the lever to the desired position and release.


- 1 Soft
- 2 Hard

(6) Armrest adjustment

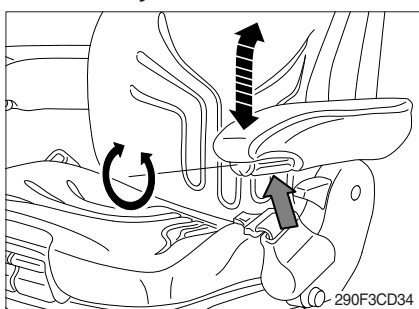


- ① The inclination of the armrests can be modified by turning the adjustment knob (arrow).

(7) Armrests

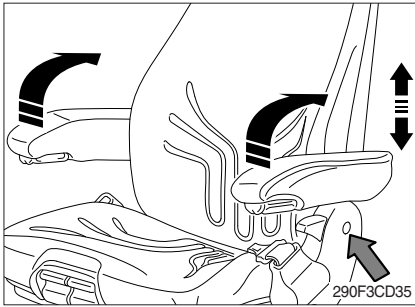


- ① The armrests can be folded up if required and the height individually adjusted.
- ② To adjust the armrests for height, separate the round cap (see arrow) from the cover, loosen the hexagon nut (size 13 mm), adjust the armrest to the desired position and tighten the nut again. Press the previously separated cap cover back onto the nut.

(8) Headrest

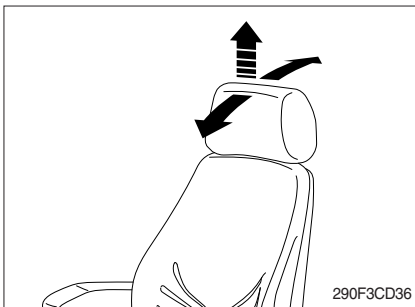


- ① The headrest can be individually adjusted for height by pulling it upward over the various increments up the end stop.
- ② By pushing forward or rearward the angle of the headrest can be adjusted individually.
- ③ To remove the headrest, pull it over the end stop.

(9) Seat heater switch

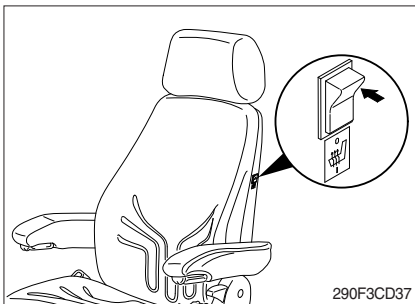


- ① The seat heater is turned on by pressing the switch.

(10) Lumbar support

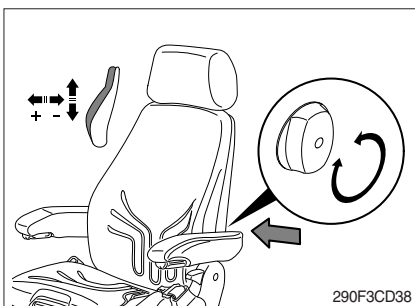

- ① By turning the adjustment knob to the left or right, both the height and curvature of the backrest cushion can be individually adjusted.
- ② This increases both the seating comfort and the performance of the operator.


(11) Backrest adjustment

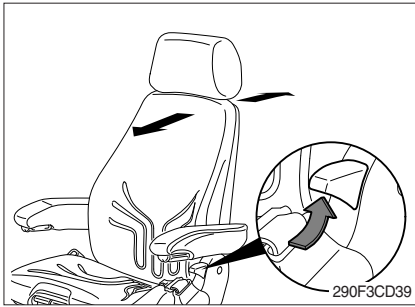

① The backrest is adjusted using the locking lever (arrow).

※ The locking lever must latch into the desired position. It should not be possible to move the backrest into another position when it is locked.


(12) Fore & after adjustment

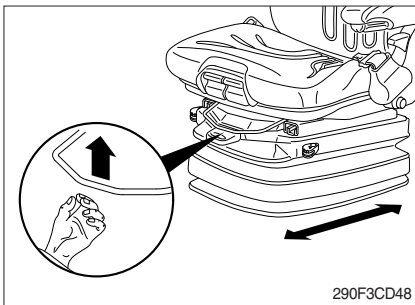

① The fore/after adjustment is released by lifting the locking lever.


※ The locking lever must latch into the desired position. It should not be possible to move the operator seat into another position when it is locked.

(13) Seat belt

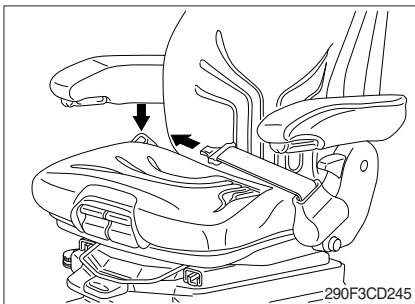

⚠ Fail to wear a seat belt during machine operation may result in serious injury or death in the event of an accident or machine overturn.

6) FUSE & RELAY BOX

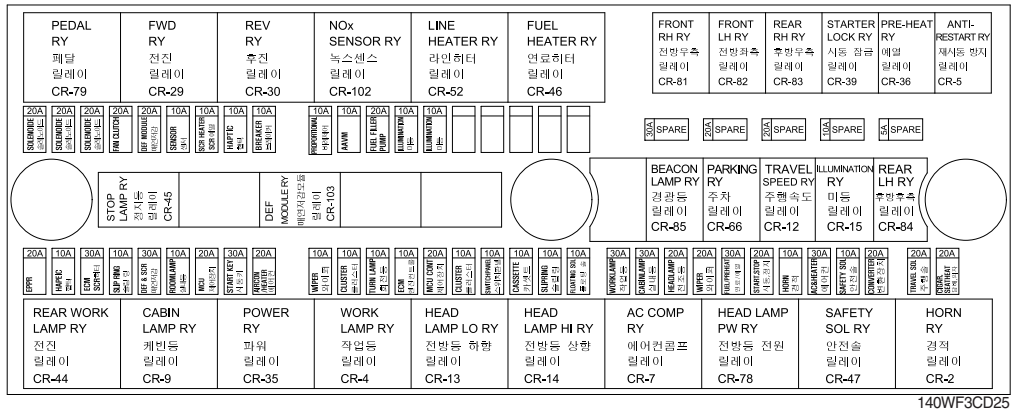


(1) The fuses protect the electrical parts and wiring from burning out.

(2) The fuse box cover indicates the capacity of each fuse and circuit it protects.

※ Replace a fuse with another of the same capacity.

▲ Before replacing a fuse, be sure to turn OFF the starting switch.

7) MCU

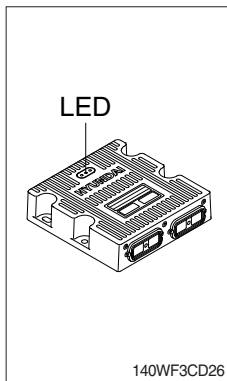


(1) To match the pump absorption torque with the engine torque, MCU varies EPPR valve output pressure, which control pump discharge amount whenever feedbacked engine speed drops under the reference rpm of each mode set.

(2) Three LED lamps on the MCU display as below.

LED lamp	Trouble	Service
G is turned ON	Normal	-
G and R are turned ON	Trouble on MCU	<ul style="list-style-type: none"> Change the MCU
G and Y are turned ON	Trouble on serial communication line	<ul style="list-style-type: none"> Check if serial communication lines between controller and cluster are disconnected
Three LED are turned OFF	Trouble on MCU power	<ul style="list-style-type: none"> Check if the input power wire (24 V, GND) of controller is disconnected Check the fuse

G : green, R : red, Y : yellow

8) EMERGENCY ENGINE SPEED CONTROL CONNECTOR

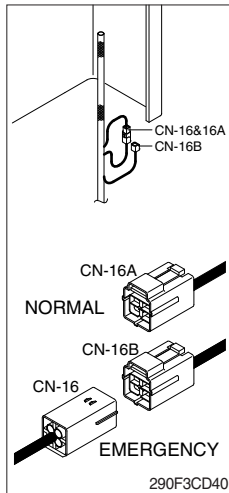


(1) When the CAN communication between the ECM and the MCU is abnormal due to malfunction, change the CN-16 connection from CN-16A to CN-16B and then control the engine speed by rotating the multimodal module of the haptic controller.

※ **Never connect connector CN-16 with CN-16B when MCU is in normal operation.**

※ **Make repair as soon as possible.**


9) SERVICE METER

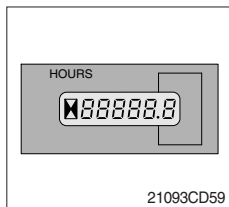

(1) This meter shows the total operation hours of the machine.

(2) Always ensure the operating condition of the meter during the machine operation. Inspect and service the machine based on hours as indicated in chapter 6, maintenance.

10) MCU/ECM CONNECTOR

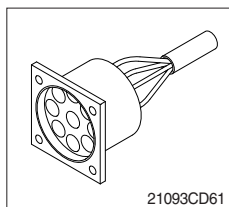

(1) MCU communicates the machine data with Laptop computer through the connector.


(2) ECM communicates the engine data with Cummins INSITE adapter through the connector.

① ECM fault code check

② ECM program change


③ Engine data monitoring & test

11) SERVICE SOCKET (12V)

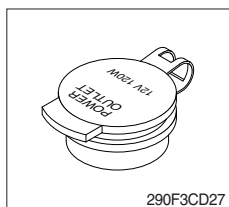

(1) Utilize the power of 12 V as your need and do not exceed power of 12 V, 30 W.

12) UPPER WINDSHIELD

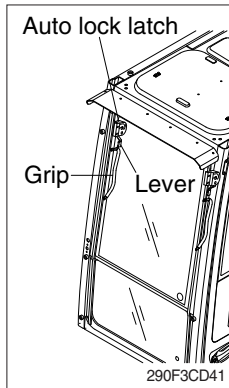

(1) Perform the following procedure in order to open the upper windshield.

- ① Pull both levers with hold both grips that are located at the top of the windshield frame and push the windshield upward.
- ② Hold both grips and back into the lock position until auto lock latch is engaged, then release the grips.

⚠ When working, without having locked the windshield by the auto lock (by pushing the windshield to the rear until it's completely fixed), please be careful as it can cause personal injury if the windshield is not fixed or falls off.



(2) Perform the following procedure in order to close the upper windshield.

- ① Pull the lever of the auto lock latch in order to release the auto lock latch.
- ② Reverse above step ① and ② in order to close the upper windshield.

1. SUGGESTION FOR NEW MACHINE

- 1) It takes about 100 operation hours to enhance its designed performance.
- 2) Operate according to below three steps and avoid excessive operation for the initial 100 hours.

Service meter	Load
Until 10 hours	About 60 %
Until 100 hours	About 80 %
After 100 hours	100 %

※ **Excessive operation may deteriorate the potential performance of machine and shorten lifetime of the machine.**


3) Be careful during the initial 100 hours operation

- (1) Check daily for the level and leakage of coolant, engine oil, hydraulic oil and fuel.
- (2) Check regularly the lubrication and fill grease daily all lubrication points.
- (3) Tighten bolts.
- (4) Warm up the machine fully before operation.
- (5) Check the gauges occasionally during the operation.
- (6) Check if the machine is operating normally during operation.

4) Replace followings after initial 250 hours of operation

Checking items	Hours
Engine oil	250
Engine oil filter element	
Fuel filter	
Prefilter	
Transmission oil	
Hydraulic oil return filter element	
Hydraulic oil tank drain filter cartridge	
Line filter element	
Swing reduction gear oil	
Axle oil	
Pressure filter element	

Avoid excessive operation for initial 100 hours

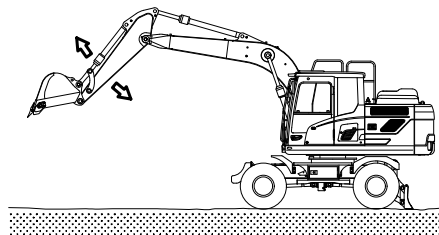

140WF4OP01

2. CHECK BEFORE STARTING THE ENGINE


1) Look around the machine and under the machine to check for loosen nut or bolts, collection of dirt, or leakage of oil, fuel or coolant and check the condition of the work equipment and hydraulic system. Check also loosen wiring, and collection of dust at places which reach high temperature.

※ **Refer to the daily check on the chapter 6, maintenance.**

2) After checking air pressure of tire, make sure that around the machine is clear.

3) Adjust seat to fit the contours of the operator's body for the pleasant operation.


4) Adjust the rear view mirror.

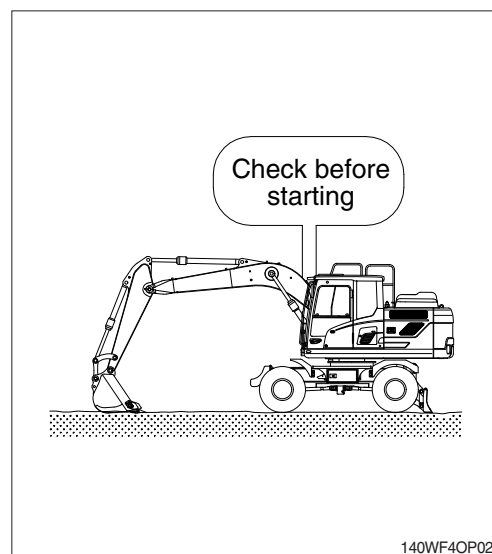

3. STARTING AND STOP THE ENGINE


1) CHECK INDICATOR LIGHTS

- (1) Check if all the operating levers are in the neutral position.
- (2) Turn the starting switch to the ON position.
Buzzer sounding for 4 seconds with HYUNDAI logo on cluster.
- ※ If the ESL mode is set to the enable, enter the password to start engine.
- ※ If the password has failed 5 times, please wait 30 minutes before re-attempting to enter the password.
- ※ Refer to page 3-28 for ESL mode.
- (3) After initialization of cluster, the operating screen is displayed on LCD (1).
Also, self-diagnostic function is carried out.

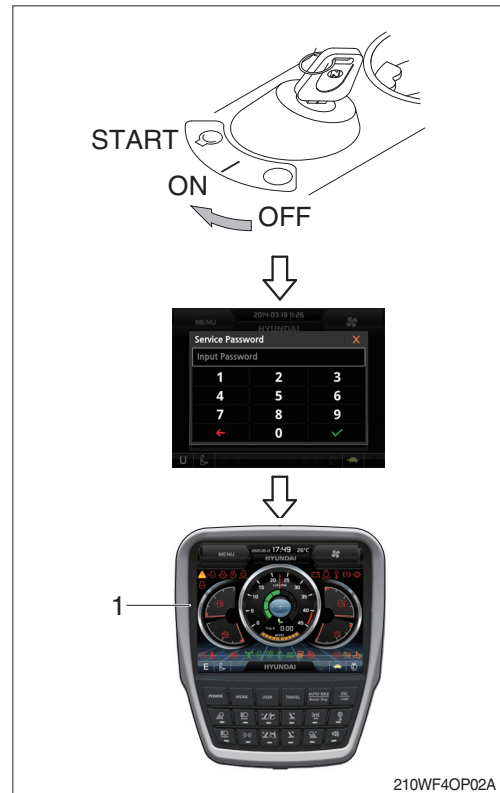

2) STARTING ENGINE IN NORMAL TEMPERATURE


- ※ Sound the horn to warn the surroundings after checking if personnel or obstacles are in the area.
- (1) Turn the multimodal dial to low idle position.
 - (2) Turn the starting switch to START position to start the engine.
 - ※ Do not hold the starting switch in the START position for longer than 20 seconds.
The start system may be seriously damaged.
 - ※ If the engine does not start, allow the stator to cool for about 2 minutes before re-attempting to start the engine again.
 - (3) Release the starting switch instantly after the engine starts to avoid possible damage to the starting motor.

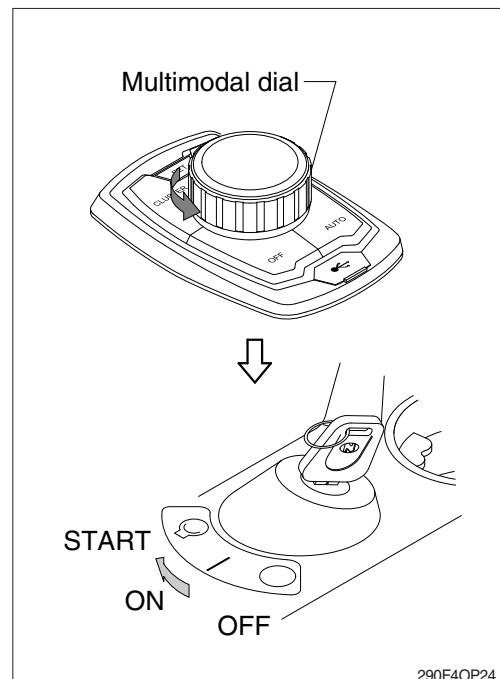

3) STARTING ENGINE IN COLD WEATHER

- ※ Sound horn to warn surroundings after checking if there are obstacles in the area.
- ※ Replace the engine oil and fuel referring to recommended oils at page 2-20.
- ※ Fill the anti-freeze solution to the coolant as required.
- ※ If you turn ON the starting switch, the fuel warmer is automatically operated to heat the fuel by sensing the coolant temperature.

- (1) Check if all the levers are in the neutral position.
 - (2) Turn the multimodal dial to low idle position.
 - (3) Turn the starting switch to the ON position, and wait 1~2 minutes. More time may take according to ambient temperature.
 - (4) Wait for five minutes to warm up the engine after the preheating pilot lamp off, and then turn the starting switch to the START position to start the engine.
- ※ If the engine does not start, allow the starter to cool for about 2 minutes before attempting to start the engine again.
- (5) Release the starting switch immediately after starting engine.
 - (6) If the temperature of the coolant is lower than 30°C the warming up automatically starts.
- ※ Do not operate the working devices, or convert the operation mode into other mode during the warming up.

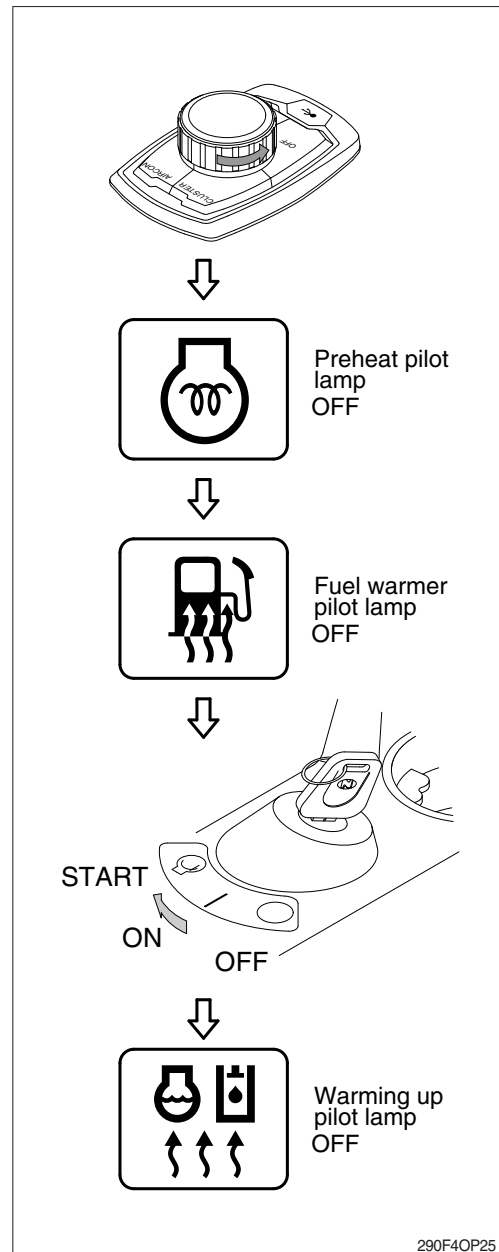

4) INSPECTION AFTER ENGINE START

Inspect and confirm the following after engine starts.

- (1) Is the level gauge of hydraulic oil tank in the normal level?
 - (2) Are there leakages of oil or water?
 - (3) Are all the warning lamps turned OFF (1-14)?
 - (4) Are the indicator of water temperature gauge (15) and hydraulic temperature gauge (16) in the operating range?
 - (5) Are the engine sound and the color of exhaust gas normal?
 - (6) Are the sound and vibration normal?
- ※ **Do not increase engine speed quickly after starting, it can damage engine or turbocharger.**
 - ※ **If there are problems in the cluster, stop the engine immediately and correct problems as required.**



210WF4OP03A


5) WARMING-UP OPERATION

- ※ **The most suitable temperature for the hydraulic oil is about 50°C (122°F).**

It can cause serious trouble in the hydraulic system by sudden operation when the hydraulic oil temperature is below 25°C (77°F).

Then temperature must be raised to at least 25°C (77°F) before starting work.

- (1) Run the engine at low idle speed for 5 minutes.
 - (2) Speed up the engine by accel dial and run the engine at mid-range speed.
 - (3) Operate bucket lever for 5 minutes.
- ※ **Do not operate anything except bucket lever.**
- (4) Run the engine at the high speed and operate the bucket lever and arm lever for 5-10 minutes.
- ※ **Operate only the bucket lever and arm lever.**
- (5) This warming-up operation will be completed by operation of all cylinders several times, and operation of swing and traveling.
- ※ **Increase the time for warming-up during winter.**

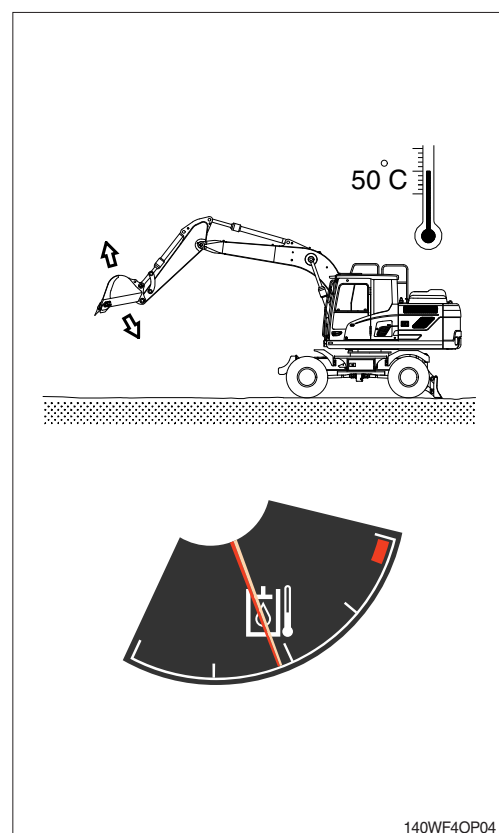


140WF4OP04

6) TO STOP THE ENGINE

- ※ If the engine is abruptly stopped before it has cooled down, engine life may be greatly shortened. Consequently, do not abruptly stop the engine apart from an emergency.
- ※ In particular, if the engine has overheated, do not abruptly stop it but run it at medium speed to allow it to cool gradually, then stop it.

- (1) Place the FNR lever in the neutral.
- (2) Down the bucket, outrigger and dozer blade on the ground then put all the levers in the neutral position.
- (3) Put the select switch in the parking position.
- (4) Run the engine at low idling speed for about 5 minutes.
- (5) Return the key of starting switch to the OFF position.
- (6) Remove the key to prevent other people using the machine and the safety knob.
- (7) Lock the cab door.

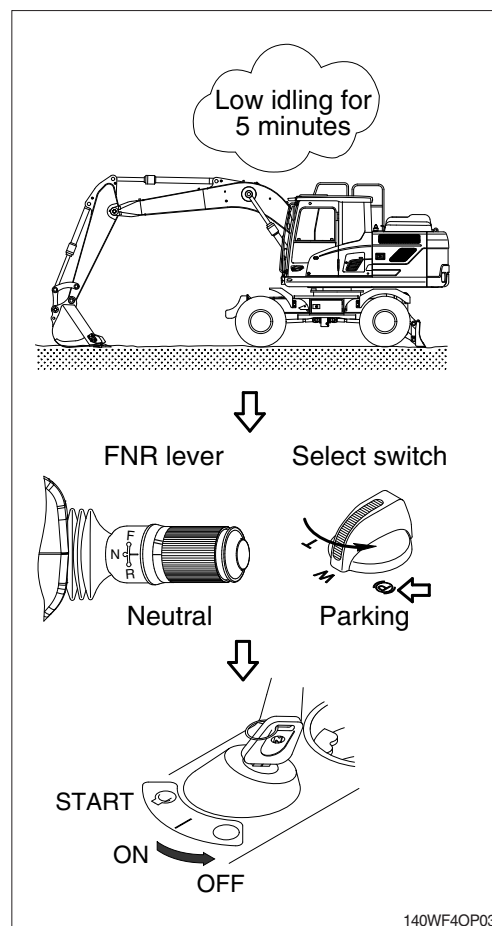

4. MODE SELECTION SYSTEM

1) STRUCTURE OF MECHATRONICS SYSTEM

CAPO, Computer Aided Power Optimization system, is the name of mode selection system developed by HD Hyundai Construction Equipment.

※ Please refer to chapter 3, cluster for below modes setting.

(1) Power mode

Power mode designed for various work loads supports high performance and reduces fuel consumption.

- P mode : Heavy duty power
- S mode : Standard power
- E mode : Economy power

(2) Work mode

One of the two work modes can be selected for the optimal work condition of the machine operation.

① General work mode (bucket)

When key switch is turned ON, this mode is selected automatically.

② Work tool mode (breaker, crusher)

It controls the pump flow and system pressure for the optimal operation of breaker or crusher.

(3) User mode

① User mode is useful for setting the user preferable power quickly.

(engine speed, power shift and idle speed)

② There are two methods for use of user mode.

a. In operation screen

User mode switch is used to memorize the current machine operating status and activate the memorized user mode.

Refer to page 3-17.

b. In menu

Engine high idle rpm, auto idle rpm and pump torque (power shift) can be modulated and memorized separately in menu status.

- Each memory mode has a initial set which are mid-range of max engine speed, power shift and auto idle speed.



- 1 Power mode switch
- 2 Work mode switch
- 3 User mode switch
- 4 Travel mode switch
- 5 Auto idle mode switch
- 6 LCD



User mode switch


- High idle rpm, auto idle rpm and EPPR pressure can be adjusted and memorized in the U-mode.

※ Refer to the page 3-22 for setting the user mode (available on U mode only).

- LCD segment vs parameter setting

Step ()	Engine speed (rpm)	Idle speed (rpm)	Power shift (bar)
1	1300	800	0
2	1400	850	3
3	1500	900	6
4	1600	950	9
5	1700	1000 (Auto decel)	12
6	1800	1050	16
7	1900	1100	20
8	2000	1150	26
9	2100	1200	32
10	2150	1250	38

※ One touch decel & low idle : 800 rpm

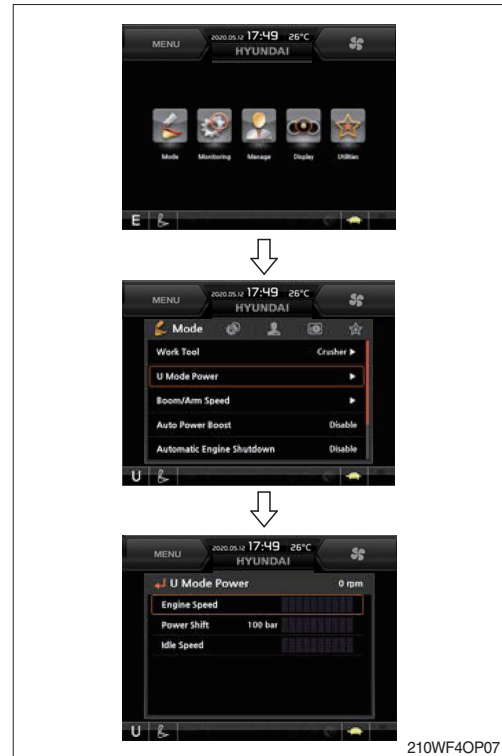

(4) Auto idle mode

Pilot lamp ON : Auto idle function is activated.

Pilot lamp OFF : Auto idle function is canceled.

(5) Travel mode

 : Low speed traveling.

 : High speed traveling.

(6) Monitoring system

Information of machine performance as monitored by the MCU can be displayed on the LCD. Refer to page 3-25.

(7) Self diagnostic system

① MCU (Machine Control Unit)

The MCU diagnoses machine status and problems and displays fault code in the cluster (fault code detected by MCU is composed of HCESPN and FMI).


② Engine ECM (Electronic Control Module)

If the engine or relevant system has problem, engine ECM detects and displays on the LCD as fault codes (this code is composed of SPN and FMI).

※ Refer to page 3-25 for LCD display.

(8) Anti-restart system

The system protects the starter from inadvertent restarting after the engine is already operational.

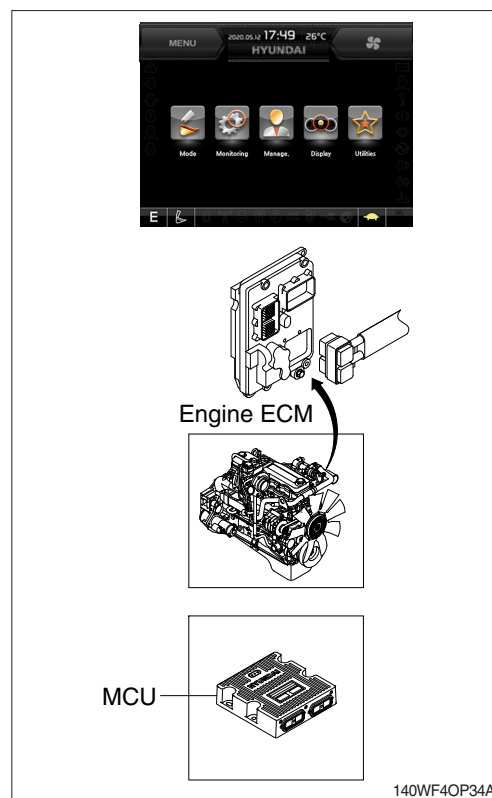


2) HOW TO OPERATE MODE SELECTION SYSTEM

(1) When start key switch is turned ON

- ① When start key switch is turned on, the cluster turns on and buzzer sounds for 4 seconds. And then main information as gauges and engine speed are displayed on LCD.
- ② Initial default mode settings are displayed in the cluster.


Mode		Status
Power mode	E	ON
Work mode		ON
Travel mode	Low (ON
Auto idle		ON

- ③ Self-diagnostic function can be carried out from this point.

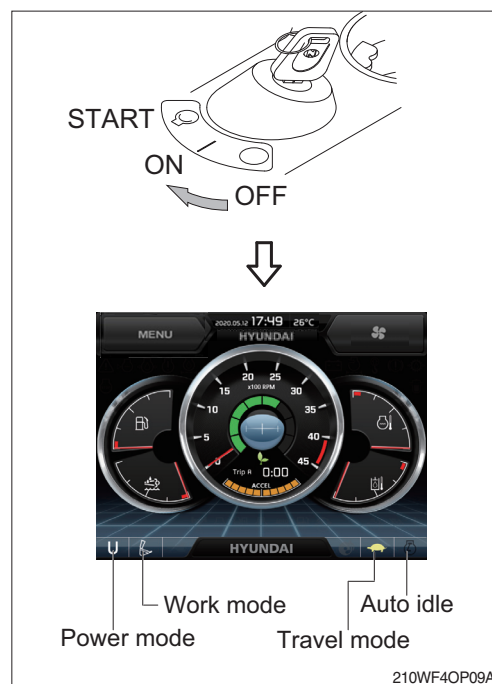

(2) After engine start

- ① When the engine is started, rpm display indicates low idle, 800 ± 100 rpm.
- ② If coolant temperature is below 30°C , the warming up pilot lamp lights ON and after 4 seconds the engine speed increases to 1000 ± 100 rpm automatically to warm up the machine.
 - After 2-3 minutes, you can select any mode depending on job requirement.

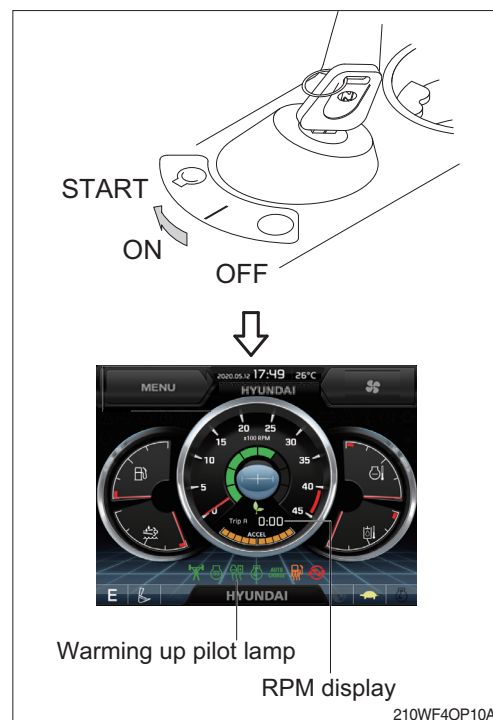


3) SELECTION OF POWER MODE

(1) E mode

The accel dial is set 10 and the auto idle mode is canceled.

Engine rpm	Effect
1300 ± 50	Variable power control in proportion to lever stroke (improvement in fuel efficiency) ※ Same power as S mode in full lever operation.

※ When the accel dial is located below 9 the engine speed decreases about 50~100 rpm per dial set.

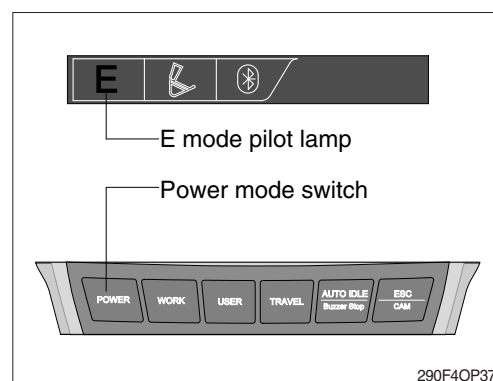


(2) S mode

The accel dial is set 10 and the auto idle mode is canceled.

Engine rpm	Effect
1400 ± 50	Standard power

※ When the accel dial is located below 9 the engine speed decreases about 50~100 rpm per dial set.

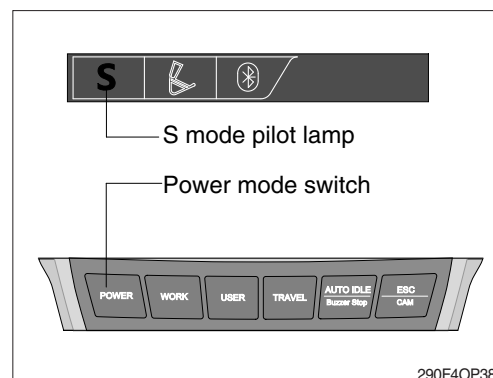


(3) P mode

The accel dial is set 10 and the auto idle mode is canceled.

Engine rpm	Effect
1500 ± 50	Approximately 120 % of power and speed available than S mode.

※ When the accel dial is located below 9 the engine speed decreases about 50~100 rpm per dial set.

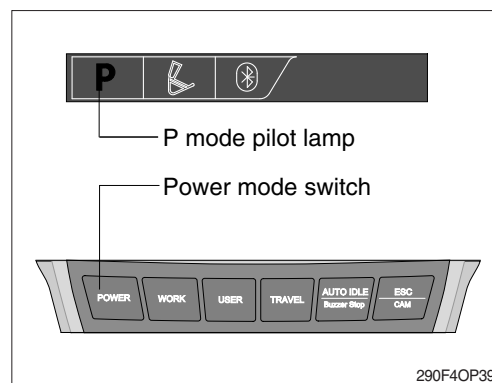


5. OPERATION OF WORKING DEVICE

※ **Confirm the operation of control lever and working device.**

- 1) Left control lever controls arm and swing.
- 2) Right control lever controls boom and bucket.
- 3) When you release the control lever, control lever returns to neutral position automatically.


※ **When operating swing, consider the swing distance by inertia.**

※ **Refer to the switching method at page 3-18, when installed dozer or outrigger.**

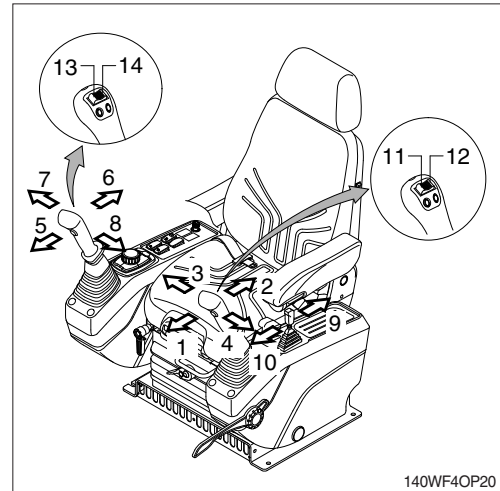


※ **Left control lever**

- 1 Arm roll-out
- 2 Arm roll-in
- 3 Swing right
- 4 Swing left

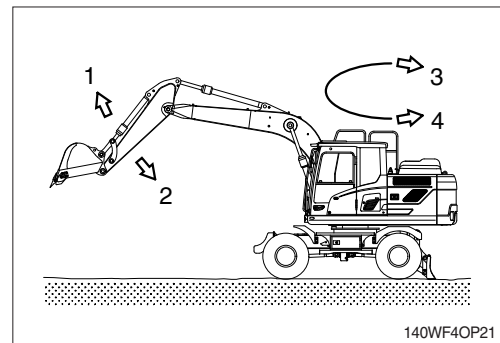

※ **Right control lever**

- 5 Boom lower
- 6 Boom raise
- 7 Bucket roll-out
- 8 Bucket roll-in

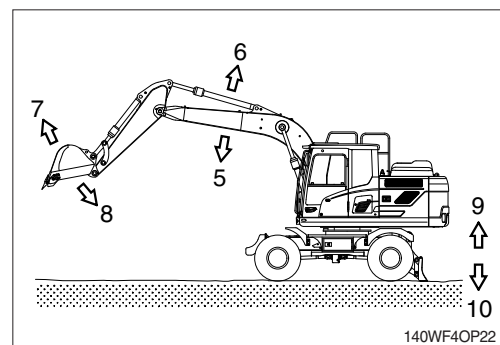


※ **Dozer and outrigger control lever**

- 9 Dozer blade or outrigger up
- 10 Dozer blade or outrigger down

※ **Crusher, ripper and grapple control switch (option)**

- 11 Counterclockwise rotate
- 12 Clockwise rotate
- 13 Close
- 14 Open

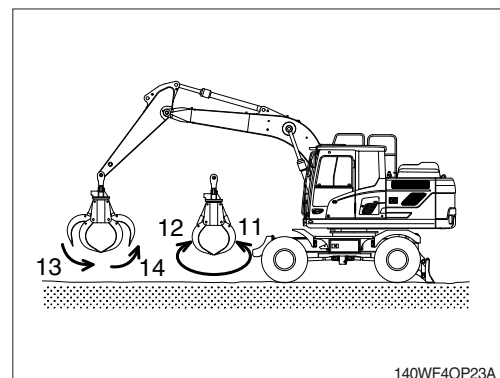


6. TRAVELING OF THE MACHINE

1) BASIC OPERATION

(1) Traveling position

It is the position which the dozer and rear axle is in the rear and the working device is forward.


- ▲ **Travel directions will be reversed if lower structure is positioned with dozer in front.**

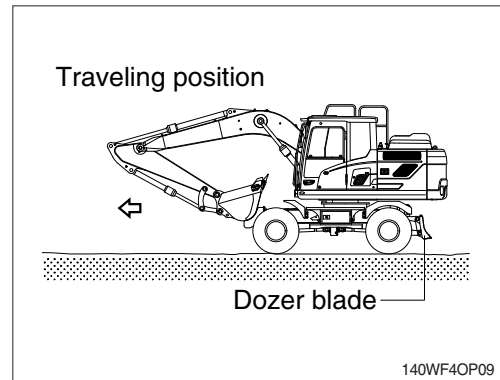

(2) Traveling operation


When warm-up operation is completed after the engine is started, move the machine according to the following procedure.

- ① Set the swing lock pin to lock position.
 - ② Release the safety lever.
 - ③ Put the select switch in the traveling position.
 - ④ Lift up the dozer blade or outrigger.
 - ⑤ Select traveling direction.
 - ⑥ Place the two speed switch in low speed.
 - ⑦ Press gently the accelerator pedal to move the machine.
- ※ **When speed up on a slope, a noise for valve of travel motor may occur. It is not out of order in machine but peculiar sound.**
- ※ **Be sure that the brake works normally on the safe place before fast traveling.**

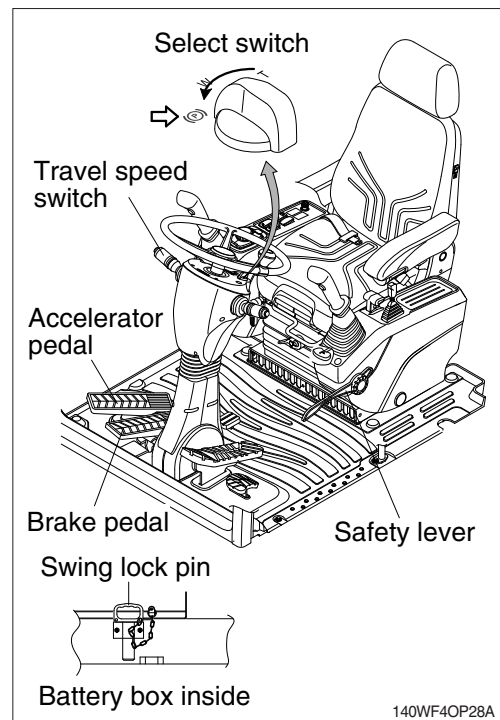


(3) Changing speed

If you want to change the speed, select the travel speed switch desired position.

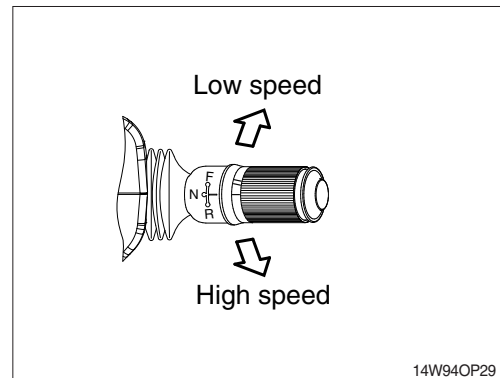


(4) Changing direction (forward/reverse)

- ① Be sure to stop the machine when changing the direction forward or backward while traveling.
 - ② Put the FNR lever in the desired position to change direction.
- ※ **When changing direction, check beforehand there is no obstacle in the direction you will be headed.**
 - ※ **It could be cause of machine failure to change the direction forward or backward while traveling.**

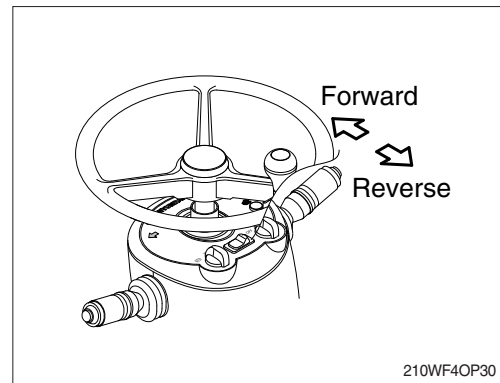

(5) Turning the machine


- ① Turn the machine by moving the steering wheel into the desired direction.
 - ② You can turn the machine to the left or right.
- ※ **Do not turn the machine abruptly when traveling at high speed and avoid turn on a slope.**
- ▲ **Steering does not function with engine OFF.**

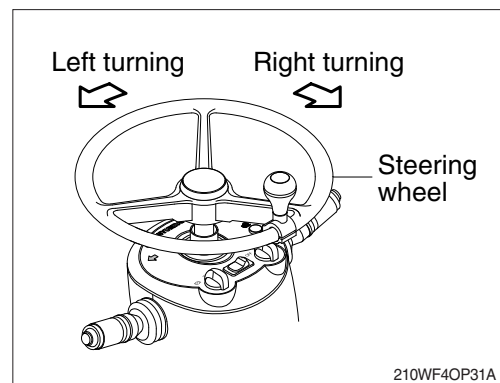

(6) Precautions when driving


The operators must be familiar with the following precautions including general safety hints.

- ① If the warning lamp lights up on the cluster, stop the machine immediately and check carefully whether the relevant parts are out of order or not.
- ② Do not allow the engine to run at overload.
- ③ Stop the engine and check as soon as finding out abnormal noise or smell.
- ④ Check the pilot lamp on the cluster frequently.
- ⑤ Do not allow passengers or riders on the machine while it is running or in operation.
- ⑥ Never get on or off the machine while it is moving.

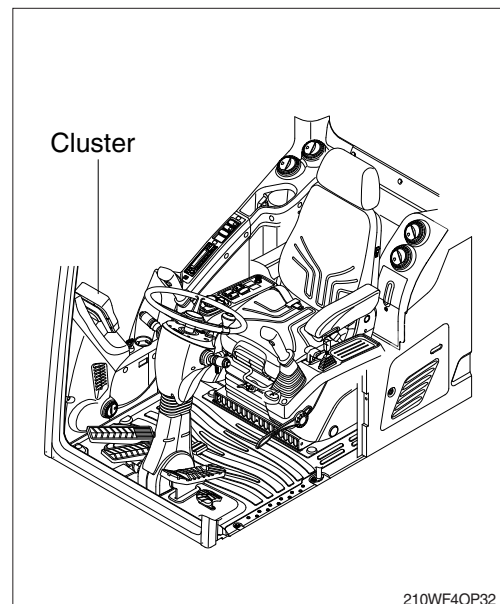

2) TRAVELING ON A SLOPE


- (1) Never travel down a slope in neutral.
 - (2) Lower the bucket 20 to 30cm(1ft) to the ground so that it can be used as a brake in an emergency.
 - (3) If the machine starts to slide or loses stability, lower the bucket immediately and brake the machine.
 - (4) When parking on a slope, use the bucket as a brake and place blocks behind the tires to prevent sliding.
- ※ **Machine can not travel effectively on a slope when the oil temperature is low. Do the warming-up operation when it is going to travel on a slope.**
 - ※ **Be careful when working on slopes. It may cause the machine to lose its balance and turn over.**

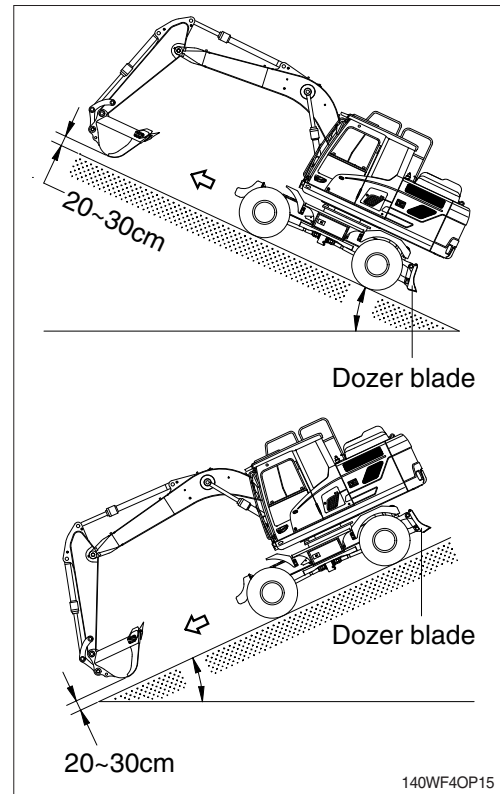

3) PARKING THE MACHINE

To park the machine, keep the steps below.

- (1) Release the accelerator pedal slowly.
 - (2) Depress the brake pedal.
 - (3) Place the FNR lever in the neutral.
 - (4) Put the select switch in the parking position and release the brake pedal.
 - (5) Lower the bucket, outrigger and dozer blade to the ground.
 - (6) Stop the engine, place the start key switch in the OFF and remove the key.
 - (7) Lower the safety lever to lock position.
 - (8) Lock the swing lock pin and the cab door.
- ※ **Whenever parking on a slope, always block the tires after lowering the bucket to the ground.**
 - ※ **Contain the outrigger lock pin in the tool box to avoid loss.**

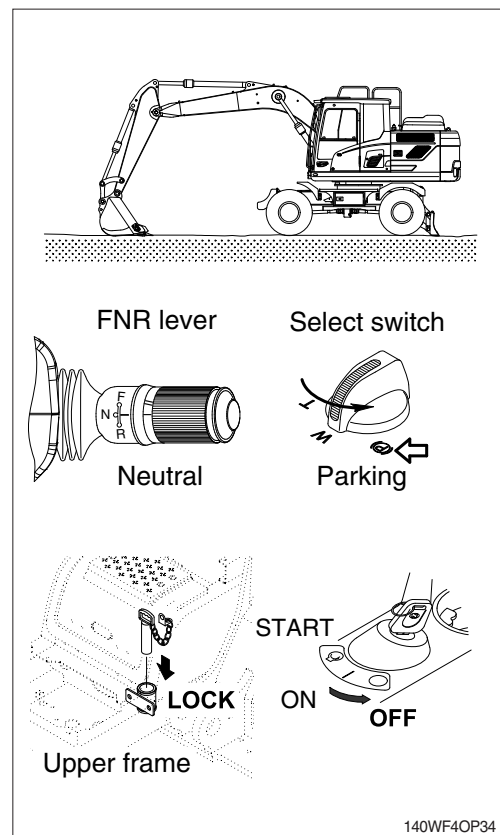

4) TOWING THE MACHINE

Except for an emergency, do not tow this machine.
If it is inevitable to tow this machine, observe the following.

(1) General

- ① Parking brake cylinder of the machine is operated by the spring force and released by hydraulic pressure.
If the engine does not operate, the brake will be operated to stop the machine.
 - ② When the machine is towed move it for a repair to nearby place at the low speed.
Transport it on a trailer, if it has to be moved for a long distance.
 - ③ When the steering device and the brake of the machine to be towed can not be operated, transport by trailer.
- ⚠ **Injury or death could result if a disabled machine is towed incorrectly.**
 - ⚠ **If your machine is towed by another machine, ALWAYS use a wire rope with a sufficient towing capacity.**
 - ⚠ **NEVER allow a disabled machine to be towed on a slope.**
 - ⚠ **When connecting up a towing machine, do not let anyone enter the area between the towing machine and the equipment being towed.**
 - ⚠ **Set the towing machine and the towing connection of the equipment being towed in a straight line when connecting it.**
 - ⚠ **Never tow machine using a light-duty towing hook.**

(2) Towing the machine


- ① The emergency device is to interrupt the power flow between input and output in case of control pressure failure or a travel motor defect and thus allows an emergency towing of the machine.
 - Towing speed : Max 10 km/h
 - Towing distance : Max 5 km
- ② Since there is no transmission lubrication, damages may occur due to lacking oil supply if the instruction are not observed. For a long distance it is best to have transported the defective machine on a trailer.

③ Activate the emergency device

- Turn the start key OFF position.
- Block the machine against rolling away.
- By means of a grease gun pump in the grease on the grease nipple (1) until it comes visibly out at the pressure relief valve (3) of the parking brake.

④ Deactivate the emergency device


- The bleeder (2) of the parking brake must be opened and then shift into the road speed (apply a control pressure of 30 to 35 bar at the connection of the brake).
- Then close the bleeder again.

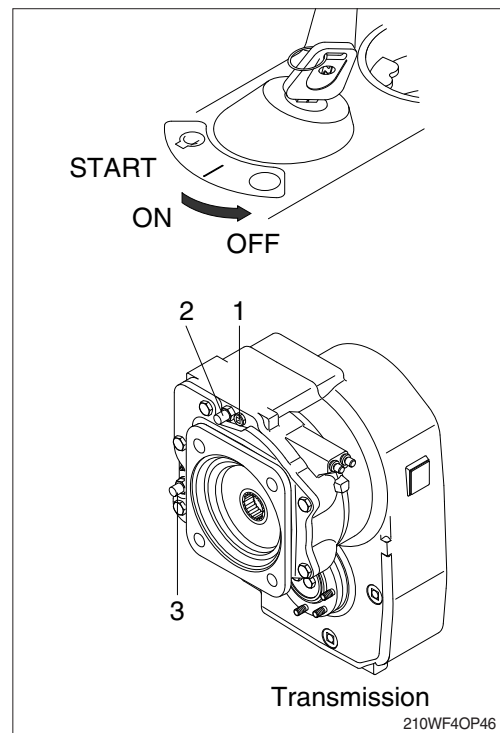

5) PRECAUTIONS FOR OPERATION


(1) Permissible water depth

- ① Do not immerse the machine in water by more than the permissible depth (axle center).
- ② For parts that have been immersed in water for a long time, pump in grease until the old grease comes out from the bearings.

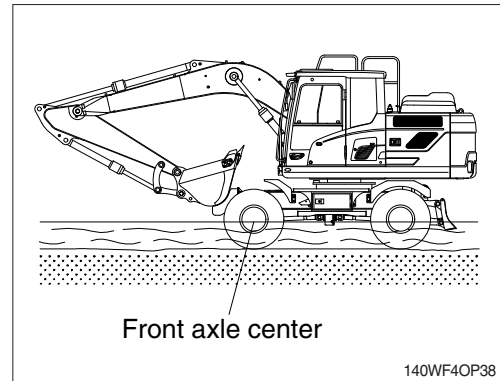

(2) When the brake does not operate


- ① If the machine does not stop even though the brake pedal is applied, put the parking position to activate the emergency brake by select switch.
- ※ After using the parking brake as an emergency brake, ask HD Hyundai Construction Equipment dealer to check complete brake system.
- ▲ Never use emergency brake, except when the service brake fails.

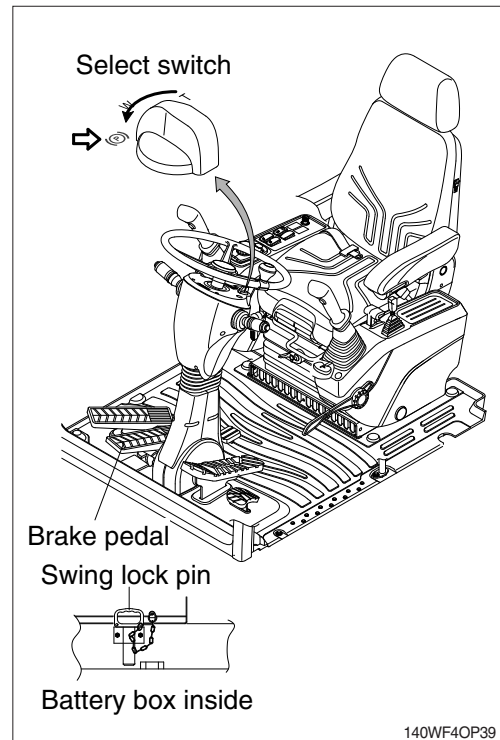

7. EFFICIENT WORKING METHOD


1) Do the digging work by arm.

Use the pulling force of arm for digging and use together with the digging force of the bucket if necessary.

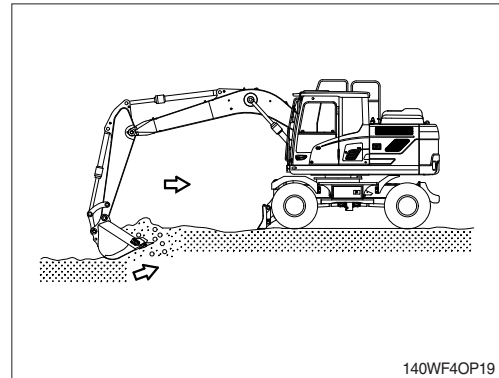


2) When lowering and raising the boom operate softly for the beginning and the end.


In particularly, sudden stops while lowering the boom may cause damage to the machine.

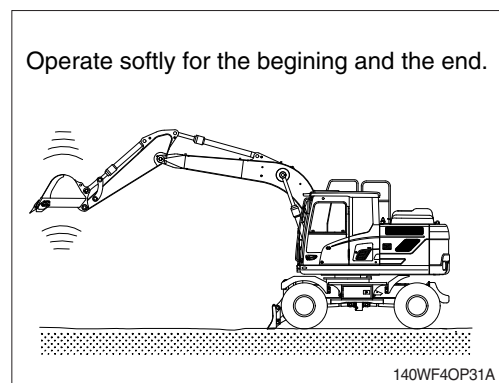


3) The digging resistance and wearing of tooth can be reduced by putting the end of bucket tooth to the digging direction.

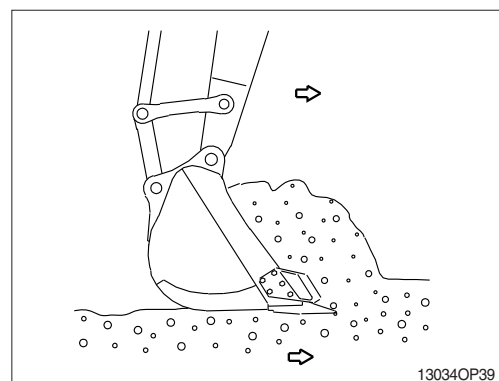


4) Set the tracks parallel to the line of the ditch to be excavated when digging ditch. Do not swing while digging.

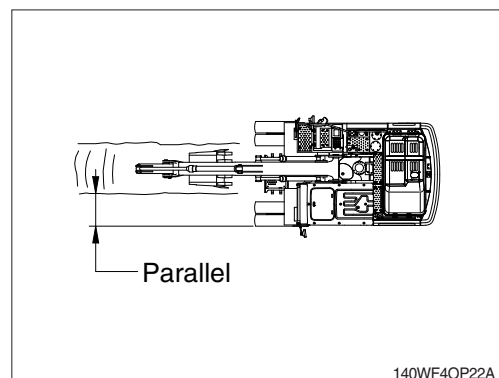

- 5) Dig slowly with keeping the angle of boom and arm, 90-110 degree when maximum digging force is required.

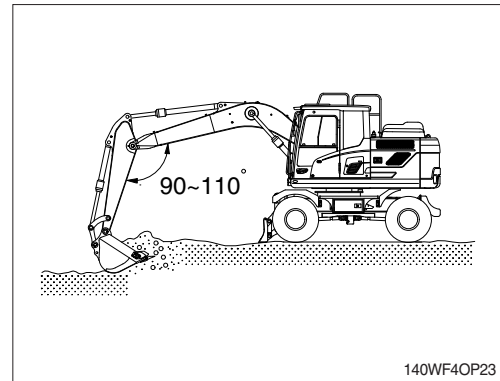


- 6) Operate leaving a small safety margin of cylinder stroke to prevent damage of cylinder when working with the machine.

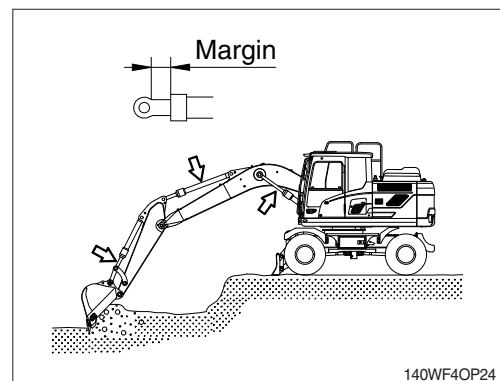


- 7) Keep the bucket to the dumping position and the arm horizontal when dumping the soil from the bucket.
Operate bucket lever 2 or 3 times when hard to dump.


※ Do not use the impact of bucket tooth when dumping.

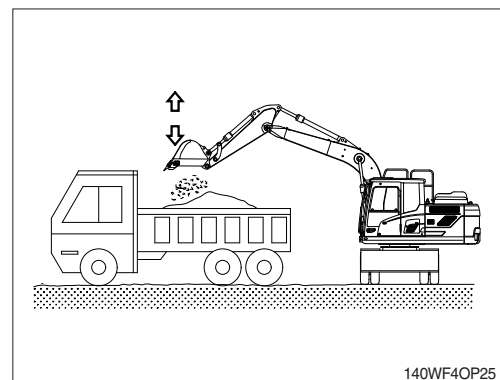


- 8) Operate stop of swing considering the swing slip distance is created by inertia after neutralizing the swing lever.

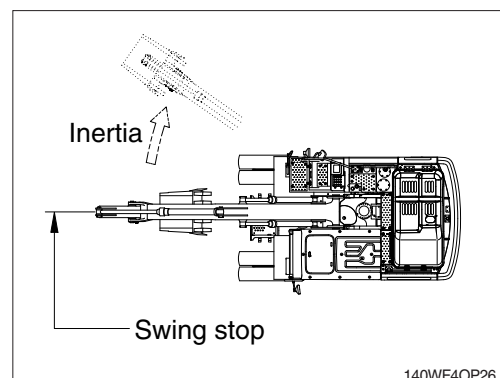


- 9) If the excavation is in an underground location or in a building, make sure that there is adequate overhead clearance and that there is adequate ventilation.

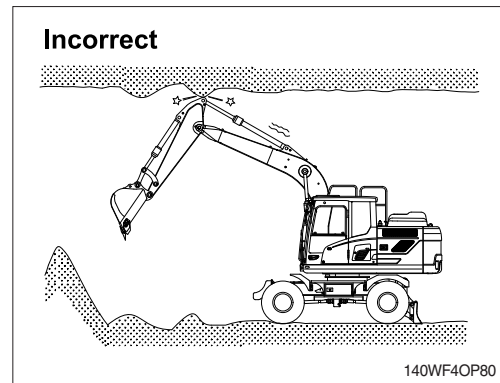


- 10) Do not use the dropping force of the work equipment for digging.
The machine can be damaged by the impact.

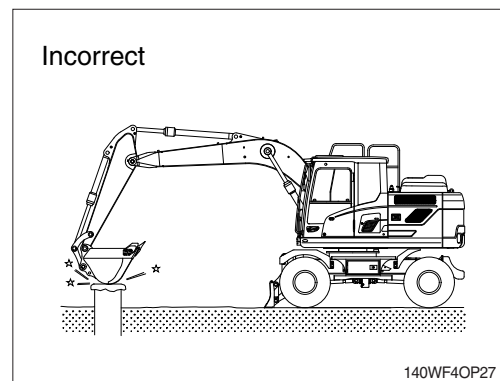

- 11) Do not use the bucket to crack hard objects like concrete or rocks.
This may break a tooth or pin, or bend boom.

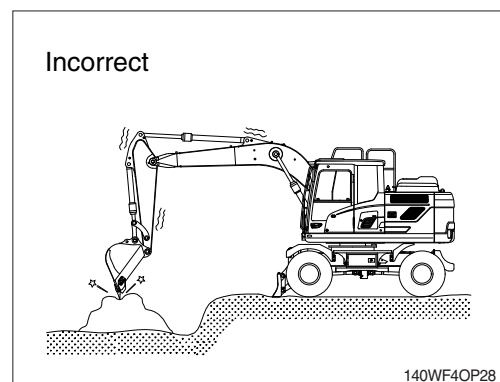

- 12) Do not use the dropping force of the machine for digging.

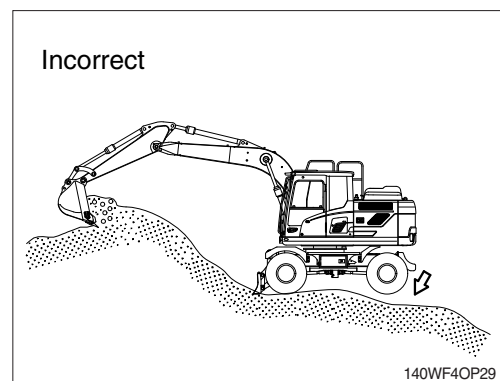

13) NEVER CARRY OUT EXCESSIVE OPERATIONS


Operation exceeding machine performance may result in accident or failure.

Carry out lifting operation within specified load limit.

Never carry out operations which may damage the machine such as overload or over-impact-load.

Never travel while carrying a load.

In case you need installing over load warning device for object handling procedure, please contact HD Hyundai Construction Equipment distributor.

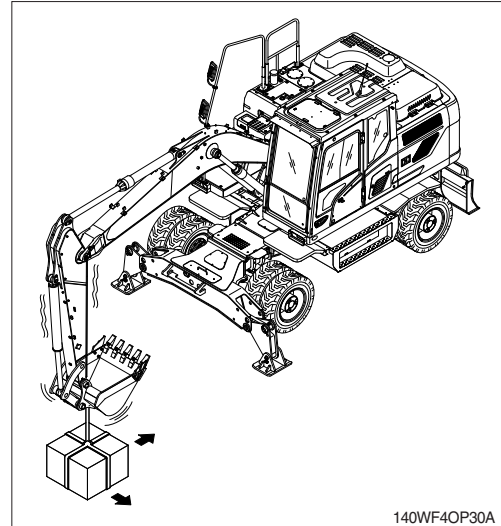

140WF40P30A

14) BUCKET WITH HOOK

When carrying out lifting work, the special lifting hook is necessary.

The following operations are prohibited.

- Lifting loads with a wire rope fitted around the bucket teeth.
- Lifting loads with the wire rope wrapped directly around the boom or arm.

When performing lifting operation, securely hook the wire rope onto the special lifting hook.

When performing lifting operation, never raise or lower a person.


Due to the possible danger of the load falling or of collision with the load, no persons shall be allowed in the working area.

Before performing lifting operation, designate an operation supervisor.

Always execute operation according to his instructions.

- Execute operating methods and procedures under his direction.
- Select a person responsible for signaling. Operate only on signals given by such person.


Never leave the operator's seat while lifting a load.

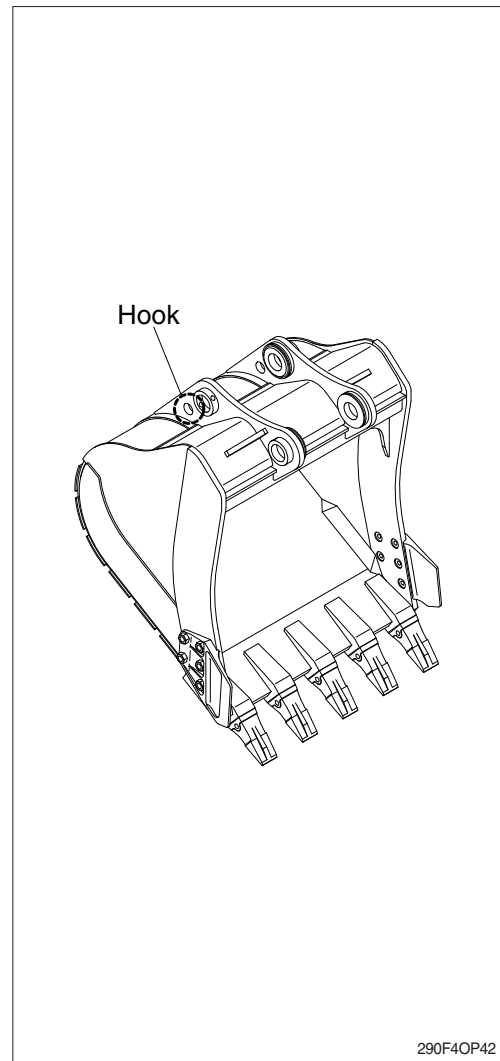

8. OPERATION IN THE SPECIAL WORK SITES

1) OPERATION THE MACHINE IN A COLD WEATHER

- (1) Use proper engine oil and fuel for the weather.
- (2) Fill the required amount of antifreeze in the coolant.
- (3) Refer to the starting engine in cold weather.
Start the engine and extend the warming up operation.
- (4) Be sure to open the heater cock when using the heater.
- (5) Always keep the battery completely charged.
※ **Discharged batteries will freeze more easily than fully charged.**
- (6) Clean the machine and park on the wood plates.

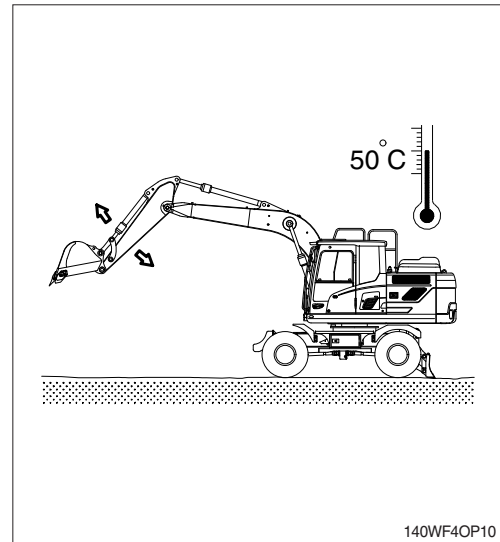

2) OPERATION IN SANDY OR DUSTY WORK SITES

- (1) Inspect air cleaner element frequently. Clean or replace element more frequently, if warning lamp comes ON and buzzer sounds simultaneously, regardless of inspection period.
※ **Replace the inner and outer element after 4 times of cleaning.**
- (2) Inspect radiator, oil cooler and condenser frequently, and keep cooling fins clean.
- (3) Prevent sand or dust from getting into fuel tank and hydraulic tank during refilling.
- (4) Prevent sand or dust from penetrating into hydraulic circuit by tightly closing breather cap of hydraulic oil tank. Replace hydraulic oil filter and air breather element frequently. Also, replace the fuel filter frequently.
- (5) Keep all lubricated part, such as pins and bushings, clean at all times.
- (6) If the air conditioner and heater filters clogged, the heating or cooling capacity will drop. Clean or replace the filter element more frequently.
- (7) Clean electrical components, especially the starting motor and alternator to avoid accumulation of dust.

3) SEA SHORE OPERATION

- (1) Prevent ingress of salt by securely tightening plugs, cocks and bolts of each part.
- (2) Wash machine after operation to remove salt residue.
Pay special attention to electrical parts, and hydraulic cylinders and track tension cylinder to prevent corrosion.
- (3) Inspection and lubrication must be carried out more frequently.
Supply sufficient grease to replace all old grease in bearings which have been submerged in water for a long time.

4) OPERATION IN MUD, WATER OR RAIN WORK SITES

- (1) Perform a walk around inspection to check for any loose fittings, obvious damage to the machine or any fluid leakage.
- (2) After completing operations, clean mud, rocks or debris from the machine. Inspect for damage, cracked welds or loosened parts.
- (3) Perform all daily lubrication and service.
- (4) If the operations were in salt water or other corrosive materials, make sure to flush the affected equipment with fresh water.


5) OPERATION IN ROCKY WORK SITES

- (1) Check for damage to the tire and for looseness, flaws, wear and damage in bolts and nut.
- (2) Do not turn the tire directly over the sharp edge rock.

9. NORMAL OPERATION OF EXCAVATOR

Followings may occur during operation due to the nature of a hydraulic excavator.

- 1) When rolling in the arm, the roll-in movement stop momentary at point **X** in the picture shown, then recovers speed again after passing point **X**.
The reason for this phenomenon is that movement by the arm weight is faster than the speed of oil flow into the cylinder.
- 2) When lowering the boom, one may hear continuous sound.
This is caused by oil flow in the valve.
- 3) Overloaded movement will produce sound caused by the relief valves, which are for the protection of the hydraulic systems.
- 4) When the machine is started swing or stopped, a noise near the swing motor may be heard. The noise is generated when the brake valve relieves.

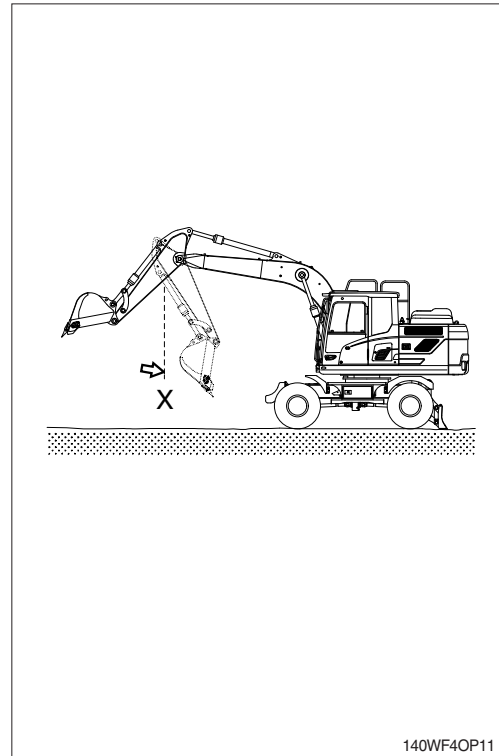

10. ATTACHMENT LOWERING (When engine is stopped)

1) On machines equipped with an accumulator, for a short time(within 2 minutes) after the engine is stopped, the attachment will lower under its own weight when the attachment control lever is shifted to LOWER. This happens only when the starting switch is ON and the safety knob is the in the UNLOCK position. After the engine is stopped, set the safety knob to the LOCK position.


▲ Be sure no one is under or near the attachment before lowering the boom.

2) The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.

▲ Never make any hole in the accumulator expose it to flame or fire.

▲ Do not weld anything to the accumulator.

※ When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your HD Hyundai Construction Equipment distributor.

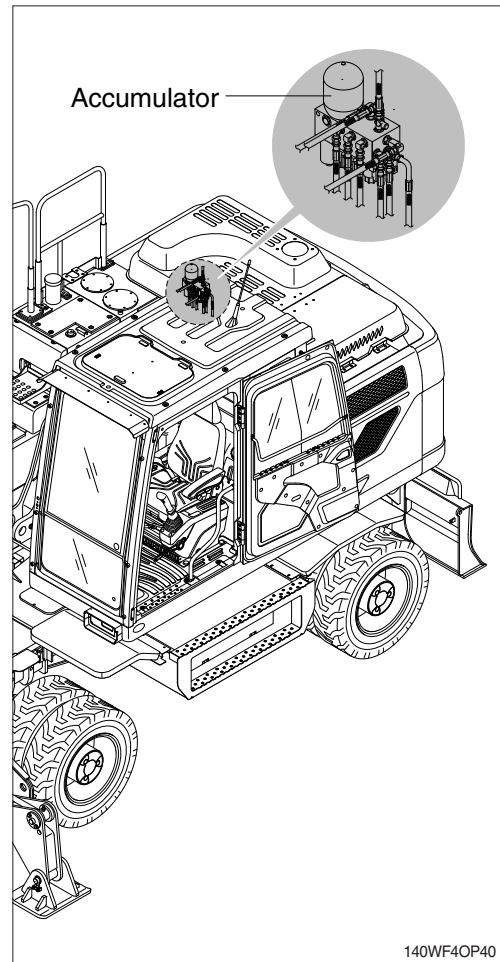

140WF40P40

11. STORAGE

Maintain the machine taking care of following to prevent the deterioration of machine when storing the machine for a long time, over 1 month.

1) BEFORE STORAGE

(1) Cleaning the machine

Clean the machine and dried.
Grease each lubrication part.


(2) Lubrication position of each part

Change all oil.

※ Be particularly careful when you reuse the machine.

As oil can be diluted during storage.

Apply an anticorrosive lubricant on the exposed part of piston rod of cylinder and in places where the machine rusts easily.

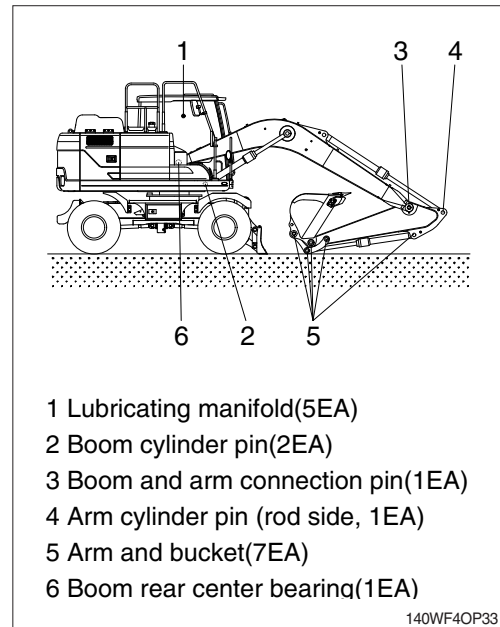


(3) Master switch

Turn OFF the master switch mounted electric box and store the machine.

▲ Off the master switch after lamp off.

▲ It may cause severe failure of aftertreatment device.

(4) Be sure to mix anticorrosive antifreezing solution in the radiator.

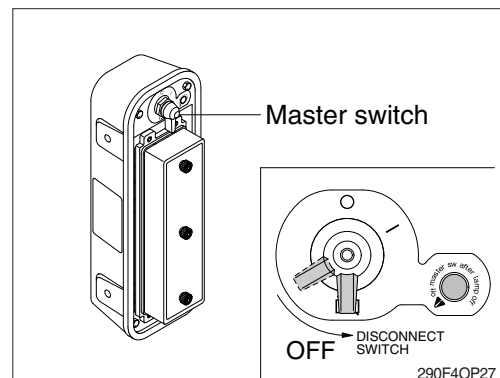


(5) Prevention of dust and moisture

Keep machine dry. Store the machine setting wood on the ground.

※ Cover exposed part of piston rod of cylinder.


※ Lower the bucket to the ground and set a support under track.

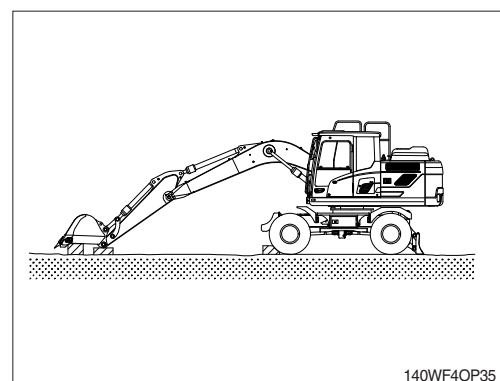

2) DURING STORAGE

Start engine and move the machine and work equipment once a month and apply lubrication to each part.

- ※ Check the level of engine oil and coolant and fill if required when starting engine.
- ※ Clean the anticorrosive on the piston rod of cylinder.
- ※ Operate the machine such as traveling, swing and work equipment operation to make sure enough lubrication of all functional components.

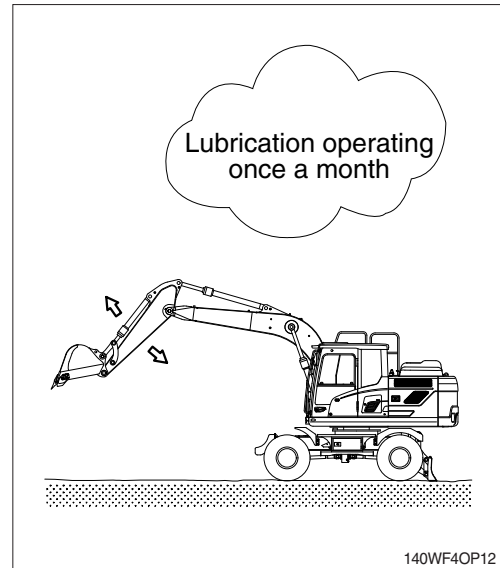

※ BATTERY

- ① Once a month, start the engine for 15 minutes (or use a charger) to charge the battery.
- ② Every 2 months, check the battery voltage and keep battery voltage over 25.08V.
- ③ If the machine stock period is over 6 months, disconnect the battery negative (-) terminal.

3) AFTER STORAGE

Carry out the following procedure when taking out of a long time storage.

- (1) Wipe off the anticorrosive lubricant on the hydraulic piston rod.
- (2) Completely fill fuel tank, lubricate and add oil.

(3) When storage period is 6 months over


If the machine stock period is over 6 months, carry out the following procedure.

This procedure is to drain condensation water for the **swing reduction gear** durability.

- ※ Remove the drain port plug and drain the water until the gear oil comes out and then tighten the drain plug.
- ※ Refer to the service instruction, section 6 for the drain plug location.
- ※ If the machine is stored without carrying out the monthly lubricating operation, consult your HD Hyundai Construction Equipment dealer for service.

12. RCV LEVER OPERATING PATTERN









1) PATTERN CHANGE VALVE NOT INSTALL (standard)

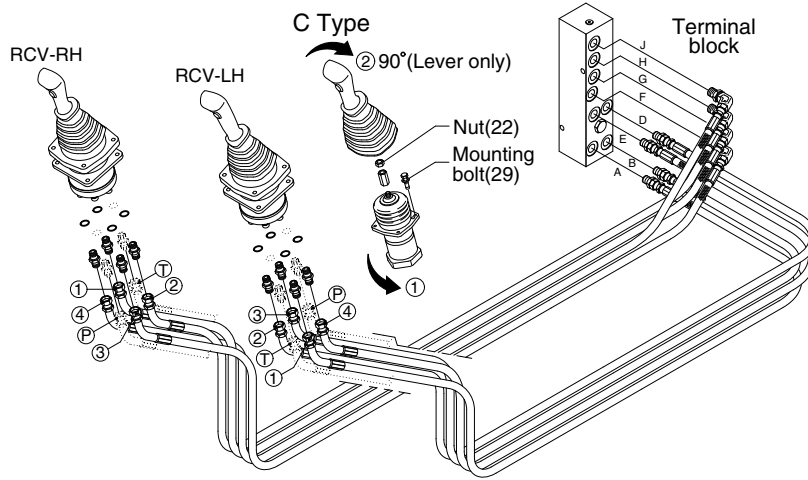

※ Whenever a change is made to the machine control pattern also exchange the pattern label in the cab to match the new pattern.

※ The hose modification works must be carried out between RCV lever and terminal block (Not between terminal block and MCV).

140WF4OP50

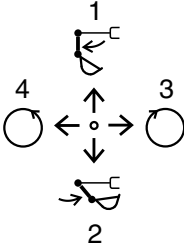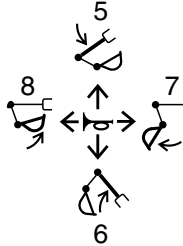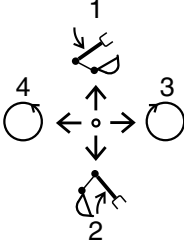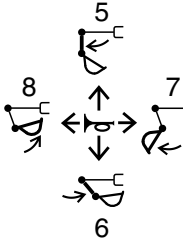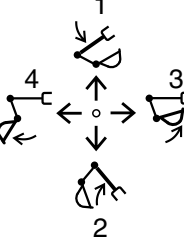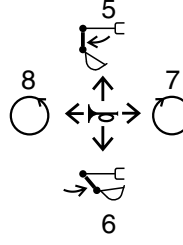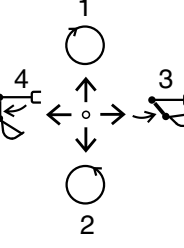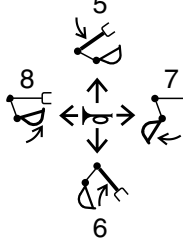Pattern	Operation		Control function	Hose connection (port)			
	Left RCV lever	Right RCV lever		RCV lever	Change of Terminal block		
					From	To	
ISO Type			Left	1Arm out	②	D	-
HD Hyundai Construction Equipment				2Arm in	④	E	-
			3Swing right	③	B	-	
			4Swing left	①	A	-	
			Right	5Boom lower	④	J	-
6Boom raise	②	H		-			
7Bucket out	①	G		-			
8Bucket in	③	F		-			
A Type			Left	1Boom lower	②	D	J
	2Boom raise	④		E	H		
	3Swing right	③	B	-			
	4Swing left	①	A	-			
	Right	5Arm out	④	J	D		
		6Arm in	②	H	E		
		7Bucket out	①	G	-		
		8Bucket in	③	F	-		
	B Type			Left	1Boom lower	②	D
	2Boom raise	④	E		H		
	3Bucket in	③	B	F			
	4Bucket out	①	A	G			
	Right	5Arm out	④	J	D		
		6Arm in	②	H	E		
		7Swing right	①	G	B		
		8Swing left	③	F	A		
	C Type			Left	① Loosen the RCV lever mounting bolt (29) and rotates lever assy 90° counterclockwise; then install. ② To put lever in correct position, disassemble nut (22) and rotates only lever 90° clockwise.		
		Right	Same as ISO type				

2) PATTERN CHANGE VALVE INSTALL (option)

- ※ If the machine is equipped with the pattern change valve, the machine operation pattern can be easily changed.
- ※ Whenever a change is made to the machine control pattern also exchange the pattern label in the cab to match the new pattern.


Operation	ISO type	A type
Left RCV lever		
Right RCV lever		

(1) The machine control pattern can be easily changed from the "ISO type" to "A type" by changing the position of the lever.

▲ Before starting the machine, check the lever position of pattern change valve and actual operating of attachment.

(2) Change of operating pattern

- ① Loosen bolt.
- ② Move lever to the "ISO" or "A" position.
- ③ After the lever is set, tighten the bolt in order to secure the lever.
 - Position ① for "ISO" pattern.
 - Position ② for "A" pattern.

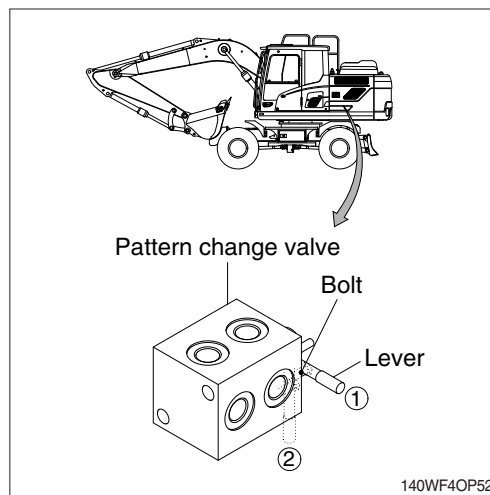


13. SCR SYSTEM CLEANING

SCR system

- ※ The SCR system is used to decrease the mono-nitrogen oxides (NOx) emissions from the machine tailpipe.
- ※ It is unlawful to tamper with, modify, or remove any component of the SCR system.
It is also unlawful to use DEF/AdBlue® that does not meet the specifications provided or to operate the machine with no DEF/AdBlue®.
- ※ The type of SCR system cleaning composes of automatic SCR system cleaning and manual SCR system cleaning.
- ▲ SCR system cleaning generates hot exhaust and causes hot exhaust system components.
- ▲ Exhaust system components get very hot and can cause severe burns. Risk for fire.
- ▲ Do not perform SCR system cleaning in a flammable environment.

(1) SCR system cleaning warning lamp

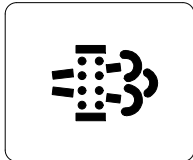


2609A3CD19

This warning lamp will light ON or blink when the SCR system cleaning is needed or activated.

- ※ Refer to page 3-10 for details.
- ※ The machine must be in a fireproof area during the entire SCR system cleaning process.

(2) SCR system cleaning inhibit warning lamp

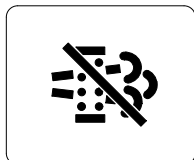


2609A3CD20

This warning lamp will light ON when the SCR system cleaning switch is pushed inhibit position.

- ※ Refer to page 3-10 for details.

(3) HEST (high exhaust system temperature) warning lamp

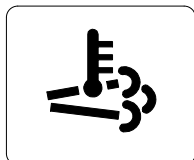


2609A3CD21

This warning lamp will light ON when the exhaust temperatures are high due to SCR system cleaning.

- ※ Refer to page 3-11 for details.

(4) SCR system cleaning switch

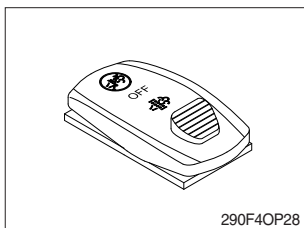

290F4OP28

This switch is used to select the SCR system cleaning.

- ※ Refer to page 3-43 for details.
- ※ Manual SCR system cleaning : refer to page 3-11 for details.


1. ROAD TRAVELING

As this machine can run at the maximum speed of 39 km/h (24.2 mph), it is not necessary to transport the machine on trailer in a short distance.

But the transportation by the trailer is convenient in a long distance.

If it is necessary to travel on a road, observe the followings.


- 1) Comply with regulations regarding this machine for the sake of safety.
- 2) Perform daily inspection before starting the machine.
- 3) Cross the bridge after checking that it will safely support the machine weight. If the bridge can not support, a detour must be prepared or the bridge must be reinforced.
- 4) When traveling for a long distance, stop every hour to allow tires and other components to cool down and check any abnormality.
- 5) Drive with the bucket empty.

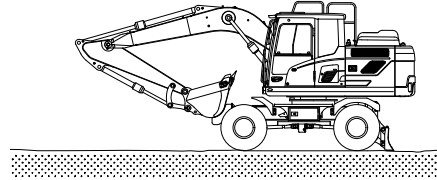

140WF5TA01


2. PREPARATION FOR TRANSPORTATION

- 1) When transporting the machine, observe the various road rules, road transportation vehicle laws and vehicle limit ordinances, etc.
- 2) Select proper trailer after confirming the weight and dimension from the chapter 2, specification.
- 3) Check the whole route such as the road width, the height of bridge and limit of weight and etc., which will be passed.
- 4) Get the permission from the related authority if necessary.
- 5) Prepare suitable capacity of trailer to support the machine.

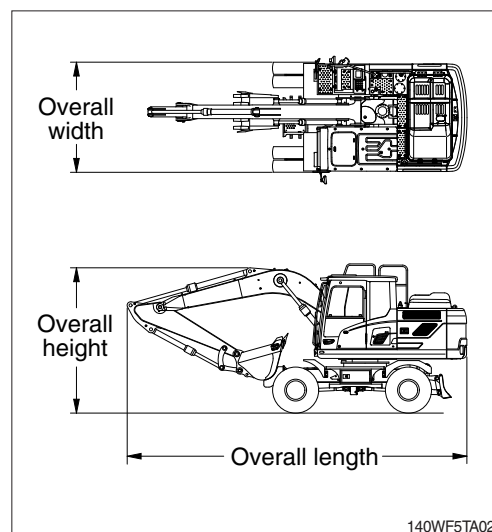

- 6) Prepare gangplank for safe loading referring to the below table and illustration.

A	B
1.0	3.65 ~ 3.85
1.1	4.00 ~ 4.25
1.2	4.35 ~ 4.60
1.3	4.75 ~ 5.00
1.4	5.10 ~ 5.40
1.5	5.50 ~ 5.75

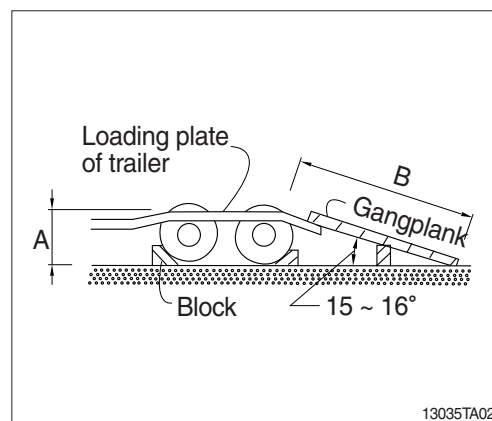


3. DIMENSION AND WEIGHT

1) HW140

(1) Base machine

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	4460 (14' 8")
H	Height	mm (ft-in)	3140 (10' 4")
W	Width	mm (ft-in)	2500 (8' 2")
Wt	Weight	kg (lb)	11150 (24580)


※ 1700 kg (3750 lb) counterweight.

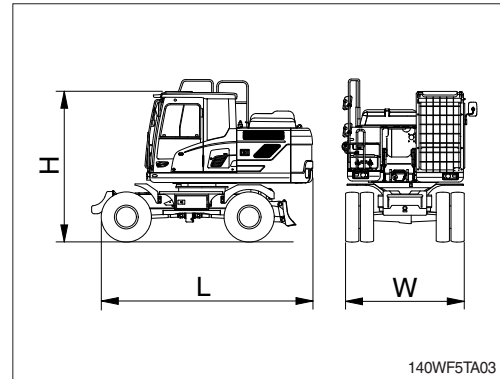

(2) Boom assembly

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	4760 (15' 7")
H	Height	mm (ft-in)	1360 (5' 6")
W	Width	mm (ft-in)	520 (1' 8")
Wt	Weight	kg (lb)	1020 (2250)


※ 4.6 m (15' 1") boom with arm cylinder (Included piping and pins).

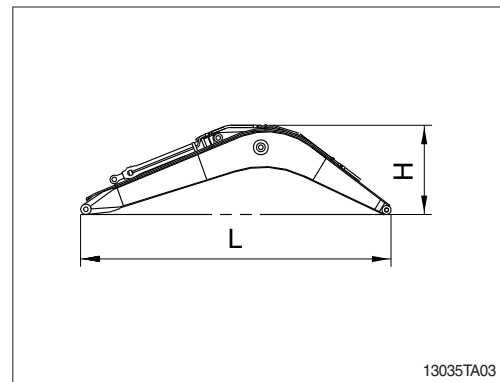

(3) Arm assembly

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	2850 (9' 4")
H	Height	mm (ft-in)	760 (3' 6")
W	Width	mm (ft-in)	380 (1' 3")
Wt	Weight	kg (lb)	570 (1260)


※ 2.10 m (6' 11") arm with bucket cylinder (Included linkage and pins).

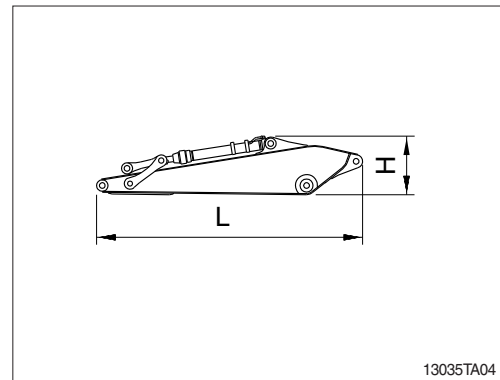

(4) Bucket assembly

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	1400 (4' 7")
H	Height	mm (ft-in)	800 (2' 7")
W	Width	mm (ft-in)	1130 (3' 8")
Wt	Weight	kg (lb)	480 (1060)


※ 0.58 m³ (0.76 yd³) SAE heaped bucket (Included tooth and side cutters).

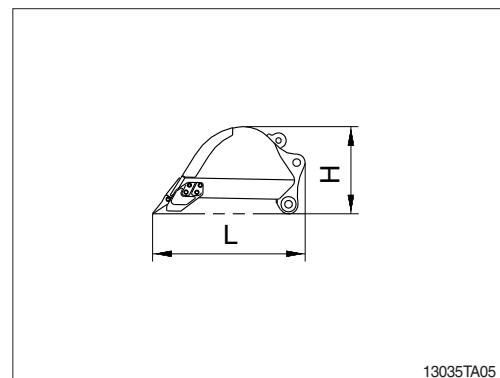

(5) Boom cylinder (2 EA)

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	1760 (5' 9")
H	Height	mm (ft-in)	210 (0' 8")
W	Width	mm (ft-in)	310 (1' 0")
Wt	Weight	kg (lb)	242 (530)


※ Included piping.

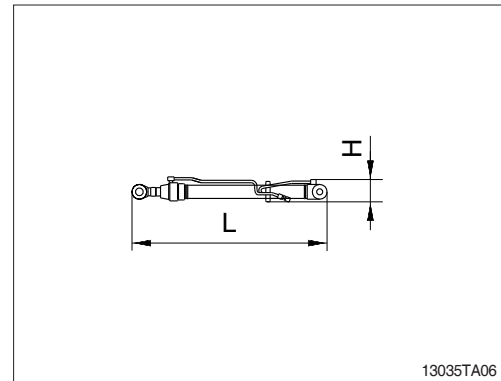

(6) Cab assembly


Mark	Description	Unit	Specification
L	Length	mm (ft-in)	1950 (6' 5") [2070 (6' 10")]
H	Height	mm (ft-in)	1780 (5' 10") [1822 (6')]
W	Width	mm (ft-in)	1104 (3' 7") [1126 (3' 8")]
Wt	Weight	kg (lb)	486.8 (1073) [641.7 (1415)]

[] : with FOG GUARD

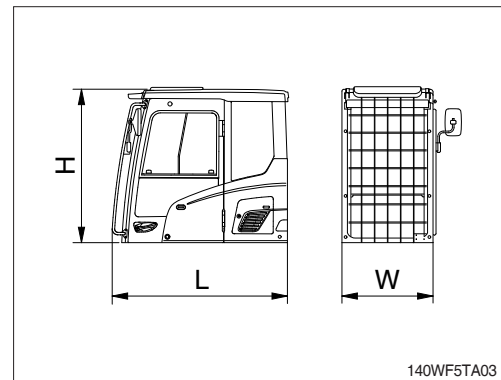


(7) Counterweight

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	2475 (8' 1")
H	Height	mm (ft-in)	1150 (3' 9")
W	Width	mm (ft-in)	460 (1' 6")
Wt	Weight	kg (lb)	1700 (3750)

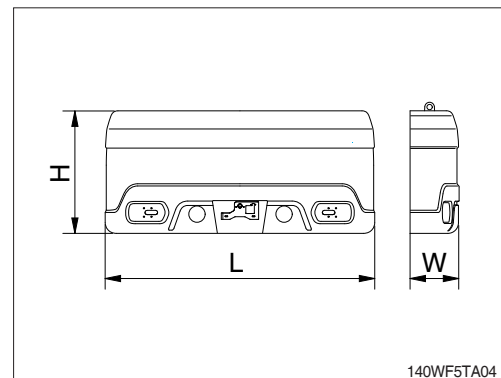


4. LOADING THE MACHINE


- 1) Load and unload the machine on a flat ground.
- 2) Use the gangplank with sufficient length, width, thickness and gradient.
- 3) Place block tires of the truck and the trailer not to move the trailer.
- 4) Place the swing lock device to the **LOCK** position before fixing the machine at the bed of trailer and confirm if the machine parallels the bed of trailer.
- 5) Drive straight and depress the acceleration pedal slowly on the gangplank with the two speed switch positioned as low speed.

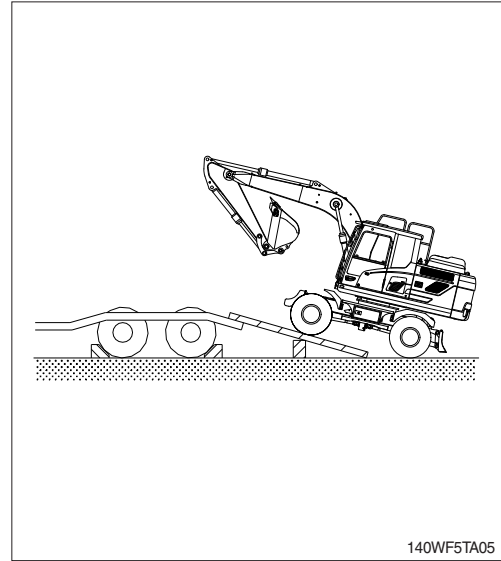

- 6) Do the following after loading the machine to the trailer.
 - (1) Stop loading when the machine is located horizontally with the rear wheel of trailer.

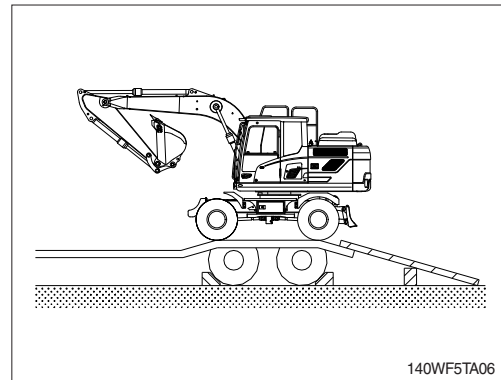

- (2) Place the swing lock device to the **LOCK** position after the swing the machine 180 degree.

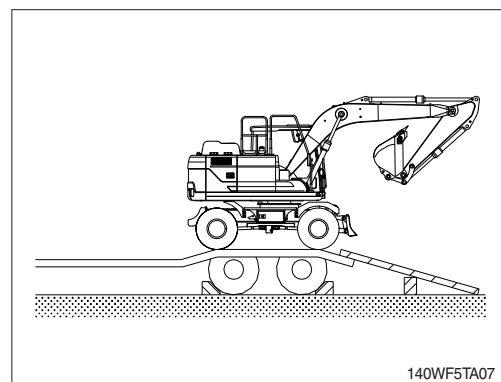

(3) Lower the working equipment gently after the location is determined.


※ **Place rectangular timber under the bucket cylinder to prevent the damage of it during transportation.**

▲ **Be sure to keep the travel speed switch on the low speed while loading and unloading the machine.**

▲ **Avoid using the working equipment for loading and unloading since it will be very dangerous.**


▲ **Do not operate any other device when loading.**

▲ **Be careful on the boundary place of loading plate or trailer as the balance of machine will abruptly be changed on the point.**

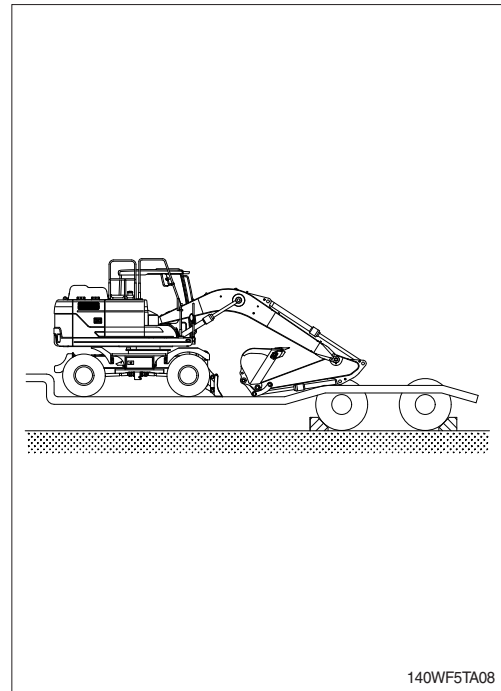


5. FIXING THE MACHINE


- 1) Place the swing lock device on the LOCK position.
- 2) Place the select switch to the parking position.
- 3) Keep the safety knob on the LOCK position.
- 4) Turn OFF all the switches and remove the key.

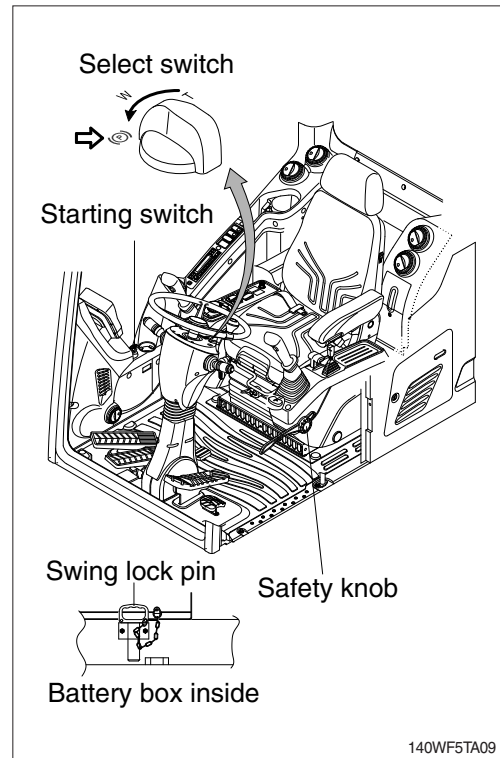

- 5) Secure all locks.

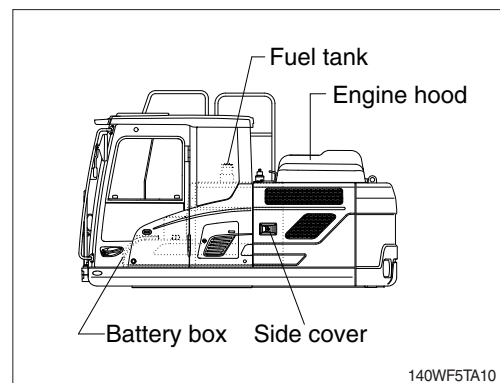


- 6) Place timber underneath of the tires and fix firmly with wire rope to prevent the machine from moving forward, backward, right or left.

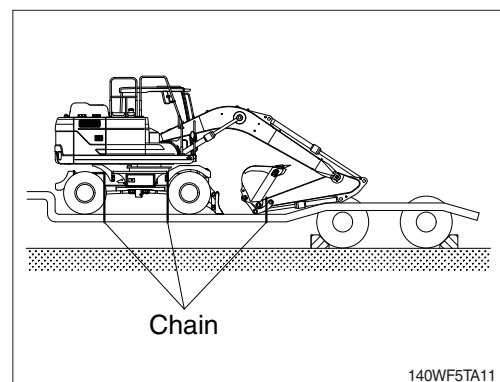

6. LOADING AND UNLOADING BY CRANE

- 1) Check the weight, length, width and height of the machine referring to the chapter 2, specification when you are going to hoist the machine.
- 2) Use long wire rope and stay to keep the distance with the machine as it should avoid touching with the machine.
- 3) Put a rubber plate where the wire rope contact with the machine's body to prevent damage.
- 4) Place crane on the proper place.
- 5) After the boom is raised to the maximum high, install the wire rope and stay like the illustration.

- ⚠ **Make sure wire rope is proper size.**
- ⚠ **Place the safety LOCK to LOCK position to prevent the machine moving when hoisting the machine.**
- ⚠ **The wrong hoisting method or installation of wire rope can cause damage to the machine.**
- ⚠ **Do not load abruptly.**
- ⚠ **Keep area clear of personnel.**
- ⚠ **Recommend to manufacture the stays separately as per lifting conditions.**

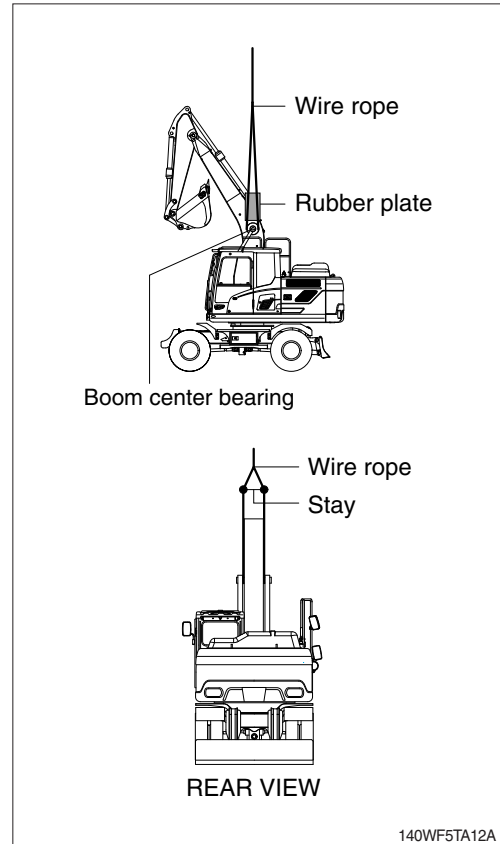


1. INSTRUCTION

1) INTERVAL OF MAINTENANCE

- (1) You may inspect and service the machine by the period as described at page 6-11 based on hour meter at control panel.
- (2) Shorten the interval of inspect and service depending on site condition. (such as dusty area, quarry, sea shore and etc.)
- (3) Practice the entire related details at the same time when the service interval is doubled.
For example, in case of 100hours, carry out all the maintenance 「Each 100hours, each 50 hours and daily service」 at the same time.

2) PRECAUTION

- (1) Start to maintenance after you have the full knowledge of machine.
- (2) The monitor installed on this machine does not entirely guarantee the condition of the machine.
Daily inspection should be performed according to clause 4, maintenance check list.
- (3) Engine and hydraulic components have been preset in the factory.
Do not allow unauthorized personnel to reset them.
- (4) Drain the used oil and coolant in a container and handle according to the method of handling for industrial waste to meet with regulations of each province or country.
- ▲ **Hot oil and hot components can cause personal injury. Do not allow hot oil or hot components to contact skin.**
- △ **Accumulated grease and oil on the machine is a fire hazard. Remove this debris with steam cleaning or high pressure water, at least every 1000 hours.**
- △ **Inspect the engine compartment for any trash build up. Remove any trash build up from the engine compartment.**
- (5) Ask to your local dealer or HD Hyundai Construction Equipment for the maintenance advice if unknown.

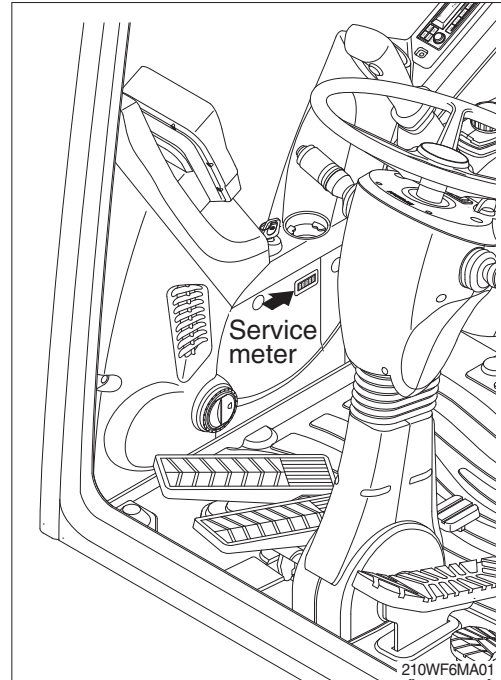

3) PROPER MAINTENANCE

(1) Replace and repair of parts

It is required to replace the wearable and consumable parts such as bucket tooth, side cutter, filter and etc., regularly.

Replace damaged or worn parts at proper time to keep the performance of machine.

(2) Use genuine parts.

(3) Use the recommended oil.

(4) Remove the dust or water around the inlet of oil tank before supplying oil.

(5) Drain oil when the temperature of oil is warm.

(6) Do not repair anything while operating the engine.

Stop the engine when you fill the oil.

(7) Relieve hydraulic system of the pressure before repairing the hydraulic system.

(8) Confirm if the cluster is in the normal condition after completion of service.

(9) For more detail information of maintenance, please contact local HD Hyundai Construction Equipment dealer.


※ **Be sure to start the maintenance after fully understand the chapter 1, safety hints.**

4) RELIEVING THE PRESSURE IN THE HYDRAULIC SYSTEM

※ Spouting of oil can cause the accident when loosening the cap or hose right after the operating of machine as the machine or oil is on the high pressure on the condition.


Be sure to relieve the pressure in the system before repairing hydraulic system.

- (1) Place machine in parking position, and stop the engine.

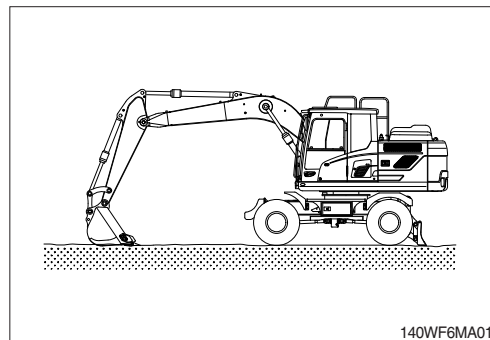


- (2) Set the safety knob completely in the UNLOCK position, operate the control levers and pedals fully to the front, rear, left and right, to release the pressure in the hydraulic circuit.

※ This does not completely release the pressure, so when serving hydraulic component, loosen the connections slowly and do not stand in the direction where the oil spurt out.

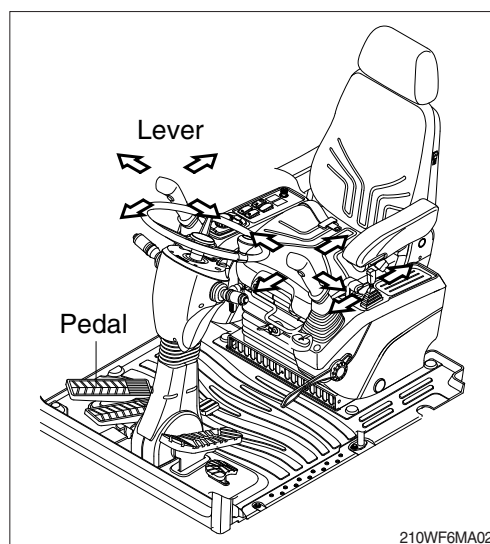

- (3) Remove the cork nut and relieve the pressure in the tank by pushing the top of the air breather.

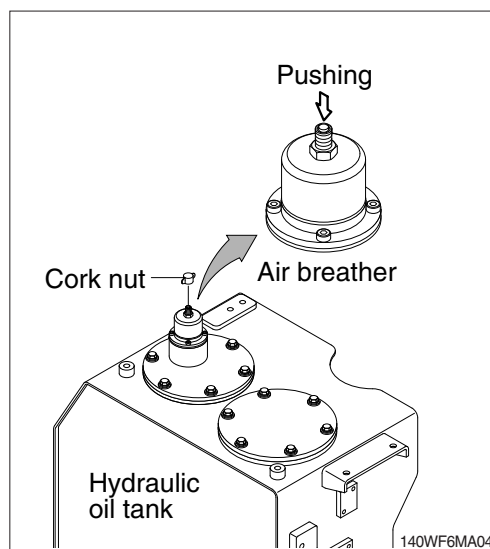

5) PRECAUTION WHEN INSTALLING HYDRAULIC HOSES OR PIPES

- (1) Be particularly careful that the joint of hose, pipe and functioning item are not damaged.
Avoid contamination.
- (2) Assemble after cleaning the hose, pipe and joint of functioning item.
- (3) Use genuine parts.
- (4) Do not assemble the hose in the condition of twisted or sharp radius.
- (5) Keep the specified tighten torque.

6) PERIODICAL REPLACEMENT OF SAFETY PARTS

- (1) It is desirable to do periodic maintenance the machine for using the machine safely for a long time.

However, recommend to replace regularly the parts related safety not only safety but maintain satisfied performance.

- (2) These parts can cause the disaster of life and material as the quality changes by passing time and it is worn, diluted, and gets fatigued by using repeatedly.

These are the parts which the operator can not judge the remained lifetime of them by visual inspection.

- (3) Repair or replace if an abnormality of these parts is found even before the recommended replacement interval.

Periodical replacement of safety parts			Interval
Engine		Fuel hose (tank-engine)	Every 2 years
		Heater hose (heater-engine)	
Hydraulic system	Main circuit	Pump suction hose	Every 2 years
		Pump delivery hose	
		Swing hose	
	Working device	Boom cylinder line hose	Every 2 years
		Arm cylinder line hose	
		Bucket cylinder line hose	
	Brake line	Service brake line hose	Every 2 years
		Parking brake line hose	
		Steering line hose	

- ※ 1. Replace O-ring and gasket at the same time when replacing the hose.

Replace clamp at the same time if the hose clamp is cracked when checking and replacing the hose.

2. TIGHTENING TORQUE

Use following table for unspecified torque.

1) BOLT AND NUT

(1) Coarse thread

Bolt size	8.8T		10.9T		12.9T	
	kgf · m	lbf · ft	kgf · m	lbf · ft	kgf · m	lbf · ft
M 6×1.0	0.8 ~ 1.2	5.8 ~ 8.6	1.2 ~ 1.8	8.7 ~ 13.0	1.5 ~ 2.1	10.9 ~ 15.1
M 8×1.25	2.0 ~ 3.0	14.5 ~ 21.6	2.8 ~ 4.2	20.3 ~ 30.4	3.4 ~ 5.0	24.6 ~ 36.1
M10×1.5	4.0 ~ 6.0	29.0 ~ 43.3	5.6 ~ 8.4	40.5 ~ 60.8	6.8 ~ 10.0	49.2 ~ 72.3
M12×1.75	6.8 ~ 10.2	50.0 ~ 73.7	9.6 ~ 14.4	69.5 ~ 104	12.3 ~ 16.5	89.0 ~ 119
M14×2.0	10.9 ~ 16.3	78.9 ~ 117	16.3 ~ 21.9	118 ~ 158	19.5 ~ 26.3	141 ~ 190
M16×2.0	17.9 ~ 24.1	130 ~ 174	25.1 ~ 33.9	182 ~ 245	30.2 ~ 40.8	141 ~ 295
M18×2.5	24.8 ~ 33.4	180 ~ 241	34.8 ~ 47.0	252 ~ 340	41.8 ~ 56.4	302 ~ 407
M20×2.5	34.9 ~ 47.1	253 ~ 340	49.1 ~ 66.3	355 ~ 479	58.9 ~ 79.5	426 ~ 575
M22×2.5	46.8 ~ 63.2	339 ~ 457	65.8 ~ 88.8	476 ~ 642	78.9 ~ 106	570 ~ 766
M24×3.0	60.2 ~ 81.4	436 ~ 588	84.6 ~ 114	612 ~ 824	102 ~ 137	738 ~ 991
M30×3.5	120 ~ 161	868 ~ 1164	168 ~ 227	1216 ~ 1641	202 ~ 272	1461 ~ 1967

(2) Fine thread

Bolt size	8.8T		10.9T		12.9T	
	kgf · m	lbf · ft	kgf · m	lbf · ft	kgf · m	lbf · ft
M 8×1.0	2.1 ~ 3.1	15.2 ~ 22.4	3.0 ~ 4.4	21.7 ~ 31.8	3.6 ~ 5.4	26.1 ~ 39.0
M10×1.25	4.2 ~ 6.2	30.4 ~ 44.9	5.9 ~ 8.7	42.7 ~ 62.9	7.0 ~ 10.4	50.1 ~ 75.2
M12×1.25	7.3 ~ 10.9	52.8 ~ 78.8	10.3 ~ 15.3	74.5 ~ 110	13.1 ~ 17.7	94.8 ~ 128
M14×1.5	12.4 ~ 16.6	89.7 ~ 120	17.4 ~ 23.4	126 ~ 169	20.8 ~ 28.0	151 ~ 202
M16×1.5	18.7 ~ 25.3	136 ~ 182	26.3 ~ 35.5	191 ~ 256	31.6 ~ 42.6	229 ~ 308
M18×1.5	27.1 ~ 36.5	196 ~ 264	38.0 ~ 51.4	275 ~ 371	45.7 ~ 61.7	331 ~ 446
M20×1.5	37.7 ~ 50.9	273 ~ 368	53.1 ~ 71.7	384 ~ 518	63.6 ~ 86.0	460 ~ 622
M22×1.5	51.2 ~ 69.2	370 ~ 500	72.0 ~ 97.2	521 ~ 703	86.4 ~ 116	625 ~ 839
M24×2.0	64.1 ~ 86.5	464 ~ 625	90.1 ~ 121	652 ~ 875	108 ~ 146	782 ~ 1056
M30×2.0	129 ~ 174	933 ~ 1258	181 ~ 245	1310 ~ 1772	217 ~ 294	1570 ~ 2126

2) PIPE AND HOSE (FLARE type)

Thread size (PF)	Width across flat (mm)	kgf · m	lbf · ft
1/4"	19	4	28.9
3/8"	22	5	36.2
1/2"	27	9.5	68.7
3/4"	36	18	130
1"	41	21	152
1-1/4"	50	35	253

3) PIPE AND HOSE (ORFS type)

Thread size (UNF)	Width across flat (mm)	kgf · m	lbf · ft
9/16-18	19	4	28.9
11/16-16	22	5	36.2
13/16-16	27	9.5	68.7
1-3/16-12	36	18	130
1-7/16-12	41	21	152
1-11/16-12	50	35	253

4) FITTING

Thread size	Width across flat (mm)	kgf · m	lbf · ft
1/4"	19	4	28.9
3/8"	22	5	36.2
1/2"	27	9.5	68.7
3/4"	36	18	130
1"	41	21	152
1-1/4"	50	35	253

4) TIGHTENING TORQUE OF MAJOR COMPONENT

No.	Descriptions		Bolt size	Torque	
				kgf · m	lbf · ft
1	Engine	Engine mounting bolt (bracket-frame, FR)	M20 × 2.5	52.1 ± 5.0	377 ± 36.2
2		Engine mounting bolt (bracket-frame, RR)	M24 × 3.0	90 ± 9.0	651 ± 65.1
3		Engine mounting bolt (engine-bracket)	M12 × 1.75	11.5 ± 1.0	83.2 ± 7.2
4		Radiator mounting bolt, nut	M16 × 2.0	29.7 ± 4.5	215 ± 32.5
5		Fuel tank mounting bolt	M20 × 2.5	57.9 ± 5.8	419 ± 42.0
6		Coupling mounting socket bolt	M18 × 2.5	32.0 ± 1.0	231 ± 7.2
7	Hydraulic system	Main pump housing mounting bolt	M10 × 1.5	4.8 ± 0.3	34.7 ± 2.2
8		Main pump mounting socket bolt	M16 × 2.0	25.0 ± 2.5	181 ± 18.1
9		Main control valve mounting bolt	M12 × 1.75	12.2 ± 1.3	88.2 ± 9.4
10		Travel motor mounting socket bolt	M16 × 2.0	35.6 ± 7.1	257 ± 51.4
11		Hydraulic oil tank mounting bolt	M20 × 2.5	57.9 ± 5.8	419 ± 42.0
12		Turning joint mounting bolt, nut	M12 × 1.75	12.8 ± 3.0	92.6 ± 21.7
13	Power train system	Swing motor mounting bolt	M16 × 2.0	29.6 ± 3.2	214 ± 23.1
14		Swing bearing upper mounting bolt	M18 × 2.5	41.3 ± 4.0	299 ± 28.9
15		Swing bearing lower mounting bolt	M16 × 1.5	29.7 ± 3.0	215 ± 21.7
16		Real axle mounting bolt, nut	M20 × 2.5	58 ± 6.3	419 ± 45.5
17		Transmission bracket mounting bolt	M20 × 2.5	58.4 ± 6.4	422 ± 46.3
18		Transmission mounting bolt	M20 × 2.5	44 ± 2.0	318 ± 14.5
19		Oscillating cylinder mounting bolt	M22 × 1.5	83.2 ± 9.2	602 ± 66.5
20		Oscillating cylinder support mounting bolt	M16 × 2.0	29.6 ± 3.2	214 ± 23.1
21		Wheel nut	M22 × 1.5	60 ⁺⁰ ₋₅	433 ⁺⁰ _{-36.2}
22		Front drive shaft mounting bolt, nut	M10 × 1.0	5.9 ± 0.6	42.7 ± 4.3
23		Rear drive shaft mounting bolt, nut	M10 × 1.0	5.9 ± 0.6	42.7 ± 4.3
24	Others	Counterweight mounting bolt	M27 × 3.0	135 ± 15	976 ± 108
25		Cab mounting bolt, nut	M12 × 1.75	12.8 ± 3.0	92.6 ± 21.7
26		Operator's seat mounting bolt	M 8 × 1.25	4.05 ± 0.8	29.3 ± 5.8

※ For tightening torque of engine and hydraulic components, see engine maintenance guide and service manual.

3. FUEL, COOLANT AND LUBRICANTS

1) NEW MACHINE

New machine used and filled with following lubricants.

Description	Specification
Engine oil (API CJ-4, ACEA-E9)	SAE 10W-30, ★SAE 5W-40
DEF/AdBlue®	ISO 22241 (32.5% high-purity urea and 67.5% deionized water)
Hydraulic oil	HD Hyundai Construction Equipment genuine long life (ISO VG 32, VG 46, VG 68) Conventional hydraulic oil (ISO VG 15★) HD Hyundai Construction Equipment Bio Hydraulic Oil (HBHO, SIO VG 46)
Swing reduction gear oil	SAE (GL-4/-GL-5)
Transmission oil	SAE 10W-30 (API CF-4)
Axle oil	SAE 85W-90 LSD-Additive(API GL-5) or UTTO
Grease	Lithium base grease NLGI No. 2
Fuel	ASTM D975-No. 2, ★ ¹ Ultra low sulfur diesel
Coolant	Mixture of 50% ethylene glycol base antifreeze and 50% water. Mixture of 60% ethylene glycol base antifreeze and 40% water.★

SAE : Society of Automotive Engineers

API : American Petroleum Institute

ISO : International Organization for Standardization

NLGI : National Lubricating Grease Institute

ASTM : American Society of Testing and Material

UTTO : Universal Tractor Transmission Oil

DEF : Diesel Exhaust Fluid

DEF compatible with AdBlue®

★¹ : Ultra low sulfur diesel

- sulfur content ≤ 15 ppm

★ : Cold region

Russia, CIS, Mongolia

2) RECOMMENDED OILS

HD Hyundai Construction Equipment genuine lubricating oils have been developed to offer the best performance and service life for your equipment. These oils have been tested according to the specifications of HD Hyundai Construction Equipment and, therefore, will meet the highest safety and quality requirements. We recommend that you use only HD Hyundai Construction Equipment genuine lubricating oils and grease officially approved by HD Hyundai Construction Equipment.

Service point	Kind of fluid	Capacity ℓ (U.S. gal)	Ambient temperature °C (°F)							
			-50 (-58)	-30 (-22)	-20 (-4)	-10 (14)	0 (32)	10 (50)	20 (68)	30 (86)
Engine oil pan	Engine oil	23.7 (6.3)	★SAE 5W-40					SAE 30		
Transmission case			SAE 10W							
		2.5 (0.7)	SAE 10W-30							
SAE 15W-40										
DEF/ AdBlue® tank	Mixture of urea and deionized water	27.0 (7.1)	ISO 22241, High-purity urea + deionized water (32.5:67.5)							
Swing drive	Gear oil		TYPE 1 : 3.5 (0.9)	★SAE 75W-90						
		TYPE 2 : 2.5 (0.7)	SAE 80W-90							
Front axle	Gear oil	Center : 9.0 (2.38) Hub : 2.4×2 (0.63×2)	SAE 85W-90 LSD or UTTO							
Rear axle		Center : 11.2 (2.96) Hub : 2.4×2 (0.63×2)								
Hydraulic tank	Hydraulic oil	Tank: 124 (32.8) System: 210 (55.5)	★ISO VG 15							
			ISO VG 32							
			ISO VG 46, HBHO★ ³							
			ISO VG 68							
Fuel tank	Diesel fuel★ ¹	270 (71.3)	★ASTM D975 NO.1							
			ASTM D975 NO.2							
Fitting (Grease nipple)	Grease	As required	★NLGI NO.1							
			NLGI NO.2							
Radiator (Reservoir tank)	Mixture of antifreeze and soft water★ ²	19.5 (5.2)	Ethylene glycol base permanent type (50 : 50)							
			★ Ethylene glycol base permanent type (60 : 40)							

SAE : Society of Automotive Engineers

API : American Petroleum Institute

ISO : International Organization for Standardization

NLGI : National Lubricating Grease Institute

ASTM : American Society of Testing and Material

UTTO : Universal Tractor Transmission Oil

DEF : Diesel Exhaust Fluid, DEF compatible with AdBlue®

★ : Cold region (Russia, CIS, Mongolia)

★¹ : Ultra low sulfur diesel
- sulfur content ≤ 15 ppm

★² : Soft water
City water or distilled water

★³ : HD Hyundai Construction Equipment
Bio Hydraulic Oil

※ Using any lubricating oils other than HD Hyundai Construction Equipment genuine products may lead to a deterioration of performance and cause damage to major components.

※ Do not mix HD Hyundai Construction Equipment genuine oil with any other lubricating oil as it may result in damage to the systems of major components.

※ Do not use any engine oil other than that specified above, as it may clog the diesel particulate filter(DPF).

※ For HD Hyundai Construction Equipment genuine lubricating oils and grease for use in regions with extremely low temperatures, please contact HD Hyundai Construction Equipment dealers.

4. MAINTENANCE CHECK LIST

1) DAILY SERVICE BEFORE STARTING

Check items	Service	Page
Visual check		
Fuel tank	Check, Refill	6-27
Hydraulic oil level	Check, Add	6-34
Engine oil level	Check, Add	6-18
Coolant level	Check, Add	6-20
Control panel & pilot lamp	Check, Clean	6-48
Prefilter (water, element)	Check, Drain, Clean	6-27
Fan belt tension & damage	Check, Adjust	6-24
DEF/AdBlue® tank	Check, Add	6-31
★ Attachment pin and bushing	Lubricate	6-47
· Boom cylinder tube end		
· Boom foot		
· Boom cylinder rod end		
· Arm cylinder tube end		
· Arm cylinder rod end		
· Boom + Arm connecting		
· Bucket cylinder tube end		

★ Lubricate every 10 hours or daily for initial 100 hours.

2) EVERY 50 HOURS SERVICE

Check items	Service	Page
Fuel tank (water, sediment)	Drain	6-27
Swing reduction gear oil	Check, Add	6-37
Drive shaft grease (flange bearing)	Check, Add	6-38
Wheel nuts	Check, Tighten	6-40
Tires (air pressure)	Check, Inflate	6-40
Front axle pivot pin bushing	Check, Lubricate	6-39
Lubricate pin and bushing	Lubricate	6-47
· Bucket cylinder rod end		
· Arm + Bucket connecting		
· Arm + Bucket control link		
· Bucket control rod		
· Bucket link connecting		
· Dozer blade cylinder (rod end, tube end)		6-39
· Dozer blade pivot pin		6-39
· Outrigger (pivot pin, cylinder pin)		6-39

3) INITIAL 50 HOURS SERVICE

Check items	Service	Page
Bolts & Nuts · Power train mounting bolts · Swing motor mounting bolts · Swing bearing mounting bolts · Engine mounting bolts · Counterweight mounting bolts · Turning joint locating bolts · Hydraulic pump mounting bolts	Check, Tight	6-8

※ Service the above items only for the new machine, and thereafter keep the normal service interval.

4) EVERY 100 HOURS SERVICE

Check items	Service	Page
Front axle steering case grease	Add, Lubricate	6-39

5) EVERY 200 HOURS SERVICE

Check items	Service	Page
★ Return filter	Replace	6-35
★ Pilot line filter	Replace	6-36
★ Drain filter cartridge	Replace	6-36

★ Replace 3 filters for continuous hydraulic breaker operation only.

6) INITIAL 250 HOURS SERVICE

Check items	Service	Page
Engine oil	Change	6-18, 19
Engine oil filter	Replace	6-18, 19
Prefilter (water, element)	Replace	6-27
Fuel filter element	Replace	6-28
Transmission case	Change	6-43
Swing reduction gear case	Change	6-37
Swing reduction gear grease	Check, Add	6-37
Pilot line filter element	Replace	6-36
Hydraulic oil return filter	Replace	6-35
Drain filter cartridge	Replace	6-36
Pressure filter element	Replace	6-35

※ Service the above items only for the new machine, and thereafter keep the normal service interval.

7) EVERY 250 HOURS SERVICE

Check items	Service	Page
Battery (voltage)	Check	6-48
Swing bearing grease	Lubricate	6-37
Aircon & heater fresh air filter	Check, Clean	6-51
Front & rear axle differential gear oil	Add, Lubricate	6-41
Axle planetary gear oil (front, rear)	Add, Lubricate	6-41
Bolts & Nuts	Check, Tight	6-8
· Power train mounting bolts		
· Swing motor mounting bolts		
· Swing bearing mounting bolts		
· Engine mounting bolts		
· Counterweight mounting bolts		
· Turning joint locating bolts		
· Hydraulic pump mounting bolts		
Attachment pin and bushing	Lubricate	6-47
· Boom cylinder tube end		
· Boom foot		
· Boom cylinder rod end		
· Arm cylinder tube end		
· Arm cylinder rod end		
· Boom + Arm connecting		
· Bucket cylinder tube end		

8) INITIAL 500 HOURS SERVICE

Check items	Service	Page
Front & rear axle differential gear oil	Change	6-42
Axle planetary gear oil (front, rear)	Change	6-42
Aircon & heater filter (inner)	Replace	6-51

※ Service the above items only for the new machine, and thereafter keep the normal service interval.

9) EVERY 500 HOURS SERVICE

Check items	Service	Page
★ Engine oil	Change	6-18, 19
★ Engine oil filter	Replace	6-18, 19
Prefilter	Change	6-27
Aircon & heater filter (outer, inner)	Change	6-51
Air cleaner element (primary)	Check, Clean	6-26
Radiator, oil cooler and charge air cooler	Check, Clean	6-23
Fuel filter element	Replace	6-28

★ Use ultra low sulfur fuel only. Ultra low sulfur fuel : Sulfur content ≤ 15 ppm.

10) EVERY 1000 HOURS SERVICE

Check items	Service	Page
Air breather element	Replace	6-36
Swing reduction gear oil	Change	6-37
Grease in swing gear and pinion	Change	6-38
Transmission oil	Change	6-43
Hydraulic oil return filter	Replace	6-35
Pilot line filter	Replace	6-36
Drain filter cartridge	Replace	6-36
Air cleaner element (primary)* ¹	Check, Clean	6-26
Pressure filter element	Replace	6-35

*¹ When working in dusty environments, more frequent cleaning is highly recommended.

11) EVERY 1500 HOURS SERVICE

Check items	Service	Page
Front & rear axle differential gear oil	Change	6-42
Axle planetary gear oil (front, rear)	Change	6-42

12) EVERY 2000 HOURS SERVICE

Check items	Service	Page
Coolant* ²	Change	6-20, 21, 22, 23
Hydraulic oil* ²	Change	6-34-1
HBHO* ³	Change	6-34-1
Hydraulic tank suction strainer	Check, Clean	6-35
Air cleaner element (primary, safety)* ⁴	Replace	6-26
Crankcase breather filter	Replace	6-29
RCV lever	Check, Lubricate	6-38
Hoses, fittings, clamps (fuel, coolant, hydraulic)	Check, Retighten, Replace	-

*² Conventional

*³ If do not want to change HBHO (HD Hyundai Construction Equipment Bio Hydraulic Oil, ISO VG 46) every 2000 hours, contact HD Hyundai Construction Equipment dealer and ask about SAMPLING.

*⁴ When working in dusty environments, more frequent replacing is highly recommended.

※ **Change hydraulic oil every 600 hours of continuous hydraulic breaker operation.**

13) EVERY 4000 HOURS SERVICE

Check items	Service	Page
DEF/AdBlue® tank filter	Replace	6-31-1

14) EVERY 4500 HOURS SERVICE

Check items	Service	Page
DEF/AdBlue® supply module filter	Replace	6-32

15) EVERY 5000 HOURS SERVICE

Check items	Service	Page
Hydraulic oil ^{*4}	Change	6-34-1

^{*4} HD Hyundai Construction Equipment genuine long life

※ **Change hydraulic oil every 1000 hours of continuous hydraulic breaker operation.**

16) EVERY 6000 HOURS SERVICE

Check items	Service	Page
Coolant ^{*4}	Change	6-20, 21, 22, 23


^{*4} HD Hyundai Construction Equipment genuine long life

17) WHEN REQUIRED

Whenever you have trouble in the machine, you must perform the service of related items, system by system.

Check items	Service	Page
Fuel system		
· Fuel tank	Drain or Clean	6-27
· Prefilter	Clean or Replace	6-27
· Fuel filter element	Replace	6-28
Engine exhaust system		
· DEF/AdBlue® supply module filter	Replace	6-32
· DEF/AdBlue® tank	Clean	6-31
Engine lubrication system		
· Engine oil	Change	6-18, 19
· Engine oil filter	Replace	6-18, 19
Engine cooling system		
· Coolant	Add or Change	6-20, 21, 22, 23
· Radiator	Clean or Flush	6-20, 21, 22, 23
· Charge air cooler	Check	6-23
Engine air system		
· Air cleaner element (primary)	Clean, Replace	6-26
· Air cleaner element (safety)	Replace	6-26
Hydraulic system		
· Hydraulic oil	Add or Change	6-34, 34-1
· Return filter	Replace	6-35
· Drain filter cartridge	Replace	6-36
· Pilot line filter	Replace	6-36
· Air breather element	Replace	6-36
· Suction strainer	Clean	6-35
Tire pressure	Check, Inflate	6-40
Bucket		
· Bucket assy	Replace	6-44
· Tooth	Replace	6-45
· Side cutter	Replace	6-45
· Linkage	Adjust	6-46
Air conditioner and heater		
· Fresh filter	Clean, Replace	6-51
· Recirculation filter	Clean, Replace	6-51, 52

5. MAINTENANCE CHART

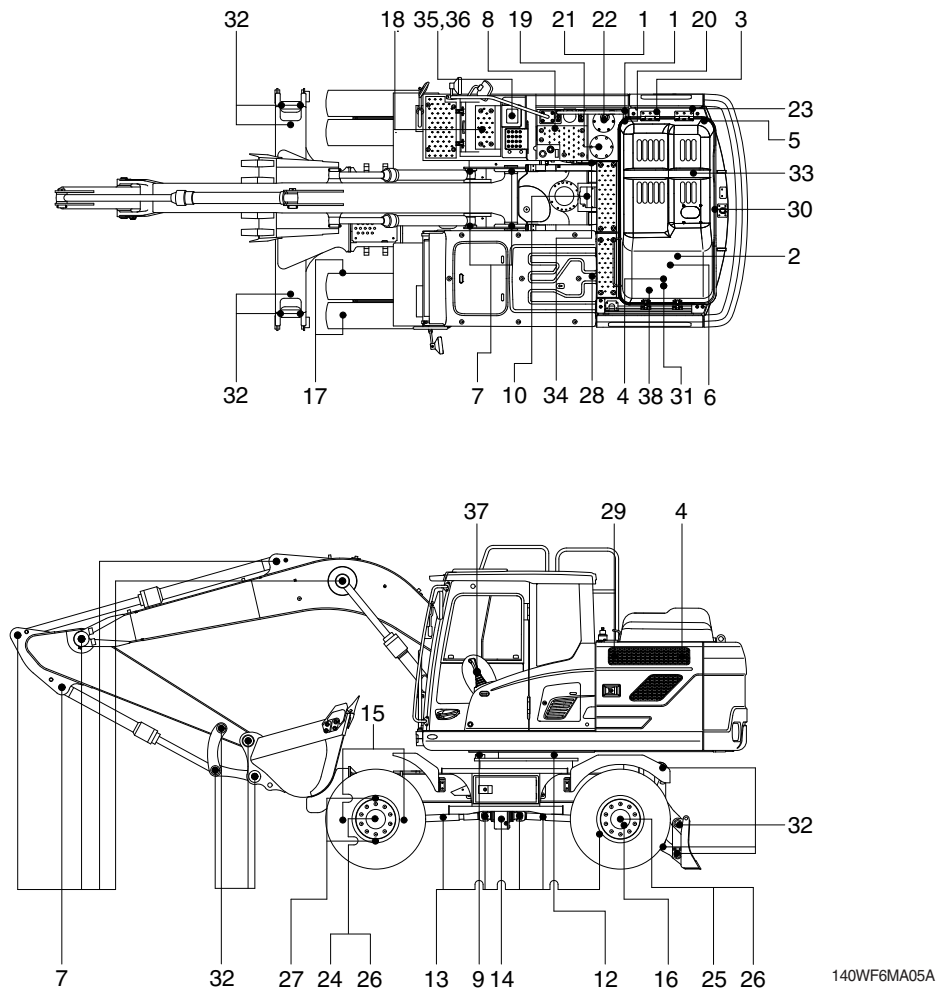

Caution

1. Service intervals are based on the hour meter reading.
2. The number of each item shows the lubrication point on the machine.
3. Stop engine while filling oil, and use no open flames.
4. For other details, refer to the service manual.

Service interval	No.	Description	Service action	Oil symbol	Capacity ℓ (U.S.gal)	Service points No.
10 Hours or daily	1	Hydraulic oil level	Check, Add	HO	124 (32.8)	1
	2	Engine oil level	Check, Add	EO	23.7 (6.3)	1
	4	Radiator coolant level	Check, Add	C	19.5 (5.2)	1
	5	Prefilter (water, element)	Check, Clean	-	-	1
	6	Fan belt tension & damage	Check, Clean	-	-	1
	8	Fuel tank	Check, Refill	DF	270 (71.3)	1
	35	DEF/AdBlue® tank	Check, Add	DEF	27.0 (7.1)	1
50 Hours or weekly	8	Fuel tank (water, sediment)	Check, Drain, Clean	DF	-	1
	10	Swing reduction gear case	Check, Add	GO	2.5 (0.7)	1
	13	Drive shaft grease (flange bearing)	Check, Add	PGL	-	6
	15	Front axle pivot pin bushing	Check, Add	PGL	-	2
	16	Wheel nuts	Check, Tighten	-	-	40
	17	Tire (air pressure)	Check, Add	-	-	8
100 Hours	32	Bucket linkage & blade pins	Check, Add	PGL	-	12
	27	Front axle steering case	Add, Lubricate	PGL	-	4

Service interval	No.	Description	Service action	Oil symbol	Capacity ℓ (U.S.gal)	Service points No.
250 Hours	7	Attachment pins	Check, Add	PGL	-	11
	9	Swing bearing grease	Check, Add	PGL	-	3
	18	Battery (voltage)	Check	-	-	1
	24	Front axle differential gear case	Add, Lubricate	GO	9.0 (2.38)	1
	25	Rear axle differential gear case	Add, Lubricate	GO	11.2 (2.96)	1
	26	Axle planetary gear case (front, rear)	Add, Lubricate	GO	2.4 (0.63)	4
Initial 250 Hours	2	Engine oil	Change	EO	23.7 (6.3)	1
	3	Engine oil filter	Replace	-	-	1
	5	Prefilter (water, element)	Replace	-	-	1
	10	Swing reduction gear case	Change	GO	2.5 (0.7)	1
	14	Transmission case	Change	EO	2.5 (0.7)	1
	19	Hydraulic oil return filter	Replace	-	-	1
	20	Drain filter cartridge	Replace	-	-	1
	23	Pilot line filter element	Replace	-	-	1
500 Hours	30	Fuel filter element	Replace	-	-	1
	38	Pressure filter element	Replace	-	-	1
	2	Engine oil	Change	EO	23.7 (6.3)	1
	3	Engine oil filter	Replace	-	-	1
	5	Prefilter (water, element)	Replace	-	-	1
	28	Aircon & heater filter (outer, inner)	Replace	-	-	1
	29	Air cleaner element (primary)	Check, Clean	-	-	1
Initial 500 Hours	30	Fuel filter element	Replace	-	-	1
	31	Radiator, oil cooler, charge air cooler	Check, Clean	-	-	3
	24	Front axle differential gear case	Change	GO	9.0 (2.38)	1
	25	Rear axle differential gear case	Change	GO	11.2 (2.96)	1
	26	Axle planetary gear case (front, rear)	Change	GO	2.4 (0.63)	4
	28	Aircon & heater recirculation filter	Replace	-	-	1
	6	Fan belt tensioner	Check, Replace	-	-	1
1000 Hours	10	Swing reduction gear case	Change	GO	2.5 (0.7)	1
	12	Swing gear and pinion grease	Change	PGL	5.9 kg (13.1 lb)	1
	14	Transmission case	Change	EO	2.5 (0.7)	1
	19	Hydraulic oil return filter	Replace	-	-	1
	20	Drain filter cartridge	Replace	-	-	1
	21	Air breather element	Replace	-	-	1
	23	Pilot line filter element	Replace	-	-	1
	38	Pressure filter element	Replace	-	-	1
1500 Hours	24	Front axle differential gear case	Change	GO	9.0 (2.38)	1
	25	Rear axle differential gear case	Change	GO	11.2 (2.96)	1
	26	Axle planetary gear case (front, rear)	Change	GO	2.4 (0.63)	4
2000 Hours	1	Hydraulic oil* ¹	Change	HO	124 (32.8)	1
	1	Hydraulic oil (HBHO* ²)	Change	-	124 (32.8)	1
	4	Radiator coolant* ¹	Change	C	19.5 (5.2)	1
	22	Hydraulic oil suction strainer	Check, Clean	-	-	1
	29	Air cleaner element (primary, safety)	Replace	-	-	1
	33	Crankcase breather filter	Replace	-	-	1
	37	RCV lever	Check, Lubricate	PGL	-	2
	-	Hoses, fittings, clamps (fuel, coolant, hydraulic)	Check, Retighten, Replace	-	-	-
4000 Hours	36	DEF/AdBlue® tank filter	Replace	-	-	1
4500 Hours	34	DEF/AdBlue® supply module filter	Replace	-	-	1
5000 Hours	1	Hydraulic oil* ³	Change	HO	120 (31.7)	1
6000 Hours	4	Radiator coolant* ³	Change	C	19.5 (5.2)	1
As required	28	Aircon & heater fresh filter	Replace	-	-	1
	28	Aircon & heater recirculation filter	Clean, Replace	-	-	1
	29	Air cleaner element (safety)	Replace	-	-	1
	29	Air cleaner element (primary)	Clean, Replace	-	-	1

*¹ Conventional *² HD Hyundai Construction Equipment Bio Hydraulic Oil

*³ HD Hyundai Construction Equipment genuine long life

※ Oil symbol

Please refer to the recommended lubricants for specification.

DF : Diesel fuel

GO : Gear oil

HO : Hydraulic oil

DEF : Diesel exhaust fluid

C : Coolant

PGL : Grease


EO : Engine oil

6. SERVICE INSTRUCTION

1) CHECK ENGINE OIL LEVEL


Check the oil level with the machine on a flat ground before starting engine.

- (1) Pull out the dipstick and wipe with a clean cloth.
 - (2) Check the oil level by inserting the dipstick completely into the hole and pulling out again.
 - (3) If oil level is LOW, add oil and then check again.
- ※ If the oil is contaminated or diluted, change the oil regardless of the regular change interval.
 - ※ Check oil level after engine has been stopped for 15 minutes.
 - ▲ Do not operate unless the oil level is in the normal range.

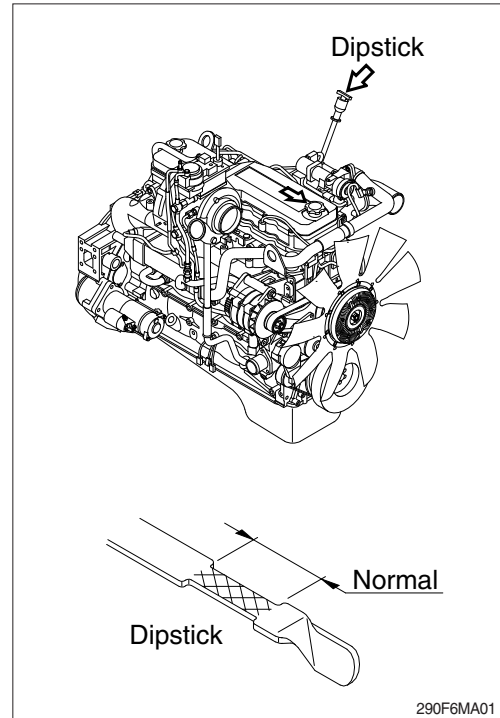


2) REPLACEMENT OF ENGINE OIL AND OIL FILTER

- (1) Operate the engine until the coolant temperature reaches 60°C (140°F). Shut off the engine.
 - (2) Remove the oil drain plug. Drain the oil immediately to be sure all the oil and suspended contaminants are removed from the engine.
- ※ A drain pan with a capacity of 30 liters (7.9 U.S. gallons) will be adequate.

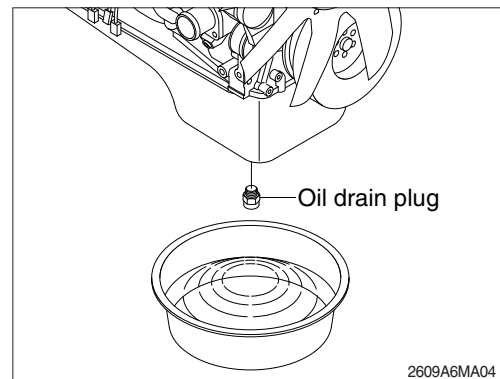


- (3) Clean the area around the lubricating oil filter head.
 - (4) Use oil filter wrench to remove the oil filter.
 - (5) Clean the gasket surface of oil filter head.
- ※ The O-ring can stick on the filter head. Be sure it is removed before installing the new filter.

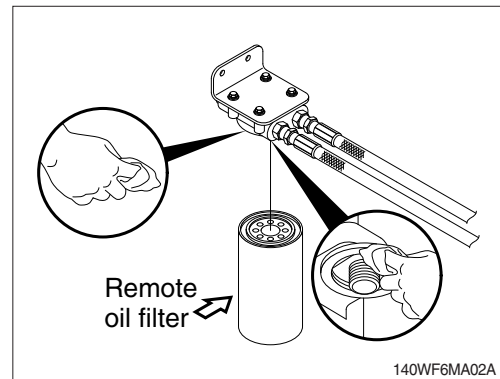

- (6) Apply a light film of lubricating oil to the gasket sealing surface before installing the filters.

※ **Fill the filters with clean lubricating oil.**

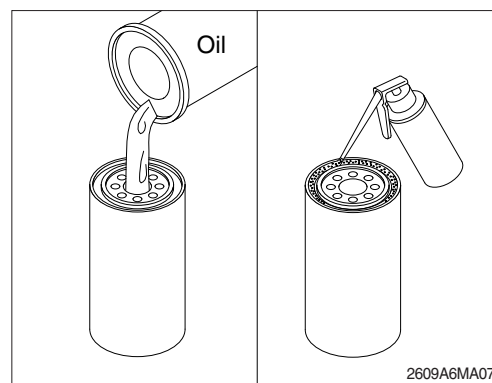


- (7) Install the filter to the filter head.

Tighten the filter until the gasket contacts the filter head surface.

Tighten 3/4 to 1 turn after the gasket makes contact with the filter head.

※ **Mechanical over-tightening may distort the threads or damage the filter element seal.**

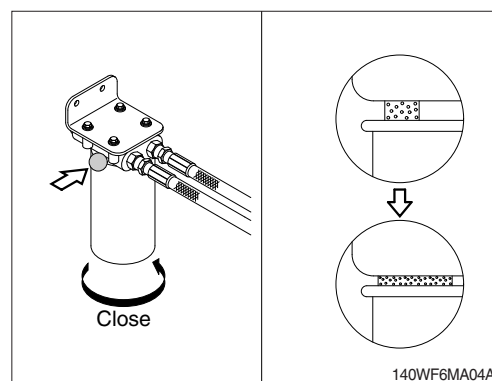


- (8) Clean and check the lubricating oil drain plug threads and sealing surface.

Install the lubricating oil pan drain plug.


- (9) Fill the engine with clean oil to the proper level.

• Quantity : 23.7 l (6.3 U.S.gallons)

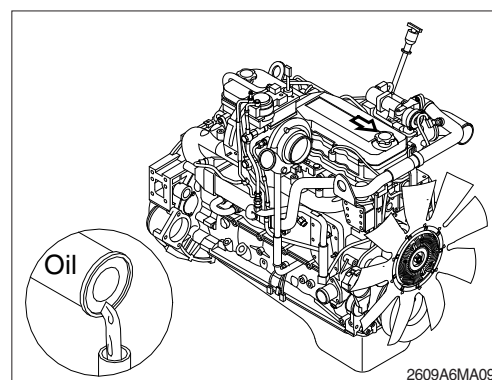



- (10) Operate the engine at low idle and inspect for leaks at the filters and the drain plug.

Shut the engine off and check the oil level with the dipstick. Allow 15 minutes for oil to drain down before checking.

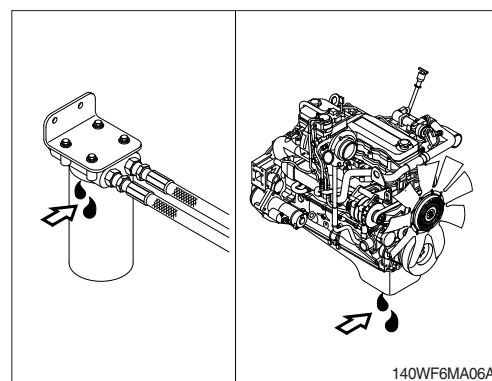


3) CHECK COOLANT

- (1) Check the coolant level at sight gauge.
The sight gauge should indicate the middle position.
 - (2) Add the mixture of antifreeze and water after removing the cap of the surge tank if coolant is not sufficient.
 - (3) Replace gasket of radiator cap when it is damaged.
- ▲ Hot coolant can spray out if surge tank cap is removed while engine is hot. Remove the cap after the engine has cooled down.
- ※ Do not add cold coolant to a hot engine ; engine castings can be damaged. Allow the engine to cool to below 50°C (120°F) before adding coolant.

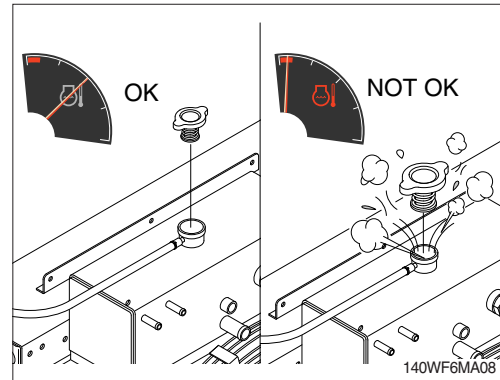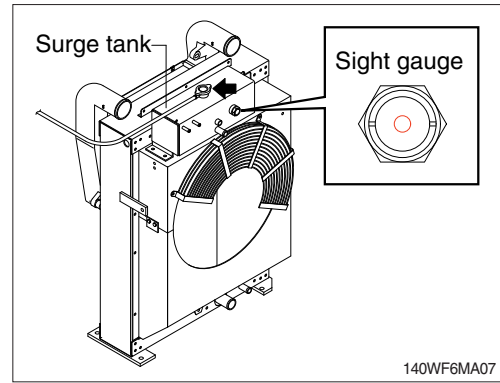

4) FLUSHING AND REFILLING OF RADIATOR

- (1) Change coolant
- ▲ Avoid prolonged and repeated skin contact with used antifreeze. Such prolonged repeated contact can cause skin disorders or other bodily injury.
Avoid excessive contact-wash thoroughly after contact.
Keep out of reach of children.
- ※ Protect the environment : Handling and disposal of used antifreeze can be subject to federal, state, and local law regulation.
Use authorized waste disposal facilities, including civic amenity sites and garages providing authorized facilities for the receipt of used antifreeze.
If in doubt, contact your local authorities for guidance as to proper handling of used antifreeze.

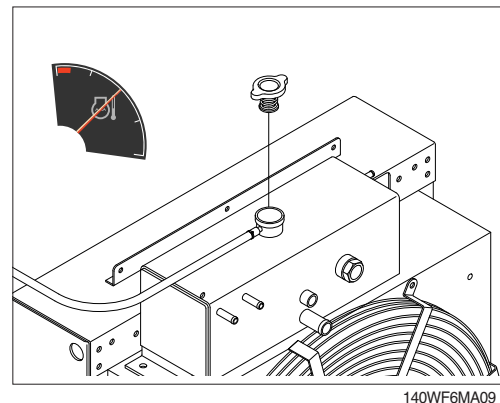

- ▲ Wait until the temperature is below 50 ° C (122 ° F) before removing the coolant system pressure cap.


Failure to do so can cause personal injury from heated coolant spray.

Drain the cooling system by opening the drain cock on the radiator, remove the hose of the oil cooler and opening the drain valve on the bottom of the engine oil cooler housing.

A drain pan with a capacity of 40 liters (10.6 U.S. gallons) will be adequate.


- Drain cock tightening torque :

$$4.2 \pm 0.4 \text{ kg} \cdot \text{m} \text{ (30.4} \pm 2.9 \text{ lbf} \cdot \text{ft)}$$

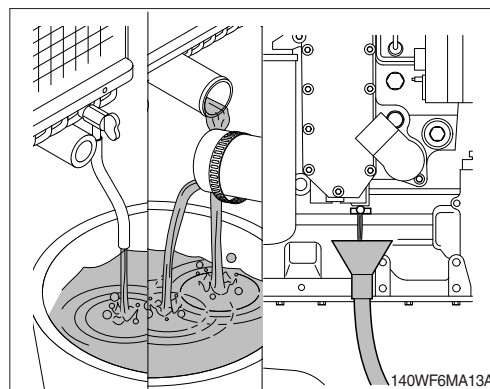


(2) Flushing of cooling system

- ① Fill the system with a mixture of sodium carbonate and water (or a commercially available equivalent).
 - ※ Use 0.5kg (1.0 pound) of sodium carbonate for every 23 liters (6.0 U.S. gallons) of water.
 - ※ Do not install the surge tank cap. The engine is to be operated without the cap for this process.

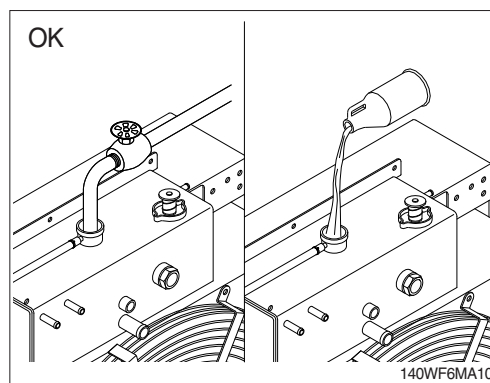


- ※ During filling, air must be vented from the engine coolant passages.


The system must be filled slowly to prevent air locks or serious engine damage can result. Wait 2 to 3 minutes to allow air to be vented, then add mixture to bring the level to the top.

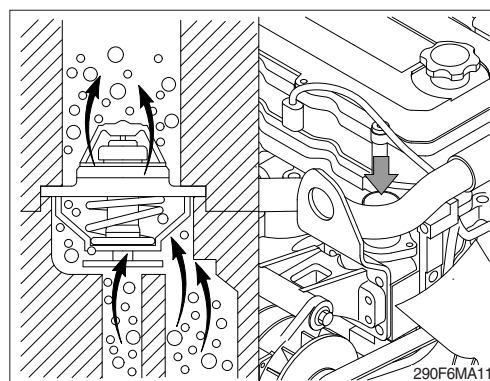


- ② Operate the engine for 5 minutes with the coolant temperature above 80°C (176°F). Shut the engine off, and drain the cooling system.

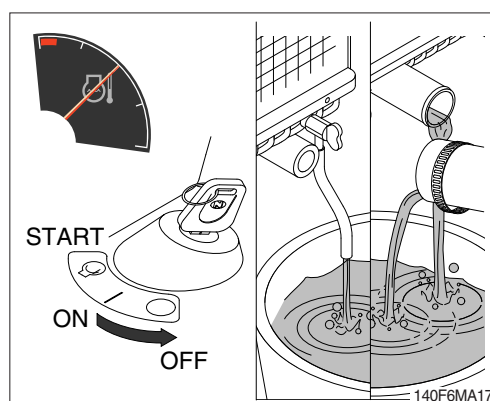

- ③ Fill the cooling system with clean water.
- ※ **Be sure to vent the engine and aftercooler for complete filling.**
- ※ **Do not install the surge tank cap or the new coolant filter.**

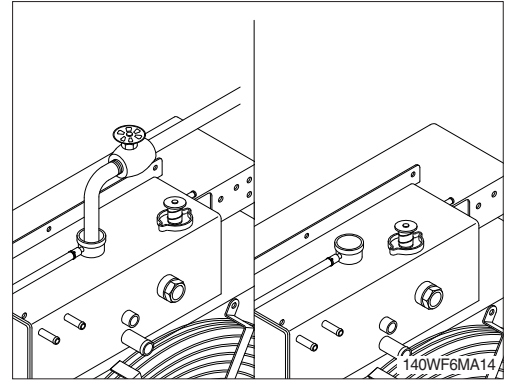


- ④ Operate the engine for 5 minutes with the coolant temperature above 80°C (176°F). Shut the engine off, and drain the cooling system.
- ※ **If the water being drained is still dirty, the system must be flushed again until the water is clean.**

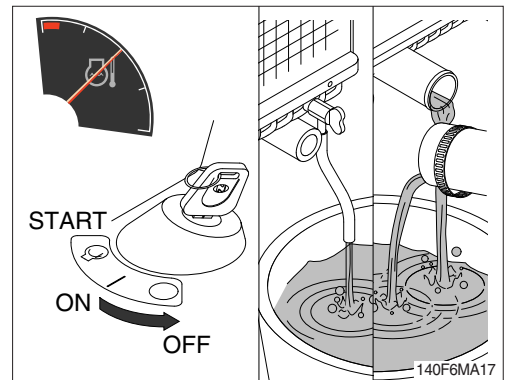


(3) Cooling system filling


- ① Use a mixture of 50 percent soft water and 50 percent ethylene glycol antifreeze to fill the cooling system. Refer to the page 6-10. Coolant capacity (engine only) : 10 l (2.6 U.S. gallons)
- ※ **Do not use hard water such as river water or well water.**

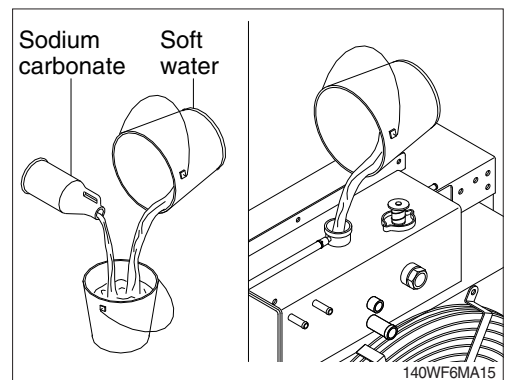

- ② The system has a maximum fill rate of 19 liters (5.0 U.S. gallons) per minute. Do not exceed this fill rate.
- ※ **The system must be filled slowly to prevent air locks.** During filling, air must be vented from the engine coolant passage.

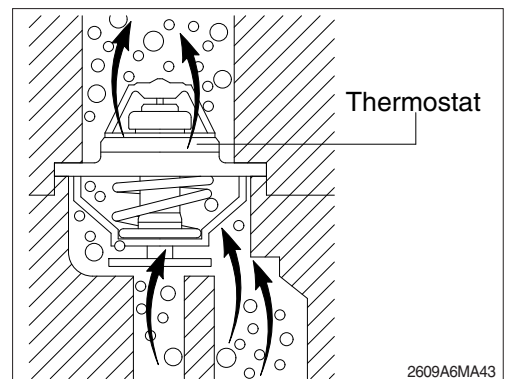



- ③ Install the pressure cap. Operate the engine until it reaches a temperature 80°C (176°F), and check for coolant leaks. Check the coolant level again to make sure the system is full of coolant.

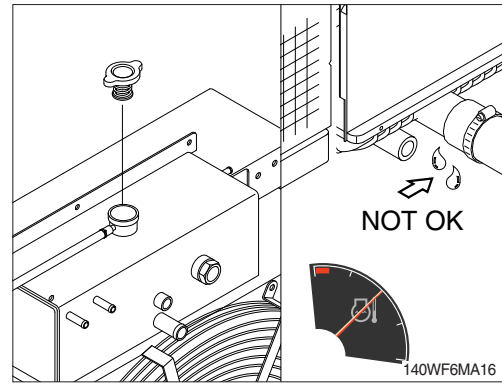

5) CLEAN RADIATOR AND OIL COOLER


Check, and if necessary, clean and dry outside of radiator and oil cooler. After working in a dusty place, clean radiator more frequently.

- (1) Visually inspect the radiator for clogged radiator fins.
- (2) Use 550 kPa (80 psi) air pressure to blow the dirt and debris from the fins.
- (3) Visually inspect the radiator for bent or broken fins.
- ※ **If the radiator must be replaced due to bent or broken fins which can cause the engine to overheat, refer to the manufacturer's replacement procedures.**
- (4) Visually inspect the radiator for core leaks.

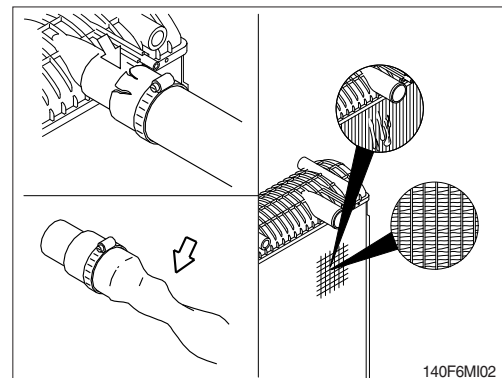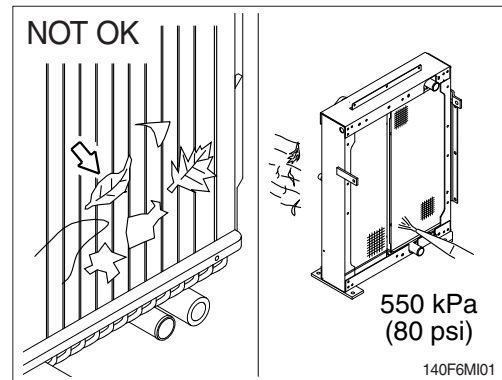


6) CHECK CHARGE AIR COOLER

Inspect the charge air cooler for dirt and debris blocking the fins. Check for cracks, holes, or other damage. If damage is found, please contact HD Hyundai Construction Equipment distributor.

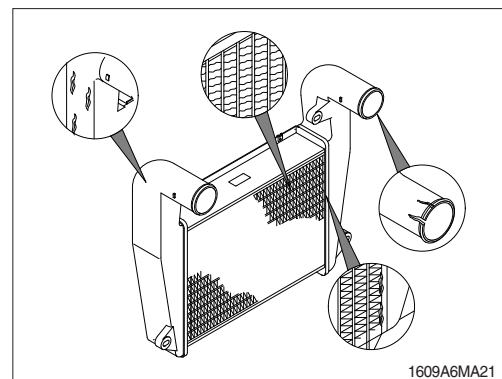


7) FAN BELT

- (1) A deflection method can be used to check belt tension by applying 11.3 kgf (25 lbf) force between the pulleys on V-belts. If the deflection is more than one belt thickness per foot of pulley center distance, the belt tension must be adjusted.

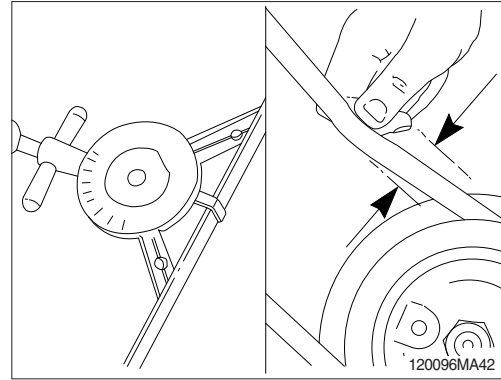

- (2) Inspect the fan belt for damage.


- ① Transverse (across the belt) cracks are acceptable.
- ② Longitudinal (direction of belt ribs) cracks that intersect with transverse cracks are not acceptable.

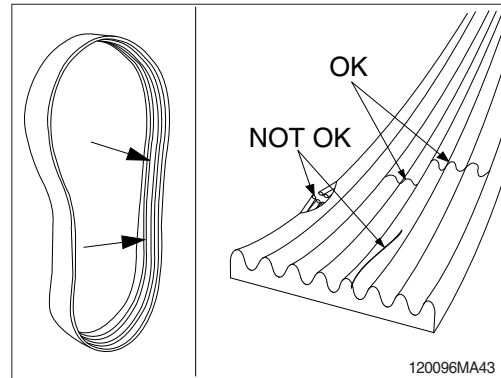

- ③ Inspect the belt

- Embedded debris
- Uneven/excessive rib wear
- Exposed belt cords
- Glazing (high heat)

- ※ If any of the above conditions are present, the belt is unacceptable for reuse and must be replaced.

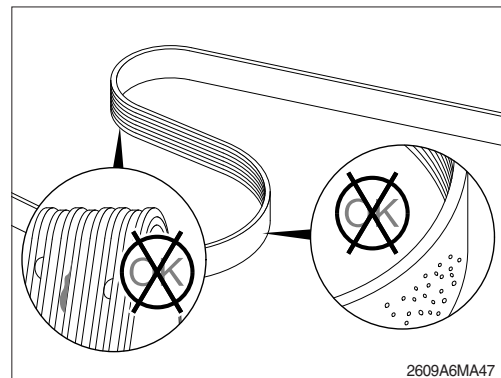

8) INSPECTION OF COOLING FAN


- ▲ Personal injury can result from a fan blade failure. Never pull or pry on the fan. This can damage the fan blade and cause fan failure.

- ※ Rotate the crankshaft by using the engine bearing gear.

- ※ A visual inspection of the cooling fan is required daily.


Check for cracks, loose rivets, and bent or loose blades.

Check the fan to make sure it is securely mounted. Tighten the capscrews if necessary. Replace any fan that is damaged.

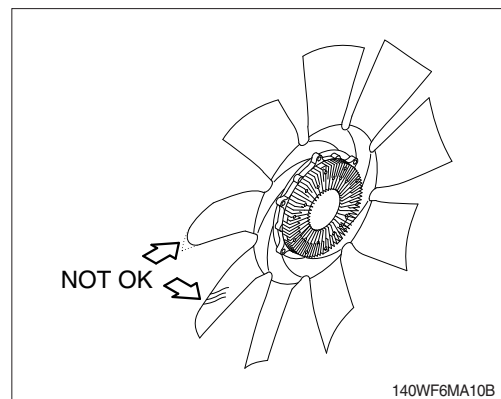


9) FAN BELT TENSIONER

- (1) With the engine stopped, check the tensioner arm, pulley, and stops for cracks. If any cracks are found, the tensioner must be replaced.

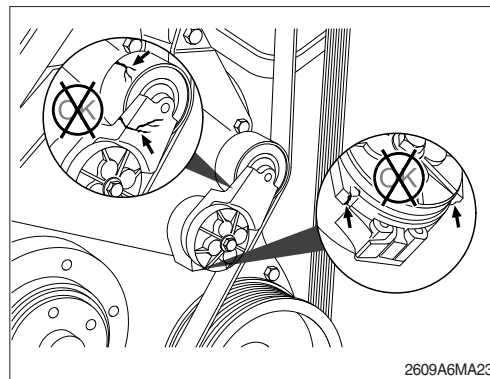


- (2) With the belt installed, verify that neither tensioner arm stop is in contact with the spring case stop.

After replacing the belt, if the tensioner arm stops are still in contact with the spring case stop, replace the tensioner.

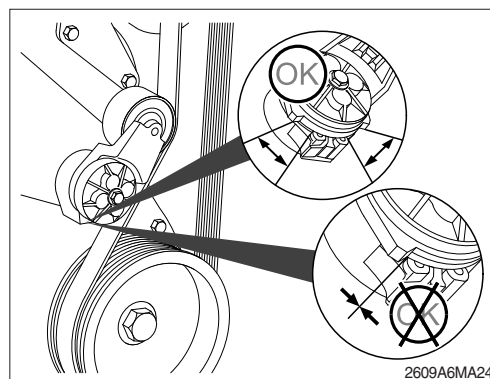


- (3) With the belt removed, verify that the tensioner arm stop is in contact with the spring case stop. If these two are not touching, the tensioner must be replaced.

※ **After replacing the belt, if the tensioner arm stop is still in contact with the spring case stop, the tensioner must be replaced.**

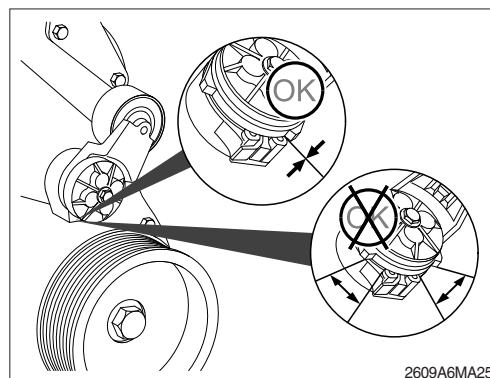

- (4) Check the location of the drive belt on the belt tensioner pulley. The belt should be centered on, or close to the middle of, the pulley. Misaligned belts, either too far forward or backward, can cause belt wear, belt roll-offs, or increase uneven tensioner bushing wear.

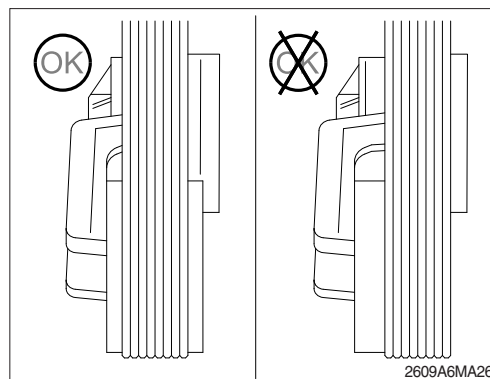

10) CLEANING OF AIR CLEANER

 


(1) Primary element

- ① Open the cover and remove the element.
- ② Wipe all contaminant and debris from inside the housing body.
- ③ Do not clean the filter element by striking or hitting the filter against any object to shake the debris from the filter element.
- ④ Clean the filter element with compressed air.
 - a. Remove dust from filter element by directing the compressed air into the opening of the air filter element.
 - b. Use 3 kg/cm^2 (40 psi) maximum air pressure and hold the compressed air nozzle at least 2.5 cm (1") away from the pleats while cleaning. Make sure to keep the clean side of air filter free of debris.
- ⑤ Visually inspect for damage to the filter elements and components. Use a light source to help identify any defects in the media. If any defects are observed discard the filter element and replace with a new primary filter element.
 - a. Before any type of cleaning, a visual inspection of the filter is needed. If there is any damage to the filter body, gaskets or endplates, do not clean or reuse; the filter should be discarded. Always clean filters in a clean environment, observe strict inspection procedures and repackage filters immediately after the cleaning process with appropriate materials.
 - b. Use observe proper safety precautions and dispose of waste materials in an environmentally compliant manner.
- ⑥ Re-install filter element into the air housing.
- ⑦ Replace the primary element at the fourth cleaning.

(2) Safety element

The safety filter element should never be cleaned since the safety filter is the last barrier to contaminant before it reaches engine.


The useful life of the safety filter is equivalent to that of the primary air filter only if the primary filter element is being regularly cleaned. If the primary filter element is not cleaned, the safety filter should be changed at every third primary air filter change or after one year of continuous service, whichever occurs first.

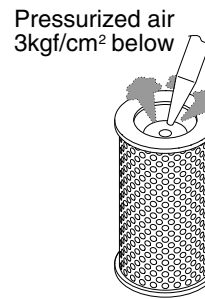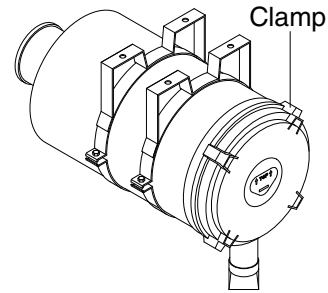

140WF6MA47

11) FUEL TANK

- (1) Fill fuel fully when system the operation to minimize water condensation, and check it with level gauge before starting the machine.
 - (2) Drain the water and sediment in the fuel tank by opening the drain cock.
 - ※ Be sure to LOCK the cap of fuel tank.
 - ※ Remove the strainer of the fuel tank and clean it if contaminated.
- ▲ **Stop the engine when refueling.**
All lights and flames shall be kept at a safe distance while refueling.

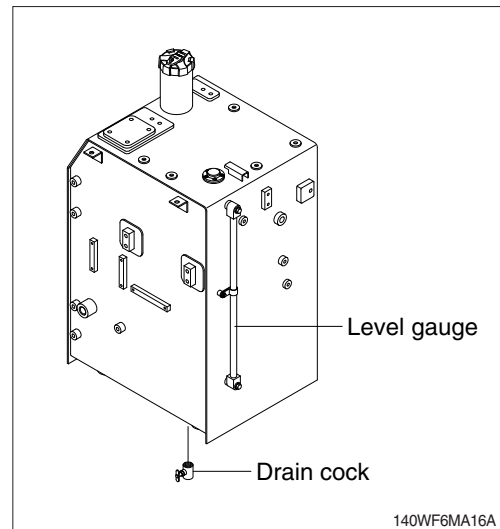


12) PREFILTER

- ※ **Inspect or drain the collection bowl of water daily and replace the element every 500hours.**


(1) Drain water

- ① Open bowl drain valve to evacuate water.
 - ② Close drain valve.
- ※ **Don't tighten up a drain valve so strong.**
 - ※ **Please inspect and drain water frequently for remain water volume to be less than 1/3 volume of a collection bowl.**

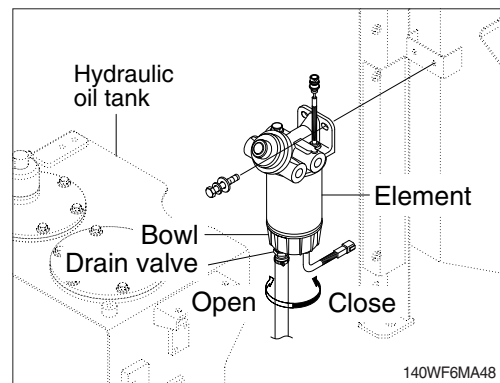


(2) Replace element

- ① Loosen the air vent plug and drain the unit of fuel. Follow "Drain water" instructions above.
 - ② Remove element and bowl from filter head.
- ※ **The bowl is reusable, do not damage or discard.**
- ③ Separate element from bowl. Clean bowl and seal gland.

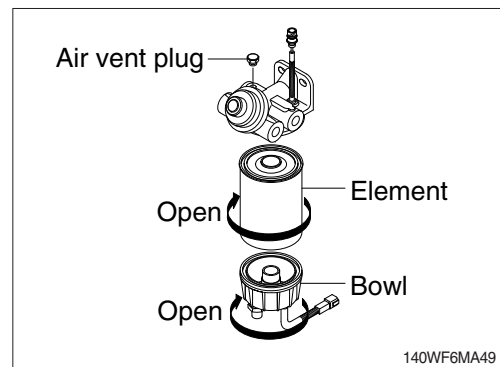


- ④ Lubricate new bowl seal with clean fuel or motor oil and place in bowl gland.
- ⑤ Attach bowl to new element firmly by hand.
- ⑥ Lubricate new element seal and place in element top gland.
- ⑦ Attach the element and bowl to the head.

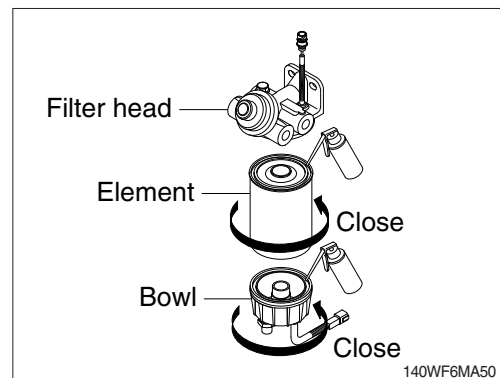

- ⑧ Do hand-priming the lift pump repeatedly until air bubbles comes out from air vent hole completely.

- ⑨ Tighten the air vent plug to its origin position.

▲ The fuel pump, high-pressure fuel lines, and fuel rail contain very high-pressure fuel. Do not loosen any fittings while the engine is running. Personal injury and property damage can result. Wait at least 10 minutes after shutting down the engine before loosening any fittings in the high-pressure fuel system to allow pressure to decrease to a lower level.

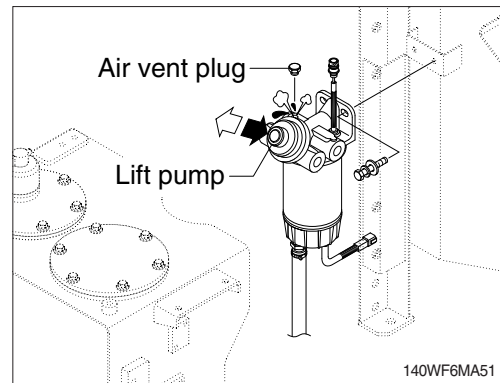

13) REPLACEMENT OF FUEL FILTER

- (1) Use 1" wrench, loosen and remove the filter and clean the gasket surface.

※ **Make sure O-ring does not stick to filter head. Remove O-ring with screwdriver if necessary.**

- (2) Lubricate the fuel filter O-ring with clean lubricating oil.


- (3) Install the filter on the filter head. Tighten the filter until the gasket contacts the filter head surface. Tighten the fuel filter an additional 3/4 turn after contact.

※ **Mechanical overtightening can distort the threads or damage the filter element seal.**

- (4) Relieve the air after mounting.

※ **Do not pre-fill an on-engine fuel filter with fuel. The system must be primed after the fuel filter is installed. Pre filling the fuel filter can result in debris entering the fuel system and damaging fuel system components.**


※ **Check for fuel leakage after the engine starts. If air is in the fuel system, the engine will not start. Start engine after bleeding the air according to the method of bleeding air.**

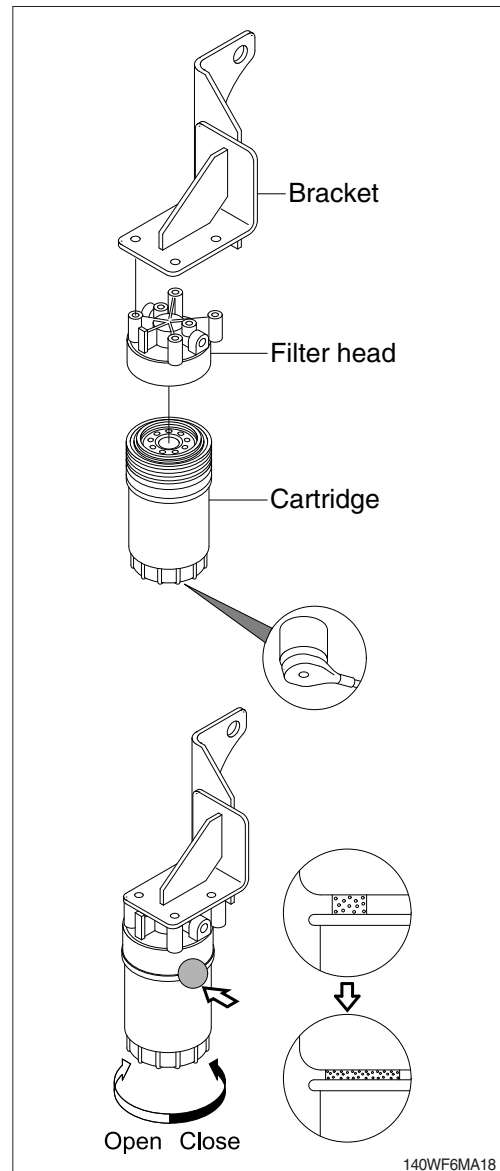

14) CRANKCASE BREATHER FILTER

※ Do not use pneumatic tools to remove the breather cover capscrews. Damage to the rocker cover can result.


- (1) Remove the oil fill cap.
- (2) Remove the crankcase breather filter cover capscrews.
- (3) Remove the filter cover.

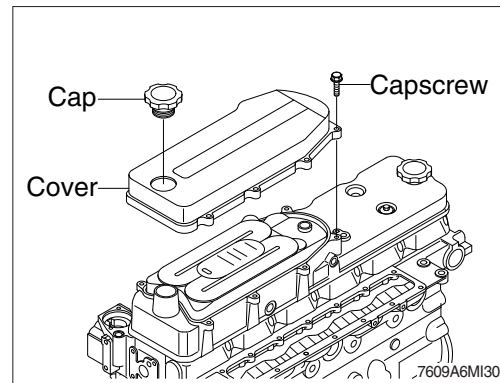


- (4) Remove the crankcase breather filter from the rocker lever cover.

※ Do not disturb the crankcase breather filter gasket located on the rocker lever cover.

※ Exposure to oil can cause the gasket to swell, which can make it difficult to install the gasket back into groove. If the gasket comes out of the groove, do not attempt to install the gasket. Replace it with a new gasket.

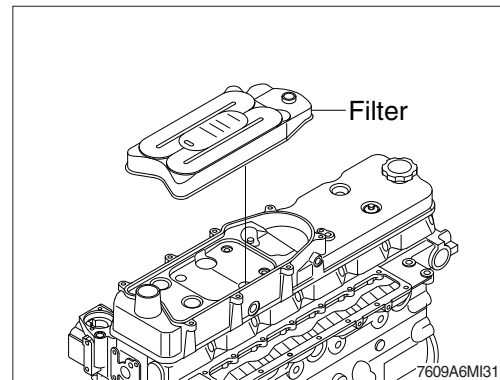


- (5) If the gasket is damaged, remove the gasket by grasping the tab on the gasket and pulling up.
- (6) Clean the crankcase breather filter mounting surface and O-ring sealing surfaces on the rocker lever cover.
- (7) Clean the crankcase breather filter cover with warm soapy water.
Inspect the cover for cracks.
Replace the cover if damage is found.

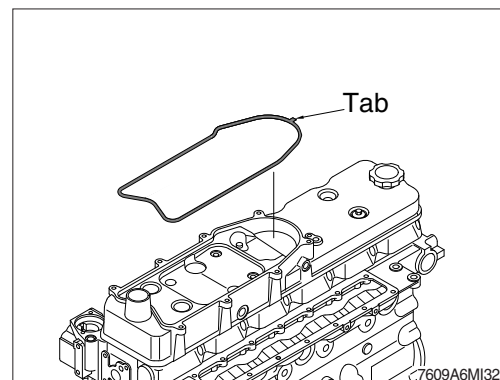

- (8) If the gasket was removed, install the gasket into the rocker lever cover groove starting with the tab end first. Then install the corners opposite the gasket tab end. Finish by pushing in the sides (see illustration).


Gently push the gasket down into the groove. Do not use a finger to trace the gasket around into the groove during installation, as this will stretch the gasket, making it difficult to fully seat into the groove.

- ※ **Do not cut the gasket to make it fit into the groove, as this will result in an oil leak. The gasket must be fully seated around the entire perimeter of the rocker lever cover groove.**

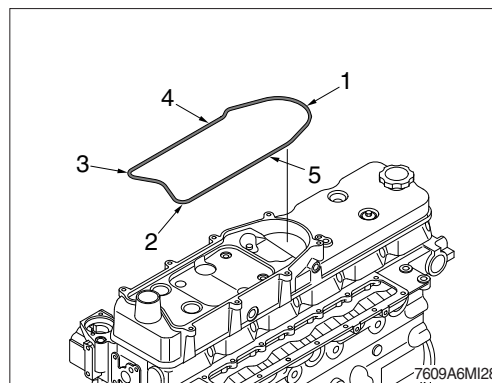

- (9) Apply clean engine oil to the O-rings on the crankcase breather filter.

Install the filter onto the rocker lever cover.

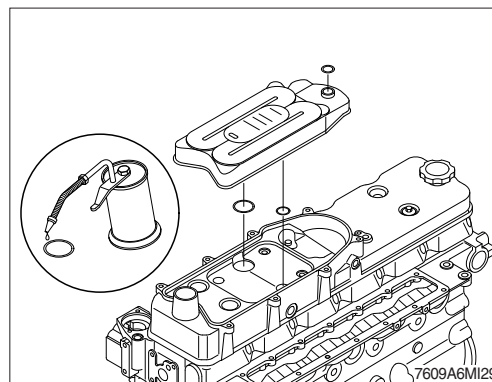


- (10) Install the crankcase breather filter cover.

Install the filter cover capscrews.

Tighten the capscrews, starting with the innermost capscrews and working outward in a circular manner.


· 0.71 kgf · m (5.16 lbf · ft)

Install the oil fill cap.

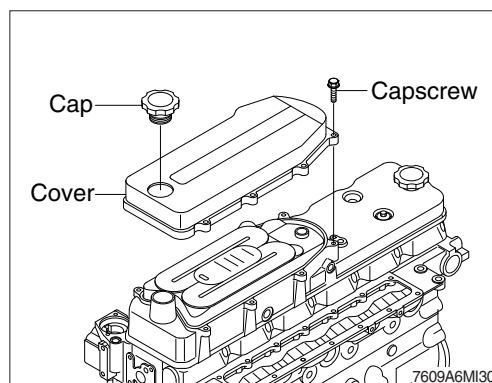

15) LEAKAGE OF FUEL


- ▲ Be careful and clean the fuel hose, injection pump, fuel filter and other connections as the leakage from these part can cause fire.

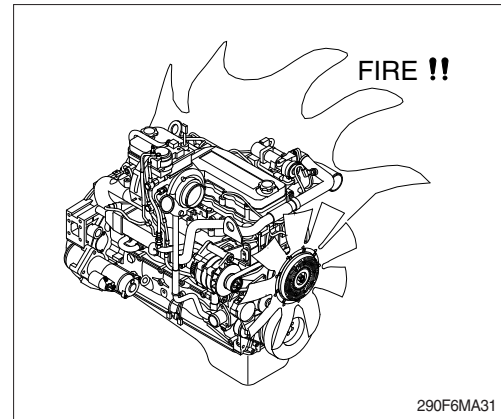

16) DEF/AdBlue® TANK


- (1) The DEF/AdBlue® tank level must be checked daily with DEF/AdBlue® level gauge.
- (2) If the DEF/AdBlue® level is found to be below, DEF/AdBlue® must be added.

- ▲ It is unlawful to tamper with or remove any component of the aftertreatment system. It is also unlawful to use a catalyst solution that does not meet the specifications provided or to operate the machine with no catalytic solution.

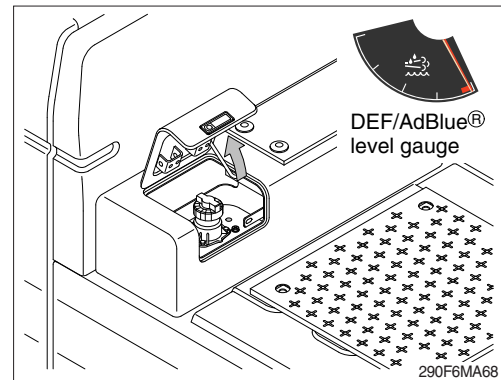

- (3) DEF/AdBlue® fill up warning lamp turns on when tank is completely filled with DEF/AdBlue®. After turning light on, do not pour DEF/AdBlue® any more.


- ※ Fill the tank with DEF/AdBlue® after key-on the start key.
- ※ Be careful to entering dust, sand or other contamination substance when you refill the DEF/AdBlue® into the tank. Otherwise, fatal problem such as engine idle locking, derating or engine stopping can be happen.

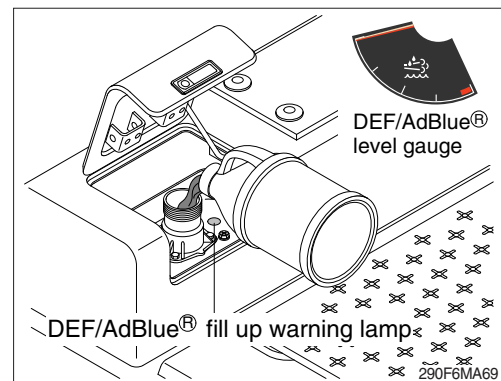

16-1) DEF/AdBlue® TANK FILTER


- (1) Remove coolant, DEF/AdBlue® and air vent hoses.

※ Move hoses back and forth 3~4 times to easily remove the hoses.

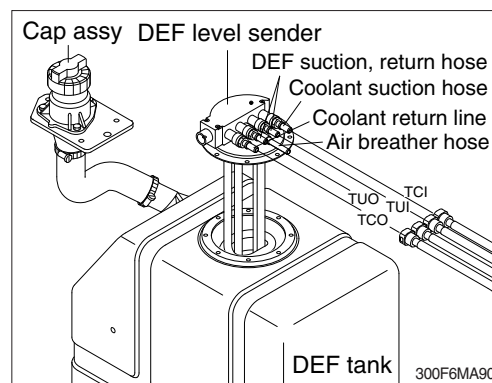


- (2) Plugging the coolant return line with the plug (P/ no : HDB030-0002).


※ When the coolant return line is removed, the coolant come out from the return line (TCO). Nearly comes out the coolant or DEF from other lines.

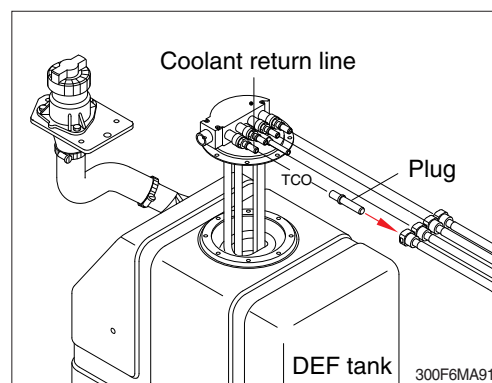


- (3) Rotate the DEF/AdBlue® level sender counter-clockwise about 20 degree with the Jig (P/no : HDB030-0001).

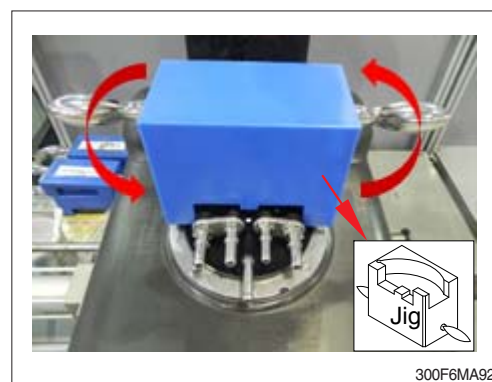

- (4) Remove the DEF/AdBlue® level sender without removal of the plunger ring.

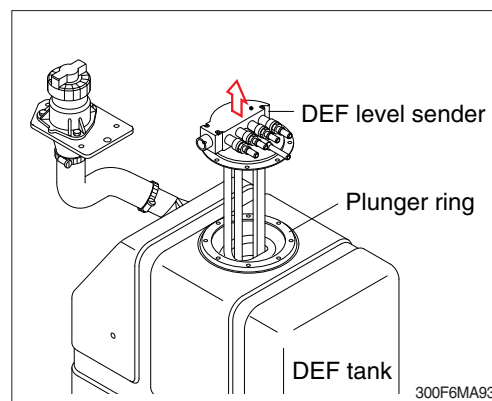


- (5) Removed DEF/AdBlue® level sender.
- ※ **Make sure O-ring is on the right position.**
- (6) Replace the DEF/AdBlue® filter and fit with a new filter.
- ※ **Replace the filter every 4000 hours.**
 - ※ **Carry out installation in the reverse order to removal.**

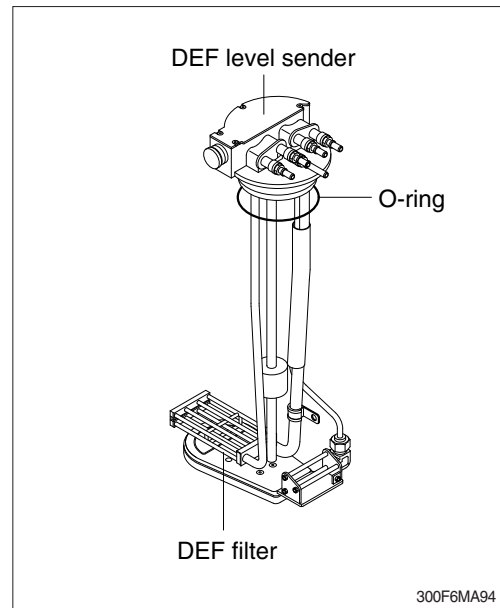

17) DEF/AdBlue® SUPPLY MODULE FILTER

- (1) Inspect the area around the seal and vent of DEF/AdBlue® supply module filter cap for signs of leakage.

※ Turn DEF/AdBlue® the master switch mounted electric box.

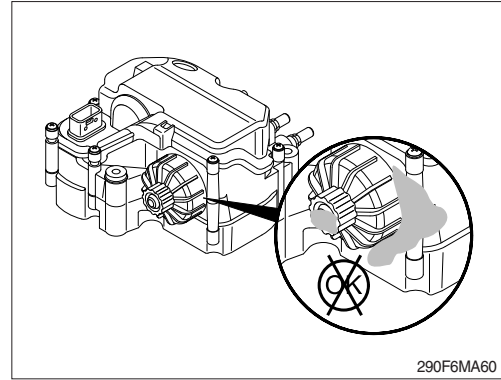

- (2) Unscrew the DEF/AdBlue® supply module filter cap.
A 27 mm wrench can be used on the cap to aid in removal.


- (3) Remove the filter equalizing element.

- (4) Remove the old filter element.

A disposable service tool is included with the filter to aid in filter removal. Use the appropriate end of the tool, depending on the color of the plastic on the filter.


When inserting the tool a "click" sound can be heard which indicates proper engagement with the filter.

※ If the filter element and equalizing element are removed from the aftertreatment DEF/AdBlue® tank, they must be discarded and replaced; regardless of condition.

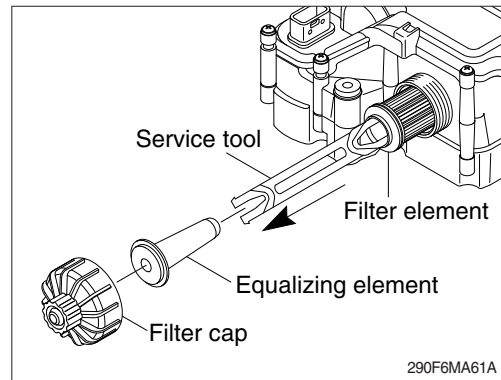


- (5) Clean and inspect the filter cap

- ① Clean the aftertreatment DEF/AdBlue® tank cap and threads on the DEF/AdBlue® tank with warm water and a clean cloth.
- ② Check the condition of the threads on the filter cap, if the threads are damaged, replace the filter cap.

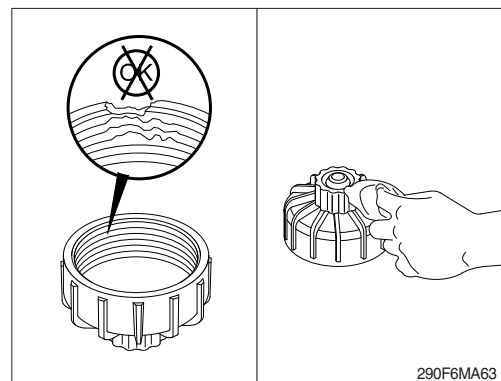

- (6) Slide the filter equalizing element in to the new filter element.
- (7) Insert the assembly into the aftertreatment DEF/ AdBlue® supply module.
- (8) Install and tighten the filter cap.
 - Tightening torque : 2.0 kgf · m (14.5 lbf · ft)


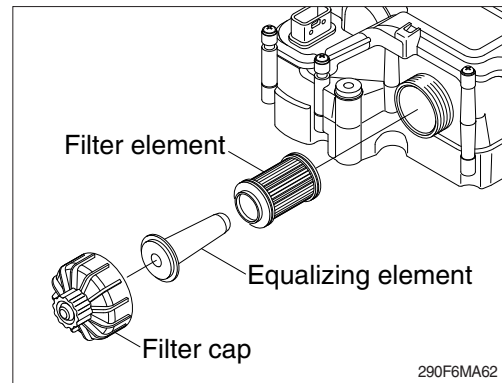


18) HYDRAULIC OIL CHECK

- (1) Position the machine as shown in the illustration on the right. Then stop engine.
- (2) Check the oil level at the level gauge of hydraulic oil tank.
- (3) The oil level is normal if the oil is between the red lines. The oil level depends on the temperature of the hydraulic oil. Refer to the height (A) in the below table to check the level gauge.


Temperature		Height A	
℃	℉	mm	inch
0	32	15	0.6
10	50	25	1.0
20	68	30	1.2
30	86	35	1.4
40	104	40	1.6

- ※ Refer to page 3-26 for checking the temperature of the hydraulic oil.
- ※ Add the hydraulic oil, if necessary.

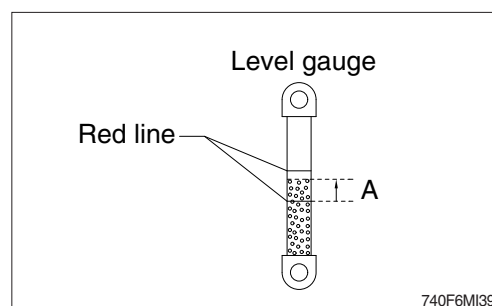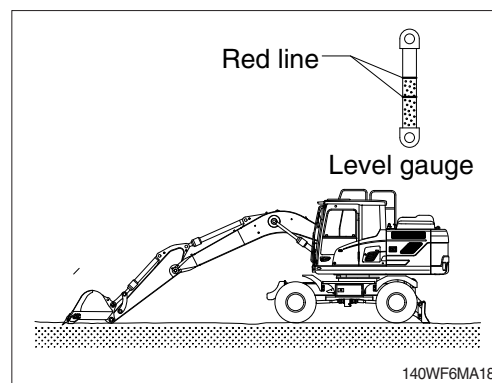


19) FILLING HYDRAULIC OIL

- (1) Stop the engine to the position of level check.
- (2) Remove the cork nut and relieve the pressure in the tank by pushing the top of the air breather.
- (3) Remove the breather on the top of oil tank and fill the oil to the specified level.
- (4) Start engine after filling and operate the work equipment several times.
- (5) Check the oil level at the level check position after engine stops.

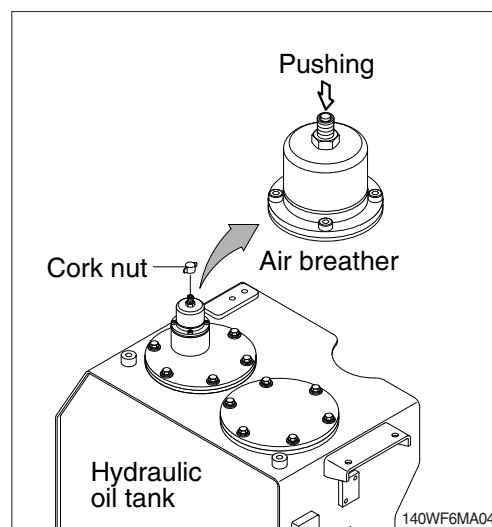

20) CHANGE HYDRAULIC OIL


- (1) Lower the bucket on the ground pulling the arm and bucket cylinder to the maximum.
 - (2) Remove the cork nut and relieve the pressure in the tank by pushing the top of the air breather.
 - (3) Remove the cover.
 - Tightening torque : $6.9 \pm 1.4 \text{ kgf} \cdot \text{m}$
($50 \pm 10 \text{ lbf} \cdot \text{ft}$)
 - (4) Prepare a suitable container.
 - (5) To drain the oil loosen the drain plug at the bottom of the oil tank.
 - (6) Fill proper amount of recommended oil.
 - (7) Put the breather in the right position.
 - (8) Bleed air hydraulic pump loosen the air breather at top of hydraulic pump assembly.
 - (9) Start engine and run continually. Release the air by full stroke of each control lever.
- ※ In case of injecting HBHO (HD Hyundai Construction Equipment Bio Hydraulic Oil) to machines that have formerly used different hydraulic oil, the proportion of residual oil must not exceed 2 %
- ※ Do not mix any other Bio oil, use only HBHO as bio oil.
- If changing to Bio oil, contact HD Hyundai Construction Equipment dealer.

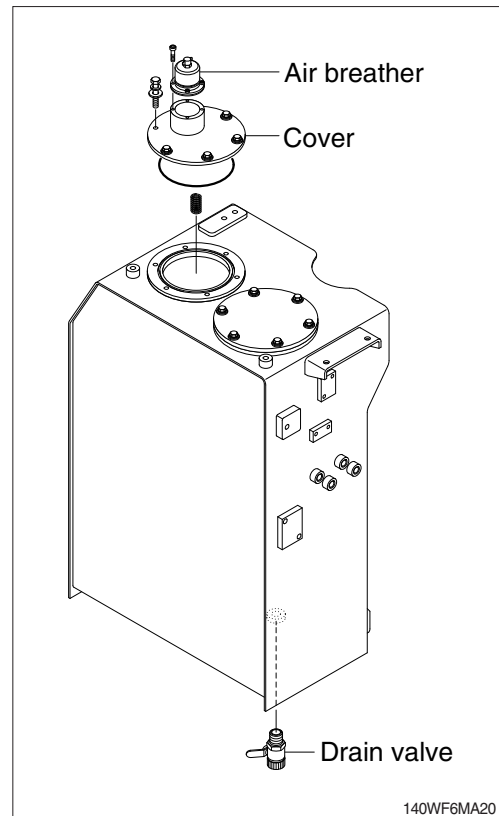

21) CLEAN SUCTION STRAINER

Clean suction strainer as follows paying attention to the cause to be kept during oil filling.


- (1) Remove the cover on the top of the oil tank.
 - Tightening torque : $6.9 \pm 1.4 \text{ kgf} \cdot \text{m}$
($50 \pm 10 \text{ lbf} \cdot \text{ft}$)
 - (2) Pull out the strainer in the tank.
 - (3) Wash the foreign material on the suction strainer with gasoline or cleaning oil.
 - (4) Replace the suction strainer if it is damaged.
 - (5) Assemble with reverse order of disassembly.
Be sure to install a new O-ring and reinsert in the oil tank.
- ※ Loosen the bolt slowly at the cover can be spring out by the spring when removing it.

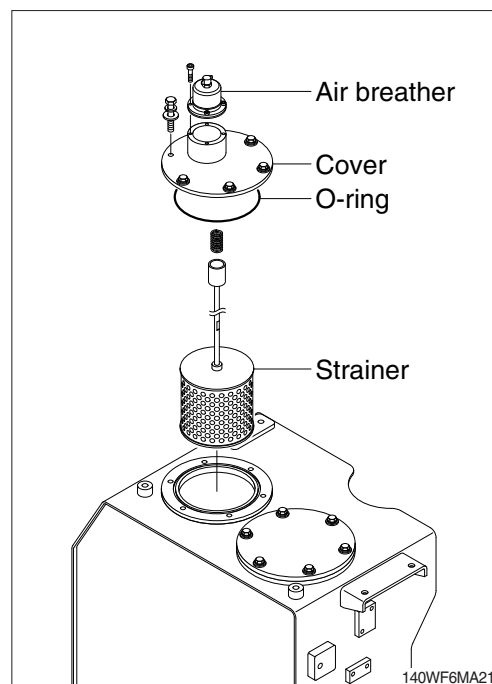

22) REPLACEMENT OF RETURN FILTER


Replace as follows paying attention to the cause to be kept during the replacement.

- (1) Remove the cover.
 - Tightening torque : $6.9 \pm 1.4 \text{ kgf} \cdot \text{m}$
($50 \pm 10 \text{ lbf} \cdot \text{ft}$)
- (2) Remove the spring, by-pass valve, and return filter in the tank.
- (3) Replace the element with new one.

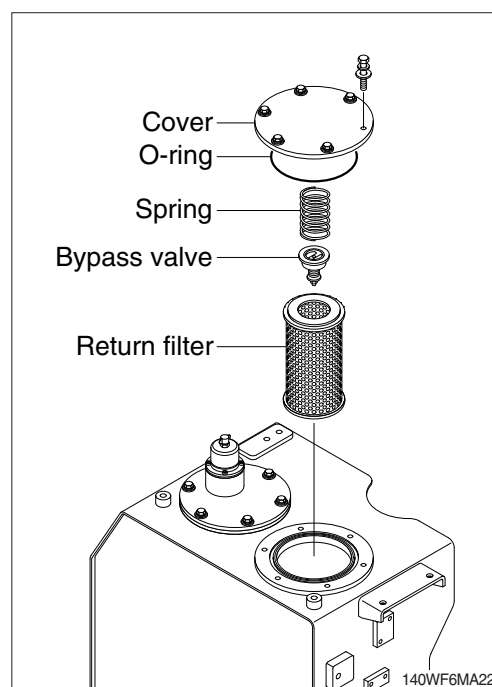


22-1) REPLACEMENT OF THE PRESSURE FILTER ELEMENT

- (1) Loosen the pressure filter.
- (2) Install the new filter and tighten.

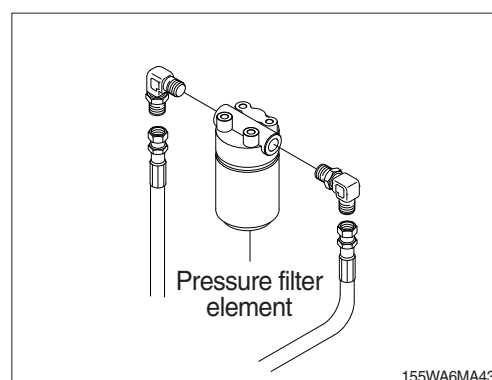

23) REPLACEMENT OF ELEMENT IN HYDRAULIC TANK BREATHER


- (1) Remove the cork nut and relieve the pressure in the tank by pushing the top of the air breather.
- (2) Loosen the bolt and remove the cover.
- (3) Pull out the filter element.
 - ※ Remove the cover, the snap ring and pull out the filter element. (-#0009)
- (4) Replace the filter element new one.
- (5) Reassemble by reverse order of disassembly.
 - Nut tightening torque : 0.4~0.5 kgf · m
(2.9~3.6 lbf · ft)

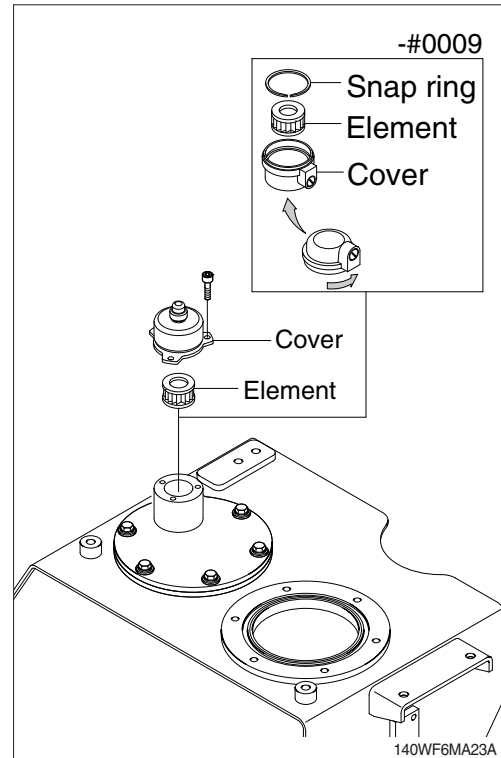

24) REPLACE OF DRAIN FILTER CARTRIDGE


Clean the dust around filter and replace with new one after removing the cartridge.

- ※ Tighten about 2/3 turn more after the gasket of cartridge contacts seal side of filter body for mounting.
- ※ Change cartridge after initial 250 hours of operation. Thereafter, change cartridge every 1000 hours.

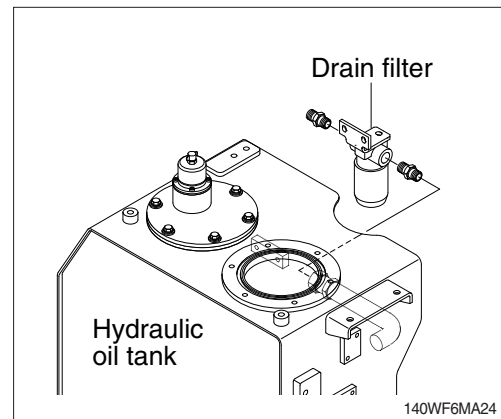


25) REPLACE OF PILOT LINE FILTER

- (1) Loosen the nut positioned on the filter body.
- (2) Pull out the filter element and clean filter housing.
- (3) Install the new element and tighten using specified torque.
 - ※ Change cartridge after initial 250 hours of operation. Thereafter, change cartridge every 1000 hours.

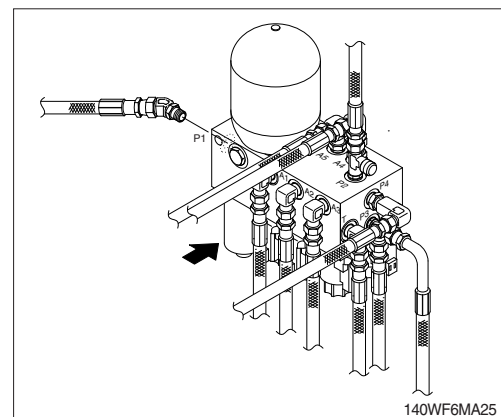


26) CHECK THE SWING REDUCTION GEAR OIL

- (1) Pull out the dipstick and clean it.
- (2) Insert it again.
- (3) Pull out one more time to check the oil level and fill the oil if the level is not sufficient.

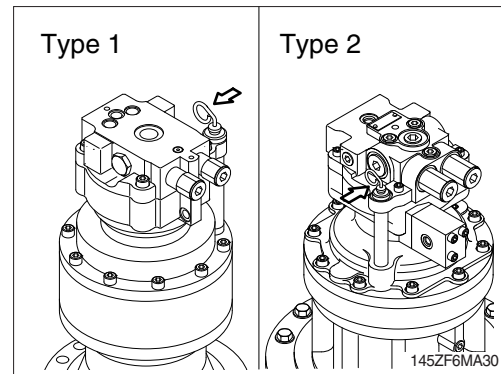


27) CHANGE SWING REDUCTION GEAR OIL

- (1) Raise the temperature of oil by swinging the machine before replace the oil and park the machine on the flat ground.
- (2) Prepare a proper container.
- (3) Remove the cap and open the drain valve.
- (4) Clean around the valve and close the drain valve and cap.
- (5) Fill proper amount of recommended oil.
 - Amount of oil
 - Type 1 : 3.5 l (0.9 U.S.gal)
 - Type 2 : 2.5 l (0.7 U.S.gal)

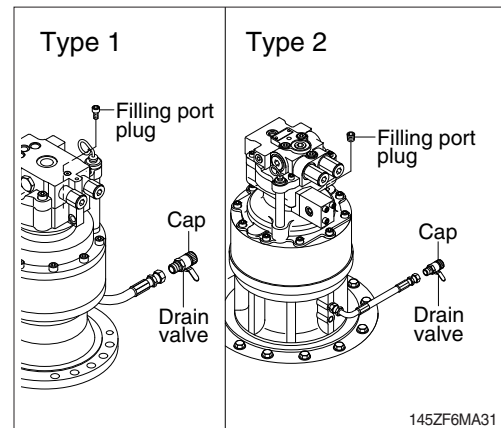


28) LUBRICATE BEARING OF OUTPUT SHAFT IN REDUCTION GEAR (TYPE 2 ONLY)

- (1) Remove air vent plug.
- (2) Lubricate NLGI No.2 with grease gun until comes out new grease from air vent port.
 - Amount of oil : 0.35 kg (0.09 lb)

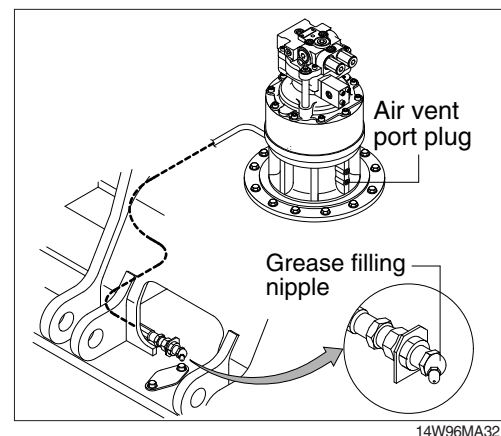

29) LUBRICATE SWING BEARING


- (1) Grease at 2 fitting.
 - ※ Lubricate every 250 hours.

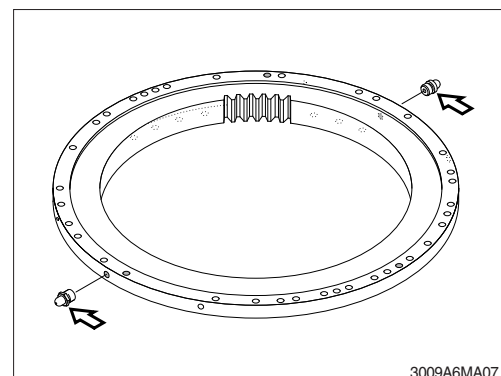

30) SWING GEAR AND PINION


(1) Drain old grease

- ① Remove under cover of lower frame.
- ② Remove drain cover of lower frame.
- ③ Remove filler cover of upper frame.
- ④ Operate full turn (360°) of swing several times.

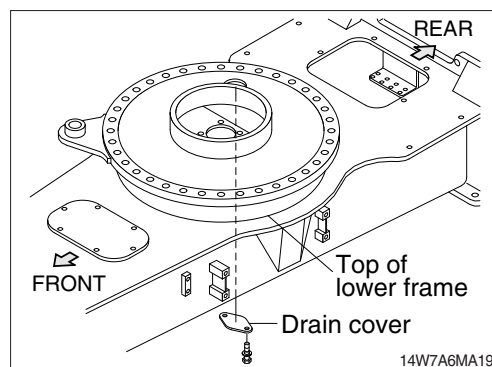


(2) Refill new grease

- ① Install drain cover.
- ② Fill with new grease.
- ③ Install filler cover.
 - Capacity : 5.9 kg (13.1 lb)

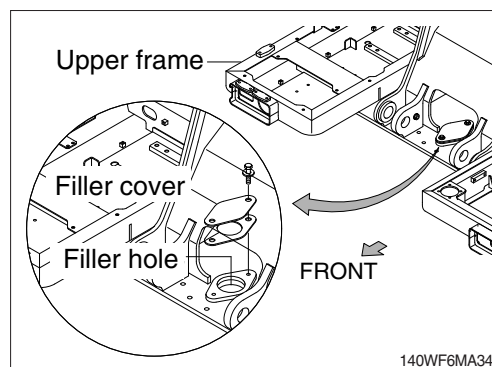

31) LUBRICATE RCV LEVER


Remove the bellows and with a grease gun grease the joint part (A) and sliding parts (B).

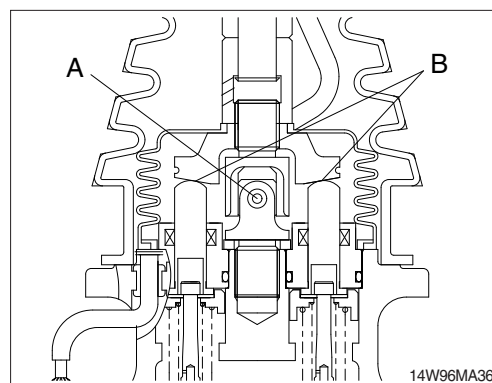

32) LUBRICATE


(1) Drive shaft

- ① Front drive shaft : 3 point
- ② Rear drive shaft : 3 point

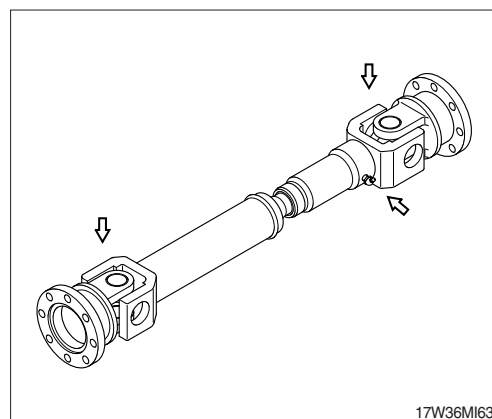


(2) Axle


- ① Front axle : 1 point

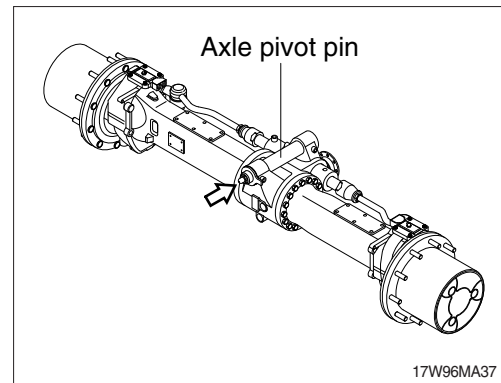


(3) Steering case : 4 point

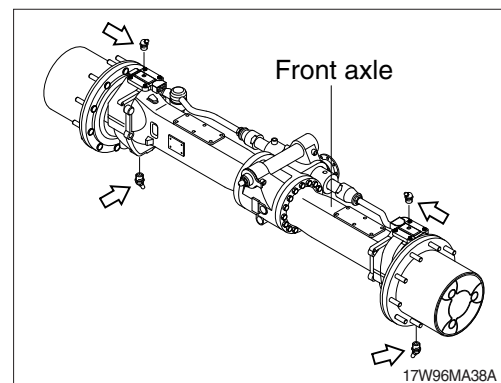

(4) Outrigger : 8 point

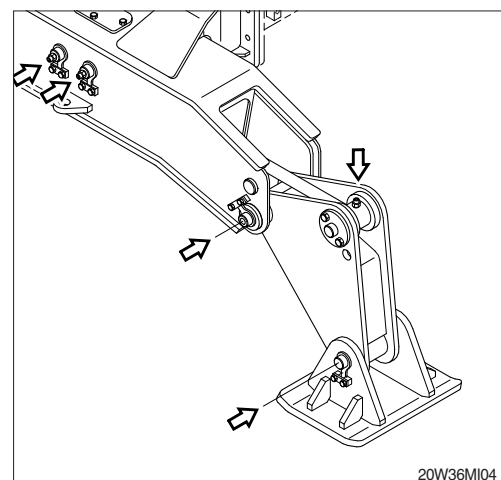

(5) Dozer blade : 12 point

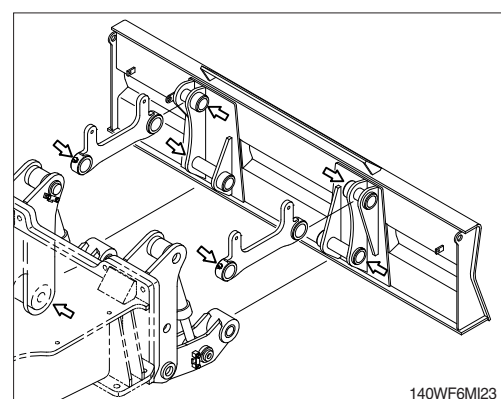

33) TIRE

(1) Air pressure


It is important to keep air pressure properly for maximizing tire life. Both excessive and insufficient air pressure of tires should be avoided not to damage tires.

Specification : 7.0 kgf/cm² (100 psi)

(2) Handling of tire


① Removal of tire

- Lift the main body until a tire separate from the ground, and place the block under front and rear axle.
- Loosen wheel nut with torque wrench and remove tire.

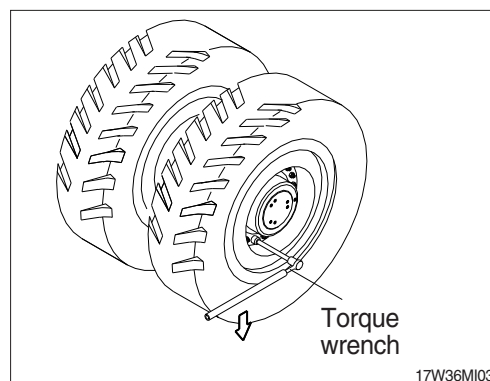


② Installation of tire

- Coat some grease on wheel stud and nut screw.
- Install the tires and tighten a nut slightly and get down a tire on the ground, and then tighten the torque in the order as figure.
 - Tightening torque : 60^{+0}_{-5} kgf · m
($433^{+0}_{-36.2}$ lbf · ft)

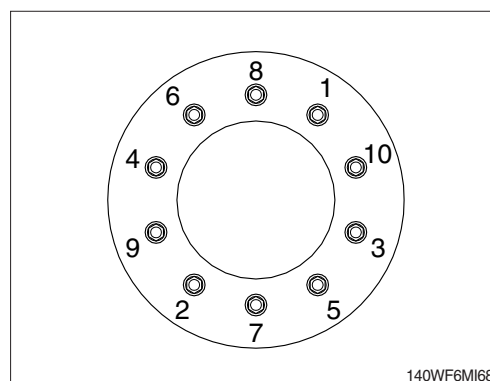

③ Position change of tire

- Tire is worn out differently part by part according to installing position, so change position regularly as figure.
- ※ **Keep air pressure at standard.**
- ※ **Use same pattern of groove and same maker's tire.**
- ※ **Always check the tire before operation.**

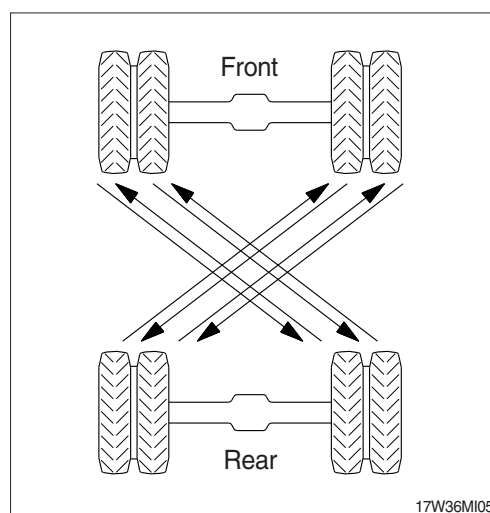


(3) Tire size

Specification : 9.00 × 20 - 14PR


34) CHECK AND SUPPLYING PLANETARY GEAR OIL

- (1) Move the machine to flat ground.
- (2) Remove the plug and check the oil amount.
 ※ **Set the oil level check line of planetary gear in parallel to the around.**
- (3) If the oil level is below the plug hole, supply oil through a plug hole.
- (4) After checking, install plug.

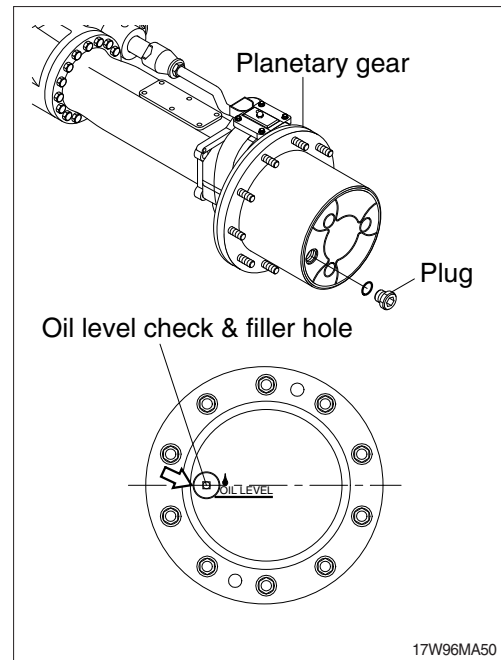


35) CHECK AND SUPPLYING DIFFERENTIAL GEAR OIL

- (1) Move the machine to flat ground.
- (2) Open the axle air breather to relieve internal air pressure.

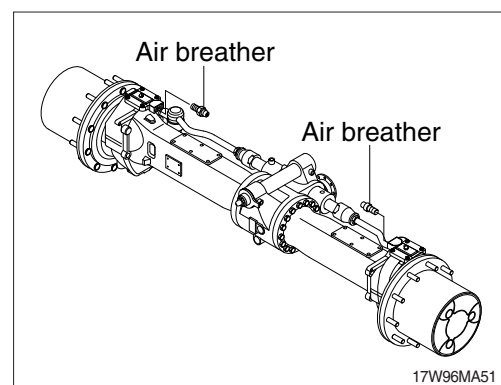

- (3) Remove the plug and check the oil amount.
 If the oil level is at the hole of the plug, it is normal.
 - (4) If the oil level is below the plug hole, supply oil through a plug hole.
- ▲ **When checking the oil level, set the select switch to parking position.**
- ▲ **As the machine is hot after operation, wait until the oil temperature has dropped.**

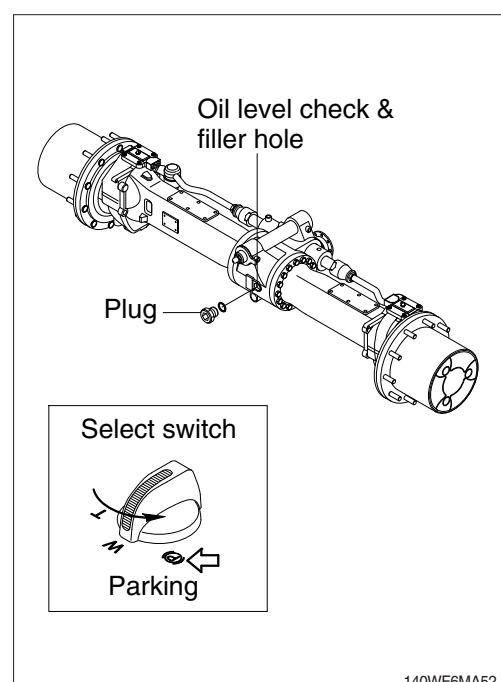


36) CHANGE THE AXLE OIL

- (1) Place a drain box under drain plug to catch oil.
- (2) Remove the air breather to relieve internal pressure.


(3) Drain oil the differential gear

- ① Remove the filling plug and remove the drain plug to drain oil off.
- ② Wash drain plug and install it.

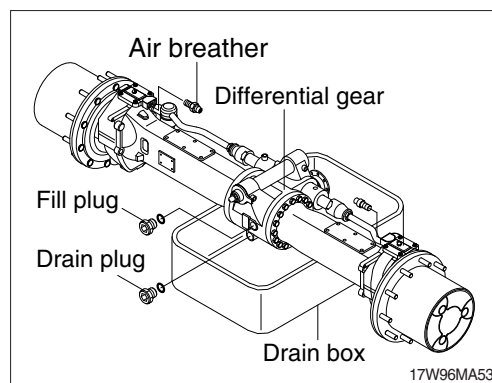

(4) Drain oil planetary gear

- ① Drain oil by removing drain plug.
- ※ The drain plug should be facing the ground.

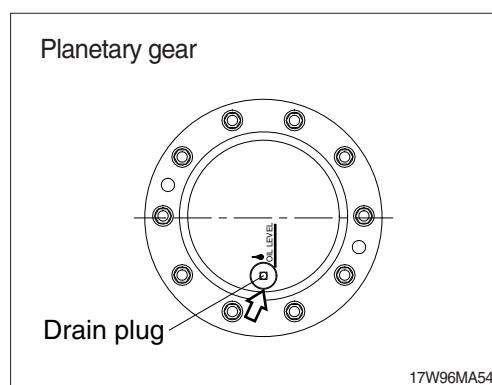

- (5) Supply oil into the differential gear and the planetary gear.


· Oil amount

Description	Capacity
Front axle differential gear	9.0 l (2.38 U.S. gal)
Rear axle differential gear	11.2 l (2.96 U.S. gal)
Planetary gear case (each)	2.4 l (0.63 U.S. gal)

- (6) Supply oil until it overflows from the oil filler, then install the plug.


▲ As the machine is hot after operation, wait until the temperature has dropped.

- ※ If a work requires frequent use of brake, replace it earlier than normal change interval.

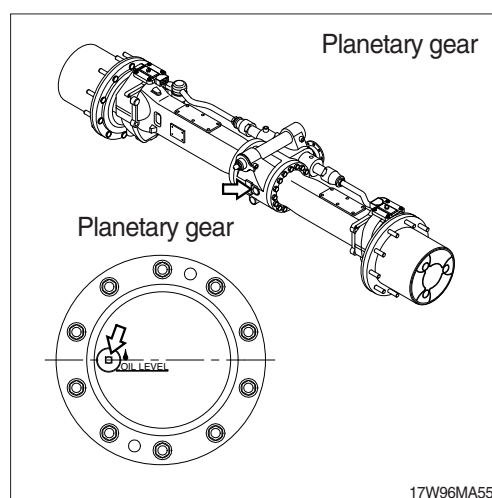

37) CLEANING AXLE BREATHER


- (1) Remove dust or debris around the breather.
- (2) Remove the breather and wash it with cleaning oil.

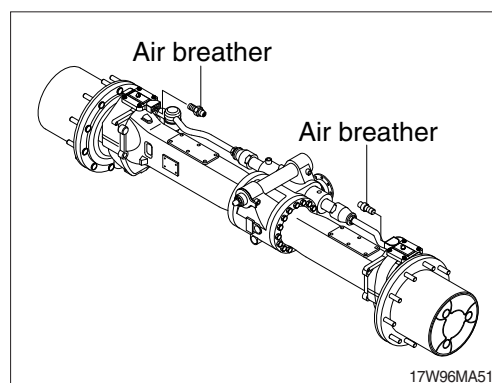

38) CHECK AND SUPPLYING TRANSMISSION OIL

- (1) Move the machine to flat ground.
- (2) Open the transmission air breather to relieve internal air pressure.
- (3) Remove the plug and check the oil amount.
If the oil level is at the hole of the plug, it is normal.
- (4) If the oil level is below the plug hole, supply oil through a plug hole.


▲ As the machine is hot after operation, wait until the oil temperature has dropped.

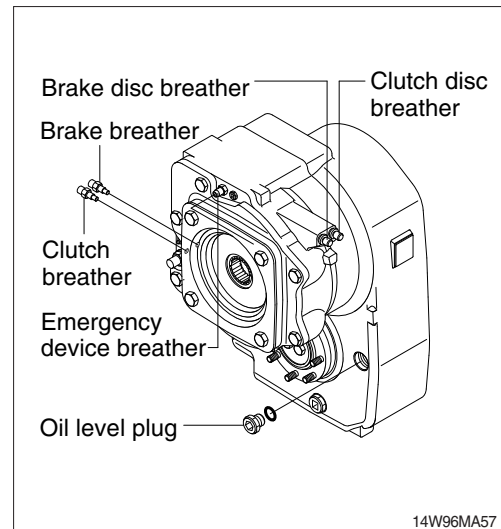

39) CHANGE THE TRANSMISSION OIL


- (1) Place a drain box under drain plug to catch oil.
- (2) Open the transmission air breather to relieve internal air pressure.
- (3) Remove the drain plug to drain oil.
- (4) Wash drain plug and install it.
- (5) Supply oil into the transmission case.
· Oil amount : 2.5 l (0.7 U.S. gal)

▲ As the machine is hot after operation, wait until the temperature has dropped.

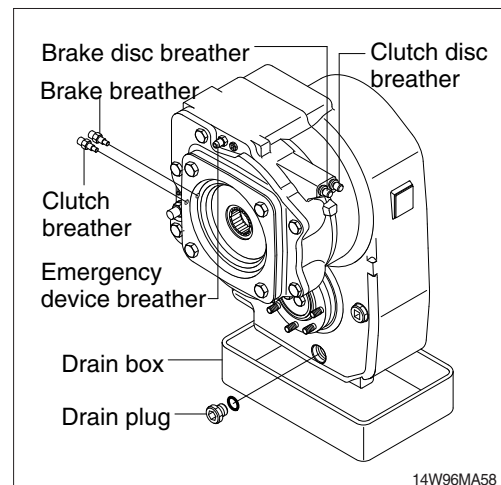

40) CLEANING TRANSMISSION AIR BREATHER

- (1) Remove dust or debris around the air breather.
- (2) Remove the air breather and wash it with cleaning oil.

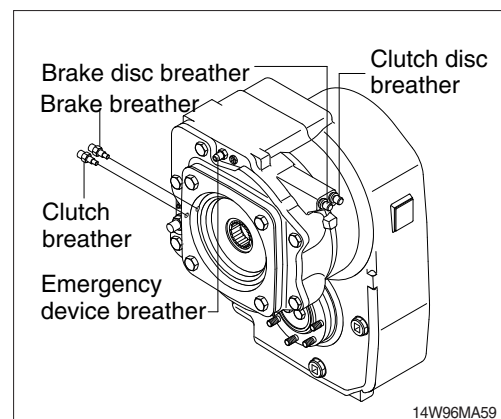

41) REPLACEMENT OF BUCKET

⚠ When knocking the pin in with a hammer, metal particles may fly and cause serious injury, particularly if they get into your eyes. When carrying out this operation, always wear goggles, helmet, gloves, and other protective equipment.

- ※ When the bucket is removed, place it in a stable condition.
- ※ When performing joint work, make sure signals to each other and work carefully for safety's sake.

(1) Lower the bucket on the ground as the picture shown in the right.

(2) Lock the safety knob to the LOCK position and stop the engine.

(3) Remove the stopper bolts (1) and nuts (2), then remove pins (3, 4) and remove the bucket.

※ When removing the pins, place the bucket so that it is in light contact with the ground.

※ If the bucket is lowered strongly to the ground, the resistance will be increased and it will be difficult to remove the pins.





※ After remove the pins, make sure that they do not become contaminated with sand or mud and that the seals of bushing on both sides do not become damaged.

(4) Align the arm with holes (A) and the link with holes (B), then coat with grease and install pins (3, 4)

※ When installing the bucket, the O-rings are easily damaged, so fit the O-rings on the boss of the bucket as shown in the picture.

After knocking the pin, move the O-ring down to the regular groove.


(5) Install the stopper bolt (1) and nuts (2) for each pin, then grease the pin.

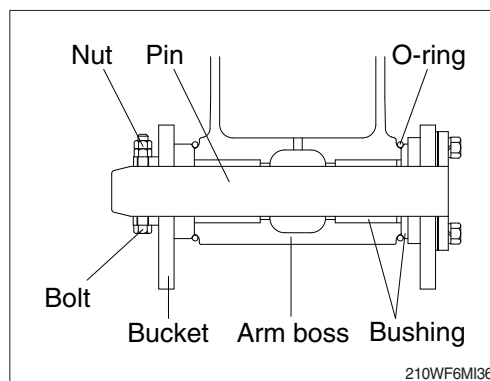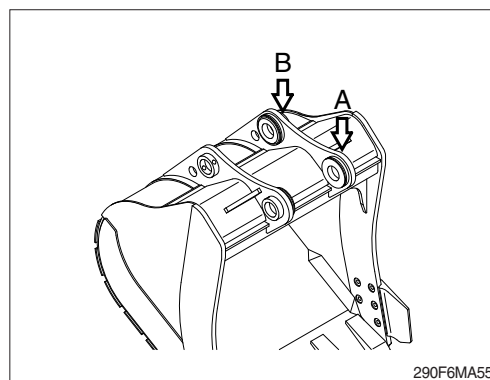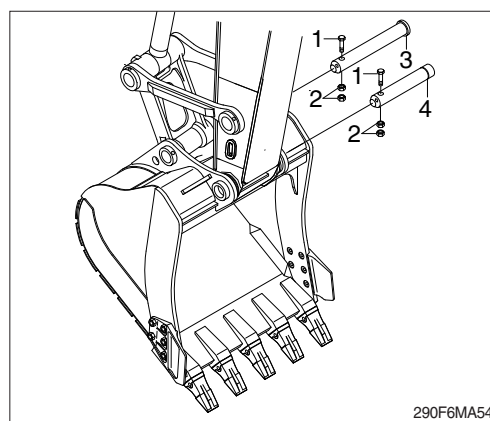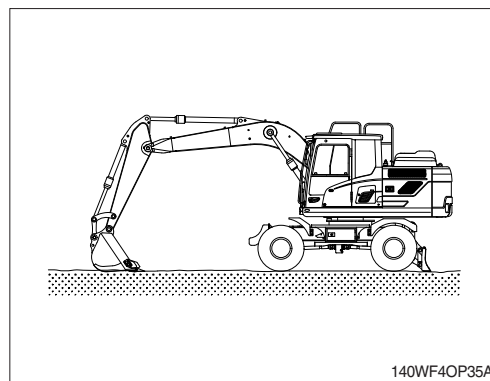

42) REPLACEMENT OF BUCKET TOOTH

(1) Timing of replacement

- ① Check wearing condition as shown in the illustration and replace tooth tip before adapter starts to wear.
- ② If excessive use, tooth adapter has worn out, replacement may become impossible.

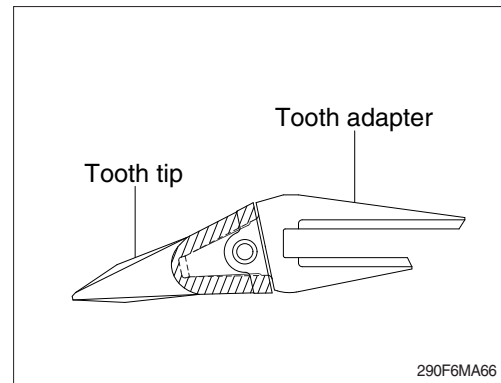


(2) Instructions for replacement

- ① Pull out pin by striking pin with punch or hammer, avoiding damage to locking washer.
- ② Remove dust and mud from surface of tooth adapter by using knife.
- ③ Place locking washer in its proper place, and fit tooth tip to adapter.
- ④ Insert pin until locking washer is positioned at tooth pin groove.

▲ Personal injury can result from bucket falling.

▲ Block the bucket before changing tooth tips or side cutters.

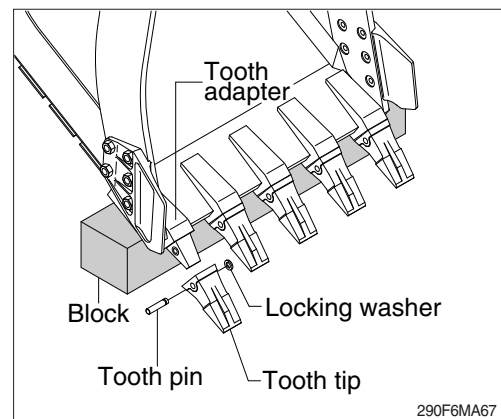


43) ADJUSTMENT OF BUCKET CLEARANCE

- (1) Lower the bucket on the ground as the picture shown in the right.
- (2) Swing to the left and keep the arm boss to be contact to the bucket left.
- (3) Lock the safety knob to the LOCK position and stop the engine.
- (4) Measure the clearance (A) between bucket and arm boss. This is the total clearance.

(5) Adjusting

- ① Loosen bolt (2), and remove washer (3), plate (1) and shim (4).
- ② Remove the shim equivalent value with measuring value.
- ③ Assemble the parts in the reverse order of removal.
 - Tightening torque : $29.6 \pm 3.2 \text{ kgf} \cdot \text{m}$
($214.0 \pm 23.1 \text{ lbf} \cdot \text{ft}$)
 - Normal clearance : $0.5 \sim 1.0 \text{ mm}$
($0.02 \sim 0.04 \text{ in}$)

※ If the bucket is not adjusted correctly, noise and vibration created during operation, and damaged O-ring, pin and bushing quickly.

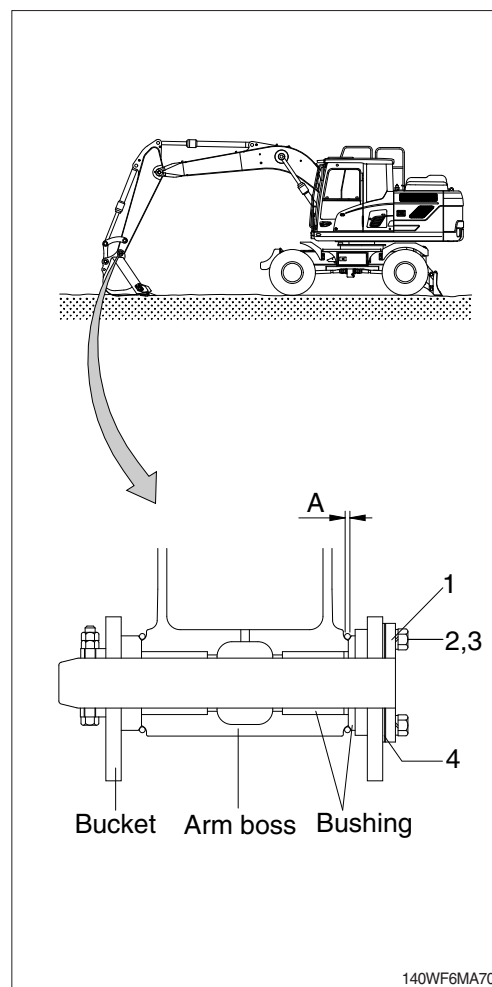


44) LUBRICATE PIN AND BUSHING

(1) Lubricate to each pin of working device

Lubricate the grease to the grease nipple according to the lubricating interval.

No.	Description	Qty
1	Lubrication manifold at boom	5
2	Boom cylinder pin	2
3	Boom and arm connection pin	1
4	Arm cylinder pin (Rod side)	1
5	Bucket cylinder pin (Head, rod)	2
	Bucket link (Control rod)	3
	Arm and control link connection pin	1
	Arm and bucket connection pin	1
6	Boom rear bearing center	1


※ Shorten lubricating interval when working in the water or dusty place.

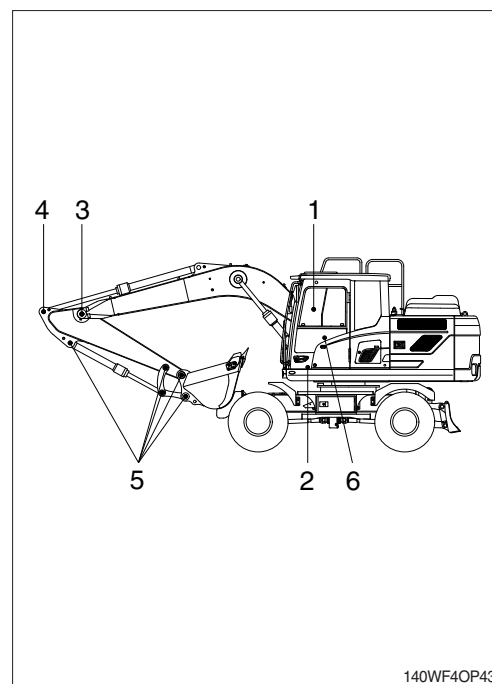

140WF4OP43

(2) Dust seals are mounted on the rotating part of working device to extend the lubricating interval.


※ Mount the lip to be faced outside when replace the dust seal.

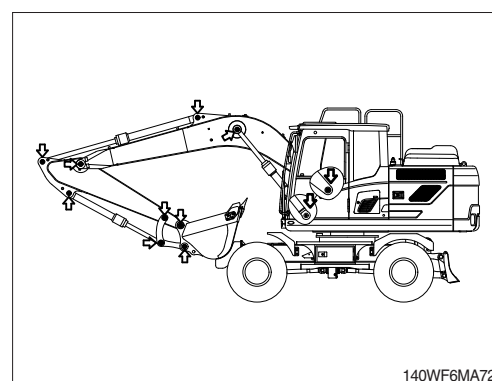

140WF6MA72

※ If it is assembled in wrong direction, it will cause fast wear of pin and bushing, and create noise and vibration during operation.

※ Assemble the seal same direction with picture and use with plastic hammer when replace.

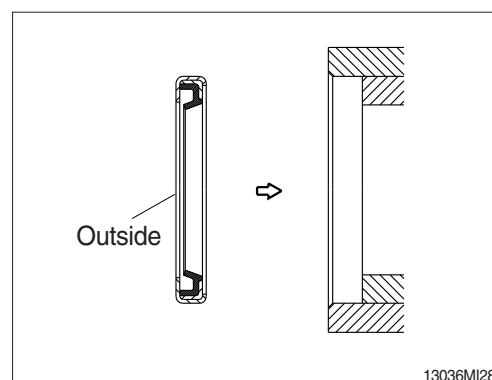


13036MI28

7. ELECTRICAL SYSTEM

1) WIRING, GAUGES

Check regularly and repair loose or malfunctioning gauges when found.

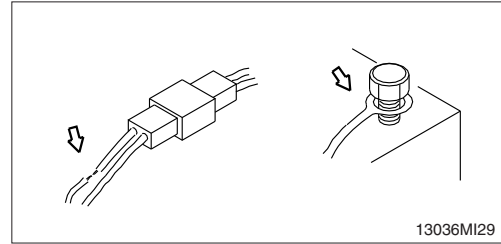

2) BATTERY

(1) Clean

- ① Wash the terminal with hot water if it is contaminated, and apply grease to the terminals after washing.


⚠ **Battery gas can explode. Keep sparks and flames away from batteries.**

⚠ **Always wear protective glasses when working with batteries.**

⚠ **Do not stain clothes or skin with electrolyte as it is acid.**

Be careful not to get the electrolyte in eyes.

Wash with clean water and go to the doctor if it enters the eyes.

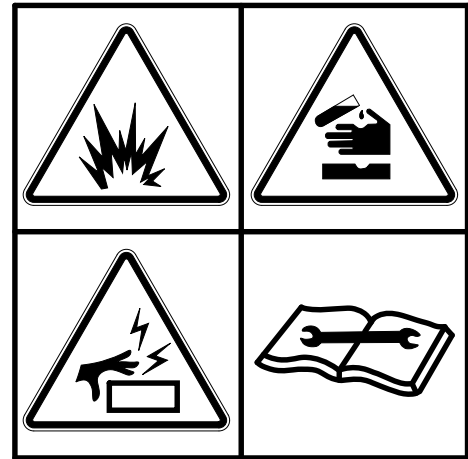

(2) Recycle


Never discard a battery.

Always return used batteries to one of the following locations.

- A battery supplier
- An authorized battery collection facility
- Recycling facility

(3) Method of removing the battery cable

Remove the cable from the ground connection first (⊖ terminal side) and reconnect it last when reassembling.

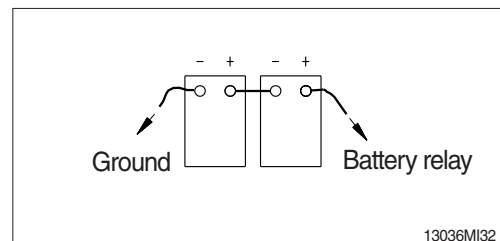

3) STARTING THE ENGINE WITH A BOOSTER CABLE


Keep following order when you are going to start engine using booster cable.

(1) Connection of booster cable

※ **Use the same capacity of battery for starting.**


- ① Make sure that the starting switches of the normal machine and trouble machine are both at the OFF position.
- ② Connect the red terminal of booster cable to the battery (+) terminal between exhausted and new battery.
- ③ Connect the black terminal of the booster cable between new battery (-) terminal and chassis of trouble machine.

※ **Keep firmly all connection, the spark will be caused when connecting finally.**

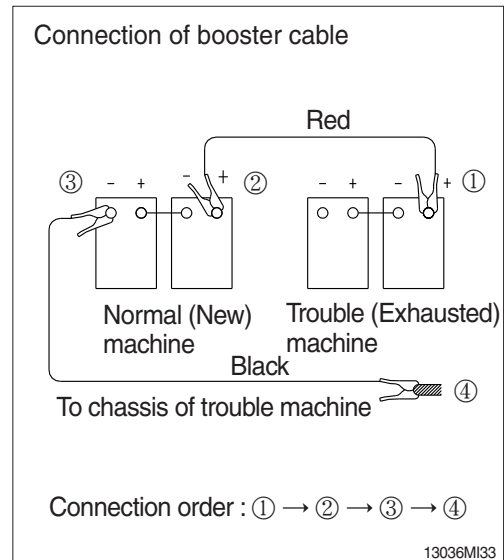

(2) Starting the engine

- ① Starting the engine of the normal machine and keep it to run at high idle.
- ② Start engine of the trouble machine with starting switch.
- ③ If you can not start it by one time, restart the engine after 2 minutes.

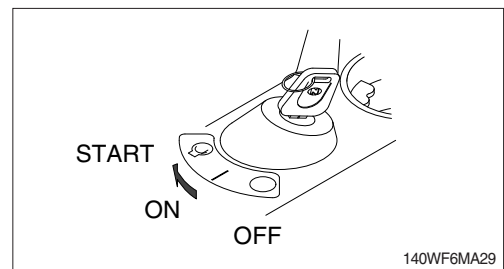

(3) Taking off the booster cable


- ① Take off the booster cable (black).
- ② Take off the booster cable (red) connected to the (+) terminal.
- ③ Run engine with high idle until charging the exhausted battery by alternator, fully.

▲ **Explosive gas is generated while using the battery or charging it. Keep away flame and be careful not to cause the spark.**

※ **Charge the battery in the well ventilated place.**

※ **Place the machine on the earth or concrete. Avoid charging the machine on the steel plate.**

※ **Do not connect (+) terminal and (-) terminal when connecting booster cable because it will be shorted.**

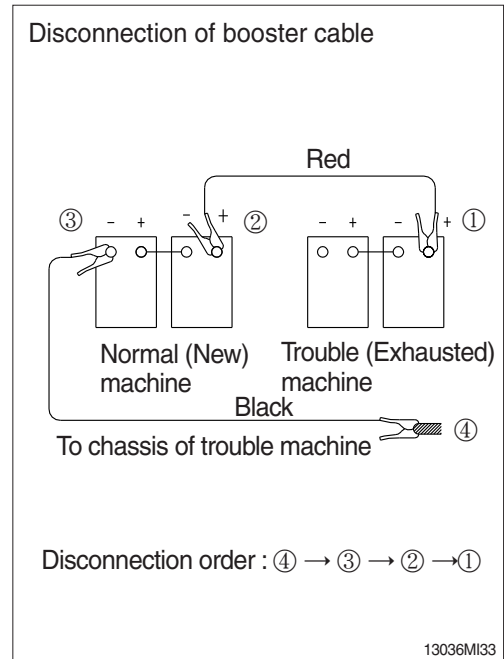

(4) Welding repair


Before start to welding, follow the below procedure.

- ① Shut off the engine and remove the starting switch.
- ② Disconnect ground cable from battery by master switch.
- ③ Before carrying out any electric welding on the machine, the battery cables should be disconnected and the connectors pulled out of the electronic control units (MCU, cluster etc).
- ④ Connect the earth (ground) lead of the welding equipment as close to the welding point as possible.

※ Do not weld or flame cut on pipes or tubes that contain flammable fluids. Clean them thoroughly with nonflammable solvent before welding or flame cutting on them.

▲ Do not attempt to welding work before carry out the above.

If not, it will caused serious damage at electric system.

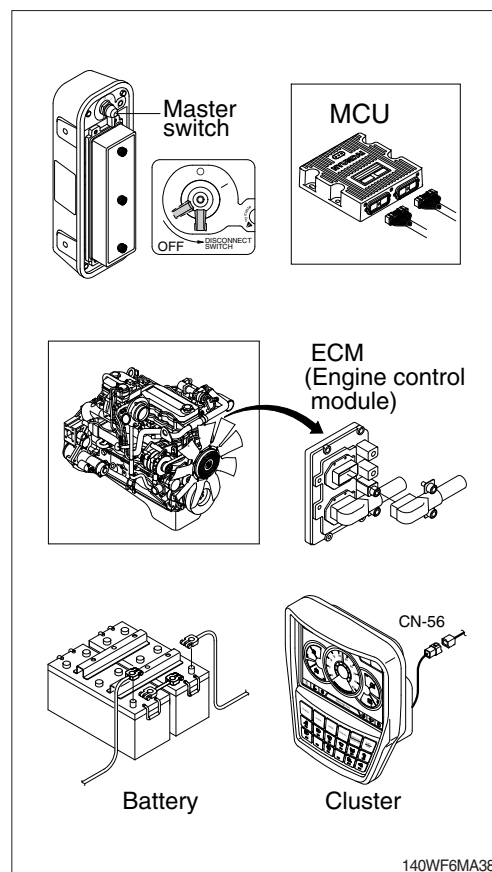


140WF6MA38

8. AIR CONDITIONER AND HEATER

1) CLEAN AND REPLACE OF FRESH AIR FILTER

※ **Always stop the engine before servicing.**


- (1) Open the LH side cover.

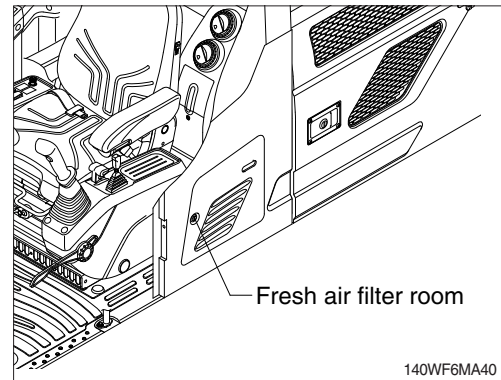

- (2) Remove the fresh air filter.

※ **When installing a filter, be careful not to change the filter direction.**


- (3) If filter is damaged or badly contaminated, use a new filter.

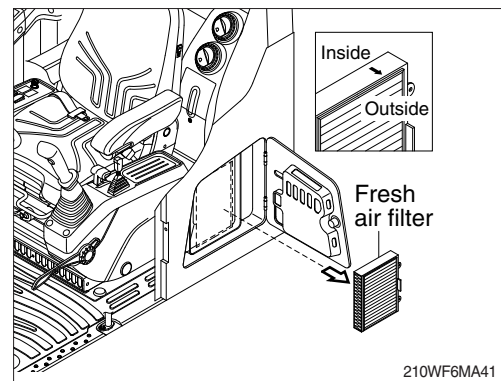


2) CLEAN AND REPLACE OF RECIRCULATION FILTER

※ **Always stop the engine before servicing.**

- (1) Move seat and console box to arrow direction using the adjust lever.

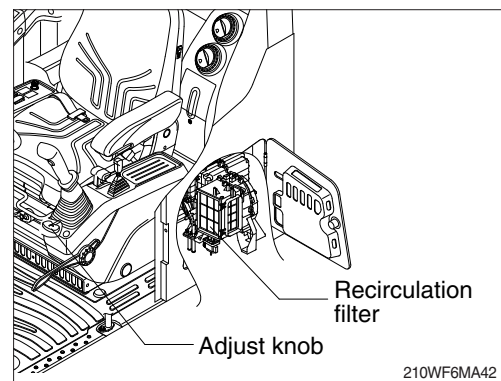


- (2) Remove recirculation filter.

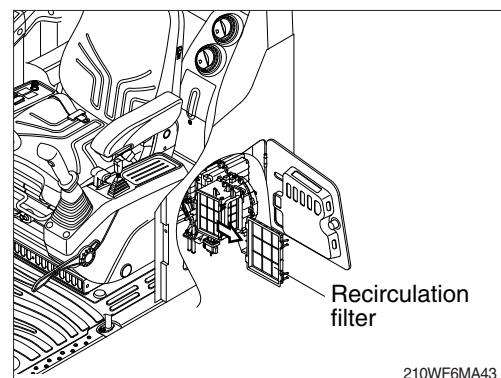

(3) Check the recirculation filter type.

(4) Non-woven fabric type

- If filter is damaged or badly contaminated, use a new filter.

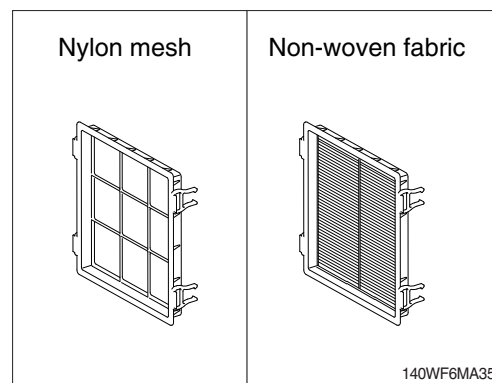


(5) Nylon mesh type

- Clean the recirculation filter using a pressurized air (below 2 kgf/cm², 28 psi) or washing with water.

△ **When using pressurized air, be sure to wear safety glasses.**

※ **Dry off after washing with water.**

(6) Inspect the filter after cleaning. If it is damaged or badly contaminated, use a new filter.

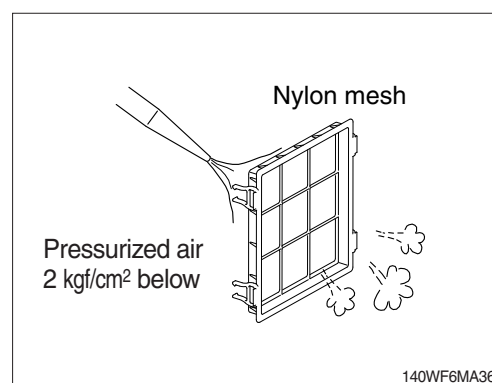

3) PRECAUTIONS FOR USING AIR CONDITIONER

- (1) When using the air conditioner for a long time, open the window once every one hour.
- (2) Be careful not to overcool the cab.
- (3) The cab is properly cooled if the operator feels cool when entering there from outside (about 5°C lower than the outside temperature).
- (4) When cooling, change air occasionally.

4) CHECK DURING SEASON

Ask the service center for replenishment of refrigerant or other maintenance service so that the cooling performance is not damaged.

5) CHECK DURING OFF-SEASON

Operate the air conditioner 2 or 3 times a month (each for a few minutes) to avoid loss of oil film in the compressor.

6) REFRIGERANT

(1) Equipment contains fluorinated greenhouse gas.

Model	Type	Quantity	GWP : 1430
HW140	HFC-134a	0.75 kg (1.65 lb)	CO ₂ eq : 1.07t

※ GWP

Global warming potential (GWP) is a measure of how much heat a gas traps in the atmosphere relative to that of carbon dioxide (CO₂). GWP is calculated in terms of the 100-year warming potential of 1 kg of a greenhouse gas relative to 1 kg of CO₂.

(2) Environmental precautions

The air conditioning system of the machine is filled with HFC-134a refrigerant at the factory.

HFC-134a refrigerant is a fluorinated greenhouse gas and contributes to global warming.

Do not release refrigerant into the environment.

(3) Safety precautions

Work on the air conditioning system must only be performed by a qualified service technician.

Do not attempt to perform work on the air conditioning system.

Wear safety goggles, chemical resistant gloves and appropriate personal protective equipment to protect bare skin when there is a risk of contact with refrigerant.

(4) Action in case of exposure

① Eye contact / Limited skin contact

Rinse with warm water and apply a light bandage. Seek medical attention immediately.

② Extensive skin contact

Rinse with warm water and carefully heat the area with warm water or warm clothing.

Seek medical attention immediately.

③ Inhalation

Leave the area and find fresh air. Seek medical attention immediately.

TROUBLESHOOTING GUIDE

1. ENGINE

※ This guide is not intended to cover every conditions, however many of the more common possibilities are listed.

Trouble	Service	Remark
The engine oil pressure lamp lights ON when engine speed is raised after completion of warm up.	<ul style="list-style-type: none"> • Add the oil to the specified level. • Replace the oil filter cartridge. • Check oil leakage from the pipe or the joint. • Replace the monitor. 	
Steam is emitted from the top part of the radiator (the pressure valve). Coolant level warning lamp lights ON.	<ul style="list-style-type: none"> • Supply the coolant and check leakage. • Adjust fan belt tension. • Wash out inside of cooling system. • Clean or repair the radiator fin. • Check the thermostat. • Tighten the radiator cap firmly or replace the packing of it. • Replace the monitor. 	
The engine does not start when the starting motor is turned over.	<ul style="list-style-type: none"> • Add fuel. • Repair where air is leaking into fuel system. • Check the injection pump or the nozzle. • Check the valve clearance. • Check engine compression pressure. • In cold weather, check if fuel warmer system is working normal. 	Refer to the pages 3-40 and 4-4.
Exhaust gas is white or blue.	<ul style="list-style-type: none"> • Adjust to specified oil quantity. • Replace with specified fuel. 	
Exhaust gas occasionally turns black.	<ul style="list-style-type: none"> • Clean or replace the air cleaner element. • Check the nozzle. • Check engine compression pressure. • Clean or replace the turbocharger. 	
Combustion noise occasionally changes to breathing sound.	<ul style="list-style-type: none"> • Check the nozzle. 	
Unusual combustion noise or mechanical noise.	<ul style="list-style-type: none"> • Check with specified fuel. • Check over-heating • Replace the muffler. • Adjust valve clearance. 	

2. ELECTRICAL SYSTEM

Trouble	Service	Remark
Lamp does not glow brightly even when engine runs at high speed. Lamp flickers while engine runs.	<ul style="list-style-type: none"> • Check for loose terminals and open-circuit wiring. • Adjust belt tension. 	
Battery charging lamp does not go out even when engine runs at high speed.	<ul style="list-style-type: none"> • Check the alternator. • Check and repair wiring. 	
Unusual noise is emitted from the alternator.	<ul style="list-style-type: none"> • Check the alternator. 	
Starting motor does not turn when starting switch is turned ON.	<ul style="list-style-type: none"> • Check and repair the wiring. • Charge the battery. • Check the starting motor. • Check the safety relay. 	
The pinion of the starting motor keeps going in and out.	<ul style="list-style-type: none"> • Charge the battery. • Check the safety relay. 	
Starting motor turns the engine sluggishly.	<ul style="list-style-type: none"> • Charge the battery. • Check the starting motor. 	
The starting motor disengages before the engine starts up.	<ul style="list-style-type: none"> • Check and repair the wiring. • Charge the battery. 	
The engine warming up lamp does not go ON.	<ul style="list-style-type: none"> • Check and repair wiring. • Check the monitor. 	
The engine oil pressure lamp does not light up when engine is stationary (when the starting switch is in ON position.)	<ul style="list-style-type: none"> • Check the monitor. • Check the caution lamp switch. 	
Battery charging lamp does not light up when the engine is stationary. (when the starting switch is in ON position.)	<ul style="list-style-type: none"> • Check the monitor. • Check and repair the wiring. 	

3. OTHERS

Trouble	Service	Remark
Track slip out of place. Excessive wear of the sprocket.	<ul style="list-style-type: none"> • Adjust tension of track. 	
Bucket either rises slowly or not at all.	<ul style="list-style-type: none"> • Add oil to specified level. 	
Slow speed of travel, swing, boom, arm and bucket.	<ul style="list-style-type: none"> • Add oil to specified level. 	
Unusual noise emitted from pump.	<ul style="list-style-type: none"> • Clean the hydraulic tank strainer. 	
Excessive oil temperature rise of hydraulic oil.	<ul style="list-style-type: none"> • Clean the oil cooler. • Adjust fan belt tension. • Add oil to specified level. 	

HYDRAULIC BREAKER AND QUICK CLAMP

1. SELECTING HYDRAULIC BREAKER

- ※ Read safety hints in this manual and breaker & quick coupler manuals in website (Dealer Portal) before using breaker and quick coupler.
- 1) Become familiar with the manual and select breakers suitable to machine specifications.
- 2) Make careful selection in consideration of oil quantity, pressure and striking force, to enable satisfied performance.
- 3) When apply a breaker to the machine, consult your local dealer of HD Hyundai Construction Equipment for further explanation.

2. CIRCUIT CONFIGURATION

- 1) As for breaker oil pressure line, use extra spool of main control valve.
- 2) Set proper breaker pressure on load relief valve.
※ The initial setting pressure of load relief valve for breaker is 210 kgf/cm².
- 3) The pressure of the HW140 system is 350 kgf/cm² (4980 psi).

4) Adjusting oil quantity

- (1) Use the breaker mode from work tool of cluster.
Use select switch to control the oil flow quantity.
· Setting oil quantity (100 lpm)

Flow set

- Max flow : Set the maximum flow for the attachment.
- (2) If the quantity of hydraulic oil is not controlled properly, it causes short lifecycle of the breaker and the machine by increased breaking force and count.

Oil quantity setting



140WF8HB01A

- 5) The accumulator should be used to the breaker charging and return line.
If the accumulator is not used, it will be damage as the input wave is delivered.
※ **Keep the pressure pulsation of pump below 60 kgf/cm² (853 psi) by installing the accumulator.**
- 6) Do not connect the breaker return line to the main control, but connect to the return line front of the cooler.
- 7) Do not connect the breaker return line to drain lines, such as of swing motor, travel motor or pump, otherwise they should be damaged.
- 8) One of spool of the main control valve should be connected to the tank.
- 9) Select the size of pipe laying considering the back pressure.
- 10) Shimless tube should be used for the piping. The hose and seal should be used HD Hyundai Construction Equipment genuine parts.
- 11) Weld the bracket for pipe clamp to prevent damage caused by vibration.

3. MAINTENANCE

1) MAINTENANCE OF HYDRAULIC OIL AND FILTER

- (1) As machine with an hydraulic breaker provides the hydraulic oil becomes severely contaminated.
- (2) So, unless frequently maintained, the machine may easily go out of order.
- (3) Inspect and maintain hydraulic oil and 3 kinds of filter elements in particular, in order to prolong machine life.

2) RELEASE THE PRESSURE IN BREAKER CIRCUIT

When breaker operating is finished, stop engine and push pedal or switch for breaker to release pressure in breaker circuit.

If pressure still remains, the lifetime of the diaphragm in the accumulator will be shortened.

- 3) Be careful to prevent contamination by dust, sand and etc.
If such pollution become mixed into the oil, the pump moving parts will wear abnormally, shorten lifetime and become damaged.
- 4) When operating breaker, bolts and nuts of main equipment may be loosened by vibration. So, it must be inspected periodically.

Service interval

unit : hours

Attachment	Operating rate	Hydraulic oil	Filter element
Breaker	100 %	600* ¹	200
		1000* ²	


*¹: Conventional hydraulic oil

*²: HD Hyundai Construction Equipment genuine long life hydraulic oil

● Replace following filter same time

- Hydraulic return filter : 1 EA
- Pilot line filter : 1 EA
- Drain filter cartridge : 1 EA

Hyd oil change guide for hydraulic breaker

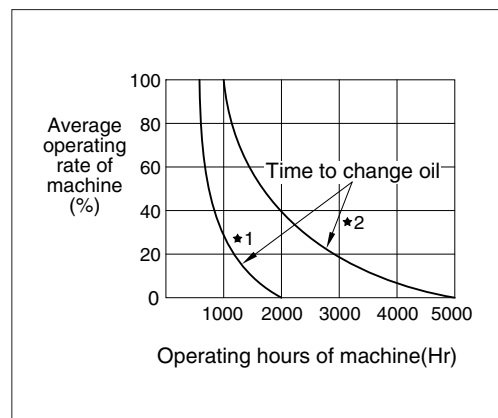

*¹: Conventional hydraulic oil


*²: HD Hyundai Construction Equipment genuine long life hydraulic oil

4. PRECAUTIONS WHILE OPERATING THE BREAKER

DO NOT BREAK ROCK WHILE LOWERING


As the breaker is heavy in comparison with bucket, it must be operated slowly.

If breaker is rapidly pushed down, working device may be damaged.

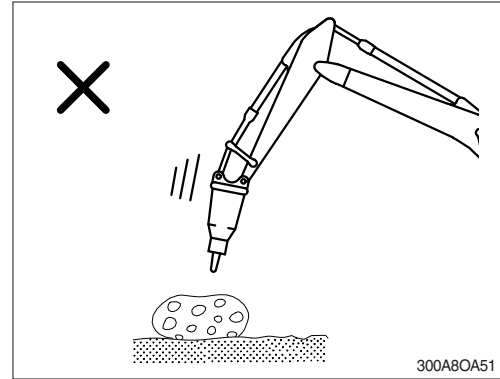

DIRECTION OF THRUST


Apply a thrust in a straight line with the tool. Place the tool on a rock with the hammering side as vertically as possible. If the hammering side is oblique, the tool may slip during hammering, causing the chisel and piston to break, or seized. When breaking, select the point of a rock on which hammering can perform stably and fully stabilize the chisel to the hammer.

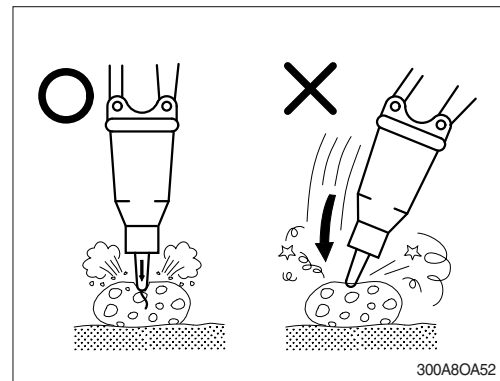

PROPER THRUST


To break effectively, a proper thrust force must be applied to the breaker. If thrust is too low, impact energy of the piston may not be sufficient to break rocks.

Breaking force is transferred to the breaker body, arm and boom resulting in damage of those parts.

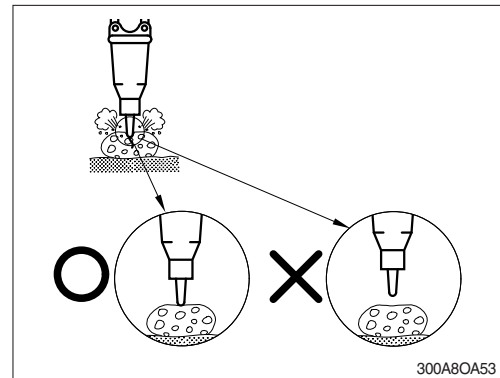


Move the impact point from the edge to the interior. Never try to break off a too large block, if the object has not broken within 30 seconds. The object should be broken up piece by piece in small blocks. Large distance steps will not improve working results.

Operating the breaker longer than 30 seconds may cause damage to the breaker.

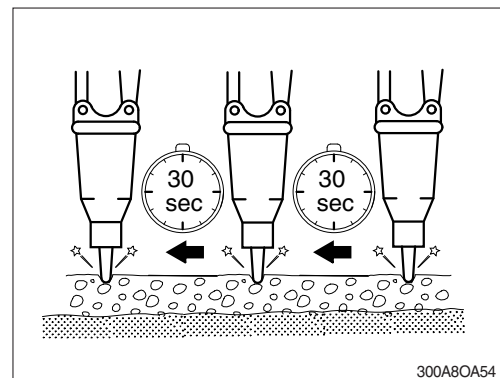

BLANKS THRUST


Blank blows, which are impact on the chisel without contact with the object, are very harmful for the breaker. Always press the chisel down onto the material before starting the breaker. And stop operation immediately as soon as the object has been broken. If operation is continued, blank blows could result in excessive wear to major components.

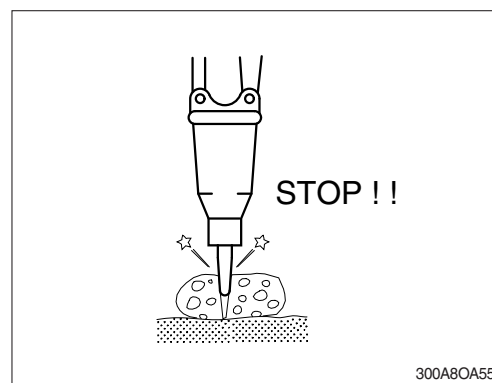

DO NOT MOVE MACHINE OR BREAKER WHILE STRIKING


Do not move hammer while striking.

This will cause damage to the working device and the swing system.

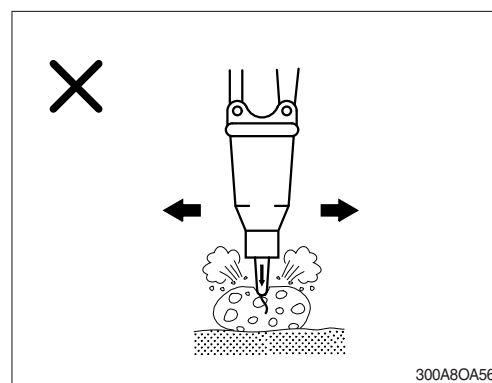


OPERATE BREAKER WITH A GAP IN EXCESS OF 100 mm (4 inches) FROM THE END OF THE STROKE TIP

If breaker is operated with the end tip, the cylinder may be damaged.

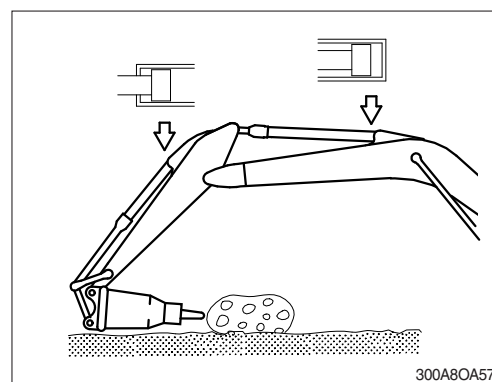


STOP THE OPERATION IMMEDIATELY IF HOSES VIBRATE EXCESSIVELY

Violent pulsations of the high / low pressure breaker hoses could indicate an accumulator fault. Check for oil leaks at the hose fitting points retightening as necessary. Should symptoms persist, contact the service shop appointed by the Hyundai dealer in your territory for repair. An excessive gap between tool and workpiece between strikes may indicate seizure of the tool in the front head. Disassemble the front head, inspect the components and repair or replace defective parts.

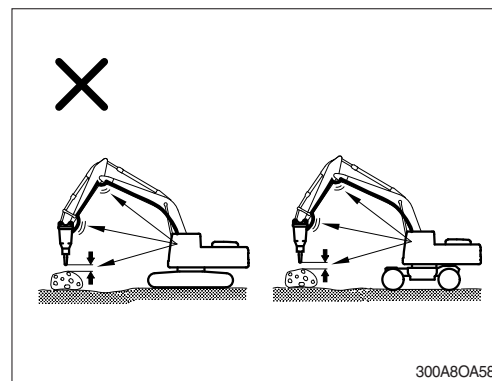


DO NOT WORK WHILE IN A SWING STATE


Do not work while swinging the upper structure. It cause oil leakage of the bend in the track shoe and rollers.

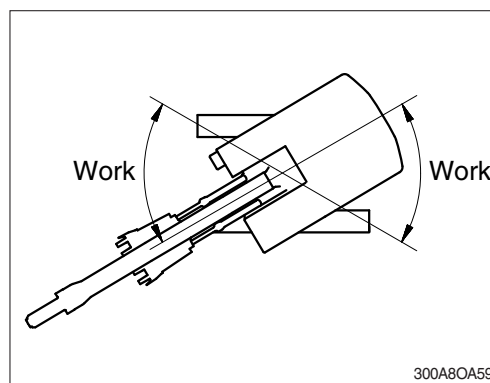

Conversely, if thrust is excessive or breaking is performed with boom of the lower chassis raised as shown, the machine may suddenly tip toward the movement. The breaker body may strike the broken rocks violently resulting in damage.

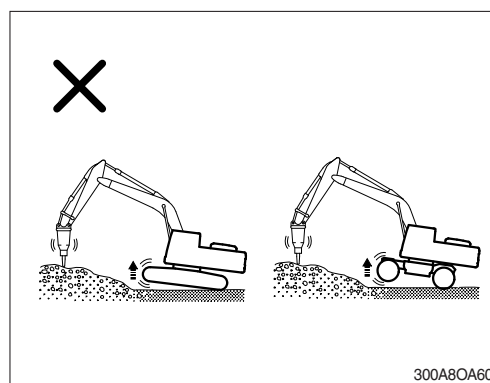


Do not extend the bucket cylinder fully and thrusting to raise the machine off the ground.

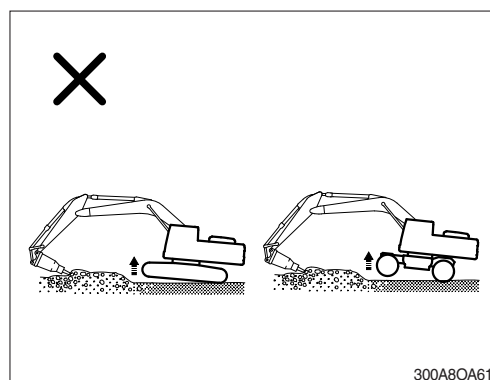

Excessive force as above may also result in vibrations being transmitted to the tracks causing damage.

Care is required to ensure adequate but not excessive force is applied to the breaker in operation.

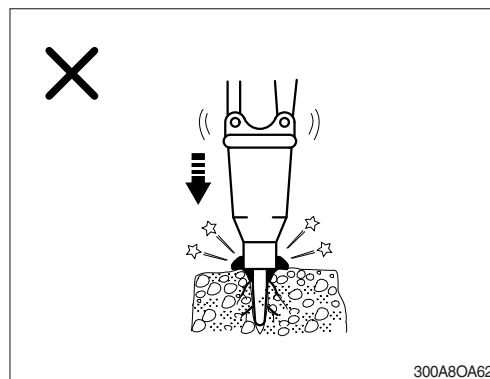


NEVER DRIVE THE CHISEL INTO THE GROUND

If the advance is too large and the chisel is not rocked to release the dust, the chisel will be driven into the material without breaking the material. This causes the chisel tip to glow red-hot and lose its hardness.

As a result, the chisel wears out more quickly. Operating in this way is not permitted.

Dust dampens impact power, when the chisel is inserted into the ground, and reduces the efficiency of the breaker. Tilt the breaker slightly backward and forward, not more than 5° , while operating so that the dust can escape.

Do not rock the breaker at angles greater than 5° or the chisel will be broken.

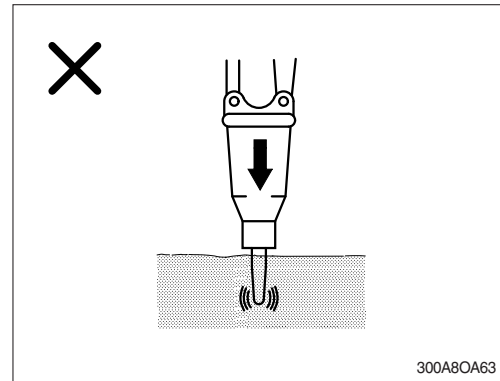


NEVER USE AS A LEVER

Do not use the chisel as a lever; e.g. crowbar, as this will cause the chisel to break.


Under any circumstances, operating in this way is not permitted.

Most of bending failure of the chisel may be caused by lever action in stone that is inside hard or frozen ground. Be careful and stop operating if you feel sudden resistance under the chisel.

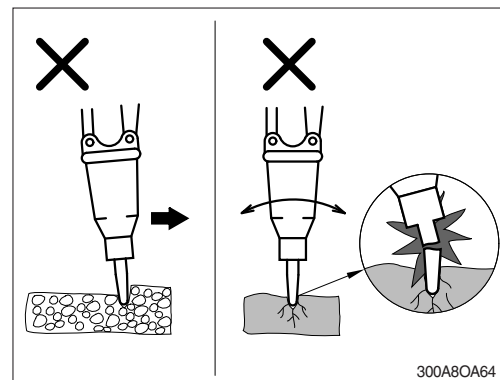

TAKE CARE OF CHISEL AND BOOM INTERFACE


Be aware of clearance between breaker tip and the underside of boom as shown.

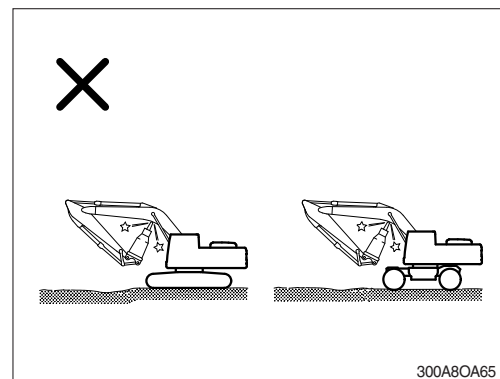

NEVER USE FOR LIFT OR TRANSPORT PURPOSES


The hydraulic breaker is not designed to lift or transport loads. Never use the chisel as a lifting point.

This is dangerous and could damage the breaker or the chisel.

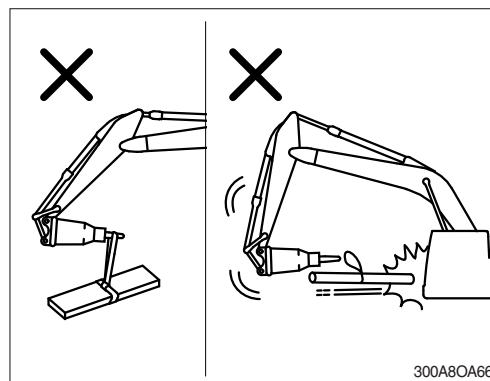


NEVER USE THE HYDRAULIC BREAKER UNDER WATER

The hydraulic breaker, as a standard assembly, never be used in or under water without prior conversion. If you use under water, water fills the impact chamber between the piston and the chisel, a strong hydraulic pressure wave is generated and will damage the seals in the breaker. And, in addition, corrosion, lack of lubrication or penetration of water could result in further damage to components of the breaker and the lower chassis. To operate the breaker under water, compressed air must be supplied into the breaker, into the impact chamber of the front-head, prior to use. Consult your HD Hyundai Construction Equipment dealer for the underwater kit.

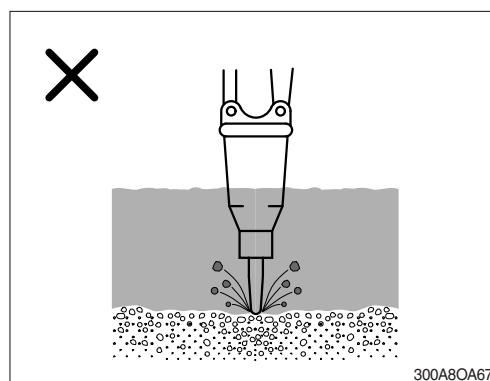

DO NOT USE BREAKER TO CARRY BROKEN STONE OR ROCK BY SWING OPERATING

This may damage the operation device and swing system.

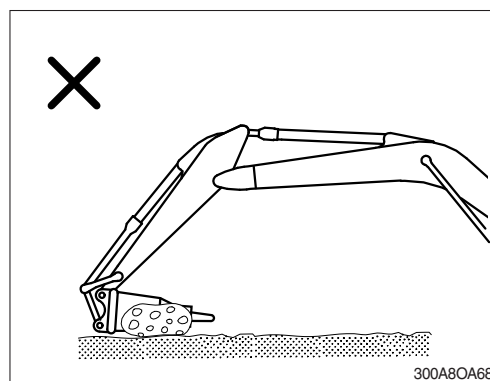


NEVER USE THE CHISEL OR HYDRAULIC BREAKER TO MOVE ROCKS OR OTHER OBJECTS

The hydraulic breaker is not designed for this usage.

Do not use the breaker or chisel to roll, push the object or reposition the lower chassis.


This may cause damage to the breaker and the lower chassis.

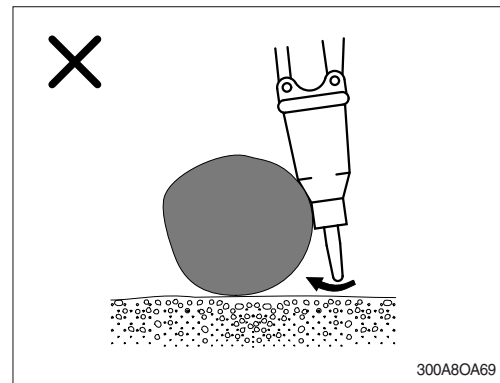


5. QUICK CLAMP

1) FIXING BUCKET WITH QUICK CLAMP


- (1) Before fixing bucket, remove safety pin of the moving hook.
- (2) Pulling safety button, press the quick clamp switch to unlock position. Then, the moving hook is placed on release position.

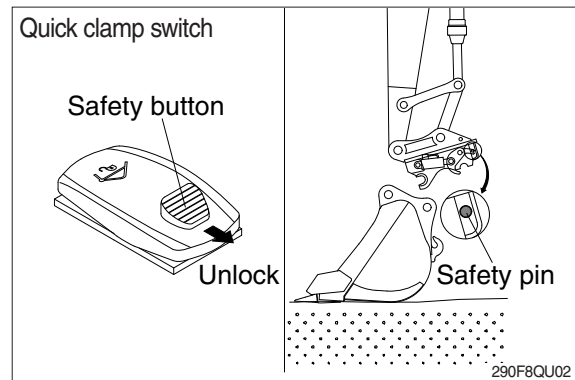


- (3) Aligning the arm and bucket, insert static hook of quick clamp to the bucket pin.

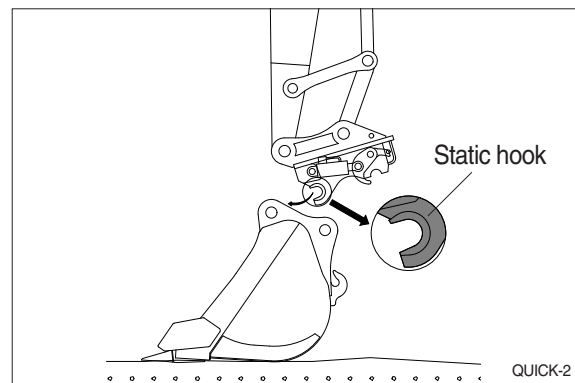


- (4) Operate RCV lever to bucket-in position. Then, the moving hook is coupled with the bucket link pin. Make sure that the moving hook is completely contacted with bucket link pin.

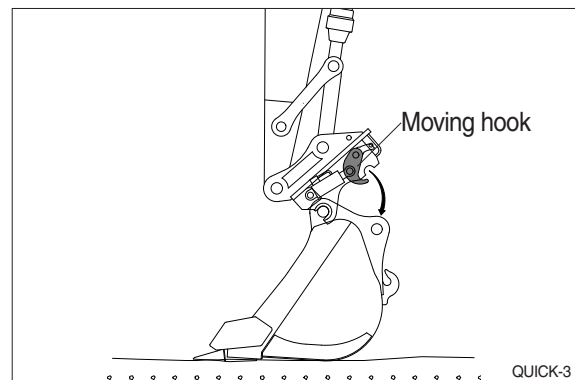

- (5) Push safety button to lock position. Operate RCV lever to bucket-in position.
- ※ **Be sure to check connection status between bucket pins and hooks of quick clamp.**

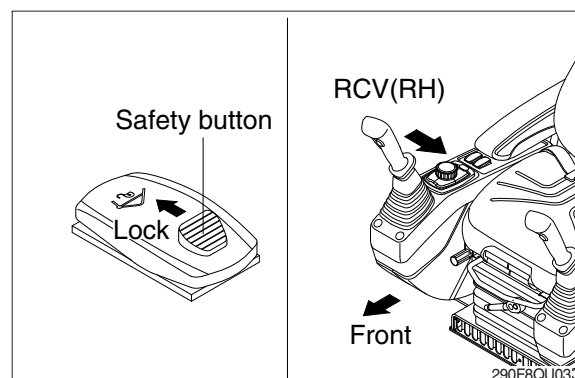

- (6) After checking the connection status between bucket pins and hooks of quick clamp, **insert safety pin of moving hook to lock position.**

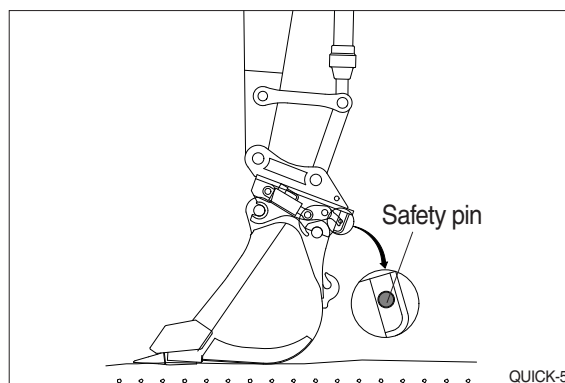

2) REMOVE BUCKET FROM QUICK CLAMP

Removing procedure is reverse of fixing.

3) PRECAUTION OF USING QUICK CLAMP



- ⚠ When operating the machine with quick clamp, confirm that the quick clamp switch is lock position and safety pin of moving hook is inserted.

Operating the machine with quick clamp switch unlocked and without safety pin of moving hook can cause the bucket to drop off and bring about the accident.

- ⚠ Serious injury or death can result from this accident.

- ⚠ Be careful to operate the machine equipped with quick clamp. The bucket may hit cab, boom and boom cylinders when it reaches vicinity of them.

HD Hyundai Construction Equipment will not be responsible for any injury or damage in case that safety pin is not installed properly.

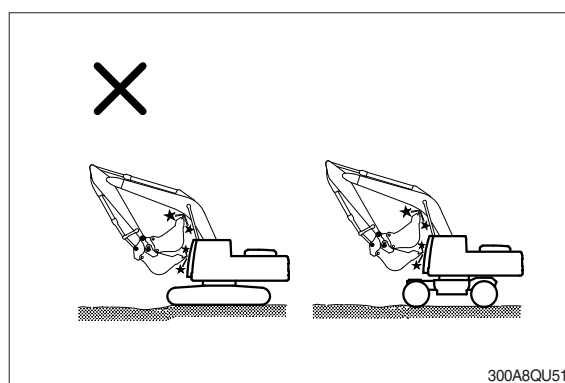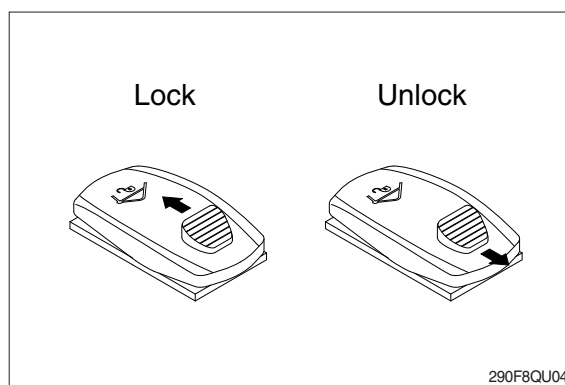

A

AAVM	3-35
Accelerator pedal	3-50
After engine start	4-5
Air breather element	6-36
Air cleaner filter	6-26
Air conditioner & heater	3-36
Air conditioner filter	6-51
Attachment lowering	4-27
Axle gear oil	6-41

B

Battery	6-48
Before starting engine	4-2
Bluetooth	3-61
Boom lowering	4-27
Brake pedal	3-50
Bucket clearance adjustment	6-46
Bucket replacement	6-44
Bucket selection guide	2-14
Bucket tooth replacement	6-45

C

Cab air filter	6-51
Cab device	3-1
Changing machine control pattern	4-30
Charge air cooler	6-23
Cigar lighter	3-52
Cluster	3-2
Coolant	6-20
Cooling fan	6-24
Crankcase breather filter	6-29

D

DEF/AdBlue® supply module filter	6-32
DEF/AdBlue® tank	6-31
Dimension and weight	5-3
Drain filter	6-36
Drive shaft lubricate	6-38

E

Emergency engine speed control connector ...	3-79
Engine ECM	4-9
Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3

Engine starting by booster	6-49
Engine stop	4-6
ESL	3-28

F

Fan belt	6-24
Fan belt tensioner	6-25
Fuel filter	6-28
Fuel leakage	6-31
Fuel system bleeding	6-28
Fuel tank	6-27
Fuel warmer	3-14
Fuse & relay box	3-78

G

Gauge	3-3
-------------	-----

H

Haptic controller	3-67
HEST	3-11
Hydraulic breaker	8-1
Hydraulic oil changing	6-34-1
Hydraulic oil filling	6-34
Hydraulic oil level	6-34

L

LCD	3-2
Levers & pedals	3-48
Lifting capacities	2-7
Lubricant specification	2-20

M

Maintenance check list	6-11
Major components	2-1
MCU (Machine Control Unit)	3-78
Mode selection system	4-7
Monitor panel	3-2
Mounting and dismounting	1-12
Multifunction switch	3-45
Multimodal dial	3-68

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
Operating pattern	4-30

P

Pedals	3-48
Periodical replacement parts	6-5
Pilot lamps	3-13
Pilot line filter	6-36
Pin & bushing adjustment	6-47
Prefilter	6-27

Q

Quick clamp	8-6
-------------------	-----

R

Radiator flushing	6-20
Radio & USB player	3-53
RCV lever lubricate	6-38
Recommended oils	2-20, 6-10
Relieving pressure	6-3
Return filter	6-35
RCV lever operation pattern	4-30

S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
SCR cleaning	4-32
Seat	3-70
Seat belt	3-77
Select switch (parking / working / traveling)	3-47
Service meter	3-79
Service socket	3-79
Smart key tag	3-40
Speciation for major component	2-16
Specifications	2-2
Start switch	3-40
Storage	4-28
Suction strainer	6-35
Surge tank	6-20
Swing bearing grease	6-37
Swing gear & pinion grease	6-38
Swing lock pin	3-50
Swing reduction gear oil	6-37
Switch panel	3-40
Switches	3-16, 40

T

Tires air pressure	6-40
Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-16
Transportation	5-2
Transmission oil	6-43
Travelling machine	4-13
Troubleshooting guide	7-1

U

USB port	3-68
----------------	------

W

Warming up operation	4-5
Warning lamps	3-6
Weight	2-6
Welding repair	6-50
Windshield	3-80
Working device operation	4-12
Working method	4-19
Working range	2-4