

A

AAVM	3-41
After engine start	2-5
Air breather element	4-47
Air cleaner filter	4-39
Air conditioner & heater	3-42
Air conditioner filter	4-64
Alternate exit	1-40
Attachment lowering	2-30
Auto safety lock	3-17
Axle gear oil	4-52

B

Battery	4-60
Battery cable and connection	4-62
Before starting engine	2-2
Bluetooth	3-71
Boom lowering	2-30
Brake pedal	3-58
Bucket clearance adjustment	4-57
Bucket replacement	4-55
Bucket selection guide	7-11
Bucket tooth replacement	4-56

C

Cab air filter	4-63
Cab device	3-1
Camera monitor	3-91
Changing machine control pattern	2-33
Charge air cooler	4-26
Charge air piping	4-31
Cigar lighter	3-60
Cluster	3-2
Cooling fan	4-27

D

DEF/AdBlue® supply module filter	4-34
DEF/AdBlue® tank	4-32
DEF/AdBlue® tank filter	4-33
Dimension and weight	5-3
DPF	4-36
Drain filter	4-47
Drive shaft lubricate	4-49

E

Emergency engine speed connector	3-90
--	------

Engine cleaning	4-36
Engine oil discoloration	4-23
Engine oil filter	4-20
Engine oil level	4-20
Engine starting & stop	2-3
Engine starting by booster	4-61
Engine stop	2-6
Exhaust system cleaning	2-35
ESL	3-34

F

Fan belt	4-27
Fuel filter	4-31
Fuel leakage	4-32
Fuel pre-filter	4-30
Fuel system bleeding	4-31
Fuel tank	4-29
Fuse caution	1-52
Fuse & relay box	3-89

G

Gauge	3-3
Getting on and off	1-19

H

HEST	3-10
Hydraulic breaker	8-1
Hydraulic oil changing	4-46
Hydraulic oil filling	4-3
Hydraulic oil level	4-45
Hydraulic oil return filter	4-47

J

Jog dial module	3-77
Joystick steering control lever	3-59

L

LCD	3-2
Levers & pedals	3-55
Lifting capacities	7-5
Lubricant specification	7-17

M

Maintenance check list	4-10
Major component	7-1
MCU (Machine Control Unit)	3-89
Mode selection system	2-7

Monitor panel	3-2
Multifunction switch	3-51
Multimodal dial	3-77

N

New machine operation	2-1
-----------------------------	-----

O

Oil cooler	4-26
Operating pattern	2-33
Overhead set	4-38
Owner menu editing	3-36

P

Pedals	3-55
Periodical replacement parts	4-5
Pilot line filter	4-48
Pin & bushing lubrication	4-47
Pilot lamps	3-14

Q

Quick coupler	8-6
---------------------	-----

R

Radiator coolant	4-23
Radiator flushing	4-23
Radio & USB player	3-61
RCV lever lubricate	4-49
Recommended oils	7-17
Relieving pressure	4-3
RCV lever operating pattern	2-33
Road traveling	5-1

S

Safety labels	1-32
Safety instructions	1-2
Safety parts	4-5
Seat	3-81
Seat belt	3-88
Select switch (parking / working / traveling) ...	3-52
Service meter	3-90
Service socket	3-90
Smart key tag	3-46
Specification for major component	7-13
Specification	7-2
Start switch	3-46
Storage	2-31

Suction strainer	4-46
Surge tank	4-23
Swing gear & pinion grease	4-48
Switch panel	3-46
Switches	3-20, 3-46

T

Tire	4-51
Torques-major component	4-8
Torques-fastener	4-6
Towing machine	2-18
Trailer connector	3-103
Trailer towing solution	2-20
Transmission oil	4-54
Transportation	5-1
Traveling machine	2-14
Troubleshooting guide	6-1

U

USB port	3-77
----------------	------

V

Vibration damper	4-37
------------------------	------

W

Warming up operation	2-5
Warning lamps	3-6
Weight	7-4
Welding repair	4-62
Windshield	3-103
Working device operation	2-12
Working method	2-22
Working range	7-3