

A

AAVM	3-32
Accel dial	3-34
After engine start	2-5
Air breather element	4-39
Air cleaner element	4-27
Air conditioner & heater	3-40
Air conditioner filter	4-51
Alternate exit	1-39
Attachment lowering	2-23
Auto safety lock	3-11

B

Battery	4-48
Battery cable and connection	4-50
Before starting engine	2-2
Bluetooth	3-61
Boom lowering	2-23
Bucket clearance adjustment	4-46
Bucket replacement	4-44
Bucket selection guide	7-33
Bucket tooth replacement	4-45

C

Cab air filter	4-51
Cab device	3-1
Changing machine control pattern	2-26
Charge air cooler	4-24
Charge air piping	4-29
Cigar lighter	3-44
Cluster	3-2
Cooling fan	4-25

D

Dimension and weight	5-2
DPF	4-31
Drain filter	4-39

E

Emergency engine speed connector	3-69
Engine cleaning	4-31
Engine oil filter	4-19
Engine oil level	4-19
Engine starting & stop	2-3

Engine starting by booster	4-49
Engine stop	2-6

F

Fan belt	4-25
Fuel filter	4-29
Fuel leakage	4-30
Fuel pre-filter	4-28
Fuel system bleeding	4-28
Fuel tank	4-27
Fuse & relay box	3-68

G

Gauge	3-3
Getting on and off	1-19

H

Hydraulic breaker	8-1
Hydraulic oil changing	4-37
Hydraulic oil filling	4-3
Hydraulic oil level	4-36
Hydraulic oil return filter	4-38

L

LCD	3-2
Levers & pedals	3-38
Lifting capacities	7-9
Lubricant specification	7-40

M

Maintenance check list	4-10
Major component	7-1
MCU (Machine Control Unit)	3-68
Mode selection system	2-7
Monitor panel	3-2

N

New machine operation	2-1
-----------------------------	-----

O

Oil cooler	4-24
Operating pattern	2-26
Overhead set	4-52
Owner menu editing	3-28

P

Pedals	3-38
Periodical replacement parts	4-5
Pilot line filter element	4-39
Pin & bushing lubrication	4-47
Pilot lamps	3-9

Q

Quick coupler	8-6
---------------------	-----

R

Radiator coolant	4-21
Radiator flushing	4-21
Radio & USB player	3-51
RCV lever lubricate	4-42
Recommended oils	7-40
Relieving pressure	4-3
RCV lever operating pattern	2-26

S

Safety lables	1-32
Safety instructions	1-2
Safety parts	4-5
Seat	3-67
Seat belt	3-67
Service meter	3-69
Service socket	3-69
Smart key tag	3-33
Specification for major component	7-67
Specification	7-2
Start switch	3-37
Storage	2-24
Suction strainer	4-38
Surge tank	4-21
Swing bearing grease	4-40
Swing gear & pinion grease	4-41
Swing reduction gear oil	4-40
Switch panel	3-33
Switches	3-13, 33

T

Torques-major component	4-8
Torques-fastener	4-6
Towing machine	2-15

Track adjustment	4-43
Track shoe selection	7-36
Transportation	5-1
Travel reduction gear oil	3-41, 42
Traveling machine	2-13
Troubleshooting guide	6-1

U

Undercarriage	7-35
USB port	3-58

W

Warming up operation	2-5
Warning lamps	3-5
Weight	7-8
Welding repair	4-50
Windshield	3-70
Working device operation	2-12
Working method	2-16
Working range	7-6