


# SAFETY LABELS

## 1. LOCATION (1/2)


Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

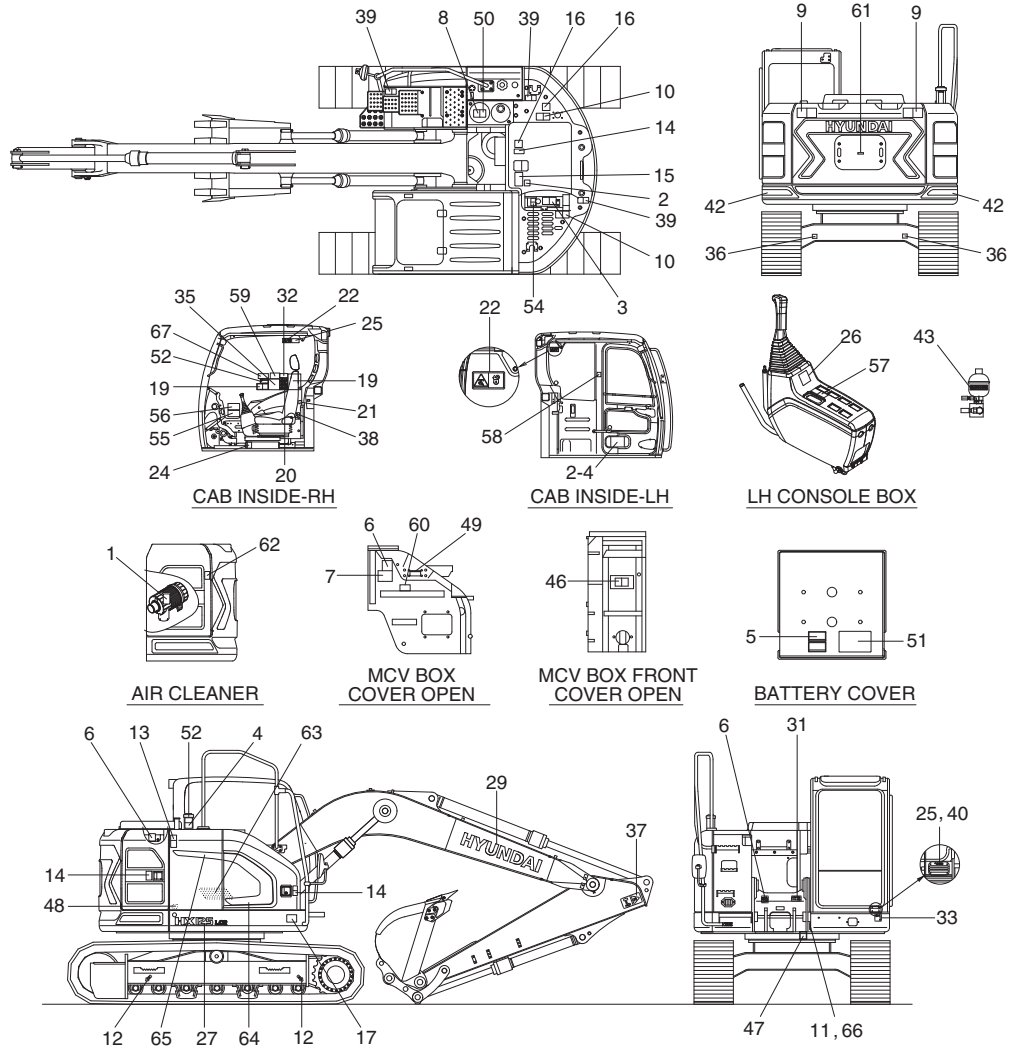

- |                         |                           |  |
|-------------------------|---------------------------|--|
| 1 Air cleaner filter    | 17 Transporting           | 37 Keep clear-attachment                   |
| 2 Turbocharger cover    | 19 M/control pattern      | 38 Electric welding                        |
| 3 Radiator cap          | 20 Ref operator's manual  | 39 Falling                                 |
| 4 Fueling               | 21 Hammer                 | 40 FOPS FOG plate                          |
| 5 Battery accident      | 22 Safety front window    | 41 Caution (water separator, turbocharger) |
| 6 High pressure hose    | 24 Air conditioner filter | 42 Reflector                               |
| 7 Hydraulic oil level   | 25 ROPS plate             | 43 Accumulator                             |
| 8 Hydraulic oil lub     | 26 Console box tilting    | 44 M/control pattern change-w/ valve       |
| 9 Keep clear-rear       | 27 Model name             | 46 M/control pattern change-w/o valve      |
| 10 Lifting eye          | 29 Trade mark (boom)      | 47 Swing bearing grease                    |
| 11 Name plate           | 31 Reduction gear grease  | 48 Battery position                        |
| 12 Sliding ideogram     | 32 Clamp locking          | 49 Lubrication oil                         |
| 13 Keep clear-side      | 33 Noise level LWA        | 50 Fuel shut off                           |
| 14 Stay fix             | 34 Service instruction    | 51 MCU/ECM connector                       |
| 15 Engine hood shearing | 35 Lifting chart          | 52 Ultra low sulfur diesel                 |
| 16 No step              | 36 Tie                    | 54 Surge tank                              |

130ZF0SL01

## LOCATION (2/2)

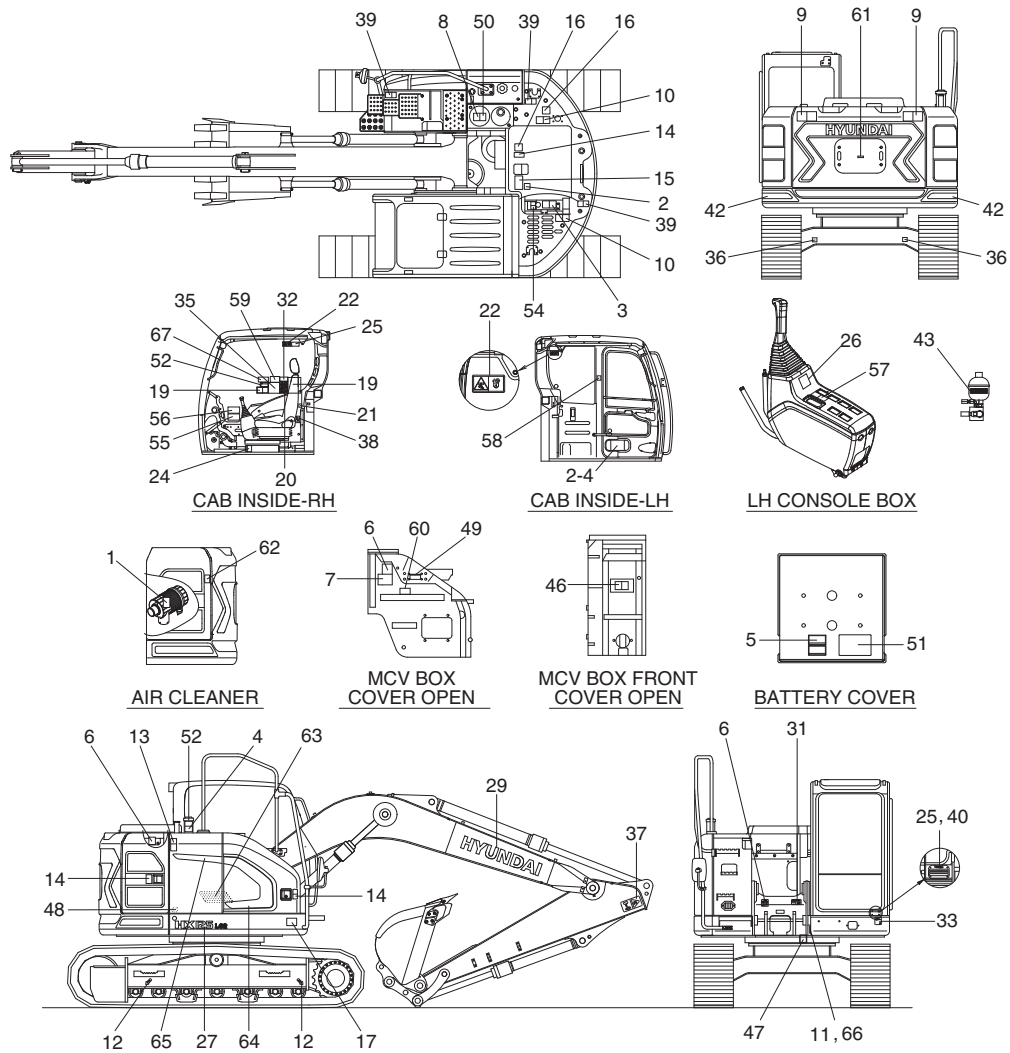

- |    |                   |    |                  |    |                       |
|----|-------------------|----|------------------|----|-----------------------|
| 55 | Key off caution   | 60 | Fuel filler pump | 65 | Tank band             |
| 56 | RCV lever         | 61 | Heavy caution    | 66 | EMC                   |
| 57 | Dozer ideogram    | 62 | Refrigerant      | 67 | Engine oil life reset |
| 58 | Fire extinguisher | 63 | Cab front band   |    |                       |
| 59 | Control RCV       | 64 | MCV box band     |    |                       |

130ZF0SL01

## 2. DESCRIPTION


There are several specific warning labels on this machine please become familiarized with all warning labels.

Replace any safety label that is damaged, or missing. If a safety label is attached to a part that is replaced, install a safety label on the replacement part.

### 1) AIR CLEANER FILTER (item 1)

This warning label is positioned on the left side of the rear support.

- ※ **Periodic and proper inspection, cleaning and change of elements prolong engine life time and maintain the good performance of engine.**

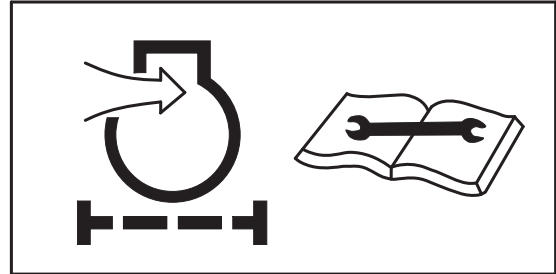

21070FW01

### 2) TURBOCHARGER COVER (item 2)

This warning label is positioned on the engine hood.

- ⚠ **Do not touch turbocharger or it may cause severe burn. When the engine is running or immediately after engine shut down.**



21070FW02

### 3) RADIATOR CAP (item 3)

This warning label is positioned on the radiator.

- ⚠ **Never open the filler cap while engine running or at high coolant temperature. Hot coolant can cause serious burns, injury or death.**




14070FW03

### 4) FUELING (item 4)

This warning label is positioned on the rear side of fuel filler neck.

- ⚠ **Stop the engine when refueling. All lights or flames shall be kept at a safe distance while refueling.**

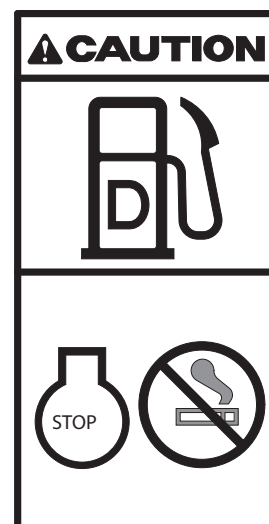

290F0FW02

#### 5) BATTERY ACCIDENT (item 5)

This warning label is positioned on the battery cover.

- ⚠ **Electrolyte containing sulfuric acid cause severe burns. Avoid being in contact with skin, eyes or clothes. In the event of accident flush with sufficient water, call a physician immediately.**
- ✳ **Maintain the electrolyte at the recommended level. Add distilled water to the battery only when starting up, never when shutting down.**  
With electrolyte at proper level, less space may cause the gases to be accumulated in the battery.
- ⚠ **Extinguish all smoking materials and open flames before checking the battery.**
- ⚠ **Do not use matches, lighters or torches as a light source near the battery for the probable presence of explosive gas.**
- ⚠ **Do not allow unauthorized personnel to change the battery or to use booster cables.**
- ⚠ **For safety from electric shock, do not battery terminal with a wet hand.**



36070FW05

#### 6) HIGH PRESSURE HOSE (item 6)

This warning labels are positioned on three places.

- Right side of the hydraulic tank
- Front side of the upper frame
- Inner side cover of the MCV box
- ⚠ **Escaping fluid under pressure can penetrate the skin causing serious injury.**
- ⚠ **Avoid the hazard by relieving pressure before disconnecting hydraulic lines or other lines.**
- ✳ **See the maintenance section for details.**




14070FW29

#### 7) HYDRAULIC OIL LEVEL (item 7)

This warning label is positioned on the inner side cover of the MCV box.

- ▲ Place the bucket on the ground whenever servicing the hydraulic system.
- ※ Check oil level on the level gauge.
- ※ Refill the recommended hydraulic oil up to specified level if necessary.

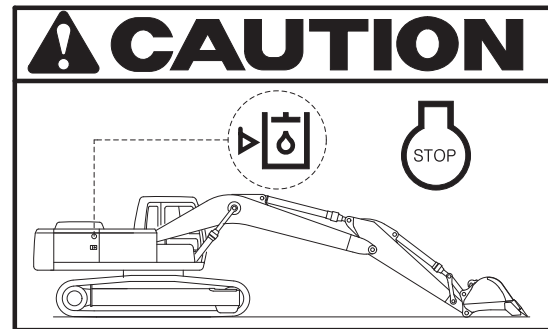

21070FW07

#### 8) HYDRAULIC OIL LUBRICATION (item 8)

This warning label is positioned on the top of the hydraulic tank.

- ※ Do not mix with different brand oils.
- ▲ Never open the filler cap while high temperature.
- ▲ Loosen the cap slowly and release internal pressure completely.




14070FW08

#### 9) KEEP CLEAR-REAR (item 9)

This warning label is positioned on the rear of the counterweight.

- ▲ To prevent serious personal injury or death keep clear of machine swing radius.
- ▲ Do not deface or remove this label from the machine.

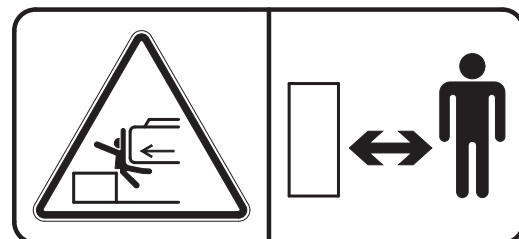


21090FW09

#### 10) LIFTING EYE (item 10)

This warning label is positioned on the pump hood and air cleaner hood.

- ▲ Do not lift the machine by using lifting eyes on the counterweight or the lifting eyes may be subject to overload causing its breaking and possible personal injury.
- ※ See page 5-7 for proper lifting method of the machine.

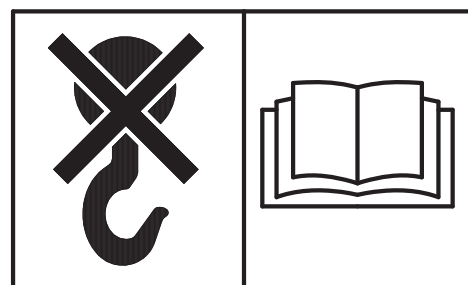

21070FW10

**11) KEEP CLEAR-SIDE (item 13)**

This warning label is positioned on the rear side of the LH and RH side cover.

- ⚠ **To prevent serious personal injury or death keep clear of machine swing radius.**
- ⚠ **Do not deface or remove this label from the machine.**



21070FW13

**12) STAY FIX (item 14)**

This warning label is positioned on the engine hood.

- ⚠ **Be sure to support the stay when the door needs to be opened.**
- ⚠ **Be careful that the opened door may be closed by the external or natural force like strong wind.**




21070FW14

**13) ENGINE HOOD SHEARING (item 15)**

This warning label is positioned on the engine hood.

- ⚠ **Don't open the engine hood during the engine's running. Stay clear of rotating parts.**
- ⚠ **Don't touch exhaust pipe or it may cause severe burn.**

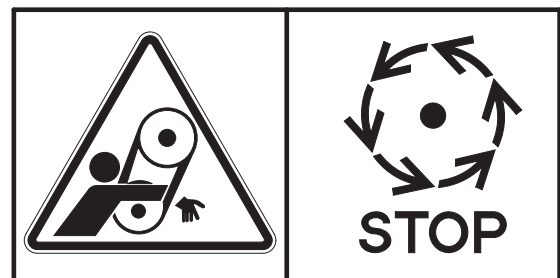

21070FW15

**14) NO STEP (item 16)**

This warning label is positioned on the engine hood and pump hood.

- △ **Don't step on the engine hood, pump hood and counterweight.**



21070FW16

**15) TRANSPORTING (item 17)**

This warning label is positioned right side of upper frame.

- ▲ **Study the operator's manual before transporting the machine, if provided and tie down arm and track to the carrier with lashing wire.**

※ See page 5-6 for details.



14070FW17


**16) MACHINE CONTROL PATTERN (item 19)**

This warning label is positioned in right window of the cab.

- ▲ **Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.**

- ▲ **Failure to do so could result in injury or death.**

※ See page 4-12 for details.

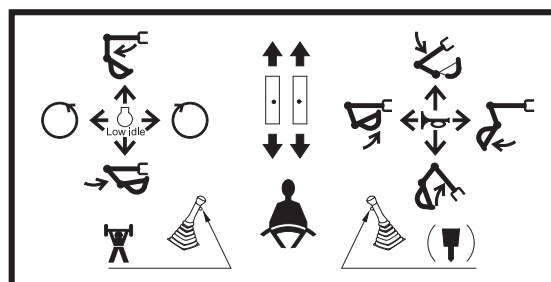

36070FW19

### 17) REF OPERATOR'S MANUAL (item 20)

This warning label is positioned on the right side window of the cab.

#### (1) Ref operator manual


- ▲ Study the operator's manual before starting and operating machine.
- ▲ Do not operate this machine unless you have read and understand the instructions and warnings in this manual. Failure to follow the instructions or warnings could result in injury or death.

#### (2) Max height

- ▲ Serious injury or death can result from contact with electric lines. An electric shock being received by merely coming into the vicinity of an electric lines, the minimum distance should be kept considering the supply voltage as page 1-16.

#### (3) Interference


- ▲ Be careful to operate machine equipped with quick clamp or extensions. Bucket may hit cab or boom, boom cylinders when it reached vicinity of them.

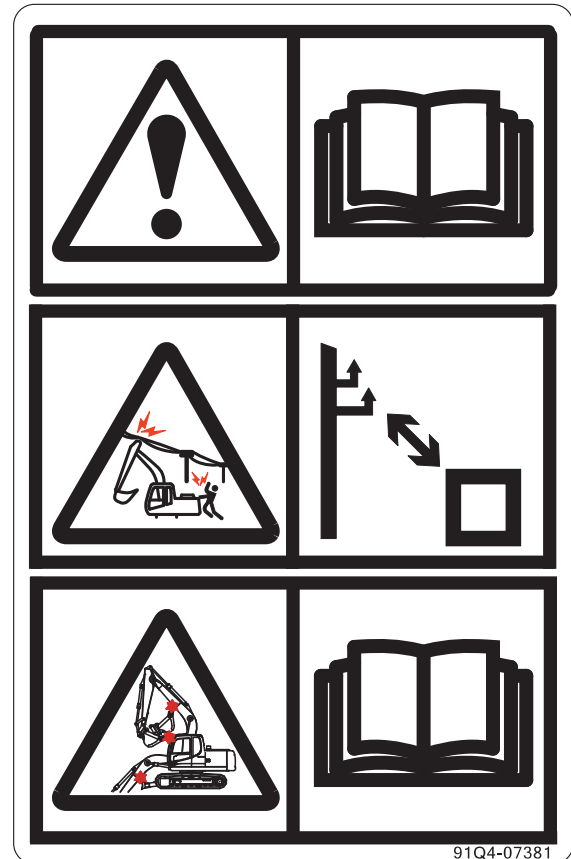

### 18) SAFETY FRONT WINDOW (item 22)

This warning label is positioned on the both upper side window of the cab.

- ▲ Be careful that the front window may be promptly closed.
- ※ See page 3-69 for details.

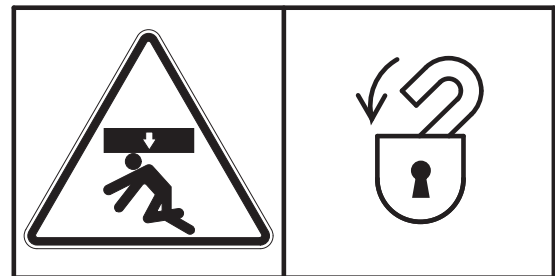


21070FW24



#### 19) AIR CONDITIONER FILTER (item 24)

This warning label is positioned on the air conditioner cover.

- ※ **Periodic and proper inspection, cleaning and change of filter prolong air conditioner life time and maintain good performance.**

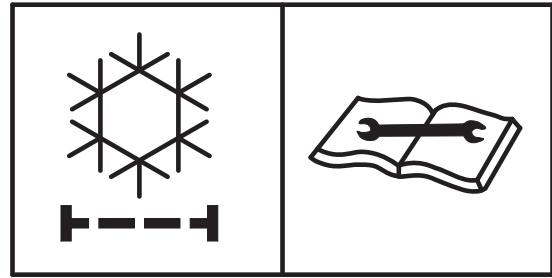


21070FW26

#### 20) CONSOLE BOX TILTING (item 26)

This warning label is positioned on the LH console box.

- ※ **Before you get off the machine be sure to tilt the LH console box.**

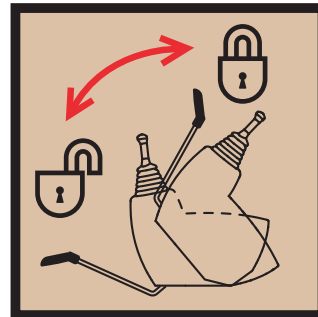

30007A1FW06

#### 21) REDUCTION GEAR GREASE (item 31)

This warning label is positioned in the front of upper frame.

- ⚠ **Grease is under high pressure.**  
Grease coming out of the grease plug under pressure can penetrate the body causing injury or death.




21070FW35

#### 22) CLAMP LOCKING (item 32)

This warning label is positioned on the right side window of cab.

- ⚠ **Serious injury or death can result from dropping bucket.**
- ⚠ **Operating the machine with quick clamp switch unlocked or without safety pin of moving hook can cause the bucket to drop off.**

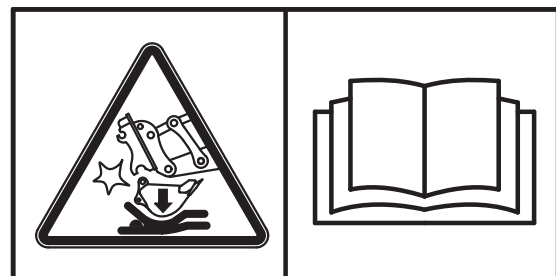


14070FW60

### 23) TIE (item 36)

This warning label is positioned on the front/rear and LH/RH side of the lower frame.

- ⚠ **Never tow the machine using tie hole, because this may break.**
- ⚠ **See page 4-15 for detail.**

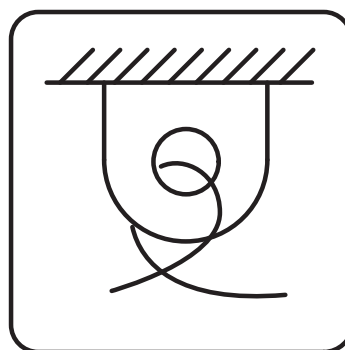

4507A0FW02

### 24) KEEP CLEAR-ATTACHMENT (item 37)

This warning label is positioned on both side of the arm.

- ⚠ **Serious injury or death can result from falling of the attachment.**
- ⚠ **To prevent serious injury or death, keep clear the underneath of attachment.**



14070FW31

### 25) ELECTRIC WELDING (item 38)


This warning label is positioned on the battery cover.

- ⚠ **Before carrying out any electric welding on this machine, follow the below procedure.**

- Pull the connector out of all electric control units.

Connector the ground lead of the welding equipment as close to the welding point as possible.

- ※ **See page 6-45 for detail.**

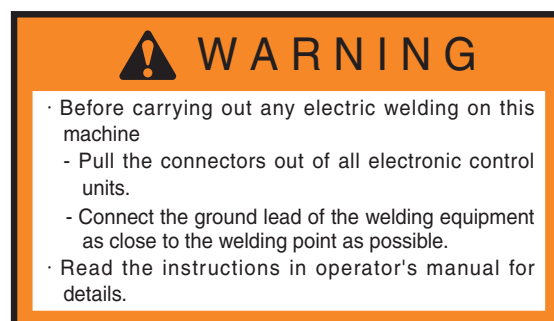

7807AFW20

## 26) FALLING (item 39)

This warning label is positioned on the top of the MCV front cover, pump hood and counterweight.

- ⚠ Falling is one of the major cause of personal injury.
- ⚠ Be careful of slippery conditions on the platforms, steps and handrails when standing on the machine.




14070FW30

## 27) CAUTION (W/SEPARATOR, TURBOCHARGER) (item 41)

This warning label is positioned on the right window of the cab.

- ⚠ In order to protect high pressure fuel system, please drain water in water separator before starting the engine.
- ⚠ In order to prevent turbocharger failure, please allow more than 5 minutes' cool down period (no load low idle operation) before shutting the engine off.

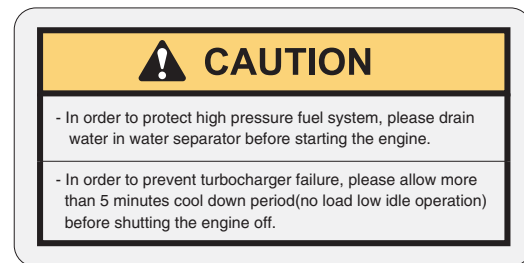

120090SL02

## 28) REFLECTOR (item 42)

This warning label is positioned on the rear of counterweight.

- ⚠ To prevent serious personal injury or death keep clear of machine swing radius.
- ⚠ Do not deface or remove this label from the machine.

 


235F0FW01

### 29) ACCUMULATOR (item 43)

This warning label is positioned on the accumulator of the solenoid valve.

- ※ The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.
- ⚠ Never make any hole in the accumulator expose it to flame or fire.
- ⚠ Do not weld anything to the accumulator.
- ※ When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your HD Hyundai Construction Equipment distributor.




1107A0FW46

### 30) MACHINE CONTROL PATTERN CHANGE-WITH VALVE (item 44)

This warning label is positioned on the right side window of the cab.

- ⚠ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.
- ⚠ Failure to do so could result in injury or death.
- ※ See page 4-27 for details.

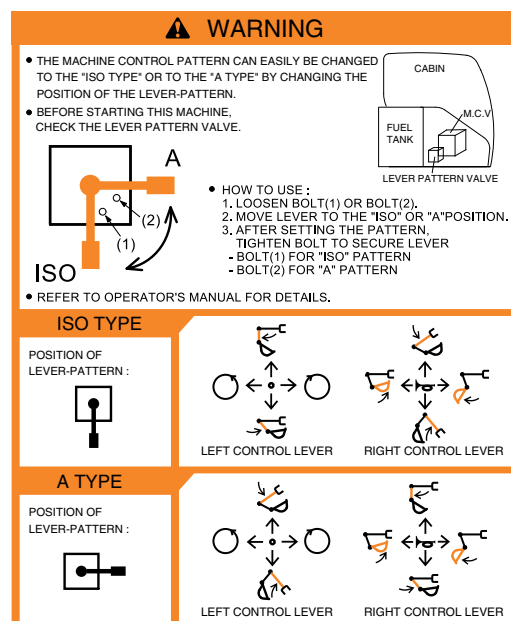

140Z90FW99

### 31) MACHINE CONTROL PATTERN CHANGE-W/O VALVE (item 46)

This warning label is positioned on the front cover of the MCV box.

- ⚠ Check the machine control pattern before starting this machine.
- ※ See page 4-26 for detail.




14W90FW47

### 32) SWING BEARING GREASE (item 47)

This warning label is positioned in the front of swing ring gear.


※ See page 6-36 for details.

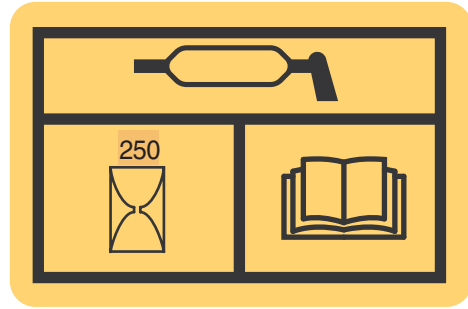

38090FW02

### 33) BATTERY POSITION (item 48)

This warning label is positioned on the LH side cover.

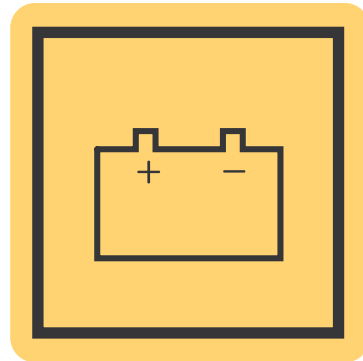


38090FW03

### 34) LUBRICATION OIL (item 49)

This warning label is positioned on the inner side cover of the MCV box.

※ Recommended lubrication oil ACEA-E9 is equivalent to API CJ-4.

※ See page 6-9 for details.

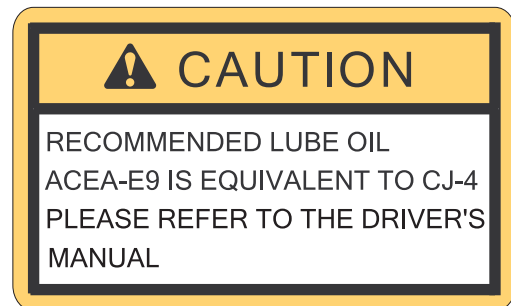

290F0SL03

### 35) FUEL SHUT OFF (item 50)


This warning label is positioned on the top side of the hydraulic tank.

※ Fill only the hydraulic oil.

※ Do not fill the diesel fuel.

⚠ Relieve tank pressure with the engine off by removing the cap nut and push the rod to prevent burns from hot oil.

※ See page 6-3 for details.

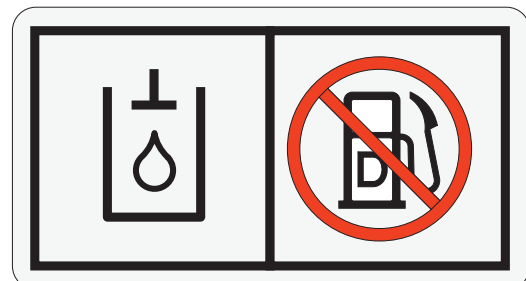

140WH90FW51

**36) MCU/ECM CONNECTOR (item 51)**

This warning label is positioned on the low cover of the air conditioner in the cab.

- ※ **MCU communicates the machine data with Laptop computer through RS232 service socket.**
- ※ **ECM communicates the engine data with Perkins electric tool through J1939 service socket.**
- ※ **See page 3-68 for details.**




235Z90FW52

**37) ULTRA LOW SULFUR DIESEL (item 52)**

This warning label is positioned on the right side window of the cab.

- ※ **Use ultra low sulfur fuel only.**
- ※ **Ultra low sulfur fuel sulfur content  $\leq 15$  ppm**

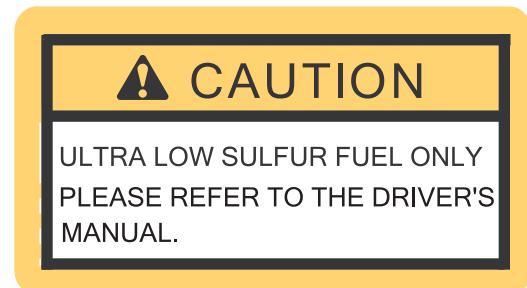


2609A0SL03

**38) SURGE TANK (item 54)**

This warning label is positioned on the top of the surge tank.

This system must be filled slowly to prevent air locks.

- ※ **Fill rate  $\leq 11$  lpm**

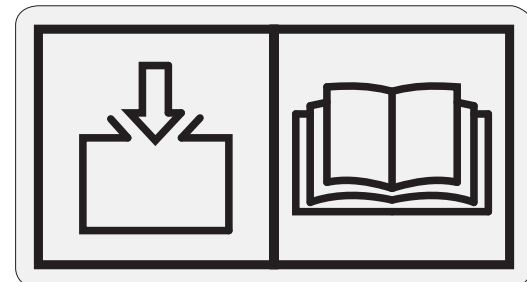


3009A0FW54

**39) KEY OFF CAUTION (item 55)**

This warning label is positioned on the right side window of the cab.

- ※ **Park on a flat place and stop the engine for inspecting and repairing. Properly TAG machine is not operational. (remove start key)**
- Extreme care shall be taken during maintenance work.**

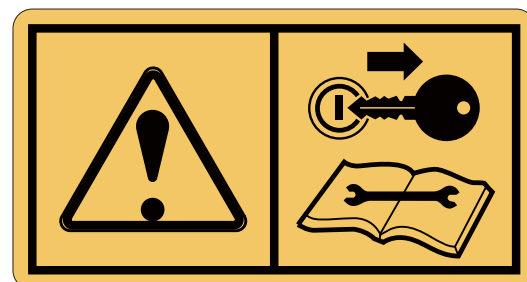

290F0FW05

#### 40) RCV LEVER (item 56)

This warning label is positioned on the right side window of the cab.

- ※ **When you work by moving the seat to the front of cab, it is possible to take place interference between cluster and RCV lever at specific position.**

**To prevent this interference, handle below works.**

- (1) Rotate cluster.
- (2) Adjust seat position for up-and-downward using seat height adjuster knob in suspension.
- (3) Lower the console box height using knob between RH console box and seat cushion.
- (4) Push back console and seat position using seat and console box adjust knob between LH console box and seat cushion.




290F0FW04

#### 41) DOZER IDEOGRAM (item 57)

This warning label is positioned on the LH console box.

- ※ **See page 4-12 for details.**
- ※ **Guidelines for using the general dozer blade.**
  - **Be careful not to apply an excessive load when using a blade.**
  - **Avoid impacts and loads on the bottom due to machine modification or excessive working conditions.**
  - **Check the BLADE UP status before traveling the machine.**
  - **Avoid any collision with the upper working device and the blade.**
  - **Do not move machine in the blade jack up state.**
  - **When using blade jack up, use it in an environment where the ground is not rough and the machine and ground are same level.**

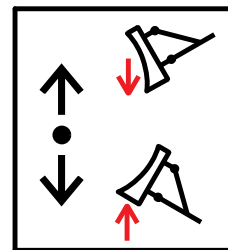

R25Z9A0FW06

**42) FIRE EXTINGUISHER** (item 58)


This label is located on the left stay of the cabin inside.

- ※ Read and understand the instructions adhered decal on the fire extinguisher.



**43) CONTROL RCV** (item 59)

This warning label is positioned on the right side window of the cab.

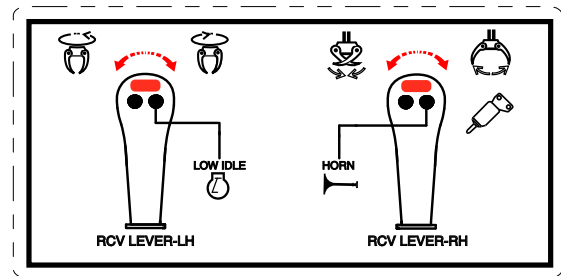


330F0SL05

**44) FUEL FILLER PUMP** (item 60)

This label is positioned on the inner side cover of the MCV box.

- ※ The hose should be separated from the IN port of the pump after filling oil in the fuel tank by using the fuel filler pump.

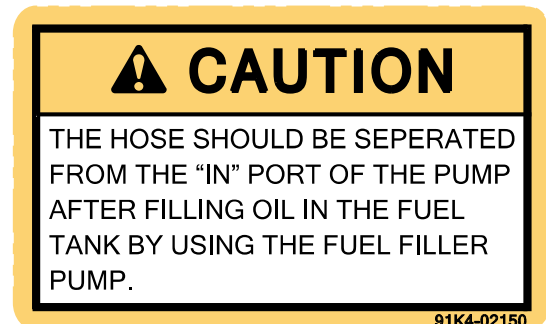

**45) HEAVY CAUTION** (item 61)

This label is positioned on the rear side of the counterweight.

- ▲ Use a lifting device when removing this cover for service.  
Failure to do so could cause back injury.






#### 46) REFRIGERANT (item 62)

This label is positioned on the right side of the counterweight.


- ※ This machine contains fluorinated greenhouse gas as below.
  - Type : HFC-134a
  - Total mass : 0.65 kg
  - Total eq (CO<sub>2</sub>) : 0.93 t
- ※ HFC-134a refrigerant is a fluorinated greenhouse gas and contributes to global warming.
- ※ Do not release refrigerant into the environment.
- ▲ Work on the air conditioning system must only be performed by a qualified service technician.

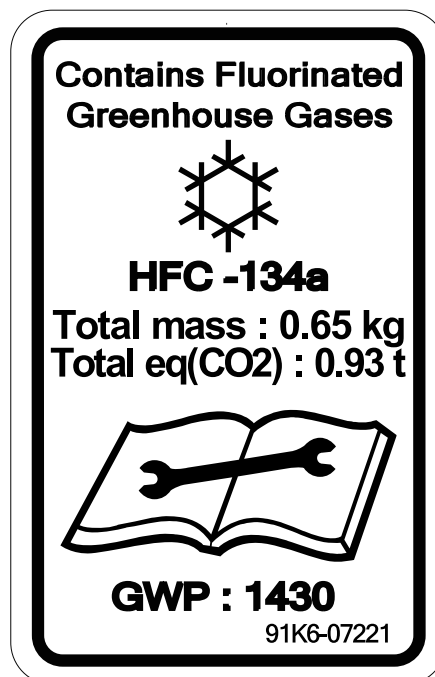

#### 47) EMC (item 66)

This label is positioned on the front side of the upper frame near to the PIN plate.

- ※ This machine comply with the EMC directive ICES-002.
- ※ EMC : ElectroMagnetic Compatibility

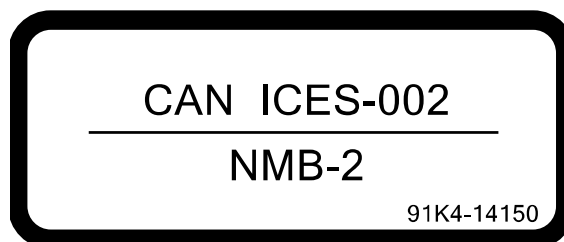

#### 48) ENGINE OIL LIFE RESET

This warning label is positioned on the right side window of the cab.

- ※ The engine will be powered down unless the "engine oil life reset" function is executed after an oil change.
- ※ See page 3-9.

