

CONTENTS

Foreword	0-1	5. Maintenance chart	4-16
Before servicing this machine	0-2	6. Service instruction	4-19
Table to enter S/No and distribution	0-3	7. Electrical system	4-50
Machine data plate	0-4	8. Air conditioner and heater	4-53
Guide (direction, S/No, symbol)	0-5		
SAFETY HINTS		TRANSPORTATION	
1. Safety rules	1-2	1. Preparation for transportation	5-1
2. Safety decals	1-33	2. Dimension and weight	5-2
		3. Loading the machine	5-5
OPERATION		4. Fixing the machine	5-7
1. Suggestion for new machine	2-1	5. Loading and unloading by crane	5-8
2. Check before starting the engine	2-2		
3. Starting and stop the engine	2-3	TROUBLESHOOTING GUIDE	
4. Mode selection system	2-7	1. Engine	6-1
5. Operation of the working device	2-12	2. Electrical system	6-2
6. Traveling of the machine	2-13	3. Others	6-3
7. Efficient working method	2-16		
8. Operation in the special work sites	2-20	SPECIFICATIONS	
9. Normal operation of excavator	2-22	1. Major components	7-1
10. Attachment lowering	2-23	2. Specifications	7-2
11. Storage	2-24	3. Working range and digging force	7-6
12. RCV lever operating pattern	2-26	4. Weight	7-8
		5. Lifting capacities	7-10
CONTROL DEVICES		6. Bucket selection guide	7-18
1. Cab devices	3-1	7. Undercarriage	7-19
2. Cluster	3-2	8. Specification for major components	7-21
3. Switches	3-33	9. Recommended oils	7-24
4. Levers and pedals	3-37		
5. Air conditioner and heater	3-39	HYDRAULIC BREAKER AND QUICK CLAMP	
6. Others	3-43	1. Selecting hydraulic breaker	8-1
		2. Circuit configuration	8-2
MAINTENANCE		3. Maintenance	8-3
1. Instruction	4-1	4. Precaution while operating the breaker	8-4
2. Tightening torque	4-6	5. Quick clamp	8-6
3. Fuel, coolant and lubricants	4-9		
4. Maintenance check list	4-10	INDEX	9-1