

A

AAVM	3-32
Accel dial switch	3-34
After engine start	2-5
Air breather element	4-41
Air cleaner filter	4-27
Air conditioner & heater	3-39
Air conditioner filter	4-53
Alternate exit	1-16
Attachment lowering	2-23

B

Battery	4-50
Battery cable and connection	4-52
Before starting engine	2-2
Bluetooth	3-60
Boom lowering	2-23
Bucket clearance adjustment	4-48
Bucket replacement	4-46
Bucket selection guide	7-18
Bucket tooth replacement	4-47

C

Cab air filter	4-53
Cab device	3-1
Changing machine control pattern	2-26
Charge air cooler	4-24
Charge air piping	4-29
Cigar lighter	3-43
Cluster	3-2
Coolant	4-21
Cooling fan	4-25

D

Digging force	7-6
Dimension and weight	5-2
Drain filter	4-41

E

Emergency engine speed connector	3-68
Engine cleaning	4-30
Engine oil filter	4-19
Engine oil level	4-19
Engine starting & stop	2-3
Engine starting by booster	4-51
Engine stop	2-6

F

Fan belt	4-25
Fuel filler pump filter	4-38
Fuel filter	4-29
Fuel leakage	4-30
Fuel system bleeding	4-28
Fuel tank	4-27
Fuse & relay box	3-67

G

Gauge	3-3
Getting on and off	1-19

H

Hydraulic breaker	8-1
Hydraulic oil changing	4-39
Hydraulic oil filling	4-39
Hydraulic oil level	4-38

L

LCD	3-2
Levers & pedals	3-37
Lifting capacities	7-10
Lubricant specification	7-24

M

Machine data plate	0-4
Maintenance check list	4-10
Major component	7-1
MCU (Machine Control Unit)	3-67
Mode selection system	2-7

N

New machine lubricants	4-9
New machine operation	2-1

O

Oil cooler	4-24
Operating pattern	2-26
Overhead set	4-32

P

Pedals	3-37
Periodical replacement parts	4-5
Pilot line filter	4-41
Pin & bushing lubrication	4-49

P

Prefilter	4-28
Pilot lamps	3-9

Q

Quick clamp	8-6
-------------------	-----

R

Radiator flushing	4-21
Radio & USB player	3-50
RCV lever lubricate	4-44
Recommended oils	7-24
Relieving pressure	4-3
Reservoir tank	4-21
Return filter	4-40
RCV lever operating pattern	2-26

S

Safety labels	1-33
Safety parts	4-5
Seat	3-66
Seat belt	3-66
Service meter	3-68
Service socket	3-68
Smart key tag	3-33
Specification for major component	7-21
Specification	7-2
Start switch	3-33
Storage	2-24
Suction strainer	4-40
Swing bearing grease	4-42
Swing gear & pinion grease	4-43
Swing reduction gear oil	4-42
Switch panel	3-33
Switches	3-12, 3-33

T

Torques-major component	4-8
Torques-fastener	4-6
Towing machine	2-15
Track adjustment	4-45
Track shoe selection	7-20
Transportation	5-1
Travel reduction gear oil	4-43
Traveling machine	2-13
Troubleshooting guide	6-1

U

Undercarriage	7-19
USB socket	3-34

V

Vibration damper	4-31
------------------------	------

W

Warming up operation	2-5
Warning lamps	3-6
Weight	7-8
Welding repair	4-52
Windshield	3-69
Working device operation	2-12
Working method	2-16
Working range	7-6