

A

AAVM	3-30
After engine start	4-5
Air breather element	6-34
Air cleaner filter	6-25
Air conditioner & heater	3-31
Air conditioner filter	6-45
Alternate exit	0-12
Attachment lowering	4-23

B

Battery	6-42
Before starting engine	4-2
Bluetooth	3-52
Boom lowering	4-23
Bucket clearance adjustment	6-40
Bucket replacement	6-38
Bucket selection guide	2-12
Bucket tooth replacement	6-39

C

Cab air filter	6-45
Cab device	3-1
Changing machine control pattern	4-26
Cigar lighter	3-43
Cluster	3-2
Coolant	6-20
Cooling fan	6-24
Crankcase breather filter	6-29

D

DEF/AdBlue® supply module filter	6-29
DEF/AdBlue® tank	6-28
Dimension and weight	5-2
Drain filter	6-34

E

Emergency engine speed connector	3-70
Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-43
Engine stop	4-6

F

Fan belt	6-24
----------------	------

Fuel filter	6-27
Fuel leakage	6-31
Fuel system bleeding	6-28
Fuel tank	6-25
Fuse & relay box	3-69

G

Gauge	3-3
-------------	-----

H

Haptic controller	3-58
Hydraulic breaker	8-1
Hydraulic oil changing	6-32-1
Hydraulic oil filling	6-32
Hydraulic oil level	6-32

L

LCD	3-2
Levers & pedals	3-40
Lifting capacities	2-8
Lubricant specification	2-19

M

Maintenance check list	6-11
Major component	2-1
MCU (Machine Control Unit)	3-69
Mode selection system	4-7
Monitor panel	3-2
Mounting and dismounting	1-12
Multimodal dial	3-59

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
Operating pattern	4-26

P

Pedals	3-41
Periodical replacement parts	6-5
Pilot line filter	6-34
Pin & bushing lubrication	6-41
Prefilter	6-26
Pilot lamps	3-12

Q

Quick clamp	8-6
-------------------	-----

R

Radiator flushing	6-20
Radio & USB player	3-44
RCV lever lubricate	6-37
Recommended oils	2-19, 6-10
Relieving pressure	6-3
Return filter	6-33
RCV lever operating pattern	4-26

S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
Seat	3-61
Seat belt	3-68
Service meter	3-70
Service socket	3-70
Smart key tag	3-35
Specification for major component	2-16
Specification	2-2
Start switch	3-35
Storage	4-24
Suction strainer	6-33
Surge tank	6-20
Swing bearing grease	6-35
Swing gear & pinion grease	6-36
Swing reduction gear oil	6-35
Switch panel	3-35
Switches	3-15, 3-35

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-15
Track adjustment	6-37
Track shoe selection	2-14
Transportation	5-1
Travel reduction gear oil	6-36
Traveling machine	4-13
Troubleshooting guide	7-1

U

Undercarriage	2-14
USB port	3-59

W

Warming up operation	4-5
Warning lamps	3-6
Weight	2-7
Welding repair	6-44
Windshield	3-71
Working device operation	4-12
Working method	4-16
Working range	2-5