

A

After engine start	4-5
Air cleaner filter	6-22
Attachment lowering	4-18

B

Battery	6-34
Before starting engine	4-2
Boom lowering	4-18
Bucket replacement	6-31
Bucket selection guide	2-15
Bucket tooth replacement	6-32

C

Cab device	3-1
Changing machine control pattern	4-21
Cluster	3-3
Coolant	6-18
Cooling fan	6-22

D

Dozer control	3-27
---------------------	------

E

Engine oil filter	6-16
Engine oil level	6-16
Engine starting & stop	4-3
Engine starting by booster	6-35
Engine stop	4-6
ESL mode setting	3-16

F

Fan belt	6-21
Fuel filter	6-23
Fuel leakage	6-25
Fuel system bleeding	6-24
Fuel tank	6-23
Fuse box	3-31

G

Gauge	3-3
-------------	-----

H

Hydraulic breaker	8-1
Hydraulic oil changing	6-26
Hydraulic oil filling	6-25
Hydraulic oil level	6-25

L

Levers & pedals	3-26
Lifting capacities	2-7
Lubricant specification	2-21

M

Maintenance check list	6-9
Major component	2-1
Mounting and dismounting	1-22

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-21
Operating pattern	4-21

P

Password	3-17
Pedals	3-26
Periodical replacement parts	6-4
Pilot lamps	3-7
Power socket	3-29

Q

Quick coupler	8-10
---------------------	------

R

Radiator flushing	6-18
RCV lever lubricate	6-29
Recommended oils	2-21
Relieving pressure	6-3
Return filter	6-27

S

Safety hints	1-1
Safety labels	0-6

Safety parts	6-4
Seat	3-30
Seat belt	3-30
Service meter	3-3
Specification for major component	2-18
Specification	2-2
Start switch	3-22
Storage	4-19
Suction strainer	6-27
Swing bearing grease	6-28
Switch panel	3-22
Switches	3-22

T

Torques-major component	6-7
Torques-fastener	6-5
Towing machine	4-10
Track adjustment	6-30
Track shoe	2-17
Transportation	5-1
Travel reduction gear oil	6-28
Travelling machine	4-8
Troubleshooting guide	7-1

U

Undercarriage	2-16
---------------------	------

W

Warming up operation	4-5
Warning lamps	3-5
Water separator	6-24
Weight	2-6
Working device operation	4-7
Working method	4-11
Working range	2-4