

A

AAVM	3-33
After engine start	4-5
Air breather element	6-35
Air cleaner filter	6-26
Air conditioner & heater	3-34
Air conditioner filter	6-46
Alternate exit	0-12
Arm speed	3-20, 3-21
Attachment lowering	4-23

B

Battery	6-43
Before starting engine	4-2
Bluetooth	3-54
Boom/arm balance	3-20-1
Boom lowering	4-23
Boom speed	3-20
Bucket clearance adjustment	6-41
Bucket replacement	6-39
Bucket selection guide	2-10
Bucket tooth replacement	6-40

C

Cab air filter	6-46
Cab device	3-1
Changing machine control pattern	4-26
Cigar lighter	3-45
Cluster	3-2
Combination speed setting	3-20-1
Coolant	6-20
Cooling fan	6-24
Crankcase breather filter	6-29

D

DEF/AdBlue® supply module filter	6-32
DEF/AdBlue® tank	6-31
Dimension and weight	5-2
Drain filter	6-35

E

Emergency engine speed connector	3-72
Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-44
Engine stop	4-6

EPFC (electric positive fine control)	0-19-2
---	--------

F

Fan belt	6-24
Fuel filter	6-28
Fuel leakage	6-31
Fuel system bleeding	6-28
Fuel tank	6-27
Fuse & relay box	3-71

G

Gauge	3-3
-------------	-----

H

Haptic controller	3-60
HEST	3-10
Hydraulic breaker	8-1
Hydraulic oil changing	6-34
Hydraulic oil filling	6-33
Hydraulic oil level	6-33

L

LCD	3-2
Levers & pedals	3-43
Lifting capacities	2-6
Load sensitivity	3-20-1
Lubricant specification	2-18

M

Maintenance check list	6-11
Major component	2-1
MCU (Machine Control Unit)	3-71
Mode selection system	4-7
Monitor panel	3-2
Mounting and dismounting	1-12
Multimodal dial	3-61

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
Operating pattern	4-26

P

Pedals	3-44
Periodical replacement parts	6-5
Pilot line filter	6-36

Pin & bushing lubrication	6-42
Prefilter	6-27
Pilot lamps	3-12

Q

Quick clamp	8-6
-------------------	-----

R

Radiator flushing	6-20
Radio & USB player	3-46
RCV lever lubricate	6-38
Recommended oils	2-18, 6-10
Relieving pressure	6-3
Return filter	6-35
RCV lever operating pattern	4-26

S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
SCR system cleaning	4-28
Seat	3-63
Seat belt	3-66
Service meter	3-72
Service socket	3-72
Smart key tag	3-38
Specification for major component	2-14
Specification	2-2
Start switch	3-38
Storage	4-24
Suction strainer	6-34
Surge tank	6-20
Swing bearing grease	6-36
Swing gear & pinion grease	6-37
Swing reduction gear oil	6-36
Switch panel	3-38
Switches	3-15, 3-38

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-15
Track adjustment	6-38
Track shoe selection	2-13
Transportation	5-1
Travel reduction gear oil	6-37
Traveling machine	4-13

Troubleshooting guide	7-1
Trucking balance	3-20-1

U

Undercarriage	2-12
USB port	3-61

W

Warming up operation	4-5
Warning lamps	3-6
Weight	2-5
Welding repair	6-45
Windshield	3-73
Working device operation	4-12
Working method	4-16
Working range	2-3