

A

AAVM	3-36
After engine start	2-5
Air breather element	4-42
Air cleaner filter	4-39
Air conditioner & heater	3-37
Air conditioner filter	4-54
Alternate exit	1-37
Attachment lowering	2-23
Auto safety lock	3-15

B

Battery	4-51
Battery cable and connection	4-53
Before starting engine	2-2
Bluetooth	3-60
Boom lowering	2-23
Bucket clearance adjustment	4-49
Bucket replacement	4-47
Bucket selection guide	7-23
Bucket tooth replacement	4-48

C

Cab air filter	4-54
Cab device	3-1
Changing machine control pattern	2-26
Charge air cooler	4-25
Charge air piping	4-30
Cigar lighter	3-49
Cluster	3-2
Cooling fan	4-26

D

DEF/AdBlue® supply module filter	4-33
DEF/AdBlue® tank	4-31
DEF/AdBlue® tank filter	4-32
Dimension and weight	5-2
DPF	4-34
Drain filter	4-42

E

Emergency engine speed connector	3-79
Engine cleaning	4-34
Engine oil filter	4-20
Engine oil level	4-20
Engine starting & stop	2-3

Engine starting by booster	4-52
Engine stop	2-6
Exhaust system cleaning	2-28

F

Fan belt	4-26
Fuel pre-filter	4-29
Fuel filter	4-30
Fuel leakage	4-31
Fuel system bleeding	4-30
Fuel tank	4-28
Fuse & relay box	3-78

G

Gauge	3-3
Getting on and off	1-19

H

HEST	3-10
Hydraulic breaker	8-1
Hydraulic oil changing	4-41
Hydraulic oil filling	4-3
Hydraulic oil level	4-40
Hydraulic oil return filter	4-42

J

Jog dial module	3-66
-----------------------	------

L

LCD	3-2
Levers & pedals	3-46
Lifting capacities	7-11
Lubricant specification	7-29

M

Maintenance check list	4-11
Major component	7-1
MCU (Machine Control Unit)	3-78
Mode selection system	2-7
Monitor panel	3-2
Multimodal dial	3-66

N

New machine operation	2-1
-----------------------------	-----

O

Oil cooler	4-25
Operating pattern	2-26

Overhead set	4-36
Owner menu editing	3-31

P

Pedals	3-47
Periodical replacement parts	4-5
Pilot line filter element	4-43
Pin & bushing lubrication	4-50
Pilot lamps	3-13

Q

Quick clamp	8-6
-------------------	-----

R

Radiator coolant	4-22
Radiator flushing	4-22
Radio & USB player	3-50
RCV lever lubricate	4-45
Recommended oils	4-10,7-29
Relieving pressure	4-3
RCV lever operating pattern	2-26

S

Safety labels	1-31
Safety instructions	1-2
Safety parts	4-5
Seat	3-70
Seat belt	3-77
Service meter	3-79
Service socket	3-79
Smart key tag	3-41
Specification for major component	7-26
Specification	7-2
Start switch	3-41
Storage	2-24
Suction strainer	4-41
Surge tank	4-22
Swing bearing grease	4-43
Swing gear & pinion grease	4-44
Swing reduction gear oil	4-43
Switch panel	3-41
Switches	3-16,3-41

T

Torques-major component	4-8
Torques-fastener	4-6
Towing machine	2-15

Track adjustment	4-46
Track shoe selection	7-24
Transportation	5-1
Travel reduction gear oil	4-45
Traveling machine	2-13
Troubleshooting guide	6-1

U

Undercarriage	7-24
USB port	3-66

V

Vibration damper	4-35
------------------------	------

W

Warming up operation	2-5
Warning lamps	3-6
Weight	7-10
Welding repair	4-53
Windshield	3-80
Working device operation	2-12
Working method	2-16
Working range	7-8