

CONTENTS

Foreword	0-1
Before servicing this machine	0-2
Table to enter S/No and distribution	0-3
Machine data plate	0-4
Guide (direction, S/No, symbol)	0-5

SAFETY HINTS

1. Safety rules	1-2
2. Safety decals	1-31

OPERATION

1. Suggestion for new machine	2-1
2. Check before starting the engine	2-2
3. Starting and stop the engine	2-3
4. Mode selection system	2-7
5. Operation of the working device	2-12
6. Traveling of the machine	2-13
7. Efficient working method	2-16
8. Operation in the special work sites	2-20
9. Normal operation of excavator	2-22
10. Attachment lowering	2-23
11. Storage	2-24
12. RCV lever operating pattern	2-26

CONTROL DEVICES

1. Cab devices	3-1
2. Cluster	3-2
3. Switches	3-33
4. Levers and pedals	3-37
5. Air conditioner and heater	3-39
6. Others	3-43

MAINTENANCE

1. Instruction	4-1
2. Tightening torque	4-6
3. Fuel, coolant and lubricants	4-9
4. Maintenance check list	4-10

5. Maintenance chart	4-16
6. Service instruction	4-18
7. Electrical system	4-49
8. Air conditioner and heater	4-52

TRANSPORTATION

1. Preparation for transportation	5-1
2. Dimension and weight	5-2
3. Loading the machine	5-7
4. Fixing the machine	5-9
5. Loading and unloading by crane	5-10

TROUBLESHOOTING GUIDE

1. Engine	6-1
2. Electrical system	6-2
3. Others	6-3

SPECIFICATIONS

1. Major components	7-1
2. Specifications	7-2
3. Working range and digging force	7-5
4. Weight	7-8
5. Lifting capacities	7-9
6. Bucket selection guide	7-24
7. Undercarriage	7-25
8. Specification for major components	7-27
9. Recommended oils	7-30

HYDRAULIC BREAKER AND QUICK CLAMP

1. Selecting hydraulic breaker	8-1
2. Circuit configuration	8-2
3. Maintenance	8-3
4. Precaution while operating the breaker	8-4
5. Quick clamp	8-6

INDEX	9-1
-------------	-----