

A

AAVM	3-30
After engine start	4-5
Air breather element	6-35
Air cleaner filter	6-26
Air conditioner & heater	3-31
Air conditioner filter	6-46
Alternate exit	0-12
Attachment lowering	4-23

B

Battery	6-43
Before starting engine	4-2
Bluetooth	3-51
Boom lowering	4-23
Bucket clearance adjustment	6-41
Bucket replacement	6-39
Bucket selection guide	2-18
Bucket tooth replacement	6-40

C

Cab air filter	6-46
Cab device	3-1
Changing machine control pattern	4-26
Cigar lighter	3-42
Cluster	3-2
Coolant	6-20
Cooling fan	6-24
Crankcase breather filter	6-29

D

DEF/AdBlue® supply module filter	6-32
DEF/AdBlue® tank	6-31
Dimension and weight	5-2
Drain filter	6-35

E

Emergency engine speed connector	3-69
Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-44
Engine stop	4-6

F

Fan belt	6-24
----------------	------

Fuel filter	6-28
Fuel leakage	6-31
Fuel system bleeding	6-28
Fuel tank	6-27
Fuse & relay box	3-68

G

Gauge	3-3
-------------	-----

H

Haptic controller	3-57
HEST	3-10
Hydraulic breaker	8-1
Hydraulic oil changing	6-34
Hydraulic oil filling	6-33
Hydraulic oil level	6-33

L

LCD	3-2
Levers & pedals	3-40
Lifting capacities	2-9
Lubricant specification	2-25

M

Maintenance check list	6-11
Major component	2-1
MCU (Machine Control Unit)	3-64
Mode selection system	4-7
Monitor panel	3-2
Mounting and dismounting	1-12
Multimodal dial	3-58

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
Operating pattern	4-26

P

Pedals	3-41
Periodical replacement parts	6-5
Pilot line filter	6-36
Pin & bushing lubrication	6-42
Prefilter	6-27
Pilot lamps	3-12

Q

Quick clamp	8-6
-------------------	-----

R

Radiator flushing	6-20
Radio & USB player	3-43
RCV lever lubricate	6-38
Recommended oils	2-25, 6-10
Relieving pressure	6-3
Return filter	6-35
RCV lever operating pattern	4-26

S

SCR system cleaning	4-28
Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
Seat	3-60
Seat belt	3-63
Service meter	3-69
Service socket	3-69
Smart key tag	3-35
Specification for major component	2-22
Specification	2-2
Start switch	3-35
Storage	4-24
Suction strainer	6-34
Surge tank	6-20
Swing bearing grease	6-36
Swing gear & pinion grease	6-37
Swing reduction gear oil	6-36
Switch panel	3-35
Switches	3-15, 3-35

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-15
Track adjustment	6-38
Track shoe selection	2-18
Transportation	5-1
Travel reduction gear oil	6-37
Traveling machine	4-13
Troubleshooting guide	7-1

U

Undercarriage	2-18
USB port	3-58

W

Warming up operation	4-5
Warning lamps	3-6
Weight	2-9
Welding repair	6-45
Windshield	3-70
Working device operation	4-12
Working method	4-16
Working range	2-6