

INDEX

A	
After engine start	4-5
Air cleaner filter	6-23
Attachment lowering	4-18
B	
Battery	6-35
Before starting engine	4-2
Boom lowering	4-18
Bucket replacement	6-32
Bucket selection guide	2-41
Bucket tooth replacement	6-32
C	
Canopy device	3-1
Changing machine control pattern	4-21
Cluster	3-3
Coolant	6-19
Cooling fan	6-22
D	
Dozer control	4-7
E	
Engine oil filter	6-17
Engine oil level	6-17
Engine starting & stop	4-3
Engine starting by booster	6-36
Engine stop	4-6
F	
Fan belt	6-22
Fuel filter	6-24
Fuel leakage	6-26
Fuel system bleeding	6-25
Fuel tank	6-24
Fuse box	3-34
G	
Gauge	3-4
H	
Heater	3-31
Heater filter	6-26
Hydraulic breaker	8-1
Hydraulic oil changing	6-27
Hydraulic oil filling	6-27
Hydraulic oil level	6-27
L	
Levers & pedals	3-28
Lifting capacities	2-9
Lubricant specification	2-47
M	
Maintenance check list	6-9
Major component	2-1
Monitor panel	3-3
Mounting and dismounting	1-19
N	
New machine operation	4-1
O	
Oil cooler	6-22
Operating pattern	4-21
P	
Pedals	3-28
Periodical replacement parts	6-4
Pilot line filter element	6-29
Pin & bushing lubrication	6-34
Q	
Quick coupler	8-10
R	
Radiator flushing	6-19
Radio	3-35
RCV lever lubricate	6-30
RCV lever operating pattern	4-21
Recommended oils	2-47
Relieving pressure	6-3
Return filter	6-28
S	
Safety hints	1-2
Safety labels	0-6
Safety parts	6-4
Seat	3-33
Seat belt	3-33
Service meter	3-4
Specification for major component	2-44
Specification	2-2
Start switch	3-23

Storage	4-19
Suction strainer	6-28
Swing bearing grease	6-29
Switch panel	3-10
Switches	3-23

T

Torques-major component	6-7
Torques-fastener	6-5
Towing machine	4-10
Track adjustment	6-31
Track shoe	2-42
Transportation	5-1
Travel reduction gear oil	6-29
Travelling machine	4-8
Troubleshooting guide	7-1

U

Undercarriage	2-42
USB player	3-49

W

Warming up operation	4-5
Warning lamps	3-6
Weight	2-8
Working device operation	4-7
Working method	4-11
Working range	2-6