

A

AAVM	3-35
After engine start	2-5
Air breather element	4-42
Air cleaner filter	4-39
Air conditioner & heater	3-36
Air conditioner filter	4-54
Alternate exit	1-37
Attachment lowering	2-23
Auto safety lock	3-15

B

Battery	4-51
Battery cable and connection	4-53
Before starting engine	2-2
Bluetooth	3-59
Boom lowering	2-23
Bucket clearance adjustment	4-49
Bucket replacement	4-47
Bucket selection guide	7-35
Bucket tooth replacement	4-48

C

Cab air filter	4-54
Cab device	3-1
Changing machine control pattern	2-26
Charge air cooler	4-25
Charge air piping	4-30
Cigar lighter	3-48
Cluster	3-2
Cooling fan	4-26

D

DEF/AdBlue® supply module filter	4-33
DEF/AdBlue® tank	4-31
DEF/AdBlue® tank filter	4-32
Dimension and weight	5-2
DPF	4-34
Drain filter	4-42

E

Emergency engine speed connector	3-78
Engine cleaning	4-34
Engine oil filter	4-20
Engine oil level	4-20
Engine starting & stop	2-3

Engine starting by booster	4-52
Engine stop	2-6
Exhaust system cleaning	2-28

F

Fan belt	4-26
Fuel pre-filter	4-29
Fuel filter	4-30
Fuel leakage	4-31
Fuel system bleeding	4-30
Fuel tank	4-29
Fuse & relay box	3-77

G

Gauge	3-3
Getting on and off	1-19

H

HEST	3-10
Hydraulic breaker	8-1
Hydraulic oil changing	4-41
Hydraulic oil filling	4-3
Hydraulic oil level	4-40
Hydraulic oil return filter	4-42

J

Jog dial module	3-65
-----------------------	------

L

LCD	3-2
Levers & pedals	3-45
Lifting capacities	7-13
Lubricant specification	7-41

M

Maintenance check list	4-11
Major component	7-1
MCU (Machine Control Unit)	3-77
Mode selection system	2-7
Monitor panel	3-2
Multimodal dial	3-65

N

New machine operation	2-1
-----------------------------	-----

O

Oil cooler	4-25
Operating pattern	2-26

Overhead set	4-36
Owner menu editing	3-30

P

Pedals	3-45
Periodical replacement parts	4-5
Pilot line filter element	4-43
Pin & bushing lubrication	4-50
Pilot lamps	4-29
	3-13

Q

Quick coupler	8-6
---------------------	-----

R

Radiator coolant	4-22
Radiator flushing	4-22
Radio & USB player	3-49
RCV lever lubricate	4-45
Recommended oils	4-10,7-41
Relieving pressure	4-3
RCV lever operating pattern	2-26

S

Safety lables	1-31
Safety instructions	1-2
Safety parts	4-5
Seat	3-69
Seat belt	3-76
Service meter	3-78
Service socket	3-78
Smart key tag	3-40
Specification for major component	7-38
Specification	7-2
Start switch	3-40
Storage	2-24
Suction strainer	4-41
Surge tank	4-22
Swing bearing grease	4-43
Swing gear & pinion grease	4-44
Swing reduction gear oil	4-43
Switch panel	3-40
Switches	3-16,3-40

T

Torques-major component	4-8
Torques-fastener	4-6
Towing machine	2-15

Track adjustment	4-46
Track shoe selection	7-34
Transportation	5-1
Travel reduction gear oil	4-45
Traveling machine	2-13
Troubleshooting guide	6-1

U

Undercarriage	7-36
USB port	3-65

V

Vibration damper	4-35
------------------------	------

W

Warming up operation	2-5
Warning lamps	3-6
Weight	7-12
Welding repair	4-53
Windshield	3-79
Working device operation	2-12
Working method	2-16
Working range	7-8