

A

AAVM	3-35
After engine start	2-5
Air breather element	4-45
Air cleaner filter	4-31
Air conditioner & heater	3-36
Air conditioner filter	4-57
Alternate exit	1-37
Attachment lowering	2-23
Auto safety lock	3-15

B

Battery	4-54
Battery cable and connection	4-56
Before starting engine	2-2
Bluetooth	3-58
Boom lowering	2-23
Bucket clearance adjustment	4-52
Bucket replacement	4-50
Bucket selection guide	7-35
Bucket tooth replacement	4-51

C

Cab air filter	4-57
Cab device	3-1
Changing machine control pattern	2-26
Charge air cooler	4-28
Charge air piping	4-28
Cigar lighter	3-47
Cluster	3-2
Coolant test	4-23
Cooling fan	4-29

D

DEF/AdBlue® supply module filter	4-36
DEF/AdBlue® tank	4-34
DEF/AdBlue® tank filter	4-35
Dimension and weight	5-2
DPF	4-37
Drain filter	4-45

E

Emergency engine speed connector	3-77
Engine cleaning	4-37
ECM (Engine Control Module)	2-9, 3-77
Engine oil filter	4-19

Engine oil level	4-19
Engine starting & stop	2-3
Engine starting by booster	4-55
Engine stop	2-6
Exhaust system cleaning	2-28

F

Fan belt	4-29
Fuel filler pump filter	4-42
Prefilter	4-32
Fuel filter	4-33
Fuel leakage	4-34
Fuel system bleeding	4-33
Fuel tank	4-32
Fuse & relay box	3-76

G

Gauge	3-3
Getting on and off	1-19

H

HEST	3-10
Hydraulic breaker	8-1
Hydraulic oil changing	4-44
Hydraulic oil filling	4-3
Hydraulic oil level	4-43
Hydraulic oil return filter	4-45

J

Jog dial module	3-64
-----------------------	------

L

LCD	3-2
Levers & pedals	3-45
Lifting capacities	7-13
Lubricant specification	7-41

M

Maintenance check list	4-10
Major component	7-1
MCU (Machine Control Unit)	3-76
Mode selection system	2-7
Monitor panel	3-2
Multimodal dial	3-64

N

New machine operation	2-1
-----------------------------	-----

O

Oil cooler	4-28
Owner menu editing	2-26
Operating pattern	4-39
Overhead set	3-30
Owner menu editing	3-30

P

Pedals	3-45
Periodical replacement parts	4-5
Pilot line filter element	4-46
Pin & bushing lubrication	4-53
Pilot lamps	3-13

Q

Quick coupler	8-6
---------------------	-----

R

Radiator coolant	4-22
Radiator flushing	4-25
Radio & USB player	3-48
RCV lever lubricate	4-47
Recommended oils	7-41
Relieving pressure	4-3
RCV lever operating pattern	2-26

S

Safety labels	1-31
Safety instructions	1-2
Safety parts	4-5
Seat	3-68
Seat belt	3-75
Service meter	3-77
Service socket	3-77
Smart key tag	3-40
Specification for major component	7-38
Specification	7-2
Start switch	3-40
Storage	2-24
Suction strainer	4-44
Surge tank	4-22
Swing bearing grease	4-46
Swing gear & pinion grease	4-47
Swing reduction gear oil	4-46
Switch panel	3-40
Switches	3-16,3-40

T

Torques-major component	4-8
Torques-fastener	4-6
Towing machine	2-15
Track adjustment	4-49
Track shoe selection	7-34
Transportation	5-1
Travel reduction gear oil	4-48
Traveling machine	2-13
Troubleshooting guide	6-1

U

Undercarriage	7-36
USB port	3-64

V

Vibration damper	4-38
------------------------	------

W

Warming up operation	2-5
Warning lamps	3-6
Weight	7-12
Welding repair	4-56
Windshield	3-78
Working device operation	2-12
Working method	2-16
Working range	7-8