


## SAFETY LABELS

### 1. LOCATION

Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

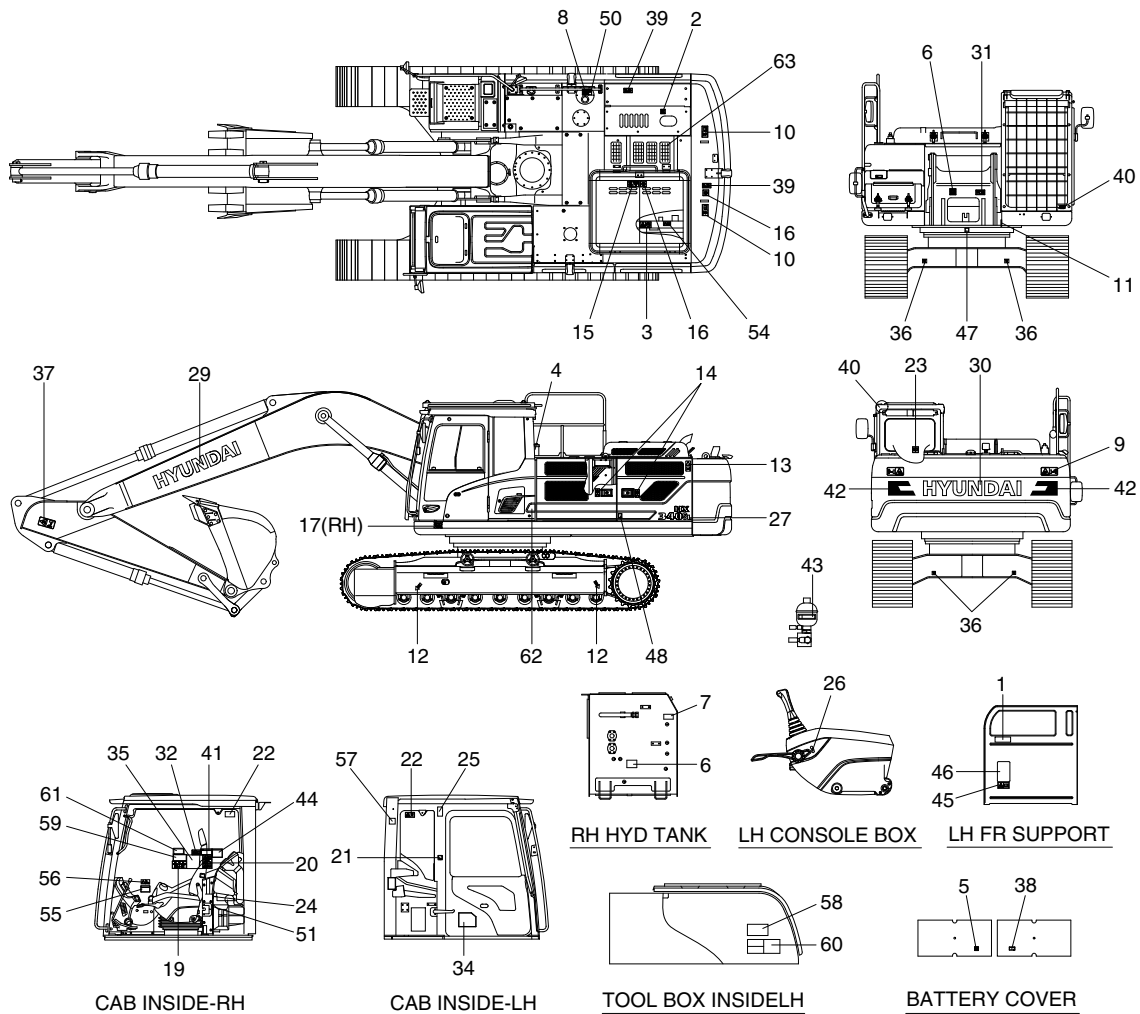

1	Air cleaner filter	22	Safety front window	42	Reflecting
2	Turbocharger cover	23	Emergency exit	43	Accumulator
3	Radiator cap	24	Air conditioner filter	44	M/control pattern change valve
4	Fueling	25	ROPS plate	45	M/control pattern change-w/o valve
5	Battery accident	26	Safety knob	46	M/control pattern change-w/valve
6	High pressure hose	27	Model name	47	Swing bearing grease
7	Hydraulic oil level	29	Trade mark (boom)	48	Battery position
8	Hydraulic oil lub	30	Trade mark (CWT)	50	Fuel shut off
9	Keep clear-rear	31	Reduction gear grease	51	MCU/ECM connector
10	Lifting eye	32	Clamp locking	54	Surge tank
11	Name plate	34	Service instruction	55	Key off caution
12	Slingside ideogram	35	Lifting chart	56	RCV lever
13	Keep clear-side	36	Tie	57	Fire extinguisher
14	Stay fix	37	Keep clear-attach	58	Leftover fuel
15	Engine hood shearing	38	Electric welding	59	RCV control
16	No step	39	Falling	60	Air compressor
17	Transporting	40	FOPS FOG plate	61	Air compressor - cab
19	M/control pattern	41	Caution (water separator, turbocharger)	62	Band
20	Ref operator's manual			63	Step tread
21	Hammer				

340S0SL01

## 2. DESCRIPTION


There are several specific warning labels on this machine please become familiarized with all warning labels.

Replace any safety label that is damaged, or missing. If a safety label is attached to a part that is replaced, install a safety label on the replacement part.

### 1) AIR CLEANER FILTER (item 1)

This warning label is positioned on the left side of the front support.

- ※ **Periodic and proper inspection, cleaning and change of elements prolong engine life time and maintain the good performance of engine.**

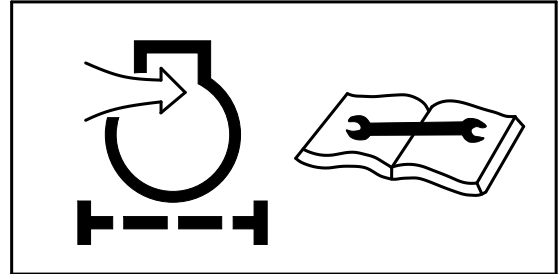

21070FW01

### 2) TURBOCHARGER COVER (item 2)

This warning label is positioned on the pump hood.

- ⚠ **Do not touch turbocharger or it may cause severe burn. When the engine is running or immediately after engine shut down.**



21070FW02

### 3) RADIATOR CAP (item 3)

This warning label is positioned on the radiator.

- ⚠ **Never open the filler cap while engine running or at high coolant temperature. Hot coolant can cause serious burns, injury or death.**



14070FW03

### 4) FUELING (item 4)

This warning label is positioned on the right side of fuel filler neck.

- ⚠ **Stop the engine when refueling. All lights or flames shall be kept at a safe distance while refueling.**




290F0FW02

#### 5) BATTERY ACCIDENT (item 5)

This warning label is positioned on the battery cover.

- ⚠ **Electrolyte containing sulfuric acid cause severe burns. Avoid being in contact with skin, eyes or clothes. In the event of accident flush with sufficient water, call a physician immediately.**
- ※ **Maintain the electrolyte at the recommended level. Add distilled water to the battery only when starting up, never when shutting down.**  
With electrolyte at proper level, less space may cause the gases to be accumulated in the battery.
- ⚠ **Extinguish all smoking materials and open flames before checking the battery.**
- ⚠ **Do not use matches, lighters or torches as a light source near the battery for the probable presence of explosive gas.**
- ⚠ **Do not allow unauthorized personnel to change the battery or to use booster cables.**
- ⚠ **For safety from electric shock, do not battery terminal with a wet hand.**

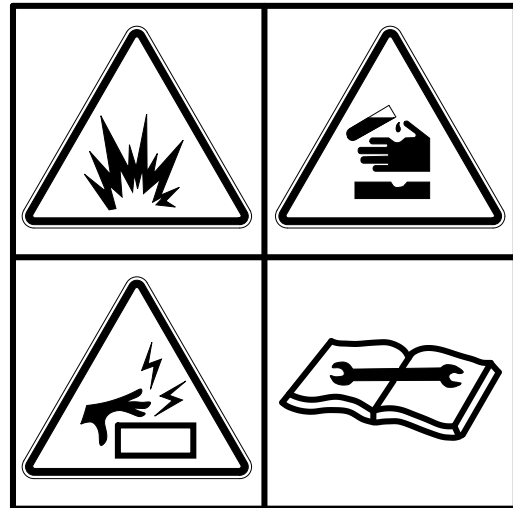

36070FW05

#### 6) HIGH PRESSURE HOSE (item 6)

This warning label is positioned on the front of the upper frame and the right side of the hydraulic tank.

- ⚠ **Escaping fluid under pressure can penetrate the skin causing serious injury.**
- ⚠ **Avoid the hazard by relieving pressure before disconnecting hydraulic lines or other lines.**
- ※ **See the maintenance section for details.**




14070FW29

#### 7) HYDRAULIC OIL LEVEL (item 7)

This warning label is positioned on the right side of the hydraulic tank.

- ▲ Place the bucket on the ground whenever servicing the hydraulic system.
- ※ Check oil level on the level gauge.
- ※ Refill the recommended hydraulic oil up to specified level if necessary.

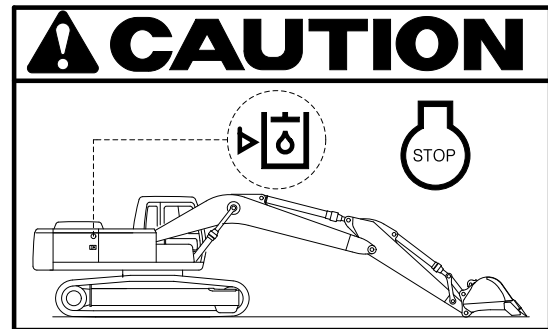


21070FW07

#### 8) HYDRAULIC OIL LUBRICATION (item 8)

This warning label is positioned on the top of the hydraulic tank.

- ※ Do not mix with different brand oils.
- ▲ Never open the filler cap while high temperature.
- ▲ Loosen the cap slowly and release internal pressure completely.

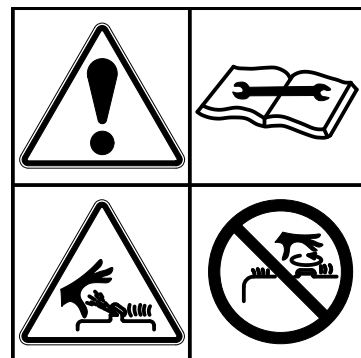


14070FW08

#### 9) KEEP CLEAR-REAR (item 9)

This warning label is positioned on the rear side of counterweight.

- ▲ To prevent serious personal injury or death keep clear of machine swing radius.
- ▲ Do not deface or remove this label from the machine.

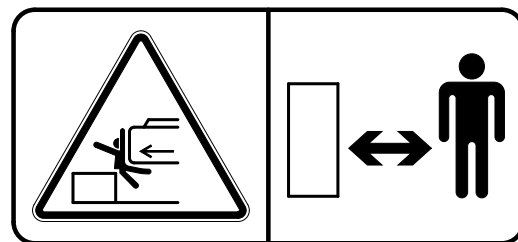


21090FW09

#### 10) LIFTING EYE (item 10)

This warning label is positioned on the top side of counterweight.

- ▲ Do not lift the machine by using lifting eyes on the counterweight or the lifting eyes may be subject to overload causing its breaking and possible personal injury.
- ※ See page 5-7 for proper lifting method of the machine.

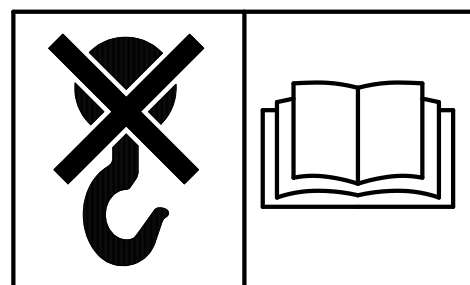


21070FW10

**11) KEEP CLEAR-SIDE (item 13)**

This warning label is positioned on the LH and RH side cover.

- ⚠ **To prevent serious personal injury or death keep clear of machine swing radius.**
- ⚠ **Do not deface or remove this label from the machine.**

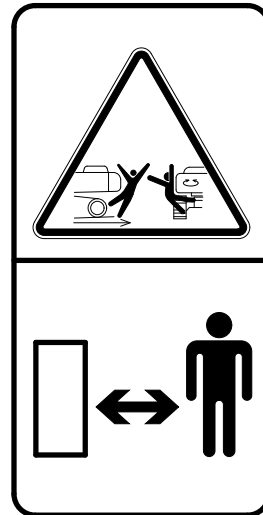


21070FW13

**12) STAY FIX (item 14)**

This warning label is positioned on the LH and RH side cover.

- ⚠ **Be sure to support the stay when the door needs to be opened.**
- ⚠ **Be careful that the opened door may be closed by the external or natural force like strong wind.**

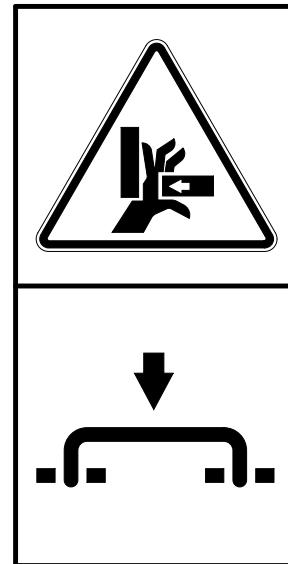


21070FW14

**13) ENGINE HOOD SHEARING (item 15)**

This warning label is positioned on the engine hood.

- ⚠ **Don't open the engine hood during the engine's running. Stay clear of rotating parts.**
- ⚠ **Don't touch exhaust pipe or it may cause severe burn.**

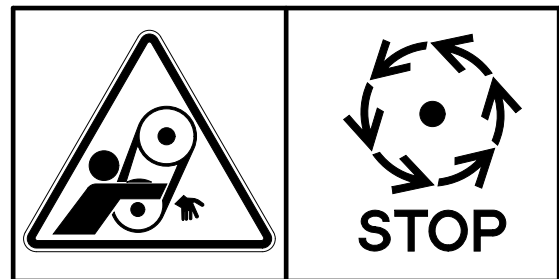


21070FW15

**14) NO STEP (item 16)**

This warning label is positioned on the engine hood and counterweight.

- △ **Don't step on the engine hood and counterweight.**

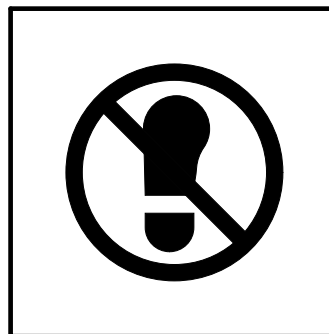


21070FW16

**15) TRANSPORTING (item 17)**

This warning label is positioned on the front right side of upper frame.

- ▲ **Study the operator's manual before transporting the machine, if provided and tie down arm and track to the carrier with lashing wire.**

See page 5-6 for details.

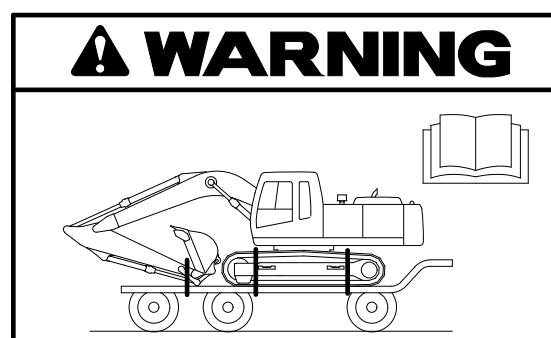

14070FW17


**16) MACHINE CONTROL PATTERN (item 19)**

This warning label is positioned in right window of the cab.

- ▲ **Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.**

- ▲ **Failure to do so could result in injury or death.**

See page 4-12 for details.

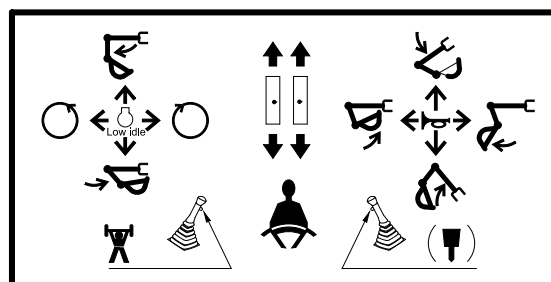

91N6-07201  
91N6-07201

### 17) REF OPERATOR'S MANUAL (item 20)

This warning label is positioned on the right side window of the cab.

#### (1) Ref operator manual


- ▲ Study the operator's manual before starting and operating machine.
- ▲ Do not operate this machine unless you have read and understand the instructions and warnings in this manual. Failure to follow the instructions or warnings could result in injury or death.

#### (2) Max height

- ▲ Serious injury or death can result from contact with electric lines. An electric shock being received by merely coming into the vicinity of an electric lines, the minimum distance should be kept considering the supply voltage as page 1-16.

#### (3) Interference

- ▲ Be careful to operate machine equipped with quick clamp or extensions. Bucket may hit cab or boom, boom cylinders when it reached vicinity of them.

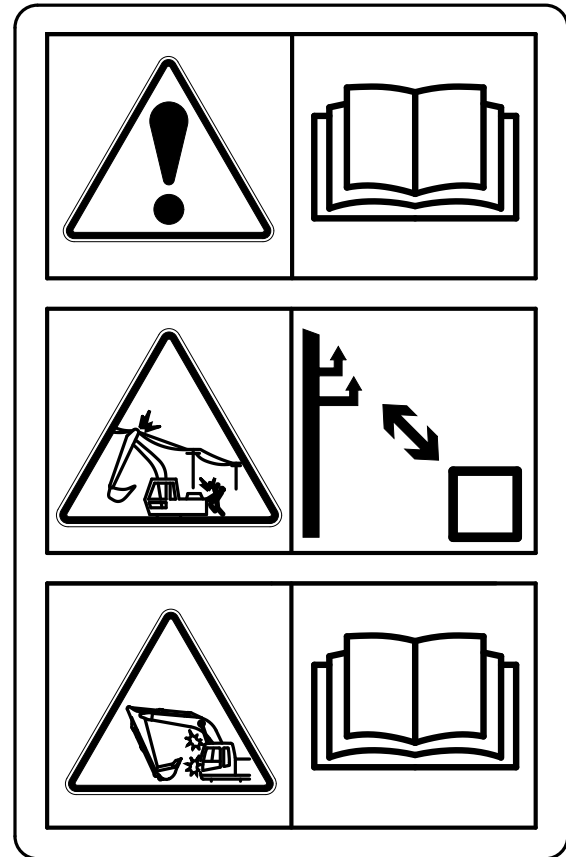

2609A0SL05

### 18) HAMMER (item 21)

This label is located on the right center stay of the cabin inside.

- ※ The window serves as an alternate exit.
- ※ In emergency, break out the window using the hammer and escape from the cabin.




91Q6-07280

### 19) SAFETY FRONT WINDOW (item 22)

This warning label is positioned on the both top side window of the cab.

- ▲ Be careful that the front window may be promptly closed.
- ※ See page 3-60 for details.

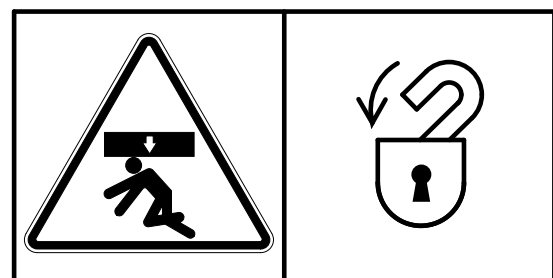

21070FW24

## 20) EMERGENCY EXIT (item 23)

This warning label is positioned on the rear side window of the cab.


- ※ The rear window serves as an alternate exit.
- ※ To remove rear window, pull the ring and push out the glass.



## 21) AIR CONDITIONER FILTER (item 24)

This warning label is positioned on the air conditioner cover.

- ※ Periodic and proper inspection, cleaning and change of filter prolong air conditioner life time and maintain good performance.

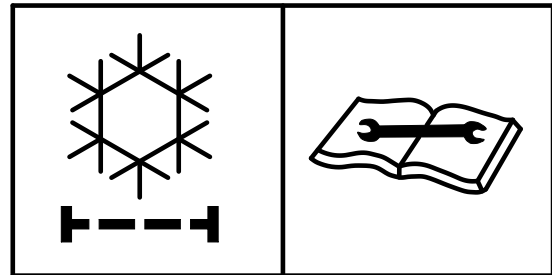


21070FW26

## 22) SAFETY KNOB (item 26)

This warning label is positioned on the cover of the safety knob.

- ⚠ Before you get off the machine be sure to place the safety knob LOCKED position.

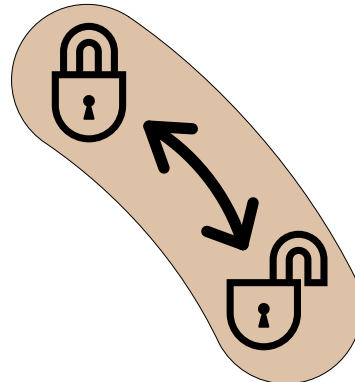


30007A1FW07A

## 23) REDUCTION GEAR GREASE (item 31)

This warning label is positioned on the front side of upper frame.

- ⚠ Grease is under high pressure. Grease coming out of the grease plug under pressure can penetrate the body causing injury or death.

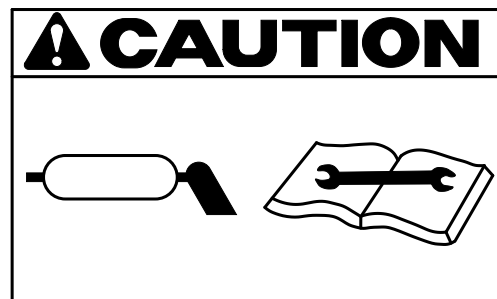


21070FW35



#### 24) CLAMP LOCKING (item 32)

This warning label is positioned on the right side window of cab.

- ⚠ **Serious injury or death can result from dropping bucket.**
- ⚠ **Operating the machine with quick clamp switch unlocked or without safety pin of moving hook can cause the bucket to drop off.**

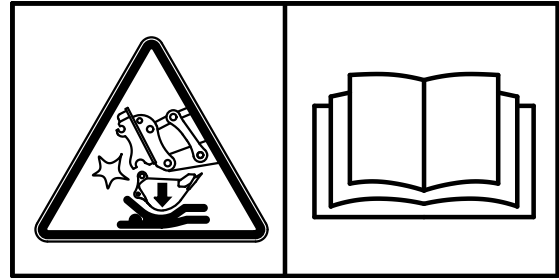


14070FW60

#### 25) TIE (item 36)

This warning label is positioned on the front and rear side of the lower frame.

- ⚠ **Never tow the machine using tie hole, because this may break.**
- ⚠ **See page 4-15 for detail.**

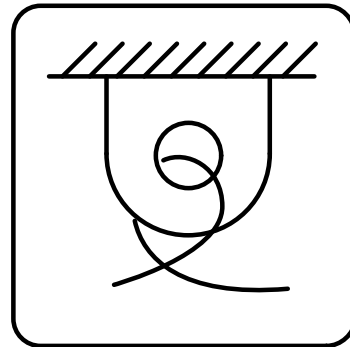

4507A0FW02

#### 26) KEEP CLEAR-ATTACH (item 37)

This warning label is positioned on both side of the arm.

- ⚠ **Serious injury or death can result from falling of the attachment.**
- ⚠ **To prevent serious injury or death, keep clear the underneath of attachment.**




14070FW31

#### 27) ELECTRIC WELDING (item 38)

This warning label is positioned on the battery cover.

- ⚠ **Before carrying out any electric welding on this machine, follow the below procedure.**
  - Pull the connector out of all electric control units.
  - Connector the ground lead of the welding equipment as close to the welding point as possible.
- ※ **See page 6-46 for detail.**

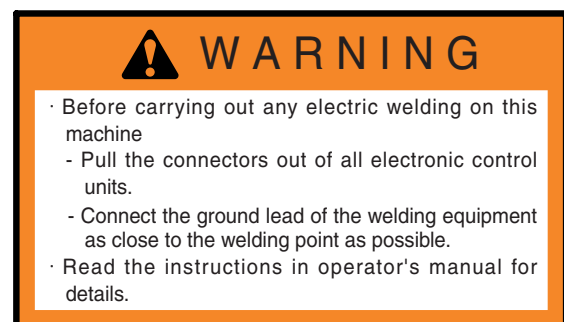

7807AFW20

### 28) FALLING (item 39)

This warning label is positioned on the top of the pump hood and counterweight.

- ⚠ Falling is one of the major cause of personal injury.
- ⚠ Be careful of slippery conditions on the platforms, steps and handrails when standing on the machine.




14070FW30

### 29) CAUTION (W/SEPARATOR, TURBOCHARGER) (item 41)

This warning label is positioned on the right window of the cab.

- ⚠ In order to protect high pressure fuel system, please drain water in water separator before starting the engine.
- ⚠ In order to prevent turbocharger failure, please allow more than 5 minutes' cool down period (no load low idle operation) before shutting the engine off.

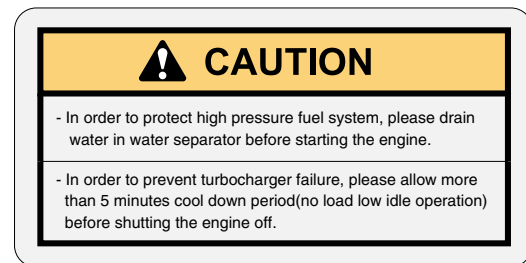

120090SL02

### 30) REFLECTING (item 42)

This warning label is positioned on the rear side of counterweight.

- ⚠ To prevent serious personal injury or death keep clear of machine swing radius.
- ⚠ Do not deface or remove this label from the machine.



290F0FW01

### 31) ACCUMULATOR (item 43)

This warning label is positioned on the accumulator of the solenoid valve.

- ※ The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.

- ▲ Never make any hole in the accumulator expose it to flame or fire.
- ▲ Do not weld anything to the accumulator.
- ※ When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your HD Hyundai Construction Equipment distributor.



1107A0FW46

### 32) MACHINE CONTROL PATTERN CHANGE VALVE (item 44)

This warning label is positioned on the right side window of the cab.

- ▲ The machine control pattern can easily be changed to the "ISO type" or to the "A type" by changing the position of the lever of the pattern change valve.
- ▲ Before starting this machine, check the lever pattern valve.
- ※ See page 4-27 for detail.

**⚠ WARNING**

- THE MACHINE CONTROL PATTERN CAN EASILY BE CHANGED TO THE "ISO TYPE", TO THE "A TYPE", TO THE "B TYPE" OR TO THE "C TYPE" BY CHANGING THE POSITION OF THE LEVER-PATTERN.
- BEFORE STARTING THIS MACHINE, CHECK THE LEVER PATTERN VALVE.

- REFER TO OPERATOR'S MANUAL FOR DETAILS.

ISO TYPE	
<b>POSITION OF LEVER-PATTERN :</b> 	 LEFT CONTROL LEVER RIGHT CONTROL LEVER
A TYPE	
<b>POSITION OF LEVER-PATTERN :</b> 	 LEFT CONTROL LEVER RIGHT CONTROL LEVER
B TYPE	
<b>POSITION OF LEVER-PATTERN :</b> 	 LEFT CONTROL LEVER RIGHT CONTROL LEVER
C TYPE	
<b>POSITION OF LEVER-PATTERN :</b> 	 LEFT CONTROL LEVER RIGHT CONTROL LEVER

91Q6-07440

91Q6-07440

### 33) MACHINE CONTROL PATTERN CHANGE-W/O VALVE (item 45)

This warning label is positioned on the left front support of cowl.

⚠ Check the machine control pattern before starting this machine.

※ See page 4-26 for detail.



14W90FW47


### 34) MACHINE CONTROL PATTERN CHANGE-W/VALVE (item 46)

This warning label is positioned on the left front support of cowl.

⚠ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.

⚠ Failure to do so could result in injury or death.

※ See page 4-27 for details.

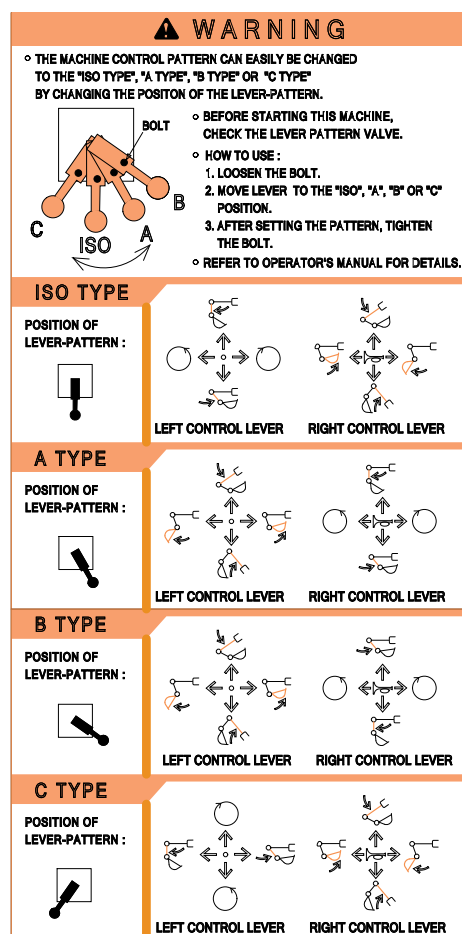


91Q6-07450

91Q6-07450

### 35) SWING BEARING GREASE (item 47)

This warning label is positioned in the front side of swing ring gear.


※ See page 6-37 for details.

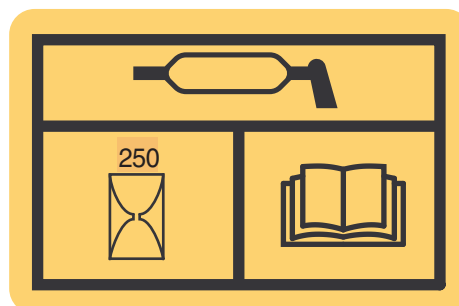

38090FW02

### 36) BATTERY POSITION (item 48)

This warning label is positioned on the left side cover.

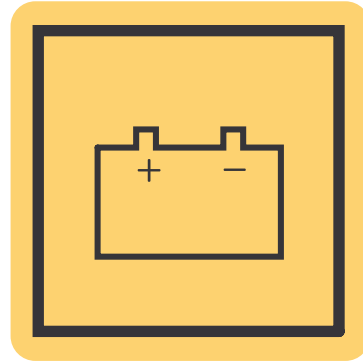


38090FW03

### 37) FUEL SHUT OFF (item 50)

This warning label is positioned on the top side of the hydraulic tank.

- ※ Fill only the hydraulic oil.
- ※ Do not fill the diesel fuel.
- ▲ Relieve tank pressure with the engine off by removing the cap slowly to prevent burns from hot oil.

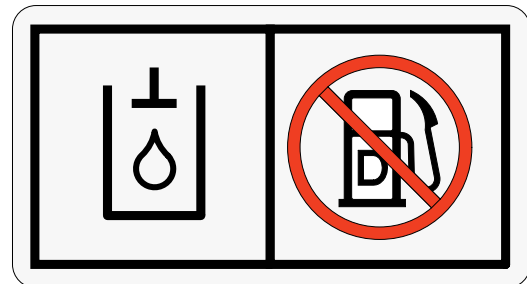

140WH90FW51

### 38) MCU/ECM CONNECTOR (item 51)

This warning label is positioned on the low cover of the air conditioner in the cab.

- ※ MCU communicates the machine data with Laptop computer through RS232 service socket.
- ※ ECM communicates the engine data with cummins INSITE tool adapter through J1939 service socket.
- ※ See page 3-60 for details.




235Z90FW52

### 39) SURGE TANK (item 54)

This warning label is positioned on the top of the radiator.

This system must be filled slowly to prevent air locks.

- ※ Fill rate  $\leq 11$  lpm

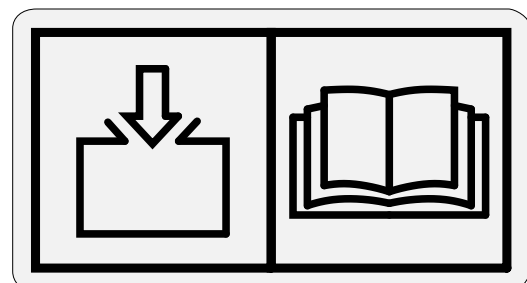


3009A0FW54

#### 40) KEY OFF CAUTION (item 55)

This warning label is positioned on the right side window of the cab.

- ※ **Park on a flat place and stop the engine for inspecting and repairing. Properly TAG machine is not operational. (remove start key)**

**Extreme care shall be taken during maintenance work.**

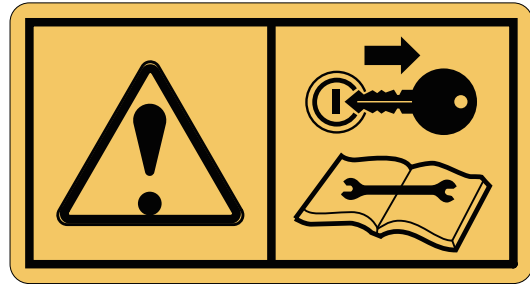

290F0FW05

#### 41) RCV LEVER (item 56)

This warning label is positioned on the right side window of the cab.

- ※ **When you work by moving the seat to the front of cab, it is possible to take place interference between cluster and RCV lever at specific position.**

**To prevent this interference, handle below works.**

- (1) Rotate cluster.
- (2) Adjust seat position for up-and-downward using seat height adjuster knob in suspension.
- (3) Lower the console box height using knob between RH console box and seat cushion.
- (4) Push back console and seat position using seat and console box adjust knob between LH console box and seat cushion.



290F0FW04

#### 42) FIRE EXTINGUISHER (item 57)

This label is located on the left rear stay of the cabin inside.

- ※ **Read and understand the instructions adhered decal on the fire extinguisher.**



91Q6-07290

91Q6-07290

#### 43) LEFTOVER FUEL (item 58)

This warning label is positioned on the inner left side of tool box.

- ⚠ Do not fuel a machine near open flames or sparks.
- ⚠ Properly clean areas of spillage.




91K4-02700

#### 44) RCV CONTROL (item 59)

This warning label is positioned on the right side window of the cab.

- ※ Read and understand the operation of the RCV lever.

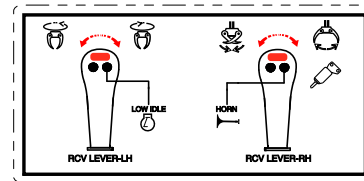

330F0SL05

#### 45) AIR COMPRESSOR (item 60)

This warning label is positioned on the inner left side of tool box.

- ⚠ Do not touch air compressor or it may cause server burn.



91Q4-13301

#### 46) AIR COMPRESSOR -CAB (item 61)

This warning label is positioned on the right window of cab.

- ※ Park on a flat place to use the air compressor.
- ※ Be sure the engine working during the use of air compressor. After the use, make sure the compressor switch off.
- ※ During the operation, do not use the other electrical devices (air conditioner, lights, stereo etc.)
- ※ Lower the air breather.
- ※ After the use, completely drain the water and the air inside the air tank.
- ※ Do not change the setting of the operating switch or the harness.
- ⚠ Do not touch the cylinder head during the operation.



91Q4-13320