

A

AAVM	3-32
Accel dial switch	3-34
After engine start	2-5
Air breather element	4-41
Air cleaner filter	4-30
Air conditioner & heater	3-39
Air conditioner filter	4-54
Alternate exit	1-38
Attachment lowering	2-23

B

Battery	4-51
Battery cable and connection	4-53
Before starting engine	2-2
Bluetooth	3-52
Boom lowering	2-23
Bucket clearance adjustment	4-49
Bucket replacement	4-46
Bucket selection guide	7-23
Bucket tooth replacement	4-48

C

Cab air filter	4-54
Cab device	3-1
Changing machine control pattern	2-26
Charge air cooler	4-28
Charge air piping	4-28
Cigar lighter	3-43
Cluster	3-2
Coolant	4-22
Cooling fan	4-29

D

Digging force	7-6
Dimension and weight	5-2
Drain filter	4-41

E

Emergency engine speed connector	3-61
Engine cleaning	4-34
Engine oil filter	4-19
Engine oil level	4-19
Engine starting & stop	2-3
Engine starting by booster	4-52
Engine stop	2-6

F

Fan belt	4-29
Fuel filler pump filter	4-39
Fuel filter	4-32
Fuel leakage	4-34
Fuel system bleeding	4-32
Fuel tank	4-31
Fuse & relay box	3-59

G

Gauge	3-3
Getting on and off	1-19

H

Hydraulic breaker	8-1
Hydraulic oil changing	4-41
Hydraulic oil filling	4-40
Hydraulic oil level	4-40

L

LCD	3-2
Levers & pedals	3-37
Lifting capacities	7-11
Lubricant specification	4-9

M

Machine data plate	0-4
Maintenance check list	4-10
Major component	7-1
MCU (Machine Control Unit)	3-59
Mode selection system	2-7

N

New machine lubricants	4-9
New machine operation	2-1

O

Oil cooler	4-28
Operating pattern	2-26
Overhead set	4-36

P

Pedals	3-37
Periodical replacement parts	4-5
Pilot line filter	4-43
Pin & bushing lubrication	4-50

P

Prefilter	4-32
Pilot lamps	3-9

Q

Quick clamp	8-6
-------------------	-----

R

Radiator flushing	4-25
Radio & USB player	3-44
RCV lever lubricate	4-45
Recommended oils	7-32
Relieving pressure	4-3
Reservoir tank	4-22
Return filter	4-42
RCV lever operating pattern	2-26

S

Safety labels	1-31
Safety parts	4-5
Seat	3-58
Seat belt	3-58
Service meter	3-60
Service socket	3-60
Smart key tag	3-33
Specification for major component	7-29
Specification	7-2
Start switch	3-33
Storage	2-24
Suction strainer	4-41
Swing bearing grease	4-43
Swing gear & pinion grease	4-44
Swing reduction gear oil	4-43
Switch panel	3-33
Switches	3-12, 3-33

T

Torques-major component	4-8
Torques-fastener	4-6
Towing machine	2-15
Track adjustment	4-46
Track shoe selection	7-27
Transportation	5-1
Travel reduction gear oil	4-44
Traveling machine	2-13
Troubleshooting guide	7-1

U

Undercarriage	7-27
USB port	3-48

V

Vibration damper	4-35
------------------------	------

W

Warming up operation	2-5
Warning lamps	3-6
Weight	7-10
Welding repair	4-53
Windshield	3-60
Working device operation	2-12
Working method	2-16
Working range	7-6