



WARNING

CALIFORNIA PROPOSITION 65

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to www.P65warnings.ca.gov/diesel.

91K4-07310-EN

▲ Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

※ For more information go to www.P65warnings.ca.gov/diesel.

Foreword	0-1	6. Efficient working method	4-11
Emission-related components warranty (USA and CANADA only)	0-2	7. Operation in the special work sites	4-15
Before servicing this machine	0-3	8. Normal operation of excavator	4-17
EC regulation approved	0-4	9. Attachment lowering	4-18
Table to enter S/No and distributor	0-5	10. Storage	4-19
Safety labels	0-6	11. RCV lever operating pattern	4-21
Machine data plate	0-22	12. Handling the rubber track	4-23
Guide (Direction, S/No, Intended use symbol) ·	0-23	13. Switching hydraulic attachment circuit	4-28
1. SAFETY HINTS		5. TRANSPORTATION	
1. California proposition 65	1-1	1. Preparation for transportation	5-1
2. Safety instructions	1-2	2. Dimension and weight	5-2
 		3. Loading the machine	5-7
2. SPECIFICATIONS		4. Fixing the machine	5-9
1. Major components	2-1	5. Loading and unloading by crane	5-10
2. Specifications	2-2	 	
3. Working range	2-9	6. MAINTENANCE	
4. Weight	2-12	1. Instruction	6-1
5. Lifting capacities	2-13	2. Tightening torque	6-5
6. Bucket selection guide	2-45	3. Fuel, coolant and lubricants	6-8
7. Undercarriage	2-46	4. Maintenance check list	6-9
8. Specification for major components	2-47	5. Maintenance chart	6-14
9. Recommended oils	2-50	6. Service instruction	6-17
 		7. Electrical system	6-34
3. CONTROL DEVICES		8. Air conditioner and heater	6-37
1. Cab devices	3-1	9. Tilting cab	6-39
2. Cluster	3-3	 	
3. Switches	3-30	7. TROUBLESHOOTING GUIDE	
4. Levers and pedals	3-35	1. Engine	7-1
5. Air conditioner and heater (cab type)	3-38	2. Electrical system	7-2
6. Others	3-40	3. Others	7-3
4. OPERATION		8. HYDRAULIC BREAKER AND QUICK CLAMP	
1. Instruction for new machine	4-1	1. Selecting hydraulic breaker	8-1
2. Check before starting the engine	4-2	2. Circuit configuration	8-2
3. Starting and stopping the engine	4-3	3. Maintenance	8-3
4. Operation of the working device	4-7	4. Precaution when operating the breaker	8-4
5. Traveling of the machine	4-8	5. Quick coupler	8-10
 		INDEX	9-1