


# SAFETY LABELS

## 1. LOCATION

Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.


### 1) CAB TYPE

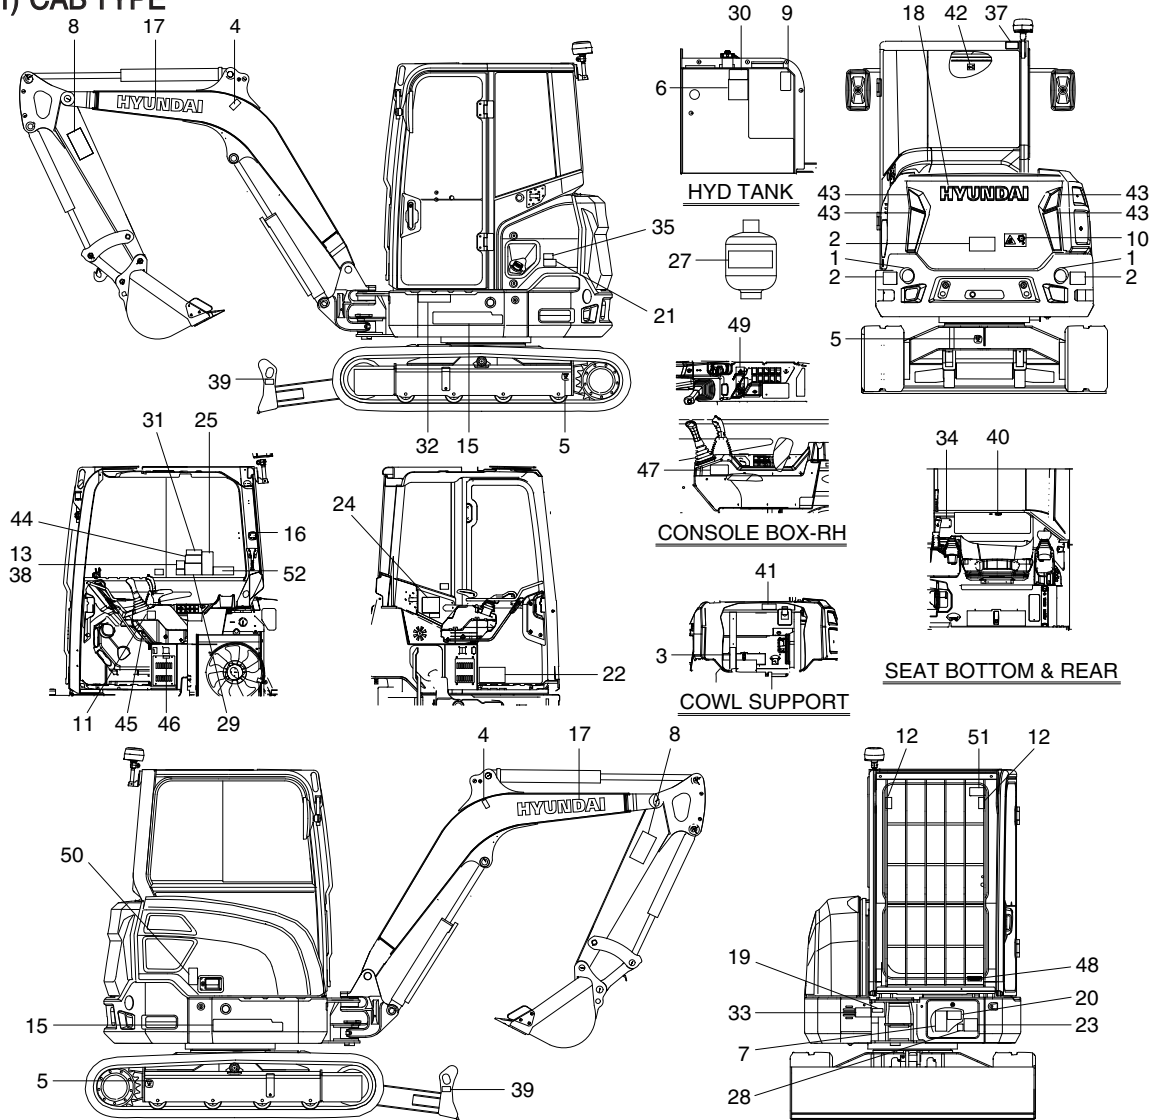

90MS-01100-01A

- |                               |                            |                              |
|-------------------------------|----------------------------|------------------------------|
| 1 Reflecting                  | 19 Grease                  | 37 Beacon lamp               |
| 2 Keep clear (rear)           | 20 Electric welding        | 38 Angle blade control (opt) |
| 3 Engine room caution         | 21 Fueling                 | 39 Lifting point/tie down    |
| 4 Lifting point               | 22 Service instruction     | 40 Fire extinguisher         |
| 5 Tie                         | 23 Noise level             | 41 Refrigerant               |
| 6 Hydraulic oil lubrication   | 24 Lifting chart           | 42 Safety rear window        |
| 7 Battery accident            | 25 General caution (cab)   | 43 Reflecting-LH/RH          |
| 8 Keep clear (attach)         | 26 Pattern change          | 44 Boom caution              |
| 9 Change way                  | 27 Accumulator             | 45 Console logo              |
| 10 Shearing                   | 28 Battery position        | 46 MCU/ECU connector         |
| 11 Console tilting            | 29 Control ideogram        | 47 Caution key               |
| 12 Front window safety        | 30 Fuel shut off           | 48 FOG plate                 |
| 13 Dozer control ideogram     | 31 Water separator         | 49 Key box                   |
| 15 Model name                 | 32 General caution (frame) | 50 Stay fix                  |
| 16 Hammer                     | 33 Name plate              | 51 Front window safety       |
| 17 Hyundai logo (boom)        | 34 ROPS plate              | 52 California 65 caution     |
| 18 Hyundai logo (engine hood) | 35 Ultra low sulfur diesel |                              |

## 2) CANOPY TYPE

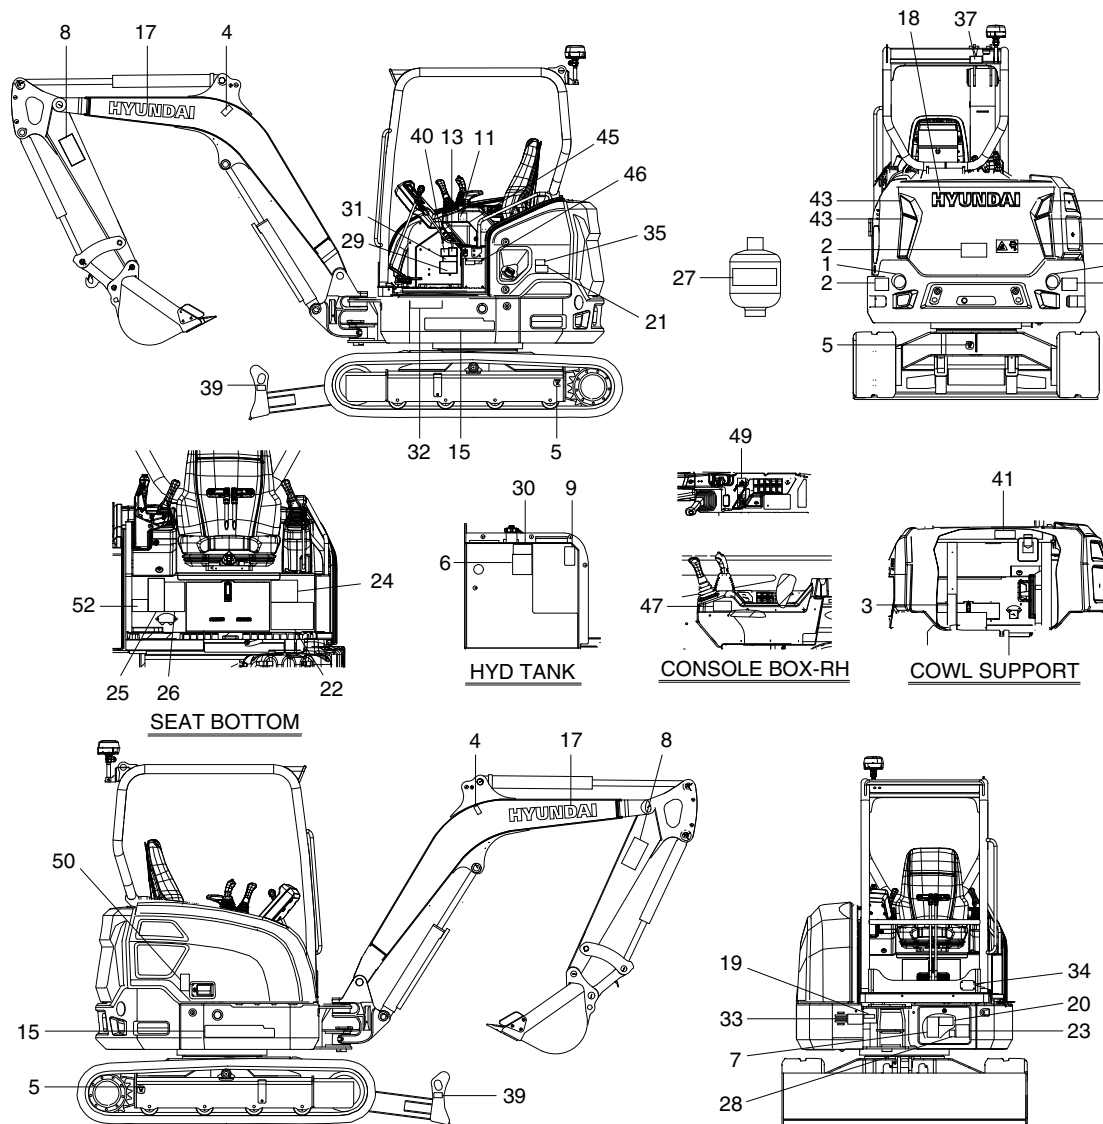

90MS-01200-01A

- |                               |                            |                              |
|-------------------------------|----------------------------|------------------------------|
| 1 Reflecting                  | 19 Grease                  | 34 ROPS plate                |
| 2 Keep clear (rear)           | 20 Electric welding        | 35 Ultra low sulfur diesel   |
| 3 Engine room caution         | 21 Fueling                 | 36 Engine control ideogram   |
| 4 Lifting point/Tie down      | 22 Service instruction     | 37 Beacon lamp               |
| 5 Tie                         | 23 Noise level             | 38 Angle blade control (opt) |
| 6 Hydraulic oil lubrication   | 24 Lifting chart           | 39 Lifting point/tie down    |
| 7 Battery accident            | 25 General caution (cab)   | 40 Fire extinguisher         |
| 8 Keep clear (attach)         | 26 Pattern change          | 43 Reflecting-LH/RH          |
| 9 Change way                  | 27 Accumulator             | 45 Console logo              |
| 11 Console tilting            | 28 Battery position        | 46 MCU/ECU connector         |
| 13 Dozer control ideogram     | 29 Control ideogram        | 47 Caution key               |
| 15 Model name                 | 30 Fuel shut off           | 49 Key box                   |
| 16 Hammer                     | 31 Water separator         | 50 Stay fix                  |
| 17 Hyundai logo (boom)        | 32 General caution (frame) | 52 California 65 caution     |
| 18 Hyundai logo (engine hood) | 33 Name plate              |                              |

## 2. DESCRIPTION

There are labels on this machine please become familiarized with all warning labels and descriptions are based on the cab type.


Replace any safety label that is damaged, or missing.

### 1) REFLECTING (item 1)

This label is positioned on the both sides of the counterweight.

**▲ To prevent serious personal injury or death keep clear of attachment working area.**

**▲ Do not deface or remove this label from the machine.**

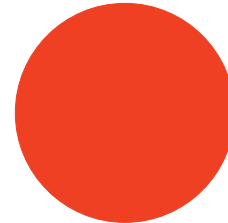

91M9-04020-00

### 2) KEEP CLEAR (REAR) (item 2)

This label is positioned on the both sides of the counterweight and rear side of the engine hood.

**▲ To prevent serious personal injury or death keep clear of machine swing radius.**

**▲ Do not deface or remove this label from the machine.**



91M8-07011-00

### 3) ENGINE ROOM CAUTION (item 3)

This label is positioned on the cowl support of the inside engine room.

**▲ Do not open the engine hood while the engine is running.**

**▲ Escaping fluid under pressure can penetrate the skin causing serious injury.**

**※ Study the service manual before service job.**

**▲ Never open the filler cap while engine running or at high coolant oil temperature.**

**▲ Do not touch turbocharger or it may cause severe burn, while the engine is running or immediately after the engine is shut down.**

**▲ Relieve all pressure before disconnecting any hydraulic, coolant or fuel lines etc.**

**▲ Study the operator's manual before starting and operating machine.**




81M8-07111-00

#### 4) LIFTING POINT (item 4)

This label is positioned on the both sides of the boom.

- ※ In order to lift the machine, attach the lifting devices to the lifting points.

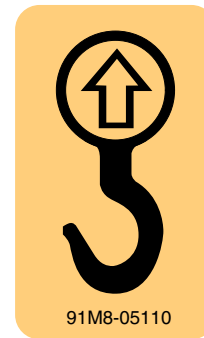


91M8-05110-00

#### 5) TIE (item 5)

This label is positioned on the LH, RH and rear sides of the lower frame.

- ※ **Never tow the machine using tie down eyelet as it may break resulting in personal injury or death.**
- ※ See page 4-10 for detail.

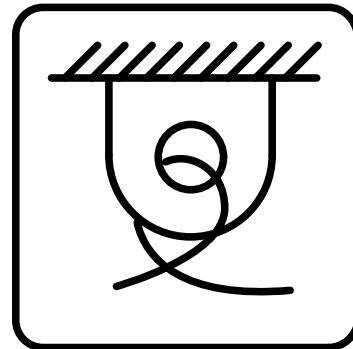

91N6-05120

#### 6) HYDRAULIC OIL LUBRICATION (item 6)

This label is positioned on the right side of the hydraulic tank.

- ※ Do not mix with different brand oils.
- ⚠ **Never open the filler cap while engine running or at high hydraulic oil temperature.**
- ⚠ **Loosen the cap slowly and release internal pressure completely.**



91N6-03112

### 7) BATTERY ACCIDENT (item 7)

This label is positioned on the inside of the service cover.

- ⚠ **Electrolyte containing sulfuric acid can cause severe burns. Avoid allowing contact with the skin, eyes or clothes. In the event of accident flush with sufficient water and contact a physician immediately.**

Failure to comply may result in serious injury or death.

- ※ **Maintain the electrolyte at the recommended level. Add distilled water to the battery only when starting up, never when shutting down.**

With electrolyte at proper level, less space may cause the gases to be accumulated in the battery.

- ⚠ **Extinguish all smoking materials and open flames before checking the battery.**
- ⚠ **Do not allow any open flames or excessive heat near or when checking the battery.**
- ⚠ **Do not allow unauthorized personnel to change the battery or to use booster cables.**
- ⚠ **To prevent electric shock, do not touch battery terminal with wet hands.**



91N6-02122

### 8) KEEP CLEAR (ATTACH) (item 8)

This label is positioned on both sides of the arm.

- ⚠ **Serious injury or death can result from a falling attachment.**
- ⚠ **To prevent serious injury or death, do not walk near, under implements or attachments.**

This applies when machine is in use, the implements are suspended in air or while the machine is being worked on.




R5570FW31

### 9) CHANGE WAY (item 9)

This label is positioned on the right side of the hydraulic tank.

※ See page 4-28 for details.

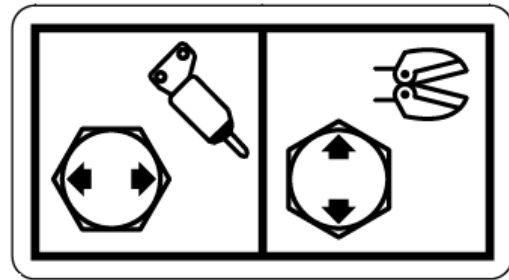

97MK-03111-00

### 10) SHEARING (item 10)

This label is positioned on the rear side of engine hood.

⚠ Do not open the engine hood while the engine is running. Stay clear of rotating parts. Failure to comply may cause serious injury or death.

⚠ Do not touch exhaust pipe or it may cause severe burn.




91N6-07122

91N6-07122-00

### 11) CONSOLE TILTING (item 11)

This label is positioned on the LH console box.

※ Before you get off the machine be sure to tilt the LH console box.

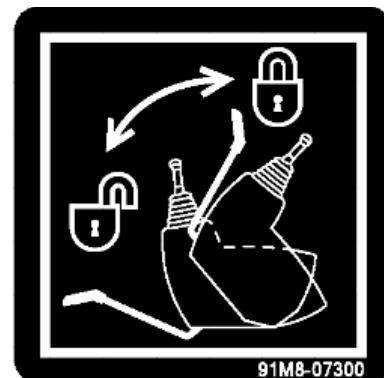

91M8-07300

91M8-07300-00

### 12) FRONT WINDOW SAFETY (item 12)

This label is positioned on the both sides front window of the cab.

⚠ Be careful that the front window may be promptly closed.




97MH-07351-00

97MH-07351-00

### 13) DOZER CONTROL IDEOGRAM (item 13)

This label is positioned on the right side window of inside the cab.

- ※ See page 4-7 for details.
- ※ Guidelines for using the general dozer blade.
  - Be careful not to apply an excessive load when using a blade.
  - Avoid impacts and loads on the bottom due to machine modification or excessive working conditions.
  - Check the BLADE UP status before traveling the machine.
  - Avoid any collision with the upper working device and the blade.
  - Do not move machine in the blade jack up state.
  - When using blade jack up, use it in an environment where the ground is not rough and the machine and ground are same level.

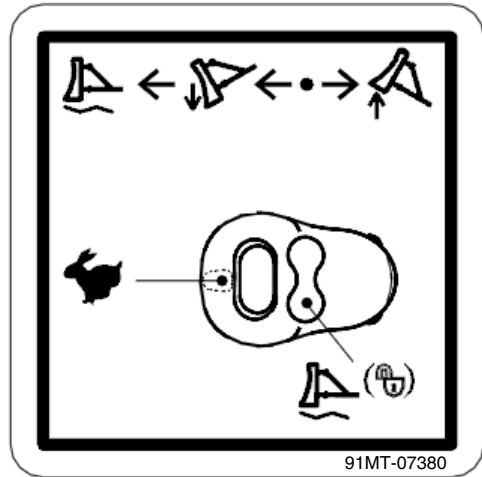

91MT-07380-00

### 14) HAMMER (item 16)

This label is located on the right stay of inside the cab.

- ⚠ The window serves as an alternate exit. In emergency, break out the window using the hammer and escape from the cabin.



91Q6-07280

#### 15) ELECTRIC WELDING (item 20)

This label is positioned on the inside of the service cover.

**▲ Before carrying out any electric welding on this machine, follow the below procedure.**

- Pull the connectors out of all electric control units.
- Connect the ground lead of the welding equipment as close to the welding point as possible.
- ※ **Be sure to remove paint where ground will be applied to ensure proper grounding of welder. Once welding is complete, clean and repaint area.**
- ※ **See page 6-36 for detail.**



7807AFW20

#### 16) FUELING (item 21)

This label is positioned on the left cover of the cowl.

**▲ Stop the engine when refueling. Any lights or flames must be kept at a safe distance while refueling.**

- ※ **Use ultra low sulfur fuel only.**
- ※ **Ultra low sulfur fuel sulfur content  $\leq 10$  ppm**



91MT-01130



**17) GENERAL CAUTION (CAB) (item 25)**


This label is positioned on the right side window of inside the cab.

- ▲ **Serious injury or death can result from contact with electric lines.**

It is possible to receive shock by merely coming into the vicinity of electric lines, the minimum distance based on supply voltage should never be exceeded.

Refer to page 1-17.

- ▲ **Serious injury or death can result from dropping bucket.**
- ▲ **Operating the machine with quick coupler switch unlocked or without safety pin of moving hook can cause the bucket to drop off.**
- ▲ **Be careful to operate machine equipped with quick coupler or extensions.**
- ▲ **Bucket may hit cab, canopy, boom and boom cylinders when it reached vicinity of them.**

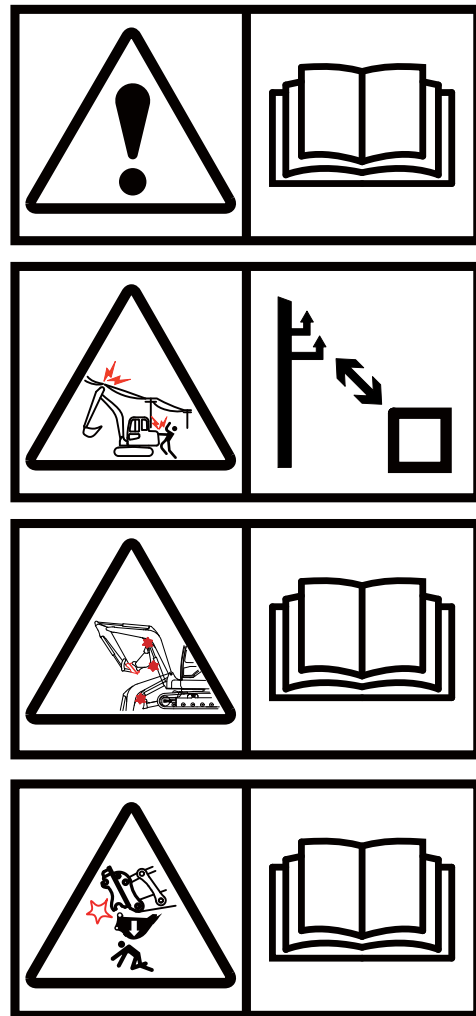


94MS-07240-00

### 18) PATTERN CHANGE (item 26)

This label is positioned on the left rear side of the cabin inside.

- ⚠ **Check the machine control pattern for conformance to the pattern on this label.**  
If not, change label to match pattern before operating machine.
- ⚠ **Failure to do so could result in serious injury or death.**
- ※ See page 4-22 for details.

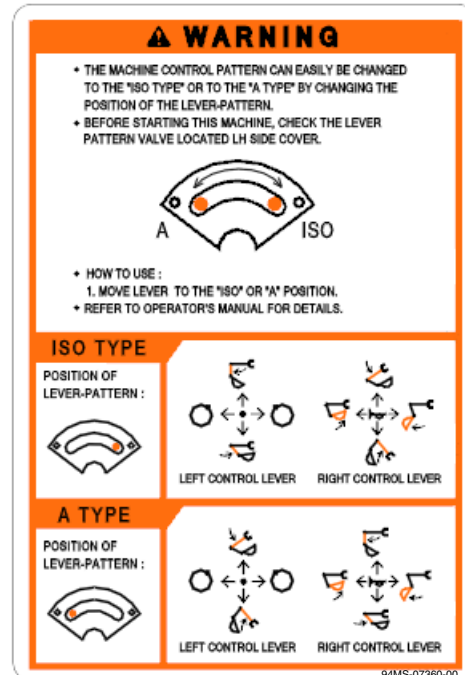

94MS-07360

### 19) ACCUMULATOR (item 27)

This label is positioned on the accumulator of the solenoid valve.

- ※ The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.

- ▲ Never make any holes in the accumulator or expose it to open flame or fire.
- ▲ Do not weld anything to the accumulator.
- ※ When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator. It is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your HD Hyundai Construction Equipment distributor.




91N6-03201

### 20) BATTERY POSITION (item 28)

This label is positioned on the right of the tool box.

- ※ See page 6-34 for the battery handling.

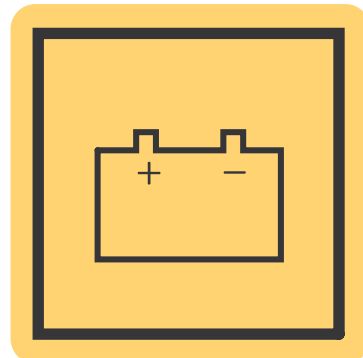


38090FW03

## 21) CONTROL IDEOGRAM (item 29)

This label is positioned on the right side window of inside the cab.


- ⚠ **Always ensure the label matches the control pattern. If it does not, replace label with appropriate control pattern label.**
- ⚠ **Failure to do so could result in serious injury or death**
- ※ **See page 4-7 for details.**

Without proportional

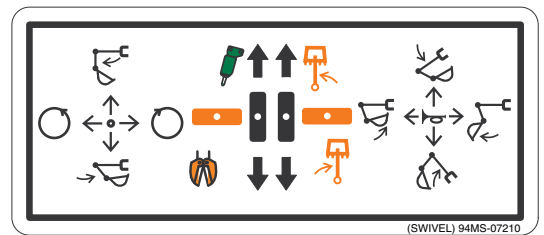


94MS-07210-00

With proportional (without rotating)

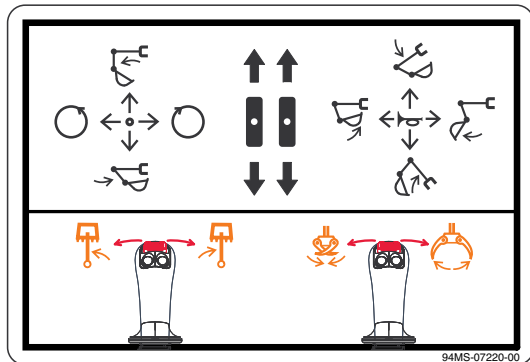

94MS-07220-00

With proportional + rotating

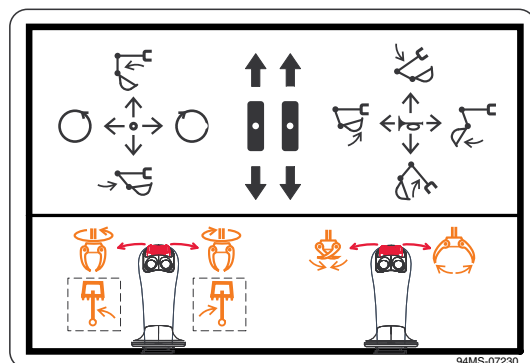


94MS-07230-00

## 22) FUEL SHUT-OFF (item 30)

This label is positioned on the right side of the hydraulic tank.

- ※ **Fill only the hydraulic oil.**  
**Do not fill the diesel fuel.**
- ⚠ **Relieve tank pressure with the engine off by removing the cap slowly to prevent burns from hot oil.**

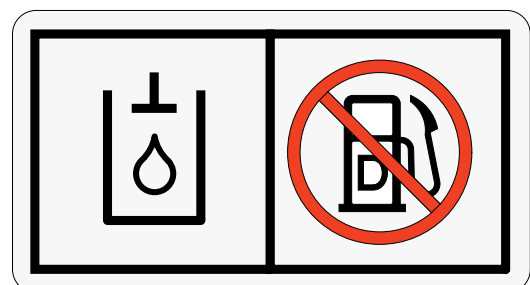


140WH90FW51

### 23) WATER SEPARATOR (item 31)

This label is positioned on the right side window of inside the cab.

- ※ In order to protect high pressure fuel system, please drain water in water separator before starting the engine.

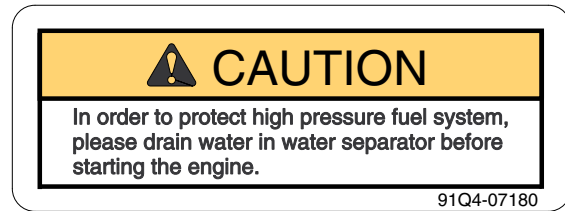

91Q4-07180

### 24) GENERAL CAUTION (FRAME) (item 32)

This label is positioned on the inside of the cab door.

- ▲ Study the operator's manual before transporting the machine, if provided and tie down arm and track to the carrier with lashing wire.
- ※ See page 5-9 for details.
- ▲ Make sure wire rope is proper size and keep correct hoisting method.
- ※ See page 5-10 for details.
- ▲ Place the bucket on the ground whenever servicing the hydraulic system.
- ※ Check oil level on the level gauge.
- ※ Refill the recommended hydraulic oil up to specified level if necessary.




97MK-04100

**25) ULTRA LOW SULFUR DIESEL (item 35)**

This label is positioned on the side of the fuel tank.

- ※ **Use ultra low sulfur fuel only.**
- ※ **Ultra low sulfur fuel**  
sulfur content  $\leq 10$  ppm
- ※ **If ultra low sulfur diesel is not used, the aftertreatment diesel particulate filter can be damaged.**

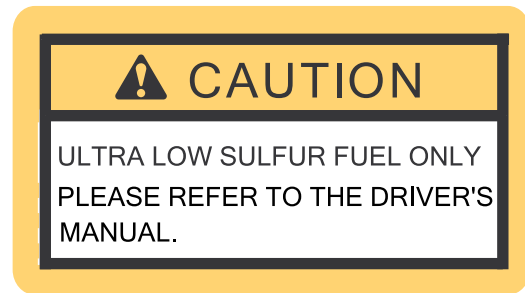


2609A0SL03

**26) BEACON LAMP (item 37)**

This label is positioned on the rear top outside of the cab.

- ※ **Make sure the beacon lamp maintains a vertical position.**  
A horizontal position can result in a decrease in life time of the lamp due to the infiltration of foreign substances such as dust or water.
- ※ **While the machine transfer, the beacon lamp is easy to break. In the case, change the position of the lamp to the horizontal.**

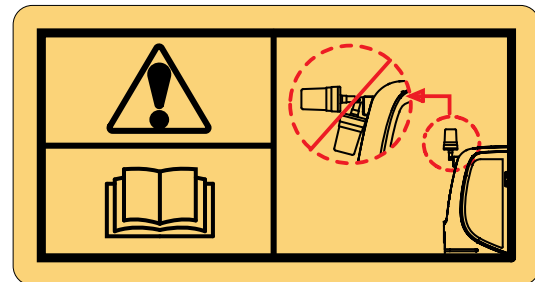


91MK-02221-00

## 27) ANGLE BLADE CONTROL (item 38)

This label is positioned on the right side window of the cab.

- ▲ To avoid personal injury or death,
  - Never jack up or lift the machine with the angle blade placed at an angle.
  - Stability of the machine is affected with blade at angle, keep at neutral position.
  - Before starting the job or when travelling up or down a slope, position and keep the angle blade at neutral.
  - Do not work under the machine.
- ※ Do not angle blade up with the angle blade placed at an angle.
- ※ Refer to page 0-12 for additional descriptions.

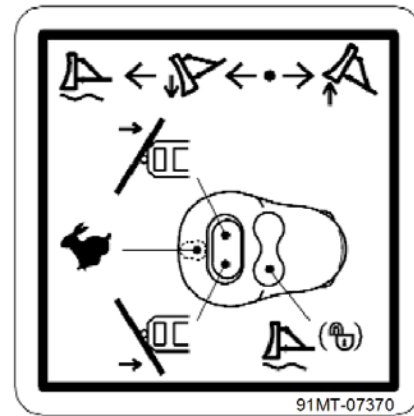


91MT-07370-00

## 28) LIFTING POINT/TIE DOWN (item 39)

This label is positioned on the LH and RH sides of the dozer blade.

- Lifting point  
In order to lift the machine, attach the lifting devices to the lifting points.
- Tie down  
In order to tie down the machine, attach the tie-downs to the tying points.

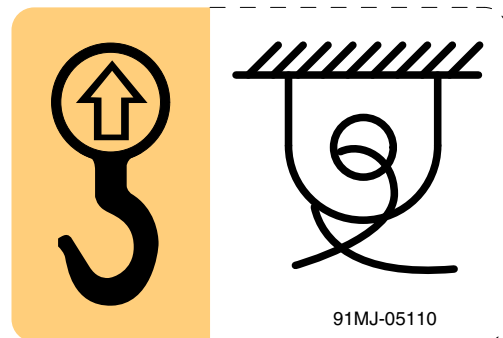

91MJ-05110-00

## 29) FIRE EXTINGUISHER (item 40)

This label is located on the rear side of the cabin inside.

- ※ Read and understand the instructions adhered decal on the fire extinguisher.




91Q6-07290

## 30) REFRIGERANT (item 41)

This label is positioned on the cowl support of the inside of the engine room.

- ▲ Inhalation of A/C refrigerant gas in any form can result in serious injury or death.
- ※ Refer to page 6-38.

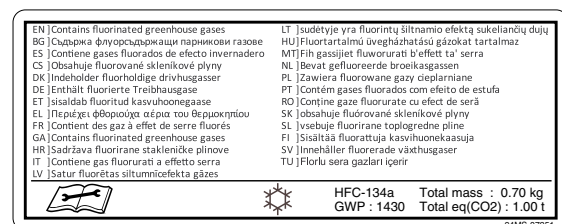

94MS-07251-00

### 31) SAFETY REAR WINDOW (item 42)

This label is positioned on the rear window of inside the cab.

- ※ The rear window serves as an alternate exit.
- ※ To remove rear window, pull the ring and push out the glass.




9KM9-07260

### 32) BOOM CAUTION (item 44)

This label is positioned on the right side window of inside the cab.

- ※ Be careful to operate the boom. The boom may hit cab when boom reaches vicinity of cab.

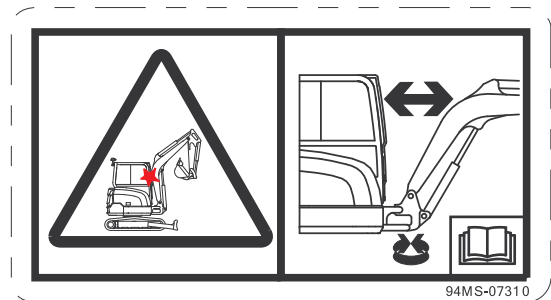


94MS-07310-00

### 33) MCU/ECU CONNECTOR (item 46)

This label is positioned on the right side of inside the cab.

- ※ MCU communicates the machine data through Laptop computer through RS232 service socket.
- ※ ECU communicates the engine data with cummins INSITE tool adapter through J1939 service socket.
- ※ See page 3-39 for details.

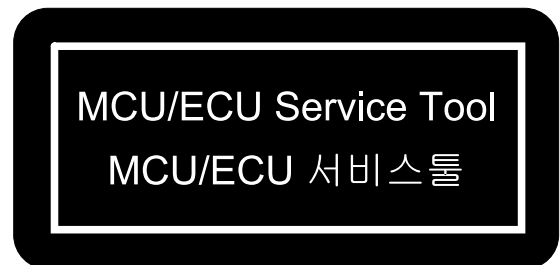

91Q4-15860

### 34) CAUTION KEY (item 47)

This label is positioned on the left side of the RH console box.

- ⚠ Park on a flat place and stop the engine for inspecting and repairing. Properly TAG machine is not operational. (remove start key)
- ※ Extreme care shall be taken during maintenance work.




91M9-01211-00



### 35) STAY FIX (item 50)

This label is positioned on the right side of the engine hood.

- ⚠ **Be sure to fix the stay when the door or cover needs to be opened.**
- ⚠ **A door or cover which is not fixed in the fully closed or open position (via stay) can suddenly move causing severe personal injury or death.**

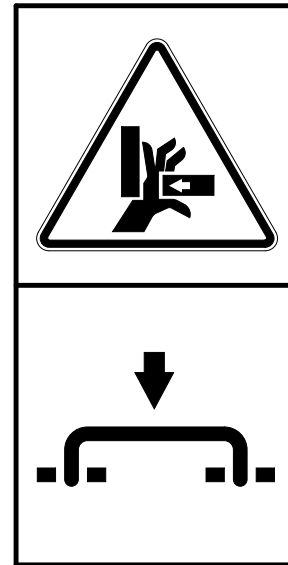

21070FW14

### 36) FRONT WINDOW SAFETY (item 51)

This label is positioned on the left top side front window of the cab.

- ⚠ **Be careful that the front window may be promptly closed.**



91Q6-07251

91Q6-07251-00


### 37) CALIFORNIA 65 (item 52)

This warning label is positioned on the RH side cover.

- ⚠ **Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.**

- (1) Always start and operate the engine in a well-ventilated area.
- (2) If in an enclosed area, vent the exhaust to the outside.
- (3) Do not modify or tamper with the exhaust system.
- (4) Do not idle the engine except as necessary.

※ **For more information go to [www.P65warnings.ca.gov/diesel](http://www.P65warnings.ca.gov/diesel).**

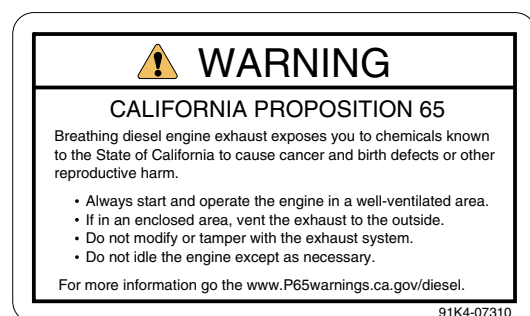

91K4-07310

91K4-07310