

A

After engine start	4-5
Air cleaner filter	6-23
Air conditioner & heater	3-37
Air conditioner filter	6-37
Angle dozer control	3-33
Attachment lowering	4-18

B

Battery	6-34
Before starting engine	4-2
Boom lowering	4-18
Bucket replacement	6-31
Bucket selection guide	2-45
Bucket tooth replacement	6-32

C

Cab device	3-1
Cab tilting	6-39
Changing machine control pattern	4-21
Cluster	3-3
Coolant	6-19
Cooling fan	6-23

D

Dozer control	3-35
---------------------	------

E

Engine oil filter	6-17
Engine oil level	6-17
Engine starting & stop	4-3
Engine starting by booster	6-35
Engine stop	4-6

F

Fan belt	6-22
Fuel filter	6-25
Fuel leakage	6-25
Fuel tank	6-24
Fuse box	3-43

H

Hydraulic breaker	8-1
Hydraulic oil changing	6-26
Hydraulic oil filling	6-26
Hydraulic oil level	6-26

L

Levers & pedals	3-34
Lifting capacities	2-13
Lubricant specification	2-50

M

Maintenance check list	6-9
Major component	2-1
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-22
Operating pattern	4-21

P

Password	3-23
Pedals	3-34
Periodical replacement parts	6-4
Pilot lamps	3-10
Pilot line filter	6-28
Power socket	3-39

R

Radiator flushing	6-19
Radio & USB player	3-44
RCV lever lubricate	6-29
Recommended oils	2-50
Relieving pressure	6-3
Return filter	6-27

S

Safety hints	1-1
Safety labels	0-6
Start limit mode setting	3-21
Safety parts	6-4
Seat	3-40
Seat belt	3-40
Service meter	3-4
Service socket	3-39
Specification for major component	2-47
Specification	2-2
Start switch	3-29

Storage	4-19
Suction strainer	6-27
Swing bearing grease	6-28
Switch panel	3-29
Switches	3-29

T

Torques-major component	6-7
Torques-fastener	6-5
Towing machine	4-10
Track adjustment	6-30
Track shoe	2-46
Transportation	5-1
Travel reduction gear oil	6-29
Travelling machine	4-8
Troubleshooting guide	7-1

U

Undercarriage	2-46
---------------------	------

W

Warming up operation	4-5
Warning lamps	3-6
Water separator	6-24
Weight	2-12
Working device operation	4-7
Working method	4-11
Working range	2-9