


## 1. DIRECTION

The direction of the arrows (as they are indicated) are with the travel motors to the rear and the boom facing the opposite direction. Refer to the right illustration.

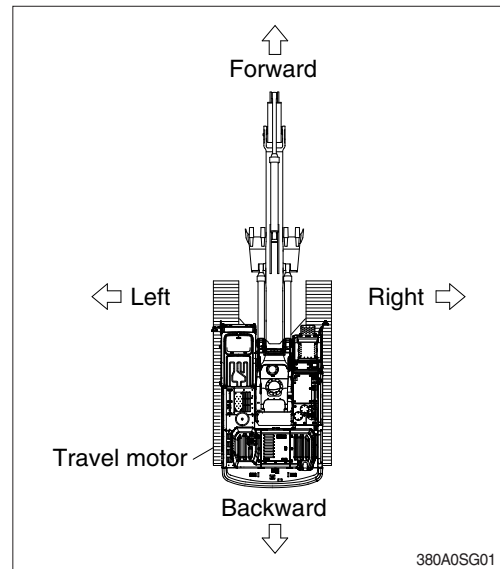


## 2. SERIAL NUMBER

Provides the serial number when ordering parts or seeking assistance.


### 1) MACHINE SERIAL NUMBER

The numbers are located below the right window of the operator's cab.

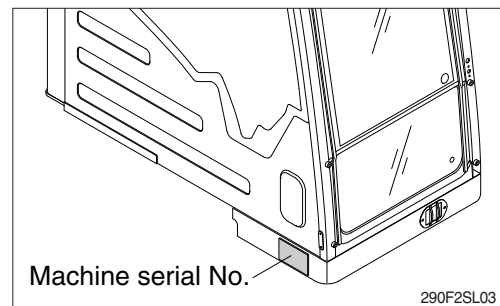

### 2) ENGINE SERIAL NUMBER

The numbers are located on the engine name plate.

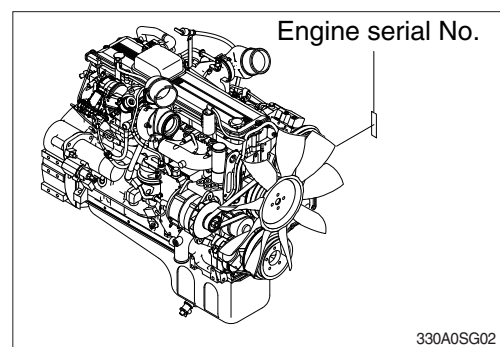

## 3. INTENDED USE

This machine is designed to be used mainly for the following work:

- Excavation work
- Loading work
- Leveling work
- Drainage work
- Lifting work
- Demolition work

※ Please refer to section, Efficient working method further details.

## 4. SYMBOLS

- ▲ Provides important safety warnings. Failure to follow these warnings could result in serious injury or death.
- △ Provides important instructions to prevent damage to the equipment.
- ※ Provides useful information for the operator.