


## GUIDE

### 1. DIRECTION

The direction of the arrows (as they are indicated) are with the travel motors to the rear and the boom facing the opposite direction. Refer to the right illustration.

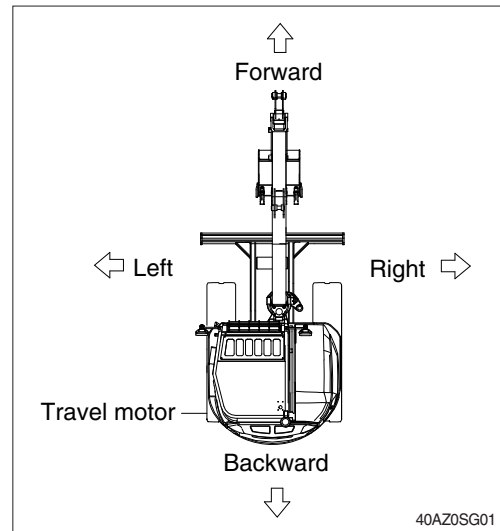


### 2. SERIAL NUMBER

Provides the serial number when ordering parts or seeking assistance.


#### 1) MACHINE SERIAL NUMBER

The numbers are located below the front window of the operator's cab.

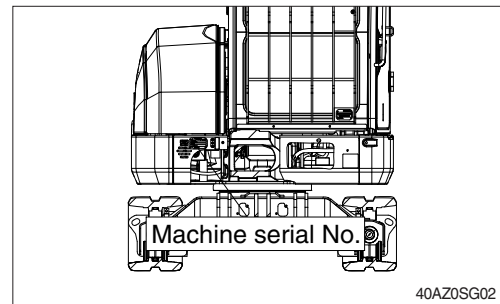

#### 2) ENGINE SERIAL NUMBER

The numbers are located on the engine name plate.

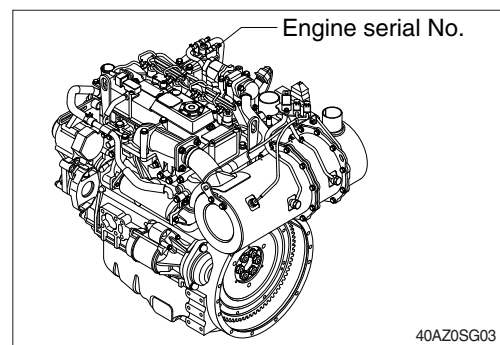

### 3. INTENDED USE

This machine is designed to be used mainly for the following work.

- Excavation work
- Loading work
- Leveling work
- Drainage work
- Lifting work
- Demolition work

※ Please refer to the section 4 (efficient working method) further details.

### 4. SYMBOLS

▲ Provides important safety warnings. Failure to follow these warnings could result in serious injury or death.

△ Provides important instructions to prevent damage to the equipment.

※ Provides useful information for the operator