

A

AAVM	3-29
Adjust track gauge	5-17
After engine start	4-5
Air breather element	6-38
Air cleaner filter	6-30
Air conditioner & heater	3-30
Air conditioner filter	6-49
Alternate exit	0-12
Attachment lowering	4-23

B

Battery	6-46
Before starting engine	4-2
Bluetooth	3-49
Boom lowering	4-23
Bucket clearance adjustment	6-44
Bucket replacement	6-42
Bucket selection guide	2-32
Bucket tooth replacement	6-43

C

Cab air filter	6-49
Cab device	3-1
Centrifugal oil cleaner	6-20
Changing machine control pattern	4-26
Cigar lighter	3-40
Cluster	3-2
Coolant	6-24
Cooling fan	6-28

D

DEF/AdBlue® supply module filter	6-35
DEF/AdBlue® tank	6-35
Dimension and weight	5-2
Drain filter	6-38

E

Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-47
Engine stop	4-6

F

Fan belt	6-27
----------------	------

Fuel filter	6-31
Fuel leakage	6-34
Fuel return filter	6-30-3
Fuel system bleeding	6-34
Fuel tank	6-30-4
Fuel tank air breather	6-34
Fuse & relay box	3-66

G

Gauge	3-3
-------------	-----

H

Haptic controller	3-55
Hydraulic breaker	8-1
Hydraulic oil changing	6-4
Hydraulic oil filling	6-3
Hydraulic oil level	6-3

L

LCD	3-2
Levers & pedals	3-38
Lifting capacities	2-24
Lubricant specification	2-44

M

Maintenance check list	6-11
Major component	2-1
MCU (Machine Control Unit)	3-66
Mode selection system	4-7
Monitor panel	3-2
Mounting and dismounting	1-12
Multimodal dial	3-56

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-26
Operating pattern	4-26

P

Pedals	3-39
Periodical replacement parts	6-5
Pilot line filter	6-39
Pin & bushing lubrication	6-45
Pilot lamps	3-11

Q

Quick clamp	8-6
-------------------	-----

R

Radiator flushing	6-24
Radio & USB player	3-41
RCV lever lubricate	6-41
Recommended oils	2-44, 6-10
Relieving pressure	6-3
Return filter	6-38
RCV lever operating pattern	4-26

S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
Seat	3-58
Seat belt	3-61
Service meter	3-67
Service socket	3-67
Smart key tag	3-34
Specification for major component	2-40
Specification	2-2
Start switch	3-34
Storage	4-24
Suction strainer	6-37
Surge tank	6-20
Swing bearing grease	6-39
Swing gear & pinion grease	6-40
Swing reduction gear oil	6-39
Switch panel	3-34
Switches	3-14, 3-34

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-15
Track adjustment	6-41
Track shoe selection	2-36
Transportation	5-1
Travel reduction gear oil	6-40
Traveling machine	4-13
Troubleshooting guide	7-1

U

Undercarriage	2-36
USB port	3-56

W

Warming up operation	4-5
Warning lamps	3-6
Weight	2-22
Welding repair	6-48
Windshield	3-67
Working device operation	4-12
Working method	4-16
Working range	2-16