



WARNING

CALIFORNIA PROPOSITION 65

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to www.P65warnings.ca.gov/diesel.

91K4-07310-EN

⚠ Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

※ For more information go to www.P65warnings.ca.gov/diesel.

CONTENTS

Foreword	0-1
Emission-related components warranty (USA and CANADA only)	0-2
Before servicing this machine	0-3
EC regulation approved	0-4
Table to enter S/No and distribution	0-5
Machine data plate	0-6
Guide (direction, S/No, symbol)	0-7

SAFETY HINTS

1. Safety instructions	1-2
2. Safety labels	1-31

OPERATION

1. Instruction for new machine	2-1
2. Check before starting the engine	2-2
3. Starting and stopping the engine	2-3
4. Mode selection system	2-7
5. Operation of the working device	2-12
6. Traveling of the machine	2-13
7. Efficient working method	2-16
8. Operation in the special work sites	2-20
9. Normal operation of excavator	2-22
10. Attachment lowering	2-23
11. Storage	2-24
12. RCV lever operating pattern	2-26
13. Exhaust system cleaning	2-28

CONTROL DEVICES

1. Cab devices	3-1
2. Cluster	3-2
3. Switches	3-42
4. Levers and pedals	3-47
5. Others	3-49
6. 2DMG+ system	3-81

MAINTENANCE

1. Instruction	4-1
2. Tightening torque	4-6

3. Fuel, coolant and lubricants	4-10
4. Maintenance check list	4-11
5. Maintenance chart	4-17
6. Service instruction	4-20
7. Electrical system	4-55
8. Air conditioner and heater	4-58

TRANSPORTATION

1. Preparation for transportation	5-1
2. Dimension and weight	5-2
3. Loading the machine	5-10
4. Fixing the machine	5-12
5. Loading and unloading by crane	5-13
6. Disassemble for transportation	5-14
7. Adjustable track gauge (HX520A L only) ..	5-17

TROUBLESHOOTING GUIDE

1. Engine	6-1
2. Electrical system	6-2
3. Others	6-3

SPECIFICATIONS

1. Major components	7-1
2. Specifications	7-2
3. Working range	7-10
4. Weight	7-14
5. Lifting capacities	7-15
6. Bucket selection guide	7-29
7. Undercarriage	7-37
8. Specification for major components	7-39
9. Recommended oils	7-42

OPTION ATTACH AND DEVICE

1. Hydraulic breaker	8-1
2. Quick coupler	8-6
3. Removable counterweight	8-8

INDEX	9-1
-------------	-----