



# WARNING

## CALIFORNIA PROPOSITION 65

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to [www.P65warnings.ca.gov/diesel](http://www.P65warnings.ca.gov/diesel).

91K4-07310-EN

**⚠ Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.**

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

**※ For more information go to [www.P65warnings.ca.gov/diesel](http://www.P65warnings.ca.gov/diesel).**

|                                                                     |      |                                               |      |
|---------------------------------------------------------------------|------|-----------------------------------------------|------|
| Foreword .....                                                      | 0-1  | 6. Efficient working method .....             | 4-11 |
| Emission-related components warranty<br>(USA and CANADA only) ..... | 0-2  | 7. Operation in the special work sites .....  | 4-15 |
| Before servicing this machine .....                                 | 0-3  | 8. Normal operation of excavator .....        | 4-17 |
| EC regulation approved .....                                        | 0-4  | 9. Attachment lowering .....                  | 4-18 |
| Table to enter S/No and distributor .....                           | 0-5  | 10. Storage .....                             | 4-19 |
| Safety labels .....                                                 | 0-6  | 11. RCV lever operating pattern .....         | 4-21 |
| Machine data plate .....                                            | 0-22 | 12. Handling the rubber track .....           | 4-23 |
| Guide (Direction, S/No, Intended use symbol) ·                      | 0-23 |                                               |      |
| <b>1. SAFETY HINTS</b>                                              |      | <b>5. TRANSPORTATION</b>                      |      |
| 1. California proposition 65 .....                                  | 1-1  | 1. Preparation for transportation .....       | 5-1  |
| 2. Safety instructions .....                                        | 1-2  | 2. Dimension and weight .....                 | 5-2  |
| <b>2. SPECIFICATIONS</b>                                            |      | 3. Loading the machine .....                  | 5-6  |
| 1. Major components .....                                           | 2-1  | 4. Fixing the machine .....                   | 5-8  |
| 2. Specifications .....                                             | 2-2  | 5. Loading and unloading by crane .....       | 5-9  |
| 3. Working range .....                                              | 2-7  | <b>6. MAINTENANCE</b>                         |      |
| 4. Weight .....                                                     | 2-9  | 1. Instruction .....                          | 6-1  |
| 5. Lifting capacities .....                                         | 2-10 | 2. Tightening torque .....                    | 6-5  |
| 6. Bucket selection guide .....                                     | 2-42 | 3. Fuel, coolant and lubricants .....         | 6-8  |
| 7. Undercarriage .....                                              | 2-43 | 4. Maintenance check list .....               | 6-9  |
| 8. Specification for major components .....                         | 2-45 | 5. Maintenance chart .....                    | 6-14 |
| 9. Recommended oils .....                                           | 2-48 | 6. Service instruction .....                  | 6-17 |
| <b>3. CONTROL DEVICES</b>                                           |      | 7. Electrical system .....                    | 6-36 |
| 1. Cab devices .....                                                | 3-1  | 8. Air conditioner and heater .....           | 6-39 |
| 2. Cluster .....                                                    | 3-3  | 9. Tilting cab .....                          | 6-41 |
| 3. Switches .....                                                   | 3-32 | <b>7. TROUBLESHOOTING GUIDE</b>               |      |
| 4. Levers and pedals .....                                          | 3-38 | 1. Engine .....                               | 7-1  |
| 5. Air conditioner and heater (cab type) .....                      | 3-41 | 2. Electrical system .....                    | 7-2  |
| 6. Others .....                                                     | 3-43 | 3. Others .....                               | 7-3  |
| <b>4. OPERATION</b>                                                 |      | <b>8. HYDRAULIC BREAKER AND QUICK CLAMP</b>   |      |
| 1. Instruction for new machine .....                                | 4-1  | 1. Selecting hydraulic breaker .....          | 8-1  |
| 2. Check before starting the engine .....                           | 4-2  | 2. Circuit configuration .....                | 8-2  |
| 3. Starting and stopping the engine .....                           | 4-3  | 3. Maintenance .....                          | 8-3  |
| 4. Operation of the working device .....                            | 4-7  | 4. Precaution when operating the breaker .... | 8-4  |
| 5. Traveling of the machine .....                                   | 4-8  | 5. Quick coupler .....                        | 8-10 |
|                                                                     |      | INDEX .....                                   | 9-1  |