

A	
After engine start	4-5
Air cleaner filter	6-23
Air conditioner & heater	3-41
Air conditioner filter	6-39
Angle dozer control	3-37
Attachment lowering	4-18
B	
Battery	6-36
Before starting engine	4-2
Boom lowering	4-18
Bucket replacement	6-33
Bucket selection guide	2-42
Bucket tooth replacement	6-34
C	
Cab device	3-1
Cab tilting	6-41
Changing machine control pattern	4-21
Cluster	3-3
Coolant	6-19
Cooling fan	6-23
D	
Dozer control	3-37
DPF	3-9
DPF switch	3-35
E	
Engine oil filter	6-17
Engine oil level	6-17
Engine starting & stop	4-3
Engine starting by booster	6-37
Engine stop	4-6
ESL mode setting	3-24
F	
Fan belt	6-22
Fuel filter	6-25
Fuel leakage	6-26
Fuel tank	6-24
Fuse box	3-47
Fuse caution	0-21
H	
HEST	3-11
Hydraulic breaker	8-1
Hydraulic oil changing	6-28
Hydraulic oil filling	6-27
Hydraulic oil level	6-27
L	
Levers & pedals	3-38
Lifting capacities	2-10
Lubricant specification	2-48
M	
Maintenance check list	6-9
Major component	2-1
Mounting and dismounting	1-12
N	
New machine operation	4-1
O	
Oil cooler	6-22
Operating pattern	4-21
P	
Password	3-26
Pedals	3-38
Periodical replacement parts	6-4
Pilot lamps	3-12
Pilot line filter	6-30
Power socket	3-43
R	
Radiator flushing	6-19
Radio & USB player	3-48
RCV lever lubricate	6-31
Recommended oils	2-48
Relieving pressure	6-3
Return filter	6-29
S	
Safety hints	1-1
Safety labels	0-6
Safety parts	6-4

Seat	3-44
Seat belt	3-44
Service meter	3-4
Service socket	3-43
Specification for major component	2-45
Specification	2-2
Start switch	3-32
Storage	4-19
Suction strainer	6-28
Swing bearing grease	6-30
Switch panel	3-32
Switches	3-32

T

Torques-major component	6-7
Torques-fastener	6-5
Towing machine	4-10
Track adjustment	6-32
Track shoe	2-43
Transportation	5-1
Travel reduction gear oil	6-30
Travelling machine	4-8
Troubleshooting guide	7-1

U

Undercarriage	2-43
---------------------	------

W

Warming up operation	4-5
Warning lamps	3-6
Water separator	6-24
Weight	2-9
Working device operation	4-7
Working method	4-11
Working range	2-7