



WARNING

CALIFORNIA PROPOSITION 65

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to www.P65warnings.ca.gov/diesel.

91K4-07310-EN

▲ Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

※ For more information go to www.P65warnings.ca.gov/diesel.

Foreword	0-1
Emission-related components warranty (USA and CANADA only)	0-2
Before servicing this machine	0-3
EC regulation approved	0-4
Table to enter S/No and distributor	0-5
Safety labels	0-6
Machine data plate	0-22
Guide (Direction, S/No, Intended use symbol) ·	0-23

1. SAFETY HINTS

1. California proposition 65	1-1
2. Safety instructions	1-2

2. SPECIFICATIONS

1. Major components	2-1
2. Specifications	2-2
3. Working range	2-8
4. Weight	2-14
5. Lifting capacities	2-15
6. Bucket selection guide	2-79
7. Undercarriage	2-80
8. Specification for major components	2-82
9. Recommended oils	2-85

3. CONTROL DEVICES

1. Cab devices	3-1
2. Cluster	3-3
3. Switches	3-32
4. Levers and pedals	3-38
5. Air conditioner and heater (cab type)	3-41
6. Others	3-43

4. OPERATION

1. Instruction for new machine	4-1
2. Check before starting the engine	4-2
3. Starting and stopping the engine	4-3
4. Operation of the working device	4-7
5. Traveling of the machine	4-8

6. Efficient working method	4-11
7. Operation in the special work sites	4-15
8. Normal operation of excavator	4-17
9. Attachment lowering	4-18
10. Storage	4-19
11. RCV lever operating pattern	4-21
12. Handling the rubber track	4-23

5. TRANSPORTATION

1. Preparation for transportation	5-1
2. Dimension and weight	5-2
3. Loading the machine	5-6
4. Fixing the machine	5-8
5. Loading and unloading by crane	5-9

6. MAINTENANCE

1. Instruction	6-1
2. Tightening torque	6-6
3. Fuel, coolant and lubricants	6-9
4. Maintenance check list	6-10
5. Maintenance chart	6-15
6. Service instruction	6-18
7. Electrical system	6-37
8. Air conditioner and heater	6-40
9. Tilting cab	6-42

7. TROUBLESHOOTING GUIDE

1. Engine	7-1
2. Electrical system	7-2
3. Others	7-3

8. HYDRAULIC BREAKER AND QUICK COUPLER

1. Selecting hydraulic breaker	8-1
2. Circuit configuration	8-2
3. Maintenance	8-3
4. Precaution when operating the breaker	8-4
5. Quick coupler	8-10

INDEX	9-1
-------------	-----