

A

After engine start	4-5
Air cleaner filter	6-24
Air conditioner & heater	3-41
Air conditioner filter	6-40
Angle dozer control	3-37
Attachment lowering	4-18

B

Battery	6-37
Before starting engine	4-2
Boom lowering	4-18
Bucket replacement	6-34
Bucket selection guide	2-79
Bucket tooth replacement	6-35

C

Cab device	3-1
Cab tilting	6-42
Changing machine control pattern	4-21
Cluster	3-3
Coolant	6-20
Cooling fan	6-24

D

Dozer control	3-37
DPF	3-9
DPF switch	3-35

E

Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-38
Engine stop	4-6
ESL mode setting	3-24

F

Fan belt	6-23
Fuel filter	6-26
Fuel leakage	6-27
Fuel tank	6-25
Fuse box	3-47
Fuse caution	0-21

H

Heater filter	6-26
HEST	3-11
Hydraulic breaker	8-1
Hydraulic oil changing	6-29
Hydraulic oil filling	6-28
Hydraulic oil level	6-28

L

Levers & pedals	3-38
Lifting capacities	2-15
Lubricant specification	2-85

M

Maintenance check list	6-10
Major component	2-1
Mounting and dismounting	1-22

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
Operating pattern	4-21

P

Password	3-26
Pedals	3-38
Periodical replacement parts	6-5
Pilot lamps	3-12
Pilot line filter	6-31
Power socket	3-43

R

Radiator flushing	6-20
Radio & USB player	3-48
RCV lever lubricate	6-32
Recommended oils	2-85
Relieving pressure	6-3
Return filter	6-30

S

Safety hints	1-1
Safety labels	0-6

Safety parts	6-4
Seat	3-44
Seat belt	3-44
Service meter	3-4
Service socket	3-43
Specification for major component	2-82
Specification	2-2
Start switch	3-32
Storage	4-19
Suction strainer	6-30
Swing bearing grease	6-31
Switch panel	3-32
Switches	3-32

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-10
Track adjustment	6-33
Track shoe	2-80
Transportation	5-1
Travel reduction gear oil	6-31
Travelling machine	4-8
Troubleshooting guide	7-1

U

Undercarriage	2-80
---------------------	------

W

Warming up operation	4-5
Warning lamps	3-6
Water separator	6-25
Weight	2-14
Working device operation	4-7
Working method	4-11
Working range	2-8